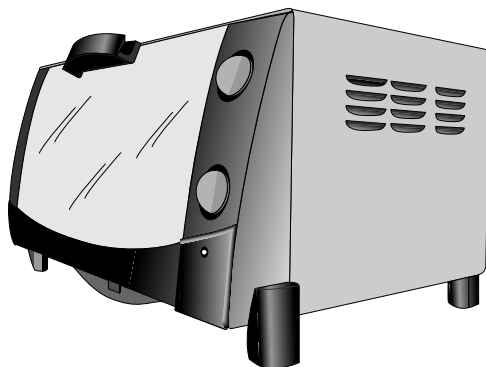 

DeLonghi



DIRECTIONS FOR USE (Page 3)

Toaster-Oven-Broiler

De' Longhi products are the finest and most versatile products available. Please read this booklet carefully to ensure that you obtain the fullest benefit from your appliance.

MODE D'EMPLOI (Page 10)

grille- pain - four - grill

Les produits De' Longhi sont les meilleurs et les plus polyvalents électroménagers disponibles dans le commerce. Nous vous prions de bien vouloir lire attentivement ce mode d'emploi afin de tirer les meilleurs avantages de votre nouvel appareil.

INSTRUCCIONES PARA EL USO (Página 17)

tostador - horno -grill

Los productos De' Longhi son los mejores y los más versátiles del comercio. Les rogamos que lean atentamente este manual, para poder utilizar lo mejor posible este electrodoméstico.

Cooking mode and temperature selector (upper knob)
Sélecteur cuisson et contrôle de la température (sélecteur supérieure)
 Selector de la función de cocción y de la temperatura (selector superior)

ON/OFF and toast colour selector (timer) (lower knob)

Sélecteur ON/OFF et couleur du toast (commande inférieure)

Selector ON/OFF y grado de tostadura (temporizador) (selector inferior)

Wire rack
Grille
Parilla

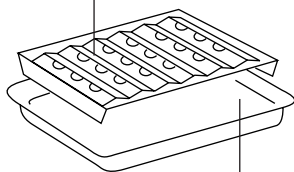 
Pilot light
Lampe témoin
Lámpara piloto

Upper slot
Position supérieure
Posición superior


Lower heating element reflector
Défecteur élément chauffante inférieure
 Deflector elemento calefacción inferior

Lower slot
Position inférieure
Posición inferior

Broiler rack (optional: not for all models)
Grille pour gril (sur requête, pas disponible sur tous les modèles)
 Parrilla para el grill (sólo si pedida, no todos los modelos disponen de ella)




 Multi-purpose oven-tray
Plateau multi-fonction
 Grasera



Handgrip for wire rack (optional: not for all models)
Poignée pour grille (sur requête, pas disponible sur tous les modèles)

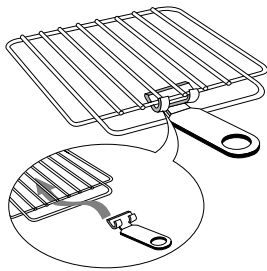 Mango de la parrilla (sólo si pedida, no todos los modelos disponen de ella).



If Your oven is provided with a handgrip:

Use handgrip to bring the wire rack out of the oven when it is hot, see figure.

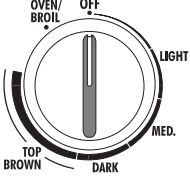 
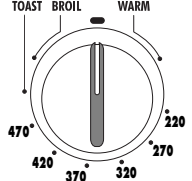 
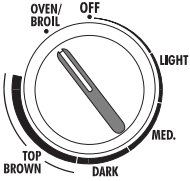 
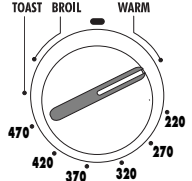 
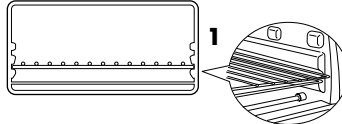 
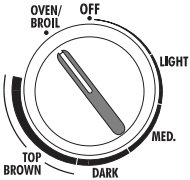 
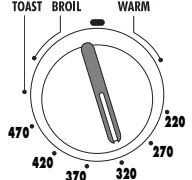 
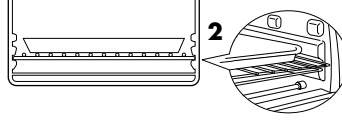 
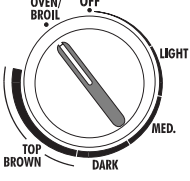 
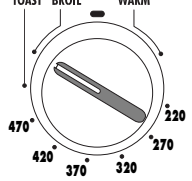 
 
 
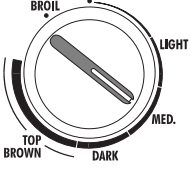 
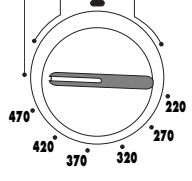 
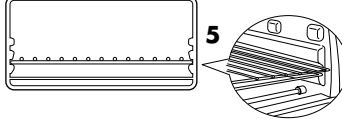 
Si Votre four est équipé avec une poignée pour parille:

Elle permet de saisir la parille quand elle est chaud, voir figure.


Si el horno está dotado de mango de la parrilla:

Sirve para sacar la parrilla cuando está calient, ver fig.

SUMMARY OF OPERATION

Program/ cooking mode	ON/OFF and toast color selector (lower knob)	Cooking mode and temperature selector (upper knob)	Indicator light	Position of wire rack/ oven tray
OFF				
KEEP WARM				 Wire rack on the lower slot
BAKE				 Oven tray on the wire rack inserted in the lower slot
BROIL				 Oven tray placed on the lower heating element reflector and wire rack inserted in the upper slot If Your oven is provided with a broiler rack 
TOAST				 Wire rack on the lower slot

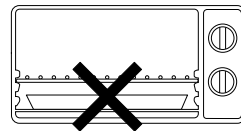 During the bake and toast function, do not put the multi-purpose oven tray (or any other accessory/container) directly on the lower heating element reflector.



ENGLISH

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. Do not touch hot surfaces. Use handles or dials.
3. Before using this appliance, place it two to four inches away from the wall or any object on the counter top. Remove any object that may have been placed on top of the appliance. Do not use on surfaces where heat may cause a problem.
4. To protect against electrical shock, do not place unit in or under water. See instructions for cleaning.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use and before cleaning. Always turn the ON/OFF dial (lower knob) to "OFF" and the temperature dial (upper knob) to "■" before unplugging.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. If the plug gets hot, please call a qualified electrician.
14. Do not use this appliance for other than intended use.
15. Use extreme caution when removing the oven tray or disposing of hot grease.
16. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
17. To assure safe operation, oversized foods or utensils must not be inserted into the oven.
18. A fire may occur if this appliance is covered or touching flammable material, including curtains, draperies, walls, etc., when in operation.
19. **CAUTION:** Never leave the toaster-oven-broiler unattended when in use (especially when broiling and toasting).
20. When broiling, the oven-tray, the broiler rack (if provided) and wire rack must be used according to the instructions on page 6.
21. Extreme caution should be exercised when using containers other than oven proof metal glass or ceramic.
22. Do not store any materials, other than the manufacturer's recommended accessories, in the oven when not in use.
23. Do not place any of the following materials in the oven: paper, cardboard, plastic and the like.
24. Do not cover any part of the oven with metal foil. This will cause overheating of the oven.
25. To switch off the toaster-oven broiler, turn the ON/OFF dial (lower knob) to "OFF" and the temperature dial (upper knob) to "■".

This product is for household use only
SAVE THESE INSTRUCTIONS

- Your product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- Plug the cord into a 120 volt AC outlet.
- The cord length of this product has been selected to reduce the possibility of tangling in or tripping over a longer cord. If more cord length is needed, an extension cord may be used. It should be rated no less than 15 amps., 120 volts, and have Underwriters Laboratories/CSA listing.
- A six feet long, 15 amp. extension cord may be purchased from your local authorized service facility. When using a longer cord, be sure not to let it drape over the working area or dangle where someone could accidentally pull or trip over it.
- Handle the cord carefully for longer life; avoid jerking or straining the cord at the plug and appliance connections.

- **Note:**
Initial start up operation may result in minimal smell and smoke (about 15 min.). This is normal. It is due to the protective substance on heating elements which protects them from salt effects during shipping from factory.

COOKING PROGRAMMES

The pilot lamp lights when the appliance is plugged into the mains and switched on. It does not mean that the oven has reached the selected temperature.

Before using the oven for the first time and after use, wash the tray and the rack with warm, sudsy water.

1) HOW TO KEEP FOOD WARM

Place the food to be kept warm on the wire rack inserted in the lower slot (please see page 3). Turn the lower knob counterclockwise to "OVEN/BROIL" position. Turn the upper knob clockwise to "KEEP WARM". This feature is designed to keep foods warm, after they are cooked for short periods of time without overcooking. We do not recommend keeping foods warm for prolonged periods or using this feature to reheat frozen or cold foods. **Once the "keep warm" function is no longer needed, turn the upper knob to "■" and the lower knob to "OFF".**

2) INSTRUCTIONS FOR BAKING

You can bake foods in your oven, just as in your regular oven. Casseroles or baking dishes may be placed directly on the removable wire rack. Use the convenient oven tray provided with your oven for baking such items as cookies, biscuits, rolls and uncovered casserole dishes. Place the oven tray directly on the removable wire rack inserted in the lower slot (please see page 3).

1. Close the door.
2. Set the upper knob clockwise to the desired position/temperature.
3. Turn the lower knob counterclockwise to "OVEN/BROIL" position.
4. **When baking is finished turn the upper knob to "■" and the lower knob to position "OFF".**

Note: - We do not recommend the use of glass covers on casseroles. Glass cooking dishes should never be closer than one inch from the heating element.

- **During the bake and toast function, do not put the multi-purpose oven tray (or any other accessory/container) directly on the lower heating element reflector.**

Helpful baking hints

To obtain best performance from this toaster-oven-broiler:

- Do not overfill the oven. Whenever possible, place foods in center of oven.
- Avoid opening the door too frequently to prevent heat loss.
- Foil may be used to cover the baking dish or pan. Be sure the ends of foil are tucked closely against the edge of the baking dish/pan.

3) INSTRUCTIONS FOR BROILING

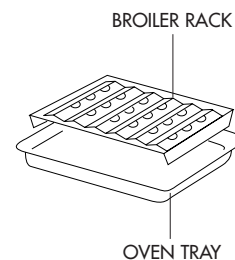 
Always use the multi-purpose oven tray with the wire rack for broiling. No preheating of the broiler is necessary.

Do not leave the broiler unattended when in use. Do not cover the oven wire rack with foil. This prevents fat and oils from draining, causing spatter and smoking, and also restricts air circulation for proper ventilation.

Broiling

1. Place the accessories as follows:

- **If the oven is not provided with the broiler rack**
 - Insert the wire rack in the upper slot (please see page 3).
 - Place the multi-purpose oven tray directly on the lower heating element reflector (please see page 3).
 - Put the food to be broiled on the wire rack.
- **If the oven is provided with the broiler rack**
 - Put the broiling rack inside the multi-purpose oven tray, as shown in figure
 - Place the food to be broiled on the broiling rack.
 - Insert the wire rack in the lower slot (please see page 3) and then put the broiling assembly with the food on the wire rack.



Always allow 1" between food and upper heating element.

In order to reduce bad smell, smoke and spattering: before starting the broiling process, pour half glass of water in the multi-purpose oven tray.

2. Turn the upper knob clockwise to "BROIL".
3. Turn the lower knob counterclockwise to "OVEN/BROIL".
4. **When broiling is finished, turn the lower knob to "Off" and the upper knob to position "■".** Care should be taken when removing the oven tray and disposing of the grease collected while broiling.

Note: While smoke is an inherent characteristic of good broiling, the following tips should eliminate or greatly reduce smoking:

- Trim excess fat from meat and score the edges to prevent curling.
- For best results, thaw frozen meats before broiling. These two precautions will reduce or eliminate smoke from the broiler.
- Placing the food on the rack allows the juices and fat to drip into the oven tray and decreases spattering while broiling (in particular if you have poured half glass of water).
- If frozen steaks and chops are broiled, allow 1½ to 2 times the required broiling time as that required for unfrozen meat.
- Remove grease from the tray and wash the tray and rack after use.
- The broiler should be cleaned inside after each use. Too much grease accumulation causes smoking. Use any non-abrasive cleaner and hot water.

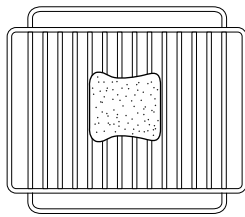 
Top Browning

Top Browning is ideal for melting, crisping and toasting food surfaces. Use it for open face sandwiches, pre-buttered muffins or browning cooked casseroles.


1. Place the food in the oven tray and place the tray on the wire rack inserted in the lower slot (please see page 3).
2. Close the door, set the upper knob clockwise to "BROIL" and the lower knob clockwise to "TOP BROWN".
3. When experimenting with new uses, watch the food to avoid overbrowning. If necessary the browning cycle can be shortened by turning the lower knob to a lighter setting.
4. A ring indicates the end of the set time. The top browning cycle has been completed. The heating elements will shut off automatically.
5. When the browning cycle has been completed, turn the upper knob to position "—".

4) DIRECTIONS FOR AUTOMATIC TOASTING


- The capacity of the wire rack is such as to allow the toasting of 4 slices of bread at the same time.
- For toasting, place the slices of bread as shown below:



Toasting one slice

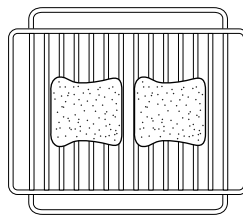 

Toasting two slices

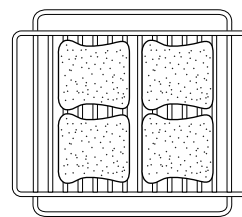 

Toasting four slices

Note: For consecutive toasting, turn the toast colour selector (lower knob) to a lower setting.

INSTRUCTIONS FOR TOASTING

Always use the oven wire rack for toasting bread, sandwiches, English muffins, shelf foods and frozen waffles automatically.

1. Place the wire rack in the lower slot (please see page 3).
2. Center the food to be toasted on the wire rack. Close the door.
3. Turn the upper knob clockwise to "TOAST". When toasting, both the top and bottom heating elements switch on to brown both sides of the food at the same time.
4. Set the lower knob clockwise to the desired brownness.
When using the toaster-oven-broiler for the first time, set the lower knob to a medium setting. Toast a few pieces of bread to check for desired brownness. If necessary, adjust the control to suit your preference.
5. A ring indicates the end of the set time. The toasting cycle has been completed and the heating elements will shut off automatically.

Note: • This toaster-oven-broiler is capable of toasting in a wide range of colours, automatically from light to dark. However, if you prefer a lighter shade of toast, simply interrupt the automatic toast cycle by turning the lower knob to "OFF". This will shut the unit off without damaging the oven. If you prefer a darker shade, restart the toasting cycle by turning the lower knob clockwise until the desired colour is obtained.

Then switch off manually as described earlier.

- Condensation may build up on the inside of the glass door. This is normal. The condensation will evaporate during the toasting cycle.
- Heavier breads and frozen breads will require a darker setting. One slice of bread will require a lighter setting than several slices.

CLEANING AND MAINTENANCE

Always unplug the toaster-oven-broiler and allow it to cool before cleaning. This unit has been designed and engineered with your safety in mind. To assure maximum safe operation, keep unit clean free of grease and build up of food particles.

1. Remove the wire oven rack.
2. To clean the inside walls use a damp cloth and a mild liquid soap solution. Never use harsh abrasives, corrosive products or spray detergents.

Note: Do not clean interior with metal scouring pads. Pieces can break off and touch electrical parts, creating risk of electrical shock.

3. To clean the glass door, use a glass cleaner or a damp cloth. Wipe dry with a clean cloth.
4. To clean the exterior finish, use a damp, sudsy cloth. For stubborn stains, a non-abrasive liquid cleaner or spray glass cleaner may be used. Do not use metal scouring pads, as they might mar the finish. Always remove cleaning agents by polishing with a dry cloth.
5. The wire rack, the oven tray and the broiler rack (if provided), can be washed as other kitchen ware.

Cleaning the bottom of the oven

To clean the bottom of the oven, pull the access panel downwards (see fig. A/B). Place the oven on its rear panel. This will make cleaning easier.

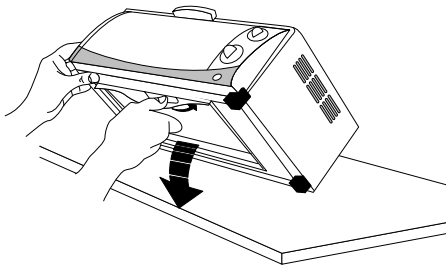 


FIG. A

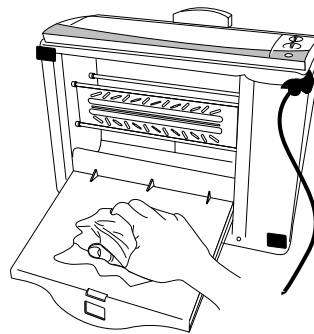 


FIG. B

Clean the oven floor after use to avoid build-up of residue, as this will affect the cooking performance. Brush off crumbs or wipe the oven floor with a damp cloth. For stubborn stains, use a nylon or plastic scouring pad or a non-caustic cleaner. Dry thoroughly before closing.

After cleaning, close the access panel and check that it is locked securely into position.

OTHER SERVICING

Any servicing requiring disassembly should be performed by an authorized service representative.

The De'Longhi logo is centered at the top of the warranty section, enclosed in a decorative oval border.

Limited Warranty

What Does This Warranty Cover? We warrant each Espresso Coffee Machine to be free from defects in material and workmanship. Our obligation under this warranty is limited to replacement or repair, free of charge at our factory or authorized service centers, of any defective part or parts there of other than parts damaged in transit, which shall be returned to us, transportation prepaid. This warranty shall apply only if the Espresso Coffee Machine is used in accordance with the factory directions which accompany it.

How Long Does The Coverage Last? This warranty runs for one year from the date of delivery and applies only to the original purchaser.

What Does This Warranty Not Cover? This warranty does not cover defects or damage of the Espresso Coffee Machine which result from repairs or alterations to the machine outside our factory or authorized service centers, nor shall it apply to any Espresso Coffee Machine which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damages resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

How Do You Get Service? If repairs become necessary or spare parts are needed, please write to:

De'Longhi America Inc.
625, Washington Avenue
Carlstadt N.J. 07072

or call Service Tel. No. 800-322-3848

The above warranty is in lieu of all other express warranties and representations; All implied warranties are limited to the applicable warranty period set forth above. This limitation does apply if you enter into an extended warranty with De'Longhi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions connection with the sale or use of its Espresso Coffee Machine.

How Does State Law Apply? This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.