

CONTENTS

CHAPTER 1	GENERAL	
1.1	Description of the oven and the accessories	17
1.2	Summary of operation	18
1.3	Specifications	20
1.4	Warnings	20
CHAPTER 2	USE OF THE OVEN AND REFERENCE COOKING TIMES	
2.1	Use of the controls	22
2.2	Tips on use	23
2.3	How to set the functions	23
	• Defrosting	23
	• Keeping food warm	23
	• Convection oven cooking	24
	• Traditional oven cooking	25
	• Grilling and cooking au gratin	26
	• Grilling with the turnspit (if fitted)	28
CHAPTER 3	CLEANING AND MAINTENANCE	29

Important information for correct disposal of the product in accordance with EC Directive 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.



ELECTRICAL CONNECTION (UK ONLY)

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.
WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.
 With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse.
 If the plug is a moulded-on type, the fuse cover must

 
be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.

- B) If your appliance is not fitted with a plug, please follow the instructions provided below:


**WARNING - THIS APPLIANCE MUST BE EARTHED
 IMPORTANT**

The wires in the mains lead are coloured in accordance with the following code:

Green and yellow: Earth
 Blue: Neutral
 Brown: Live



As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:


The green and yellow wire must be connected to the terminal in the plug marked with the letter E or the earth symbol  or coloured green or green and yellow.

The blue wire must be connected to the terminal marked with the letter N or coloured black.

The brown wire must be connected to the terminal marked with the letter L or coloured red.


CHAPTER 1 – GENERAL

  1.1 - DESCRIPTION OF THE OVEN AND THE ACCESSORIES

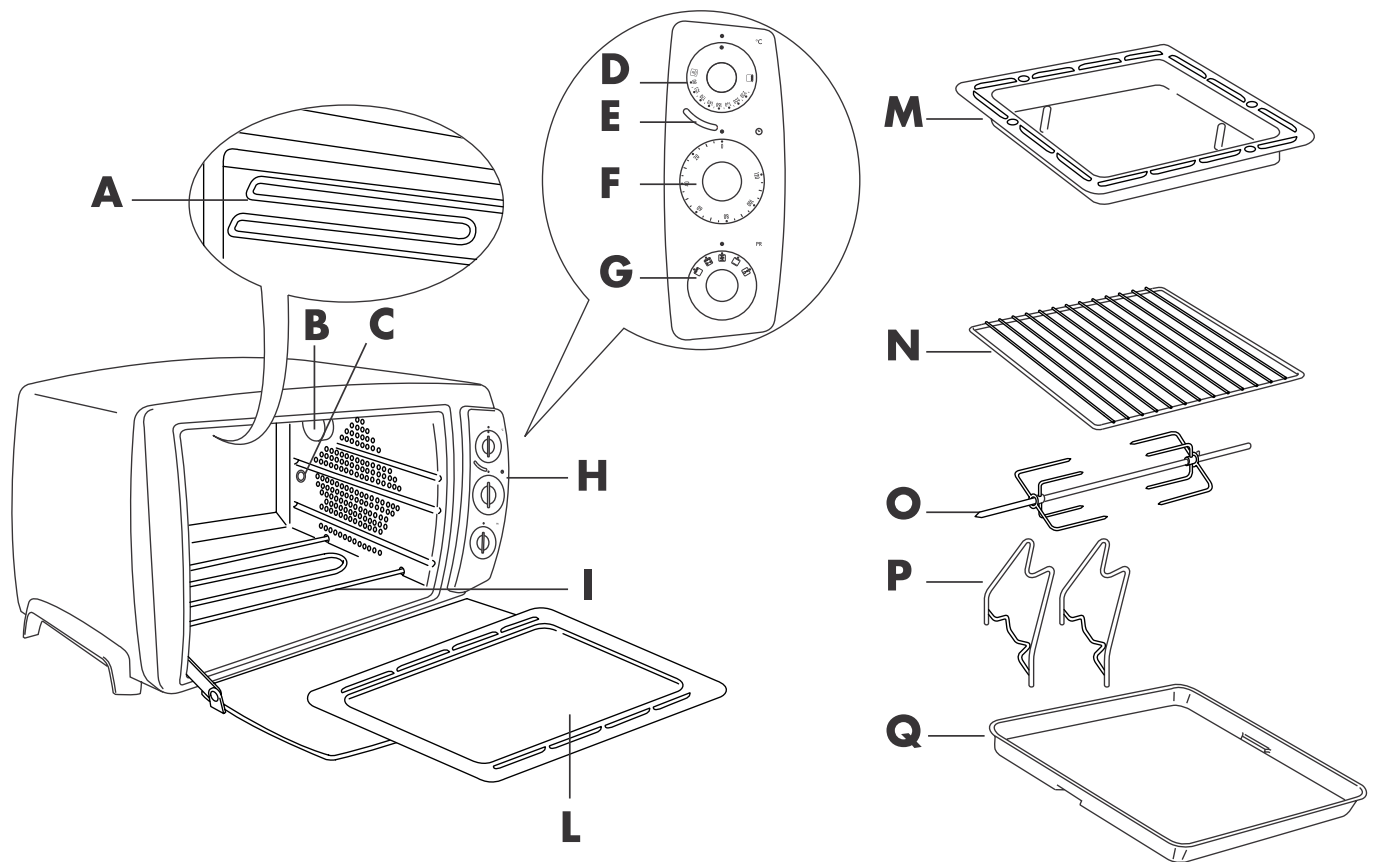
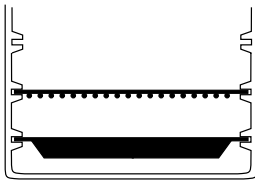




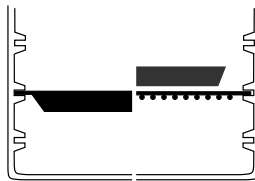
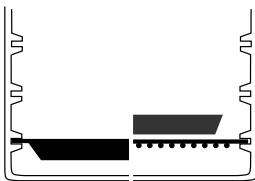
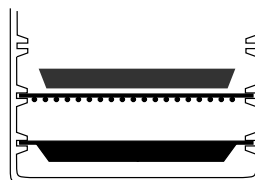


- A** Top heating element
- B** Oven light
- C** Turnspit mount (if fitted)
- D** Thermostat knob
- E** Thermostat pilot light
- F** On/off and timer knob
- G** Function selector knob
- H** Control panel

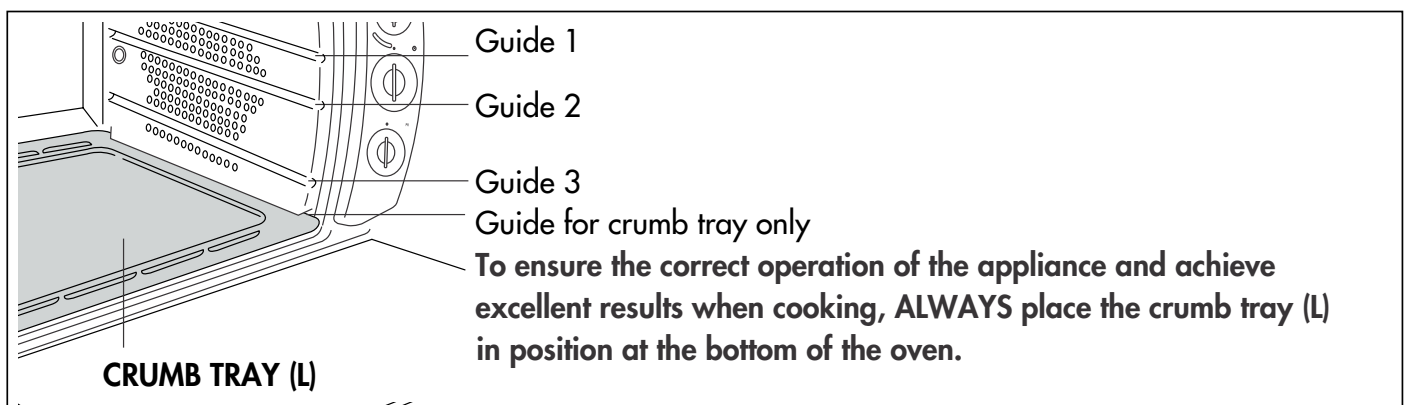
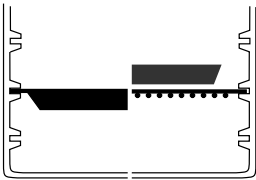




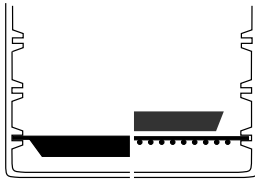



- I** Bottom heating element
- L** Crumb tray
- M** Dripping pan
- N** Wire rack
- O** Spit (if supplied)
- P** Spit supports (if supplied)
- Q** Lasagne pan (if supplied)



1.2 - SUMMARY OF OPERATION

PROGRAM	FUNCTION SELECTOR KNOB SETTING	THERMOSTAT KNOB SETTING	POSITION OF WIRE RACK AND ACCESSORIES	GUIDES	NOTES/TIPS
DEFROSTING		●		1 2 3	Place the food being defrosted directly onto the wire rack. The dripping pan is used to collect any drops of fat and water.
KEEPING FOOD WARM				1 2 3	60° If the food needs to be kept warm for longer than 20-30 minutes, it should be covered with tinfoil, to prevent it from becoming too dry.
CONVECTION OVEN COOKING (ONE LEVEL)		80°-230° (see table on page 24)	 or alternatively 	1 2 3 1 2 3	Ideal for cooking meat, poultry, roast potatoes, bread and leavened cakes. Use the dripping pan, sliding it directly into the guides, or the lasagne pan, if supplied, resting it on the wire rack.
CONVECTION OVEN COOKING (TWO LEVELS)				1 2 3	For simultaneous cooking on two levels, position the accessories as shown in the figure to the side. Ideal for cooking foods that need to be turned/stirred during cooking.

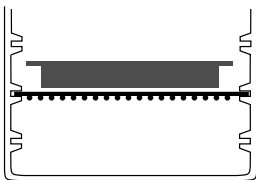Chapter 1 – General

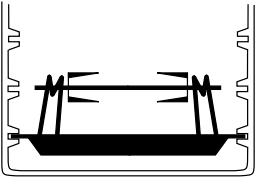PROGRAM	FUNCTION SELECTOR KNOB SETTING	THERMOSTAT KNOB SETTING	POSITION OF WIRE RACK AND ACCESSORIES	GUIDES	NOTES/TIPS
TRADITIONAL OVEN COOKING		80°-230° (see table on page 25)	 or alternatively 	1 2 3 1 2 3	Ideal for cooking pizza, lasagne, pasta au gratin, fish and stuffed vegetables (capsicums, courgettes, etc.). Use the dripping pan, sliding it directly into the guides, or the lasagne pan, if supplied, resting it on the wire rack.
GRILLING AND COOKING AU GRATIN				1 2 3	Ideal for all types of traditional grill; hamburgers, frankfurters, kebabs, toast, etc. Place the food directly on the wire rack. The dripping pan is used to collect any drops of fat.
				1 2 3	Ideal for dishes that need to be cooked au gratin (e.g. coquilles Saint-Jacques, etc.). In this case, the container (with the food inside) should be placed on the wire rack.
GRILLING WITH THE TURNSPIT (IF FITTED)				1 2 3	Ideal for cooking chickens, fowl in general, roast pork, etc. A glass of water can be poured into the dripping pan to make cleaning easier and prevent smoke being produced by the burning fat.

1.3 - SPECIFICATIONS

Operating voltagesee rating label

Maximum power absorbedsee rating label

POWER CONSUMPTION (CENELEC STANDARD HD 376)

To reach 200°C0,3 KWh

To maintain 200°C for one hour0,8 KWh

Total1,1 KWh

This appliance conforms to EC directive 2004/108/EC on Electromagnetic Compatibility and EC regulation no. 1935/2004 of 27/10/2004 on materials intended for contact with food.

1.4 - WARNINGS


- **Read all the instructions carefully before using the appliance.**
- This oven has been designed to cook food. It must never be used for other purposes, modified or tampered with in any way.
- Place the appliance on a horizontal surface at a height of at least 85 cm and out of reach of children.
- Wash all accessories thoroughly before use.
- **Before plugging into the mains, make sure that:**
 - **the mains voltage corresponds to the voltage indicated on the rating plate;**
 - **the mains socket has a minimum rating of 16A and an earth wire.**
- **The manufacturer declines all liability in the event that this important accident-prevention rule is not respected.**
- Before using the oven for the first time, remove any paper and other material inside the oven such as protective cardboard, booklets, plastic bags, etc.
- Before using for the first time, operate the oven empty with the thermostat at maximum for at least 15 minutes to eliminate the "new" smell and any smoke caused by the presence of protective substances applied to the elements before transport.
During this operation, ventilate the room.
- **IMPORTANT:** when you have unpacked the appliance, make sure the door is undamaged and working correctly. The door is made from glass and is therefore fragile. If it is visibly chipped, scored or scratched, it should be replaced. While using, cleaning or moving the appliance, avoid slamming or knocking the door violently. Do not pour cold liquid onto the glass while the appliance is hot.
- **When in operation, the door and accessible external surfaces could become very hot. Always use the knobs, handles and buttons. Never touch metal parts or the glass. Use oven gloves if necessary.**
- **This electrical appliance operates at high temperatures which could cause burns.**
- Accessible parts may become hot during use. Young children should be kept away.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not move the appliance while in use.
- Do not use the appliance if...
 - the power cable is faulty,
 - the appliance has been dropped, is visibly damaged or malfunctions.



Chapter 1 - General

Should this occur, to avoid all risk take the appliance to your nearest authorised service centre.

 - Do not let the power cable dangle and avoid touching hot parts of the oven. Never unplug the appliance by pulling on the power cable.
- If you intend to use an extension, make sure it is in good condition, that the plug is earthed and that the cross section of the wires is at least equal to that of the power cable provided with the appliance.
- To avoid all risk of electric shock, never immerse the power cable, plug or appliance itself in water.
- Never position the appliance near heat sources.
- Do not leave inflammable products near the oven or under the work surface where it is located.
- Bread may burn. Never leave the oven unattended during toasting or grilling. Never operate the appliance under a wall cupboard or shelf or near inflammable materials such as curtains, blinds, etc.
- Do not use the appliance as a heat source.
- Never place paper, cardboard or plastic inside the oven and never rest anything on top of the appliance (utensils, wire racks, other objects).
- Never insert anything into the ventilation openings. Make sure they are unobstructed.
- **If food or other parts of the oven catch fire, never try and put out the flames with water. Close the door, unplug from the mains and smother the flames with a damp cloth.**
- This oven is not designed for built-in installation.
- When the door is open, remember:
 - never exert excessive pressure with overly heavy objects or pull the handle downwards;
 - never rest heavy containers or boiling saucepans just out of the oven on the open door.
- Given the differences in legislation in force, if the appliance is used in a country other than that where it was bought, have it checked by an authorised service centre.
- For your personal safety, never take the appliance to pieces on your own. Always contact an authorised service centre.
- This appliance is designed for domestic use only. Professional or inappropriate use, or failure to observe the instructions absolves the manufacturer from all responsibility and invalidates the guarantee.
- When not in use and before cleaning, always unplug the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

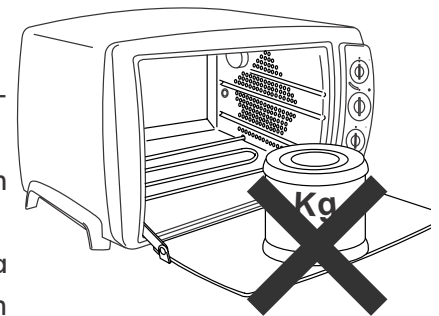



Keep these instructions


CHAPTER 2 - USE OF THE OVEN AND REFERENCE COOKING TIMES

2.1 - USE OF THE CONTROLS

THERMOSTAT KNOB (D)

Select the desired temperature as follows:

 
- **Defrosting:** Thermostat knob in position "●".
- **Keeping food warm:** Thermostat knob set to .
- **Convection oven or traditional oven cooking:** Thermostat knob set from 80°C to 230°C.
- **All types of grilling and cooking with the turnspit (if fitted):** Thermostat knob in position .

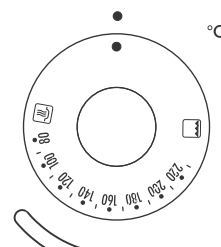

ON/OFF AND TIMER KNOB (F)



- **To switch the oven on and to set the cooking time:** Turn the knob clockwise to the desired time (max. 120 minutes). A bell will ring when the set time has elapsed, and the oven will automatically switch itself off.
- **To switch the oven off:** Turn the knob to position "0".

 When setting times of less than 10 minutes, first turn the knob all the way round, and then set the desired time.

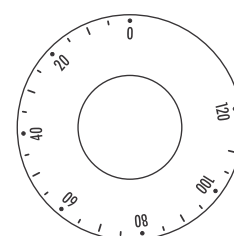



FUNCTION SELECTOR KNOB (G)

  
This knob is used to select from the available cooking functions, as follows:

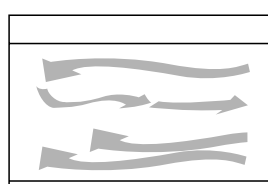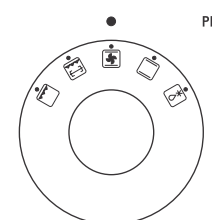


 **DEFROSTING**
(fan on only)

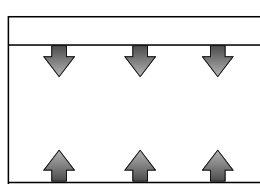 

 
 **TRADITIONAL OVEN COOKING**
(top heating element and bottom heating element on only)

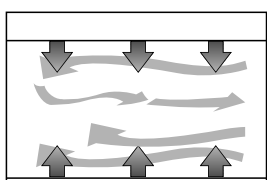

 
 **CONVECTION OVEN COOKING, KEEPING FOOD WARM**
(top heating element, bottom heating element and fan on)

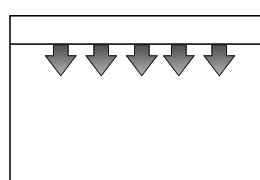

 **GRILLING**
 **TURNSPIT (IF FITTED)**
(top heating element on only, at maximum power)

THERMOSTAT PILOT LIGHT (E)

 The light comes on to indicate that the oven is heating up, and goes off when the oven has reached the set temperature. **The pilot light is always off during the DEFROSTING function.**

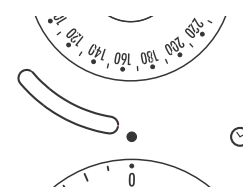

2.2 - GENERAL ADVICE

- When cooking using the convection oven, traditional oven or grill functions, the oven should always be preheated to the set temperature for best results.
- The cooking times depend on the quality of the products, the temperature of the food and individual tastes. The times given in the table are only intended as a guide, and may need to be varied. They do not take into account the time required to preheat the oven.
- When cooking frozen food, follow the recommendations on the package.

2.3 - HOW TO SET THE FUNCTIONS

DEFROSTING

Place the wire rack in guide no. 2 and the dripping pan in guide no. 3, as shown in the figure on page 18.

The food being defrosted should be placed directly on the wire rack.

If this is not possible for practical reasons (such as in the case of minced meat, which once defrosted may fall between the openings in the wire rack), place the food on a dinner plate, and then place the plate on the wire rack (in this case, the dripping pan is not required).

Turn the function selector knob (G) to position . Turn the thermostat knob (D) to position "●".


Turn the ON/OFF and timer knob (F) to the desired time. A bell will ring when defrosting is complete.

N.B. the defrosting times are reduced significantly with this function.

 
 
KEEPING FOOD WARM

Place the dripping pan or the wire rack with a pan on top (the lasagne pan, if supplied, may also be used) in guide no. 3, as shown in the figure on page 18. This function is used to keep the food warm until serving. The food should not be left in the oven too long, as it may become too dry (to avoid this, cover the pan with tin-foil or baking paper).

Turn the function selector knob (G) to position .

Turn the thermostat knob (D) to .

Turn the ON/OFF and timer knob (F) to the desired time. A bell will ring when the set time has elapsed; if the food being kept warm is served before the end of the set time, manually turn the ON/OFF and timer knob (F) to position "0".

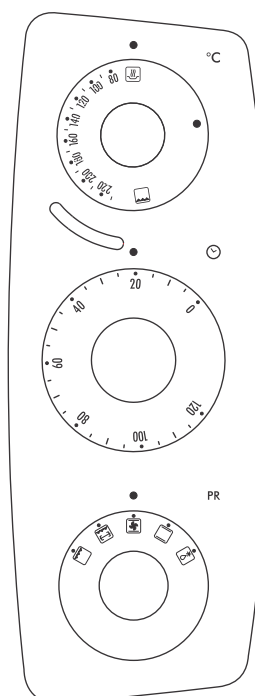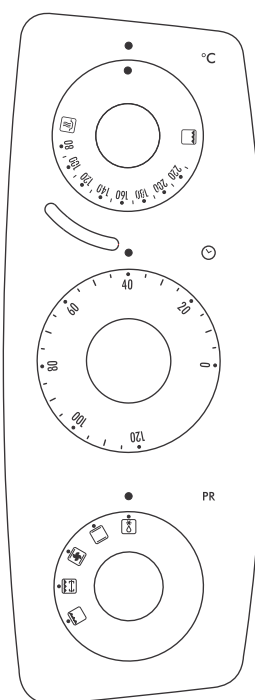


Chapter 2 - Use of the oven and reference cooking times

CONVECTION OVEN COOKING

This function is ideal for cooking great savoury pies, all types of meat-based main dishes (apart from small fowl), roast potatoes and cakes in general. It is also suitable for simultaneous cooking on two different levels.

 
How to use the function:

Turn the function selector knob (G) to position .

Select the desired temperature using the thermostat knob (D).

Turn the ON/OFF and timer knob (F) to the time desired.

Wait for the oven to reach the set temperature (the pilot light goes off), then place the dish containing the food on the wire rack (previously placed in the oven), or, if the food is in the dripping pan, place the pan directly into the guide (refer carefully to the table below). A bell will ring when the set time has elapsed.

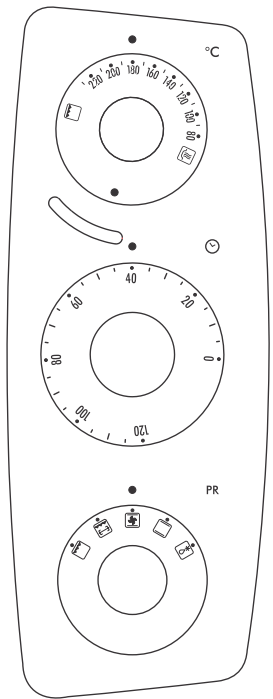


RECIPE	QUANTITY	THERMOSTAT KNOB	TIME	WIRE RACK/DRIPPING PAN POSITION	OBSERVATIONS AND TIPS
SAVOURY PIE	600 g	180°C	35 min.	3	Use a cake tin
CHICKEN PIECES	1000 g	200°C	60 min.	3	Place directly in the dripping pan (M)
WHOLE CHICKEN	1500 g	200°C	90 min.	3	Pierce with a fork to drain the fat
ROAST PORK	1500 g	200°C	90 min.	3	Leave a little fat around the edges to prevent it from becoming too dry
MEAT LOAF	1000 g	200°C	60 min.	3	Place directly in the dripping pan (M)
ROAST POTATOES	1000 g	200°C	45 min.	2	Turn 2 or 3 times during cooking
SPONGE CAKE	700 g	180°C	35 min.	3	Use a mold with hinge
PLUM CAKE	900 g	160°C	90 min.	3	Use a rectangular mold
BISCUITS	400 g	180°C	20 min.	2	Place directly in the dripping pan (M)
TART	1000 g	180°C	35 min.	2	A round mold can be used, placed on the wire rack (N), or alternatively directly the dripping pan (M)
DOUGHNUT	700 g	180°C	40 min.	3	Use a mold with hinge

Add around 5 minutes to the cooking time for preheating.

TRADITIONAL OVEN COOKING

This function is ideal for cooking great pizzas, lasagne, first courses au gratin, small fowl, all types of fish, stuffed vegetables au gratin and some types of cakes.

 
How to use the function:

Turn the function selector knob **(G)** to position .

Select the desired temperature using the thermostat knob **(D)**.

Turn the ON/OFF and timer knob **(F)** to the desired time.

Wait for the oven to reach the set temperature (the pilot light goes off), then place the dish containing the food on the wire rack (previously placed in the oven), or, if the food is in the dripping pan, place the pan directly into the guide (refer carefully to the table below). A bell will ring when the set time has elapsed.

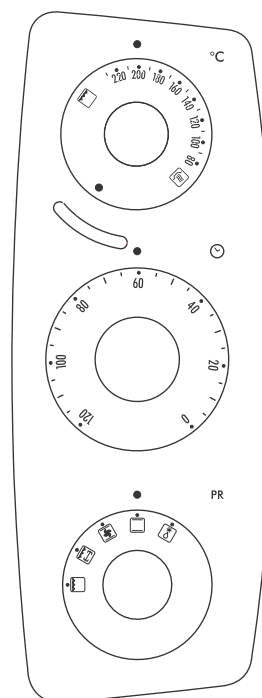

RECIPE	QUANTITY	THERMOSTAT KNOB	TIME	WIRE RACK/DRIPPING PAN POSITION	OBSERVATIONS AND TIPS
FRESH PIZZA	400 g	200°C	25 min.	3	Use the dripping pan (M)
FROZEN PIZZA	250 g	220°C	8 min.	2	Can be placed directly on the wire rack (N) or on the dripping pan (M)
FROZEN PIZZA	450 g	220°C	13 min.	2	Can be placed directly on the wire rack (N) or on the dripping pan (M)
LASAGNE	1500 g	200°C	40 min.	3	Place the lasagne pan (if supplied) or a baking pan directly on the wire rack (N)
CANNELLONI	2300 g	200°C	40 min.	3	Place the lasagne pan (if supplied) or a baking pan directly on the wire rack (N)
BAKED BREAM	1000 g	190°C	60 min.	3	Can be cooked directly on the dripping pan (M)
TROUT BAKED IN FOIL	800 g	200°C	60 min.	3	Place in the dripping pan (M) , wrapped in tinfoil
AUBERGINES WITH PARMESAN	1700 g	200°C	35 min.	2	Place the baking pan on the wire rack (N)
COURGETTES WITH TUNA	1000 g	200°C	50 min.	2	Use the dripping pan (M) : add oil, tomatoes and water
POTATOES AU GRATIN	1500 g	200°C	50 min.	2	Place the baking pan on the wire rack (N)
APPLE PIE	1000 g	190°C	90 min.	3	Place the cake tin on the wire rack (N)
MUFFINS	600 g	200°C	20 min.	2	Place the muffin cups directly on the dripping pan


Add around 5 minutes to the cooking time for preheating.

GRILLING AND COOKING AU GRATIN

This function is ideal for grilling hamburgers, chops, frankfurters, sausages, etc. In addition, this function may be used for browning foods: gnocchi alla romana, coquilles Saint-Jacques, etc.

How to use the function:

Fit the wire rack (**N**) in the upper guide (1) and the dripping pan (**M**) in the centre guide (2), as shown in Figure 1. A glass of water can be poured into the dripping pan (**M**) to make cleaning easier, and prevent smoke being produced by the burning fat.

Turn the function selector knob (**G**) to position .

Turn the thermostat knob (**D**) to position .

Turn the ON/OFF and timer knob (**F**) to the desired time.

Preheat the oven for 5 minutes, with the door slightly ajar (as highlighted in Figure 1).

Once the preheating time is complete, place the food being grilled directly on the wire rack (Figure 2) and close the door, leaving it ajar, as shown in Figure 3; remember to turn the food half way through cooking.

Important: for best results, place the food on the wire rack (N), leaving an empty space of around 2cm near the door (see Figure 2).

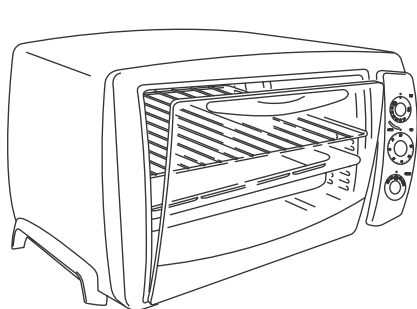 


fig. 1

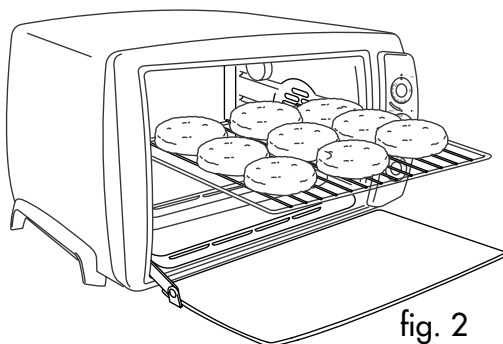 


fig. 2

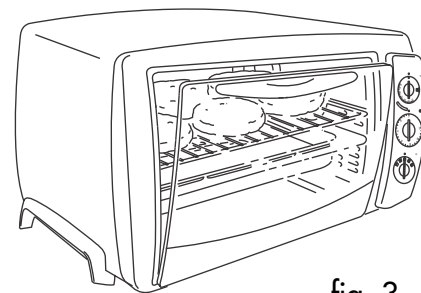 


fig. 3

In the case of food that has already been cooked or is to be cooked au gratin, place the container directly on the wire rack in the centre guide (2); the door must be left ajar as shown in Figure 4). A bell will ring when the set cooking time has elapsed; if cooking is completed before the end of the set time, manually turn the ON/OFF and timer knob (**G**) to position "0".



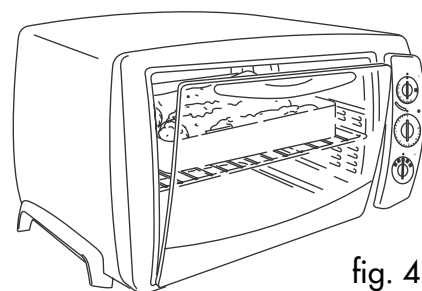 



fig. 4

 

 

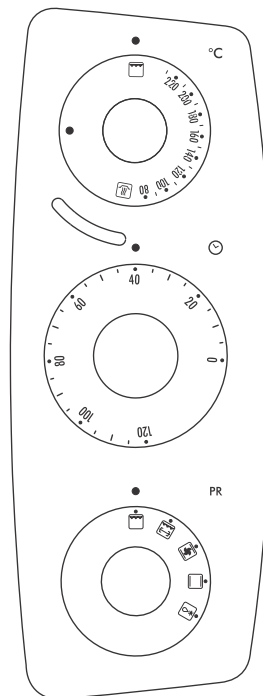

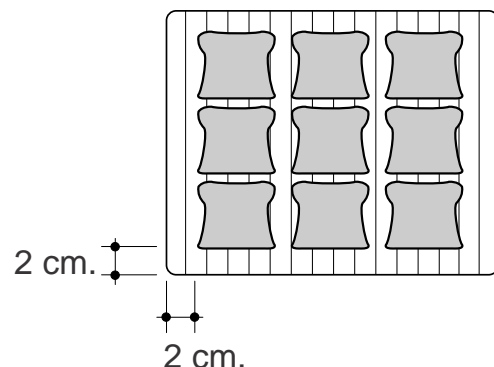 

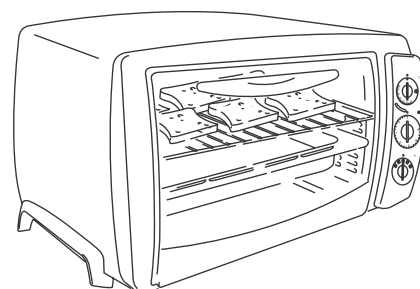
To correctly toast bread, place the slices as shown in the figure to the side, that is, leaving 2cm of free space at the ends of the wire rack.



FOR TOASTING BREAD ONLY; the oven door must be closed completely (as shown in the figure to the side)



The table below provides some useful tips for preparing great grilled food.

RECIPE	QUANTITY	THERMOSTAT KNOB	TIME	OBSERVATIONS AND TIPS
PORK CHOPS (4)	600 g		20 min.	Turn after approx. 12 minutes
SAUSAGES (12)	1200 g		25 min.	Pierce with a fork to drain the fat. Turn after approx. 15 minutes
HAMBURGERS (6)	700 g		20 min.	Turn after approx. 12 minutes
FRANKFURTERS (6)	500 g		10 min.	Turn after approx. 3-4 minutes
KEBABS (4)	650 g		25 min.	Turn after approx. 15 minutes
TOAST	9 slices		3,5 min.	Turn half way through toasting
GNOCCHI ROMANA	ALLA 1500 g		15 min.	Place the baking pan on the wire rack, positioned in the centre guide (2)

GRILLING WITH THE TURNSPIT (IF FITTED)

This function is ideal for cooking chickens on the spit, fowl in general, roast pork and veal.

Operate as follows:

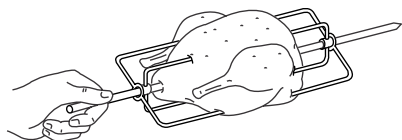 


fig. 5

Place the food on the spit (O) and hold it firm using the forks (for best results, tie the meat using kitchen string).

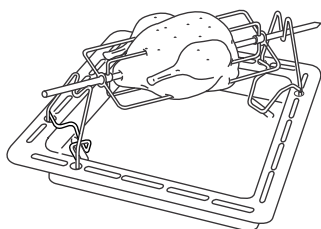 


fig. 7

Place the spit on the supports.

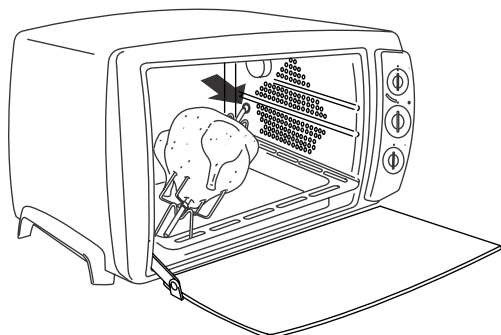 


fig. 9

Once the dripping pan is in place, push the spit into the turnspit mount (C), tilting the spit supports (P) to the right.

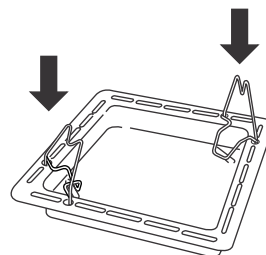 


fig. 6

Place the spit supports (P) on the dripping pan, in the holes provided.

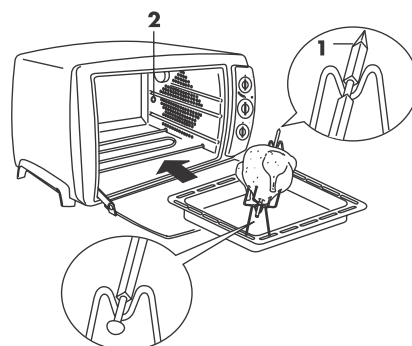 


fig. 8

Slide the dripping pan with the food being cooked into the lower guide (3), tilting the spit supports (P) to the left. **Make sure the point of the spit 1 is facing forwards and is correctly inserted into the hole 2.**

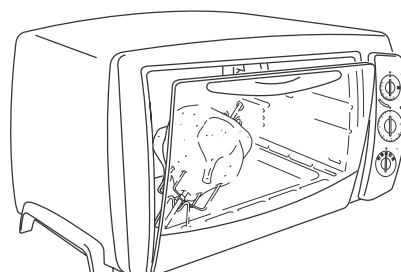 




fig. 10

Close the door, leaving it slightly ajar, as highlighted in the figure (half-open).

The oven does not need to be preheated for this function.

 
Turn the function selector knob (G) to position .

Turn the thermostat knob (D) to position .

Turn the ON/OFF and timer knob (F) to the desired time.

If the cooking time is longer than 2 hours, remember to reset the timer.

Once cooking is complete, manually turn the ON/OFF and timer knob (F) to position "0".

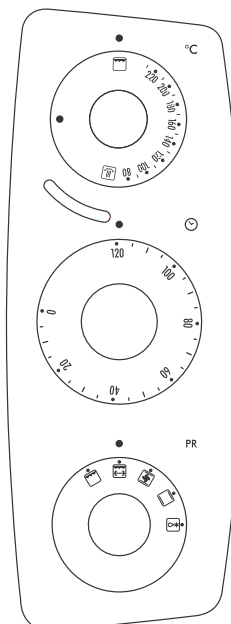

CHAPTER 3 - CLEANING AND MAINTENANCE

Frequent cleaning will prevent the formation of smoke and bad smells during cooking.

Before performing any cleaning operations, always unplug the appliance from the power socket.

Never immerse the appliance in water; do not wash it by spraying it with water.

The wire rack, dripping pan, crumb tray, lasagne pan (if supplied) and spit (if supplied) are washed like normal dishes, by hand or in the dishwasher.

Always use a damp sponge to clean the outer surface. Avoid using abrasive products that may damage the surface finish (enamel or paint). Make sure water or liquid soap does not infiltrate through the slits on the right-hand side of the oven.

To clean the inside of the oven, never use corrosive products and do not scrape the walls with sharp objects or blades. Only use non-abrasive liquid detergents.

Do not attempt to push forks, knives or sharp objects into the openings on the right-hand side and the rear of the oven.

Remove the crumb tray (L) by pulling it outwards (see Fig. 11). In case of difficulty, wet the outside parts of the tray. Remove any dirt with a damp cloth. Dry thoroughly and then **put the tray back in place**.

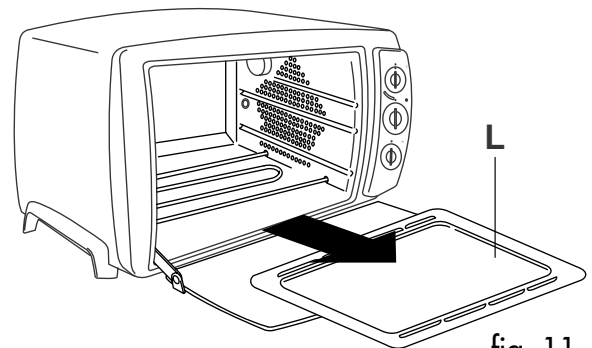 


fig. 11

OVEN LIGHT

The oven light (B) is always on when the oven is on. To replace the bulb, proceed as follows:

- unplug the appliance from the power socket
- unscrew the protective glass cover (X), by turning it anti-clockwise, and replace the bulb (Y) with a new one of the same type (see Fig. 12). Replace the protective glass cover (X).

Only use bulbs suitable for ovens (T300°C)

N.B. The oven can still be used even if the bulb is burnt-out

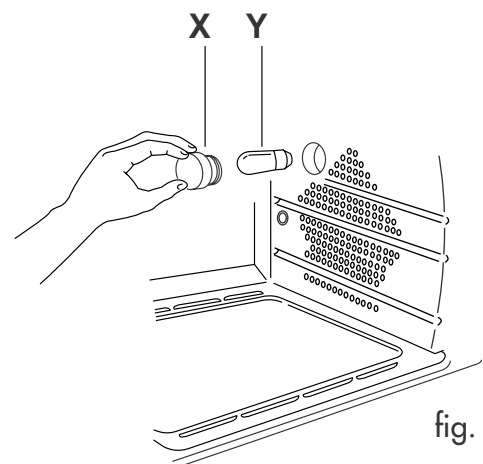 


fig. 12