



# **ELECTRIC OVEN**

# **電焗爐**

## **Instruction Manual**

## **說明書**

Model/ 型號：EO1835



# CONTENTS

## **CHAPTER 1 GENERAL**

1.1	Description of the oven and the accessories .....	3
1.2	Summary of operation .....	4
1.3	Specifications .....	5
1.4	Warnings .....	5

## **CHAPTER 2 USE OF THE OVEN AND REFERENCE COOKING TIMES**

2.1	Use of the controls .....	6
2.2	Tips on use .....	7
2.3	How to set the functions .....	7
	• Keeping food warm .....	7
	• Delicate cookin .....	7
	• Oven cooking .....	8
	• Grilling and cooking au gratin .....	9
	• Grilling with the turnspit (if fitted) .....	11

## **CHAPTER 3 CLEANING AND MAINTENANCE** ..... 12

### **IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

 
At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.





# CHAPTER 1 - GENERAL


## 1.1 - DESCRIPTION OF THE OVEN AND THE ACCESSORIES

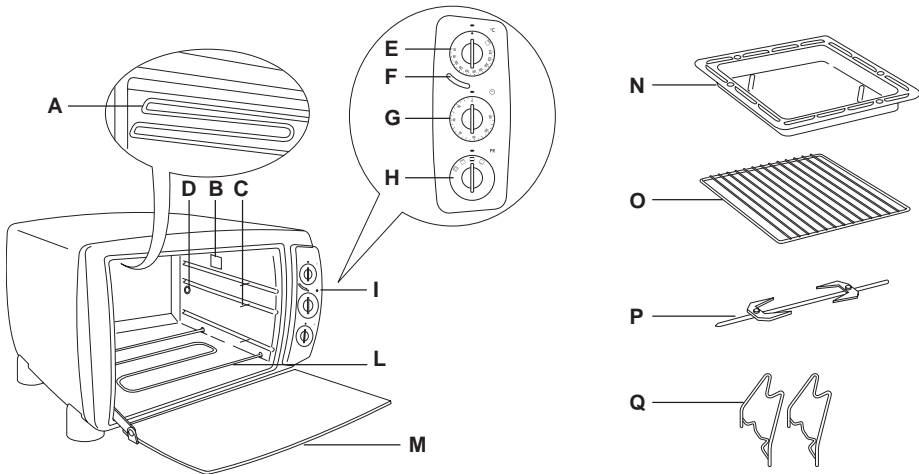

- |   |                            |   |                             |
|---|----------------------------|---|-----------------------------|
| A | Top heating element        | I | Control panel               |
| B | Oven light (if fitted)     | L | Bottom heating element      |
| C | Side guides                | M | Glass door                  |
| D | Turnspit mount (if fitted) | N | Dripping pan                |
| E | Thermostat knob            | O | Wire rack                   |
| F | Thermostat pilot light     | P | Spit (if supplied)          |
| G | On/off and timer knob      | Q | Spit supports (if supplied) |
| H | Function selector knob     |   |                             |

 
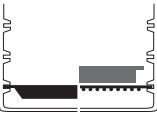 



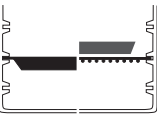 


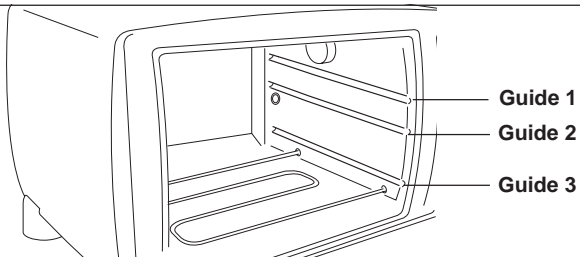




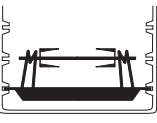 
### SIDE GUIDES

The oven features 3 guides for positioning the baking pans and wire racks at different heights





## 1.2 - SUMMARY OF OPERATION

PROGRAM	FUNCTION SELECTOR KNOB SETTING	THERMOSTAT KNOB SETTING	POSITION OF WIRE RACK AND ACCESSORIES	GUIDES	NOTES/TIPS
KEEPING FOOD WARM		60°C		1 2 3	If the food needs to be kept warm for longer than 20-30 minutes, it should be covered with tinfoil, to prevent it from becoming too dry.
DELICATE COOKING		60°C- 240°C		1 2 3	Use the dripping pan, sliding it directly into the lower guide, or a baking pan on the wire rack (in the lower guide)
OVEN COOKING		60°C-240°C (see table on page 8)	 or 	1 2 3 1 2 3	Use the dripping pan, sliding it directly into the guides, or a baking pan placed directly on the wire rack.
GRILLING AND COOKING AU GRATIN				1 2 3	Ideal for all types of traditional grill; hamburgers, frankfurters, kebabs, toast, etc. Place the food directly on the wire rack. The dripping pan is used to collect any drops of fat.
				1 2 3	Ideal for dishes that need to be cooked au gratin (e.g. coquilles Saint-Jacques, etc.). In this case, the container (with the food inside) should be placed on the wire rack.
GRILLING WITH THE TURNSPIT (IF FITTED)				1 2 3	Ideal for cooking chickens, fowl in general, roast pork, etc. A glass of water can be poured into the dripping pan to make cleaning easier and prevent smoke being produced by the burning fat.



## 1.3 - SPECIFICATIONS

Operating voltage ..... see rating plate

Maximum power absorbed ..... see rating plate

### POWER CONSUMPTION (CENELEC STANDARD HD 376)

To reach 200°C ..... 0,2 KWh

To maintain 200°C for one hour ..... 0,70 KWh

 
Total ..... 0,90 KWh

This appliance complies with EEC Directive 89/336 on electromagnetic compatibility.

The materials and objects that come into contact with food products comply with the provisions of EEC Directive 89/109.

## 1.4 - WARNINGS

1. This oven has been designed to cook food. It must not be used for other purposes and must not be modified or tampered with in any way.
2. The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.
3. Before using the oven, make sure it has not been damaged during transport.
4. Position the oven on a horizontal surface at a height of at least 85 cm, **out of the reach of children.**
5. The temperature of the door or the outer surface may be high when the appliance is operating: only touch the plastic knobs and handles. Do not place anything on top of the oven while in use.
6. Before using the oven for the first time, remove all the packaging and paper material inside, such as protective boards, booklets, plastic bags, etc.
7. Before plugging the oven into the power socket, make sure that
  - the mains power supply corresponds to the value shown on the rating plate, fitted to the rear of the appliance;
  - the power socket has a rating of at least 13A and is properly earthed; **the manufacturer declines all liability if this safety standard is not observed.**
8. Wash all the accessories thoroughly before use.
9. The following must be kept in mind when the door is open:
  - do not apply excessive force with heavy objects or by pulling the handle downwards.
  - never place heavy containers or hot pans just taken out of the oven on the open door.
10. Never move the oven when it is in operation.
11. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

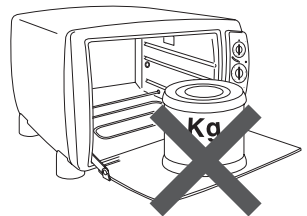

**Before using the oven for the first time, operate it empty with the thermostat set to maximum for at least 15 minutes, to eliminate the "new" smell and any smoke from the protective material applied to the heating elements before transport. The room must be ventilated during this operation.**




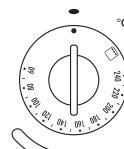 
# CHAPTER 2 - USE OF THE OVEN AND REFERENCE COOKING TIMES

## 2.1 - USE OF THE CONTROLS

### • THERMOSTAT KNOB (E)

 
Select the desired temperature as follows

- **Keeping food warm:** Thermostat knob set to 60°C.
- **Open cooking:** Thermostat knob set from 60°C to 240°C.
- **All types of grilling and cooking with the turnspit (if fitted):** Thermostat knob in position .




### • ON/OFF AND TIMER KNOB (G)

- **To switch the oven on and to set the cooking time:** Turn the knob clockwise to the desired time (max. 120 minutes). A bell will ring when the set time has elapsed, and the oven will automatically switch itself off.
- **To switch the oven off:** Turn the knob to position "0".




**When setting times of less than 10 minutes, first turn the knob all the way round, and then set the desired time.**

 


### • FUNCTION SELECTOR KNOB (H)

 
This knob is used to select from the available cooking functions, as follows:

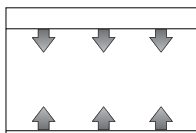

  **OVEN COOKING AND KEEPING FOOD WARM**  
(top heating element and bottom heating element on only)

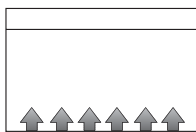

 
 **DELICATE COOKING**  
(lower heating element only operating)

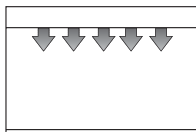

 **GRILLING**  
 **TURNSPIT (IF FITTED)**  
(top heating element on only, at maximum power)

### • THERMOSTAT PILOT LIGHT (F)

 The light comes on to indicate that the oven is heating up, and goes off when the oven has reached the set temperature.

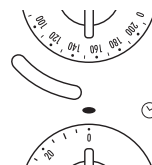




## 2.2 - TIPS ON USE

- For oven cooking and "delicate" cooking, for best results the oven should always be preheated to the desired temperature for 5 minutes.
- The cooking times depend on the quality of the products, the temperature of the food and individual tastes. The times given in the table are only intended as a guide, and may need to be varied. They do not take into account the time required to preheat the oven.
- When cooking frozen food, follow the recommendations on the package.

## 2.3 - HOW TO SET THE FUNCTIONS

### • **KEEPING FOOD WARM**

Place the dripping pan or the wire rack with a pan on top in guide no. 3, as shown in the figure on page 4. This function is used to keep the food warm until serving. The food should not be left in the oven too long, as it may become too dry (to avoid this, cover the pan with tinfoil or baking paper).

Turn the function selector knob **(H)** to position .


Turn the thermostat knob **(E)** to 60°C.

Turn the ON/OFF and timer knob **(G)** to the time desired. A bell will ring when the set time has elapsed; if the food being kept warm is served before the end of the set time, manually turn the ON/OFF and timer knob **(G)** to position "0".



### • **DELICATE COOKING**

Place the dripping pan or the wire rack with a pan on top in guide 3, as shown in the figure on page 4. Ideal for pastries and cakes with icing. Good results are also achieved when completing the cooking of the base of foods or for cooking that requires heat above all at the bottom. The baking pan should be inserted in the lower guide (3).

Turn the function selector knob **(H)** to position .


Select the desired temperature using the thermostat knob **(E)**.

Turn the ON/OFF and timer knob **(G)** to the time desired. A bell will ring when the set time has elapsed; if the food being kept warm is served before the end of the set time, manually turn the ON/OFF and timer knob **(G)** to position "0".





• **OVEN COOKING**

Turn the function selector knob **(H)** to position .

Select the desired temperature using the thermostat knob **(E)**.

Turn the ON/OFF and timer knob **(G)** to the time desired.

Wait for the oven to reach the set temperature (the pilot light goes off), then place the dish containing the food on the wire rack (previously placed in the oven), or, if the food is in the dripping pan, place the pan directly into the guide (refer carefully to the table below). A bell will ring when the set time has elapsed.



RECIPE	QUANTITY	THERMOSTAT KNOB	TIME	WIRE RACK/ DRIPPING PAN POSITION	OBSERVATIONS AND TIPS
FRESH PIZZA	400 g	200°C	25 min.	3	Use the dripping pan <b>(N)</b>
SAVOURY PIE	600 g	200°C	35 min.	3	Use the dripping pan <b>(N)</b> or a cake tin on the wire rack
FROZEN PIZZA	450 g	220°C	13 min.	2	Can be placed directly on the wire rack <b>(O)</b> or on the dripping pan <b>(N)</b>
LASAGNE	1500 g	200°C	40 min.	3	Place the baking pan directly on the wire rack <b>(O)</b>
CANNELLONI	2300 g	200°C	40 min.	3	Place the baking pan directly on the wire rack <b>(O)</b>
WHOLE CHICKEN	1500 g	220°C	90 min.	3	Pierce with a fork to drain the fat
ROAST PORK	1500 g	220°C	90 min.	3	Leave a little fat around the edges to prevent it from becoming too dry
MEAT LOAF	1000 g	200°C	60 min.	3	Place it directly in the dripping pan
RABBIT PIECES	1000 g	200°C	60 min.	3	Add a little water. If necessary, turn half way through cooking.
SEA BASS IN SALT	900 g	190°C	40 min.	3	Cover the fish completely with rock salt.
BAKED BREAM dripping pan (N)	1000 g	190°C	40 min.	3	Can be cooked directly on the
TROUT BAKED IN FOIL	800 g	190°C	40 min.	3	Can be cooked directly on the dripping pan (N) wrapped in tinfoil
AUBERGINES WITH PARMESAN	1700 g	200°C	30 min.	2	Place the baking pan on the wire rack <b>(O)</b>
COURGETTES WITH TUNA	1000 g	200°C	40 min.	2	Use the dripping pan <b>(N)</b> : add oil, tomatoes and water
POTATOES AU GRATIN	1500 g	200°C	40 min.	2	Place the baking pan on the wire rack <b>(O)</b>
APPLE PIE	1000 g	190°C	90 min.	3	Place the cake tin on the wire rack <b>(O)</b>
MUFFINS	600 g	200°C	18 min.	2	Place the muffin cups directly on the dripping pan

Add around 5 minutes to the cooking time for preheating.



### • GRILLING AND COOKING AU GRATIN

*This function is ideal for grilling hamburgers, chops, frankfurters, sausages, etc. In addition, this function may be used for browning foods: gnocchi alla romana, coquilles Saint-Jacques, etc..*

#### Operate as follows:

Place the food being grilled directly on the wire rack and the dripping pan **(N)** in the centre guide (2) as shown in Figure 1. Leave the door ajar as shown in Figure 2. Pour a glass of water into the dripping pan **(N)** to make cleaning easier and prevent smoke being produced by the burning fat.

Turn the function selector knob **(H)** to position .

Turn the thermostat knob **(E)** to position .

Turn the ON/OFF and timer knob **(G)** to the time desired.



**Important: for best results, place the food on the wire rack (O), leaving an empty space of around 2cm near the door (see Figure 1).**

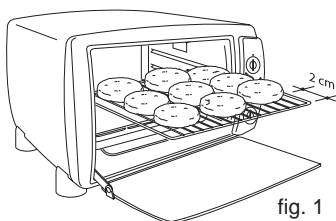 


fig. 1

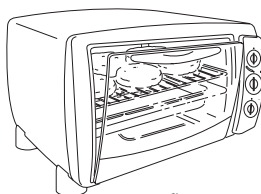 


fig. 2


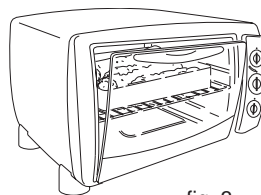 


fig. 3

 
In the case of food that has already been cooked or is to be cooked au gratin, place the container directly on the wire rack in the centre guide (2); the door must be left ajar as shown in Figure 3. A bell will ring when the set cooking time has elapsed; if cooking is completed before the end of the set time, manually turn the ON/OFF and timer knob (G) to position "0".



To correctly toast bread, place the slices as shown in the figure to the side, that is, leaving 2cm of free space at the ends of the wire rack.

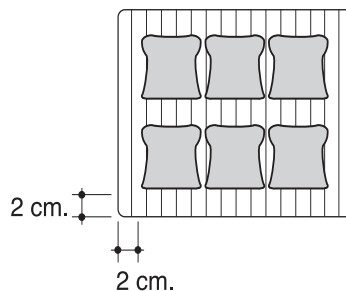

 **FOR TOASTING BREAD ONLY:** preheat the oven for 2-3 minutes with the door ajar (as shown in the figure to the side)

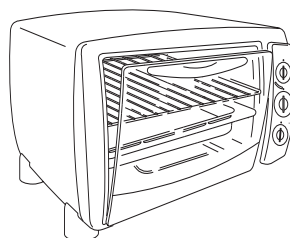

The table below provides some useful tips for preparing great grilled food.

RECIPE	QUANTITY	THERMOSTAT KNOB	TIME	OBSERVATIONS AND TIPS
PORK CHOPS (4)	600 g		20 min.	Turn after approx. 12 minutes
SAUSAGES (12)	1200 g		25 min.	Pierce with a fork to drain the fat. Turn after approx. 15 minutes
HAMBURGERS (6)	700 g		20 min.	Turn after approx. 12 minutes
FRANKFURTERS (6)	500 g		10 min.	Turn after approx. 3-4 minutes
KEBABS (4)	650 g		25 min.	Turn after approx. 15 minutes
TOAST	6 slices		3,5 min.	Turn half way through toasting.
GNOCCHI ALLA ROMANA	1500 g		15 min.	Place the baking pan on the wire rack, positioned in the centre guide (2)



• **GRILLING WITH THE TURNSPIT (IF FITTED)**

This function is ideal for cooking chickens on the spit, fowl in general, roast pork and veal.

**Operate as follows:**

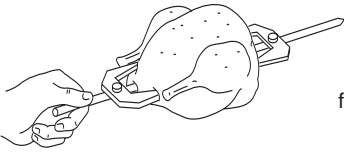 


fig. 4

Place the food on the spit (**P**) and hold it firm using the forks (for best results, tie the meat using kitchen string).

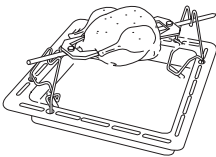 


fig. 6

Place the spit on the supports.

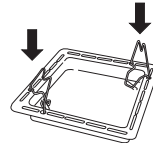 


fig. 5

Place the spit supports (**Q**) on the dripping pan, in the holes provided.

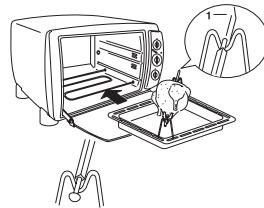 


fig. 7

Place the dripping pan with the food being cooked in the lower guide (3), tilting the spit supports (**Q**) to the left. **Make sure that the tip of the spit 1 is facing forwards.**

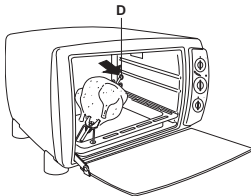 


fig. 8

Once the dripping pan is in place, push the spit into the turnspit mount (**D**), tilting the spit supports (**Q**) to the right.

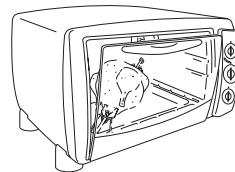 



fig. 9

Close the door, leaving it slightly ajar, as highlighted in the figure (half-open).

The oven does not need to be preheated for this function.

Turn the function selector knob (**H**) to position .

Turn the thermostat knob (**E**) to position .

Turn the ON/OFF and timer knob (**G**) to the time desired.

If the cooking time is longer than 2 hours, remember to reset the timer.

Once cooking is complete, manually turn the ON/OFF and timer knob (**G**) to position "0".





## CHAPTER 3 - CLEANING AND MAINTENANCE

Frequent cleaning will prevent the formation of smoke and bad smells during cooking.

**Before performing any cleaning operations, always unplug the appliance from the power socket, and wait for it to cool down.**

Never immerse the appliance in water; do not wash it by spraying it with water.

The wire rack, dripping pan, and spit (if supplied) are washed like normal dishes, by hand or in the dishwasher.

Always use a damp sponge to clean the outer surface. Avoid using abrasive products that may damage the surface finish (enamel or paint). Make sure water or liquid soap does not infiltrate through the slits on the right-hand side of the oven.

To clean the inside of the oven, never use corrosive products and do not scrape the walls with sharp objects or blades. Only use non-abrasive liquid detergents.

Do not attempt to push forks, knives or sharp objects into the openings on the right-hand side and the rear of the oven.

To make the bottom of the oven easier to clean, the lower heating element (L) must be raised by pulling it upwards and to the right (see Figure 10).

After cleaning, fasten the heating element back in place, as shown in Figure 11.

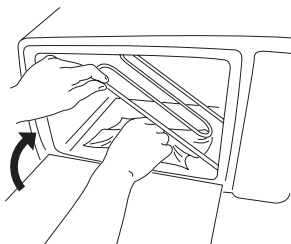 


fig. 10

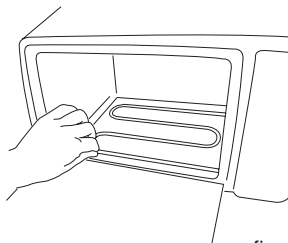 


fig. 11

### OVEN LIGHT (if fitted)

The oven light (B) is always on when the oven is on. To replace the bulb, contact authorised personnel or an authorised Service Centre.

**N.B. The oven can still be used even if the bulb is burnt-out .**