






DESCRIPTION

- A** Handle
- B** Cable wind button
- C** Parking position clip
- D** ON/OFF button
- E** Air outlet grill
- Handgrip with remote control (certain models only)**
 - F** Infrared transmitter (there are two emitters, enabling the signal to be transmitted from all working positions)
 - G** "Power Control" button (selects vacuum power level)
 - H** "StopVac"  button (pauses during vacuuming)
 - I** Remote control battery compartment door
- J** Handgrip extraction tabs
- K** Tool compartment
- L** Hose
- M** Telescopic or rigid extensions

- N** Two position carpet/floor brush
- O** Crevice tool
- P** Brush tool (if present)
- Q** Multipurpose nozzle for upholstered furniture (if present)
- R** Shoulder strap
- Control panel A (models with remote control)**
 - S** Dust bag full indicator
 - T** Power level indicators
 - U** Power reduction button
 - V** Power increase button
 - W** Infrared signal receiver
- Control panel B (models with power regulation)**
 - S** Dust bag full indicator
 - X** Power regulation knob

IMPORTANT SAFEGUARDS

- Read this manual carefully and keep for future reference.
- Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate.
- Connect the appliance to sockets with a minimum current rating of 10 A only.
- **When not in use or before cleaning or maintenance, always unplug the appliance from the mains socket.**
- Non lavare mai l'apparecchio con trielina o altri solventi.
- Never vacuum up liquids.
- Never allow the appliance to be used by persons (including children) with psychological, physical or sensory impairments or with insufficient knowledge, unless closely supervised and instructed by someone responsible for their safety. Children must be supervised to ensure they do not play with the appliance.
- Use the appliance for domestic use only as described in the instructions.
- If the appliance appears defective, do not use.
- Do not pull the power cable out beyond the point indicated by the red mark. The yellow mark before the red mark indicates that the cable is about to run out.
- For repairs or to buy accessories, contact an authorised technical service centre only.
- The manufacturer cannot be held responsible for any damage caused by tampering or improper or incorrect use of the product.
- If the power cable is damaged, it must be replaced by the manufacturer or an authorised technical service centre in order to avoid all risk.
- Never unplug the appliance by pulling the power cable or the appliance itself.
 - Do not run the appliance over the power cable. 
 - Do not vacuum up matches, ash or cigarette ends when still lit. 
 - Never use the appliance on wet surfaces. 
 - Avoid obstructing the air intake or air vent grill. 
 - Never vacuum up needles, staples or pieces of string.

The manufacturer reserves the right to modify appliances and tools without warning.

ASSEMBLY INSTRUCTIONS

Assembling the appliance

Join the hose to the handle, insert the hose into the coupling on the appliance and press until it hooks into place (fig. 1). To remove the hose, press the lever at the side and pull the hose out (fig. 2).

Telescopic or rigid extensions (M)

Connect the telescopic extension to the end of the hose handgrip.

The telescopic extension enables the hose to be extended to the required length (fig. 3).

For versions without telescopic extension, join the two rigid extensions (fig. 4), connect them to the hose handgrip and attach the required tool to the opposite end.


N.B: All vacuuming tools can be connected either directly to the hose handgrip or to the telescopic or rigid extension.

USING THE CLEANING TOOLS


- **Shoulder strap** (fig. 5) (certain models only)
To use the appliance for the widest possible range of cleaning needs, use the easy-to-fit shoulder strap provided.
- **Two position carpet/floor brush**
Pos. 1: to clean hard floors, bristles out (fig. 6).
Pos. 2: to clean carpets and rugs, bristles in (fig. 7).
- **Multipurpose nozzle for upholstered furniture** (fig. 8) (certain models only)
To clean upholstered furniture, mattresses, garments, car seats etc.
- **Crevice tool** (fig. 9)
to clean radiators, corners, edges, drawers, etc.
- **Brush tool** (fig. 10) (certain models only)
Fitted with a joint to facilitate cleaning. Particularly suitable for removing dust from fabric, furniture, books, curtains, frames and clothing.

INSTRUCTIONS


Before using the appliance, extract the power cable completely and plug into the mains.

To rewind the cable, unplug and press the cable wind button  (fig. 11).

 

Operation


To turn the vacuum cleaner on, lightly press the ON/OFF button  (D) (fig. 12). In models with remote control, press the switch to turn the remote control unit on.

Models with remote control:

While cleaning, you can interrupt vacuuming by pressing the "StopVac" button  (H) on the remote control. To resume cleaning, press the "Power Control" button (G).

The effectiveness of the remote control is guaranteed by means of two signal transmitters, enabling the signal to be transmitted both from the front and the back. However, bear in mind that the remote control should always be pointed towards the appliance.

NB: the "StopVac" button  (H) interrupts vacuuming but does not turn the appliance off. To turn off, press the ON/OFF button  (D).

To turn the appliance on, always press the ON/OFF button  (D).

Electronic vacuum power regulation

The electronic regulator enables suction power to be varied according to the type of surface to be cleaned.

The maximum power of the appliance can therefore be exploited to vacuum dust from carpets or hard floors (marble, ceramics, cotto, etc) and a lower suction power to clean curtains or other light fabrics.

Models with remote control

By pressing the + or - button on the appliance (U or V) and (if present) on the remote control (button G) (fig. 13). You can choose between three power levels. The LED corresponding to the level chosen lights up (fig. 14).

NB: the power can also be regulated with the batteries flat by using the + or - (U or V) button on the appliance.

Models with power regulation knob (X- fig.15)

Turn the power regulation knob (X) towards MIN to reduce the power or towards MAX to increase it.

CLEANING

Dust bag full indicator (Fig. 16)

The dust bag full indicator (S) indicates when the dust bag needs changing or the vacuum hose is blocked.

You should change the bag before the full length of the indicator turns red to guarantee optimum hygiene and the quality of the air emitted into the environment.

Replacing the dust bag

To change the paper dust bag, pull the bag compartment opening lever (fig. 17) and lift the cover. Remove the bag carefully by pulling the fixing lever towards you (fig. 18).

This moves the bag backwards and enables it to be removed easily.

Thread the new bag into the guides and push as far as it will go.

The bag provided with the appliance has a handy closure to avoid dust leaks. Just pull the edge of the paper until it is closed (fig. 19).

Hook the bag holder back in place and close the cover of the appliance exerting light pressure.

You should change the dust bag frequently when vacuuming up very fine dirt such as flour, talcum powder, etc.

NB:

The appliance has a safety device which prevents the dust bag compartment cover being closed when there is no dust bag in place.

Motor protection filter

To extend the working life of the appliance and protect the motor, it is vital to keep the motor protection filter clean.

To access the filter, open the dust collection container, extract the dust bag and remove the filter holder (fig. 20).

If the filter is not excessively dirty, simply remove the dust.

If particularly clogged, it must be washed and dried.

Make sure the filter is dry before putting it back in the appliance.

When replacing the filter, make sure it is positioned correctly.

Air outlet microfilter

Depending on the model, your appliance is fitted with a microfilter or high efficiency filter (HEPA Filter**). This is housed under the air outlet slits.

Remove the rear grill (E) (fig. 21), take out the filter and wash with water.

When completely dry, put back in place then

reposition the grill correctly.

You should replace the filter at least every five dust bag changes. For HEPA filter models, replace the filter every four dust bag changes.

**** The HEPA Filter (High Efficiency Particulate Air) removes impurities down to a size of 0.3 microns, filtering all types of particle and even bacteria.**

Important warning:

Never use the appliance without the filter.

Never wash the filter in the washing machine or dry with a hairdryer.

"PARKING" POSITION

The appliance is provided with a clip at the bottom to enable it to be put away safely and tidily in the parking position (C) (Fig. 22)

If you have to interrupt cleaning for a brief period, the appliance has a convenient "parking" system. Insert the bracket on the brush joint (N) into the clip (C) at the rear of the appliance (Fig. 23).

IMPORTANT WARNING

Malfunction of the appliance (low power, unusual noise or complete breakdown) could be caused by obstructed nozzles or hoses or faulty electrical components.

Check the nozzles, dust bag and motor protection filter.

If this does not resolve the problem, take the appliance to an authorised service centre.

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dust-bin.