

 
IMPORTANT SAFEGUARDS

- Read this manual carefully and keep for future reference.
- Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate.
- Connect the appliance to sockets with a minimum current rating of 10 A only.
- When not in use or before cleaning or maintenance, always unplug the appliance from the mains socket.
- Check the filters regularly and if necessary shake or replace them.
- If you wash the filters, make sure they are completely dry before replacing in the appliance.
- Never wash the appliance with triethylene or other solvents.
- Never vacuum up liquids.
- Never leave the appliance turned on when unattended. Keep away from children and unfit persons.
- Use the appliance for domestic purposes only as described in the instructions.
- If the appliance appears defective, do not use.
- Do not pull the power cable out beyond the point indicated by the red mark. The yellow


mark before the red mark indicates that the cable is about to run out.

- For repairs or to buy accessories, contact an authorised technical service centre only.
- The manufacturer cannot be held responsible for any damage caused by tampering or improper or incorrect use of the product.
- If the power cable is damaged, it must be replaced by the manufacturer or an authorised technical service centre in order to avoid all risk.
- If the power cable is damaged, it must be replaced by the manufacturer or an authorised technical service centre in order to avoid all risk.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

The manufacturer reserves the right to modify appliances and tools without warning.



 
Never unplug the appliance by pulling the power cable or the appliance itself.

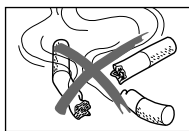


Never vacuum up matches, ash or cigarette ends when still lit.



 
Avoid obstructing the air intake or air vent grill.

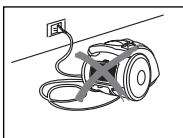

 Do not run the appliance over the power cable.

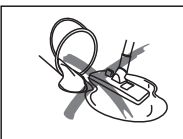

 Never use the appliance on wet surfaces.

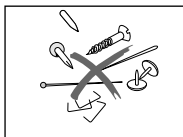

Never vacuum up needles, staples or pieces of string.

Important information for correct disposal of the product in accordance with EC Directive 2002/96/EC.



At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder

of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

DESCRIPTION

A	Suction port	I	Air discharge grill
B	Dust drum removal button	L	Air outlet filter
C	Dust drum handle	M	Hose
D	Appliance handle	N	Two position carpet/floor brush
E	ON/OFF pedal	O	Multipurpose nozzle
F	Power regulator knob	P	Crevice tool with brush
G	Cable wind pedal	Q	Telescopic extension
H	Parking position	R	Tool holder

Make sure the HEPA filter is always inserted in the drum before operating the appliance. Using the appliance without the filter could cause damage to the motor.*

USING THE CLEANING TOOLS

Hose (fig. 1)

Attach the connector to the coupling and push in until it locks into place (fig. 1). To remove, press the release button on the connector and pull out.

Telescopic tube (fig. 2)

The telescopic extension enables the hose to be extended to the required length (fig. 2). Just slacken the ring and pull out the extension.

Two position carpet/floor brush

Pos. 1: to clean hard floors, bristles out (fig.3).

Pos. 2: to clean carpets and rugs, bristles in (fig. 4).

Multipurpose nozzle for upholstered furniture (fig. 5)

 
To clean upholstered furniture, mattresses, garments, car seats etc.

Crevice tool with brush (fig. 6)

Fitted with a joint to facilitate cleaning. Particularly suitable for removing dust from fabric, furniture, books, curtains, frames and clothing.

TOOL HOLDER

The tool holder on your appliance enables you to keep the smallest tools close at hand. After attaching the tools to the tool holder, hook the tool holder to the telescopic extension near the handgrip. (See figure).

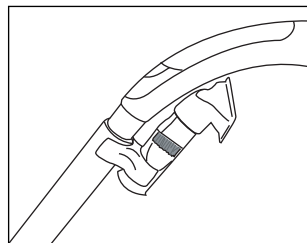

INSTRUCTIONS

Before using the appliance, extract the power cable completely and plug into the mains. To rewind the cable, unplug and press the cable wind pedal  (fig. 7) .

Operation

To turn the vacuum cleaner on, lightly press the ON/OFF  pedal (fig. 8).

Suction power regulation

Turn the power regulator to electronically regulate suction power according to the type of surface to be cleaned.

The maximum power of the appliance can therefore be exploited to vacuum dust from carpets or hard floors (marble, ceramics, cotto, etc) and a lower suction power to clean curtains or other light fabrics.

Rotate the power regulator to vary the power (fig. 9).

Safety device

The appliance has a safety device which trips and turns the appliance off if the motor overheats. To turn it on again, unplug from the mains, eliminate the cause of the overheating (eg. clogged nozzle, dust drum full, filters dirty, see the "Cleaning" chapter) and leave the appliance to cool down (at least 20 minutes). Plug in again and press the ON/OFF pedal. If the appliance does not come on, contact a service centre.

CLEANING

When the collected dust reaches the MAX level marked on the dust collection drum, the drum must be emptied.

Empty the drum (ordinary cleaning)

- 1) Extract the drum completely by gripping the handle and pressing the button (fig. 10).
- 2) Place the drum over a rubbish bin and press the lever (fig. 11). The drum lid opens and the dust drops into the bin;
- 3) Close the cover.
- 4) Replace the drum on the appliance.

Clean the filters in the drum (regular cleaning)

Regularly and whenever the appliance becomes less efficient, you are recommended to clean the dust collection system thoroughly.

- 1) Empty the drum;
- 2) Rotate the filter (fig. 12) and remove.
- 3) Clean the HEPA* filter by shaking it and brushing it with a brush (fig. 13) (do not use wire or hard bristle brushes as they could damage the filter material). About every six months or so, the filters should be washed under running water.
- 4) Dry the filter thoroughly;
- 5) Replace the filter in the drum;
- 6) Close the drum and replace in the appliance.

* The HEPA (High Efficiency Particulate Air) filter removes impurities down to a size of 0.3 microns, filtering all types of particle and even bacteria.

Note: Make sure the HEPA* filter is always inserted in the drum before replacing the drum on the appliance. **Using the appliance without the filter could cause damage to the motor.**

Air outlet filter

Depending on the model, your appliance is fitted with a microfilter or high efficiency filter (HEPA Filter*) This is housed under the air outlet slits. Remove the air discharge grill, take out the filter and when visibly dirty, clean.

Reposition the grill correctly.

Caution: Never use the appliance without the filter.

"PARKING" POSITION

The appliance is provided with a clip at the bottom to enable it to be put away safely and tidily in the parking position (fig. 14)

If you have to interrupt cleaning for a brief period, the appliance has a convenient hose "parking" system. Insert the bracket on the brush joint into the housing on the bottom of the appliance. (Fig. 15).

IMPORTANT WARNING

Malfunction of the appliance (low power, unusual noise or complete breakdown) could be caused by obstructed nozzles or hoses or faulty electrical components.

Then check the nozzles, hose and inspection hatch and clean the drum filters regularly. If this does not resolve the problem, take the appliance to an authorised service centre.

WARRANTY

Everyone opening the box containing the De'Longhi product should read the entire instruction manual carefully before performing any operation involving the product. Most importantly, you should make sure the voltage of the appliance is compatible with the voltage of the mains socket. All De'Longhi electrical appliances are guaranteed free of all material and manufacturing defects.

According to the terms of this Guarantee, our obligations are limited to replacement or repair free of charge at one of our authorised service centres of parts or assemblies with fabrication defects or damaged during transport to the shop of your choice. The date considered will always be the date of sale to the consumer.

Improper use of the product invalidates the guarantee. This De'Longhi product is designed and produced for domestic use only. Its use on commercial premises is not recommended and will invalidate the Guarantee.

With the exception of authorised De'Longhi centres, no person or company is authorised to repair our products. No third party is authorised to assume responsibility for our products on our behalf.

This guarantee is valid for a twelve month (one year) period from the date of sale to the first consumer. The tax code or number of an alternative identity document of the purchaser must be given on the official receipt.

IMPORTANT: the OFFICIAL RECEIPT must be attached to the guarantee in order to take advantage of your rights.

DE'LONGHI BRASIL

Rua Alexandre Dumas Nº 1658

Cep 04717-004

São Paulo -S.P.

Brasil

Sac 11.51886650 - Fax 51886651

