 
 
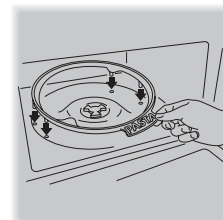 


## To cook the "Pasta"

 
 
- Put the pan support inside the microwave located to the four specific pegs. Put the "Pasta" inside the specific pan.

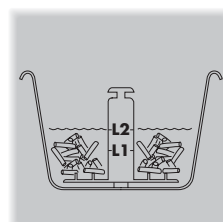


- Fill to the required water level (L1 or L2) on the mixer; the water has to cover completely the "Pasta". Salt the water, close the lid and put the pan inside the microwave.

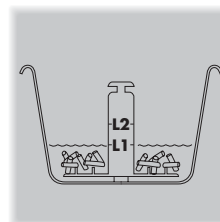


- Push one of the two water buttons, to select on the display the level of water inside the pan (L1 or L2): the blue button, if you poured cold water inside the pan; the red one, if you poured hot water inside the pan.

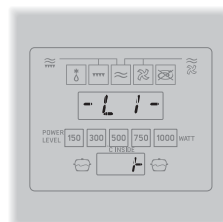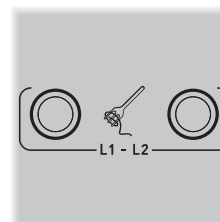

  
- Select the cooking time written on the "Pasta" packaging (to obtain "pasta al dente" consider one minute less), turning the timing knob.

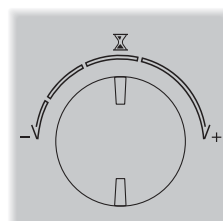

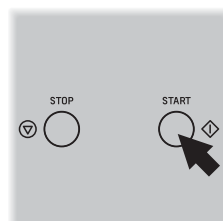

- Push the START button to begin cooking. At the end of cooking, the microwave advises you with a sound, so you can drain the "Pasta".




## Microwave only

- Prepare food and place on turntable: close oven door.
- Choose microwave function by repeatedly pressing function button until the symbol  is the only one displayed
- Use time adjust knob to select time of cooking
- Press power level button repeatedly until desired power level is indicated.
- Press start
- The microwave oven will beep three times and "END" will display when cooking time is completed.


## Microwave with Grill

- Prepare food and place on the lower rack: close oven door.
- Choose microwave plus grill function by repeatedly pressing the function button until the two symbols   are displayed together.
- Use time adjust knob to select time of cooking
- Press power level button repeatedly until desired power level is indicated.
- Press start
- The microwave oven will beep three times and "END" will display when cooking time is completed.


## Grill only

- Prepare food and place on the high rack: close oven door.
- Choose grill function by repeatedly pressing function button until the symbol  is the only one displayed
- Use time adjust knob to select time of cooking
- Press start
- The oven will beep three times and "END" will display when cooking time is completed.



## Defrost

- Prepare food and place on the turntable: close oven door.
- Choose defrost function by repeatedly pressing function button until the symbol  is the only one displayed
- Use time adjust knob to select time of defrosting
- Press start
- The oven will beep three times and "END" will display when defrosting time is completed.

## Fan Oven only

- Prepare food and place on the lower rack: close oven door.
- Choose fan oven function by repeatedly pressing function button until the symbol  is the only one displayed
- Use time adjust knob to select time of cooking
- Press temperature button repeatedly until the desired temperature is indicated
- Press start (it will take a few minutes for the oven to reach the correct temperature)
- The oven will beep three times and "END" will display when cooking time is completed.

## Microwave plus Fan Oven

- Prepare food and place on the lower rack: close oven door.
- Choose microwave plus fan oven function by repeatedly pressing function button until the two symbols   are displayed together.
- Use time adjust knob to select time of cooking
- Press power level button repeatedly until desired power level is indicated.
- Press temperature button repeatedly until the desired temperature is indicated
- Press start (it will take a few minutes for the oven to reach the correct temperature)
- The oven will beep three times and "END" will display when cooking time completed.