

IMPORTANT:

- 1) Always close the cover "A" before operating the dasher.
- 2) Never leave the selector in the "cold" position for more than two minutes.
- 3) After turning the appliance off from the "cold" position, always wait at least five minutes before starting it up again.
- 4) The appliance must never be laid on its side or turned upside down.

DESCRIPTION

- | | |
|-----------------------|----------------------|
| A) Cover | D) Function selector |
| B) Dasher | E) Ventilation grill |
| C) Removable cylinder | F) Carrying handle |
| | G) Scoop |

WARNINGS

Read this manual thoroughly before installing and using the appliance. This is the only way to ensure the best results and maximum safety for the user. Save these instructions for future reference.

- Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate. Only connect the appliance to a power supply and sockets with a minimum current rating of 10A and provided with an earth connection.
- In the event of incompatibility between the socket and the plug on the appliance, the plug should be replaced by a suitable type by qualified personnel only.
- The safety of this appliance is guaranteed only if correctly connected to a proper and effective earth connection as specified by current electrical safety standards and regulations. The manufacturer cannot be considered responsible for damage caused by the absence of an earth connection on the power supply line.
If in doubt, consult an expert.
- After removing the packing, make sure the appliance is not damaged. If in doubt, do not use the appliance and contact professional personnel.
- The packing elements (plastic bags, polystyrene foam, etc.) should be kept out of the reach of children as they are a safety hazard.
- Adapters, multiple sockets and/or extensions should not be used. If their use is necessary, only adapters, multiple sockets and extensions complying with current safety standards and regulations should be used, taking care not to exceed the power limit indicated on the adapter.
- This appliance is intended for household use only. Any other use is considered improper and thus dangerous.
- The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.
- The appliance must NEVER be laid on its side or turned upside down.

- After the compressor shuts down, always wait at least five minutes before starting it up again.
 - Use the appliance away from heat sources. Keep it at a distance of at least 20 cm from walls or other objects which could obstruct free air circulation.
 - Never remove the cover while the dasher is moving.
- The use of all electrical appliances implies the observance of some fundamental rules.

In particular:

- Never touch the appliance with wet or damp hands or feet. Never immerse the appliance in water.
- Never use the appliance in bathrooms.
- Never pull the power cable.
- Never leave the appliance plugged in unnecessarily without supervision as it could be a safety hazard. Before cleaning or servicing, disconnect the appliance by removing the plug from the socket.
- In the event of malfunction or faulty operation, switch off and do not attempt to repair. For all repairs contact a Customer Service Centre appointed by the manufacturer only and ask for original spare parts. Failure to respect the above could reduce the safety of the appliance.
- When the appliance is to be discarded, after unplugging from the mains, the cable should be cut to make the appliance unusable.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent in order to avoid a hazard.
- Unplug the appliance when not in use. Do not leave plugged in unnecessarily.

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the envi-

ronment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

INSTRUCTIONS

ASSEMBLY AND DISASSEMBLY

To disassemble the appliance, remove the cover and extract the dasher from the spindle in the centre of the cylinder, then remove the cylinder. To assemble the appliance, insert the cylinder pressing down with the hands on the edge (figure 1), insert the dasher and put on the cover.

OPERATION

Assemble the appliance as described in the chapter "ASSEMBLY AND DISASSEMBLY". Pour the ingredients required for the chosen recipe into the cylinder and position the cover, rotating anticlockwise. Remember that the maximum capacity of the cylinder is **600 g**.

Plug into a suitable mains socket. Make sure nothing obstructs free circulation of air through the side grills.

Important: never operate the appliance without the cylinder. Make sure the outside of the cylinder is completely dry before inserting it in the appliance.

Process the ingredients by rotating the selector to the required position.

DESCRIPTION OF THE SELECTOR

The function selector has four different positions:

Dasher rotation (compressor off)

To mix the ingredients during the first phase of ice cream processing. **Important:** you cannot pour ingredients into the cylinder while the dasher is moving.

0 Appliance off

Cooling (compressor comes on)

This function enables you to add ingredients or taste the contents during ice cream preparation or to stop the dasher to check the texture of the ice cream.


Important: never leave the appliance in this position for more than a maximum of **two** minutes. Beyond this time, the dasher rotation mechanism could be seriously damaged.

Simultaneous rotation of the dasher and cooling (compressor on)

To prepare the ice cream

This function must be turned off as soon as the ice cream has reached the required texture.

Normally each ice-cream making cycle lasts a maximum of one hour. Continuous operation beyond this time will result in excessively hard ice-cream and serious damage to the dasher rotation mechanism.

Important: when preparing ingredients requiring whipping (egg whites, egg and sugar, etc), you are recommended to prepare the ingredients in a bowl and when ready pour the mixture into the cylinder. In this case, choose the  function immediately. **0**.

ONCE THE ICE CREAM IS READY...

When the ice cream is ready, turn off the appliance by placing the selector in the " **0** " position.

Remove the cover and dasher, extract the cylinder and use the scoop provided to transfer the ice cream into another container.

CLEANING AND CARRYING

Before cleaning, always turn the appliance off by placing the selector in position "0" and unplugging from the mains socket.

Thoroughly wash all parts of the machine in close contact with food each time the appliance is used. The dasher, cylinder and cover can be dishwasher washed.

Dry the bottom of the cylinder compartment thoroughly (figure 2) to avoid ice forming during ice cream preparation, prolonging ice cream processing times.

The appliance must NEVER be laid on its side or turned upside down.