

IMPORTANT SAFEGUARDS

Read all this manual thoroughly before using the appliance. This is the only way to ensure the best results and maximum safety for the user.

Save these instructions for future reference.

- It is dangerous to modify or alter the characteristics of the appliance in any way.
- The appliance must be installed in conformity with national legislation regulating electrical equipment.
- Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate.
Connect the appliance to an efficiently earthed power supply and sockets with a minimum current rating of 10A only.
- If the socket and the plug of the appliance are incompatible, the socket should be changed by a qualified professional only.
- The manufacturer cannot be considered responsible for damage caused by the absence of an earth connection on the power supply line.
If in doubt, consult a qualified professional.
- If the power cable is damaged, it must be replaced by the manufacturer or the manufacturer's Customer Services in order to avoid all risk.
- This appliance must be used exclusively by adults.
- Never allow the appliance to be used by persons (including children) with psychological, physical or sensory impairments or with insufficient knowledge, unless closely supervised and instructed by someone responsible for their safety.
Children must be supervised to ensure they do not play with the appliance.
- After removing the packing, make sure the appliance is not damaged.
If in doubt, do not use the appliance and contact a qualified professional.
- Do not leave packaging (plastic bags, polystyrene foam, etc) within reach of children as it could be dangerous.
- The materials used for packaging can be recycled.
You are therefore recommended to dispose of them in special differentiated waste collection containers.
- Do not use extension leads.
- Do not install the appliance in rooms containing gas, oil or sulphur. Do not install near sources of heat.
- Keep the appliance at least 50 cm away from flammable substances (alcohol etc) or pressurised containers (e.g. aerosol cans).
- Do not rest heavy or hot objects on top of the appliance.

- This appliance is intended for household use only. It must not be used outdoors.
Any other use is considered improper and thus dangerous.
- The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.

Important:

- **The appliance must not be laid on its side or turned upside down.**
- **Wait at least 1 hour after transporting the appliance before starting it**
- **Do not leave the selector in the  position for more than 1 minute.**
- **Use the appliance away from heat sources. Leave at least 20 cm between the appliance and walls or objects which could obstruct free air circulation.**
- **Do not remove the lid while the dasher is moving.**

The use of all electrical appliances implies the observance of some fundamental rules.

In particular:

- Never touch the appliance with wet or damp hands or feet.
Never immerse the appliance in water.
- Never use the appliance in bathrooms.
- Do not pull the power cable.
- Before cleaning or servicing, disconnect the appliance by unplugging from the mains.
- In the event of malfunction or faulty operation, switch off and do not attempt to repair.
For all repairs contact the manufacturer's authorised Customer Services only and ask for original spare parts.
Failure to respect the above could reduce the safety of the appliance.
- When the appliance is to be discarded, after unplugging from the mains, the cable should be cut to make the appliance unusable.
- Unplug the appliance when not in use.
Do not leave plugged in unnecessarily.
- At the end of its working life, take the appliance to a specialist waste collection centre.

Materials and accessories coming into contact with food conform to EEC directive 1935/2004.

This appliance also complies with the relevant EC directives, including on radio interference suppression.

ENVIRONMENTAL INFORMATION:

This unit contains fluorinated greenhouse gases covered by the Kyoto Protocol.

Maintenance and disposal must be carried out by qualified personnel only (R134a - GWP=1300).

Transport, filling, cleaning, recovery and disposal of refrigerant should be performed by the manufacturer's authorised Customer Services only. The appliance should be disposed of by a specialist centre authorised by the manufacturer only.

DESCRIPTION

- A) Lid
- B) Dasher
- C) Removable cylinder
- D) Function selector
- E) Ventilation grille
- F) Hollow to facilitate moving the appliance
- G) Spatula (2 provided)
- H) Wheels

IMPORTANT:

- 1) Always close the lid "A" before operating the dasher.
- 2) **Do not leave the selector in the  position for more than 1 minute.**
- 3) The appliance must not be laid on its side or turned upside down.

INSTRUCTIONS

THE FOLLOWING INSTRUCTIONS APPLY WHETHER USING THE CYLINDERS TOGETHER OR SEPARATELY.

ASSEMBLY AND DISSASSEMBLY

To take the appliance apart, remove the lid, then remove the dasher from the pin in the centre of the cylinder.

Then remove the cylinder.

To reassemble the appliance, insert the cylinder and press downwards on the edge with the hands (fig. 1). Insert the dasher then fit the lid.

OPERATION

Assemble the appliance as described in the chapter "ASSEMBLY AND DISSASSEMBLY".

You are recommended (fig. 3) to moisten the aluminium bottom of the appliance evenly with cotton wool dipped in **alcohol** for food use taking care not to pour it onto the central plastic area (fig. 3). Remember that alcohol is inflammable. You should therefore perform this operation away from flames or hot stoves. This prevents the formation of ice between the cylinder and aluminium bottom of the appliance, making it easier to extract the cylinder

when preparation is complete.

Place the ingredients required by the recipe in the cylinder and fit the lid by turning anticlockwise.

Bear in mind that the cylinder holds a maximum of **600 g**.

Plug into a suitable mains socket.

Make sure there are no obstacles preventing air from circulating freely through the grilles at the sides.

The pair of wheels **H** make it easy to move the appliance on the work surface.

Once you have added all the ingredients to the cylinder, turn the appliance on by placing the selector in the  position.

Important: never use the appliance without the cylinder. Make sure the outside surface of the cylinder is completely dry before inserting it in the appliance.

Process the ingredients by turning the selector to the required position.

DESCRIPTION OF SELECTOR

The selector has 4 different positions:

Dasher rotation (compressor off)

Use this function to mix the ingredients during the first phase of ice-cream preparation.

Important: you cannot add ingredients to the cylinder while the dasher is in movement.

0 Appliance off.

Chilling (compressor operating)

Use this function to add or taste ingredients during preparation or to stop the dasher to check the texture of the ice-cream.

If the recipe requires ingredients to be added (pieces of chocolate, raisins, meringues...), turn the selector to the  position for a maximum of 1 minute.

Important: you must never leave the appliance in this position for more than 1 minute.

Leaving it in this position for longer could seriously damage the dasher rotation mechanism.

Combined dasher rotation and chilling (compressor operating)

 Use this function to make the ice-cream through the combined action of the compressor and the dasher. When the ice-cream reaches the required texture, place the selector in the 0 position to turn the appliance off.

Important: always remove the cylinder from the base when the ice-cream is ready, particularly if you are using the 2 cylinders together and one finishes first. Do not wait for the second cylinder to complete the cycle.

Each ice-cream making cycle usually lasts a maximum of about 50 minutes with the 2 cylinders operating simultaneously and about 30

minutes when only 1 cylinder is in operation. Continuous functioning beyond this time will result in excessively hard ice-cream and serious damage to the dasher rotation mechanism.

The ice-cream preparation process described is valid whether you are using one or both cylinders, given that each cylinder works independently.

The ice-cream preparation time may vary according to the ingredients used.

Below is a general recipe which should be taken as purely indicative. The times are influenced by room temperature, the ingredients and the quantities.

TYPE OF ICE-CREAM (*):

- **Fiordilatte (milk, sugar and cream):**
 - **600 g (1 cylinder):** about 25 min
 - **1200 g (2 cylinders):** about 45 min (35 min if you use alcohol)
- **Crema ice-cream (milk base, eggs and cream):**
 - **600 g (1 cylinder):** about 20 min
 - **1200 g (2 cylinders):** about 45 min (35 min if you use alcohol)
- **Fruit ice-cream (milk base, fruit and cream):**
 - **600 g (1 cylinder):** about 30 min
 - **1200 g (2 cylinders):** about 50 min (45 min if you use alcohol)

(*) The times are calculated using the procedure described in the Instructions.

Important: if you need to work the ingredients with a whisk (e.g., to froth the egg whites, beat the eggs and sugar, etc.), you are recommended to prepare the ingredients in a separate container and then pour them into the cylinder.

You can then select the   function to start making the ice-cream.


ONCE THE ICE-CREAM IS READY

When the ice-cream is ready, turn the appliance off by placing the selector in the 0 position.

Remove the lid, the dasher and the cylinder, then use the scoop provided to transfer the ice-cream to another container.

Then follow the normal ice-cream preparation procedure, inserting first the cylinder containing the ingredients, then the dasher and finally the lid.

When the ice-cream is ready, turn the appliance off by placing the selector in the 0 position, remove the lid and cylinder and dry the aluminium bottom with a cloth.

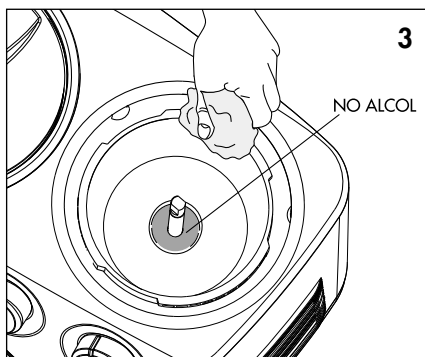

CLEANING AND TRANSPORT

Before cleaning, always turn the appliance off by placing the selector in the 0 position and unplug the appliance from the mains socket.

Always wash the components of the appliance in direct contact with the ingredients thoroughly whenever you use the appliance.

Dasher, cylinder and lid can also be washed in the top basket of a dish washer.

You are recommended to use a short low temperature programme.

Dry the bottom of the cylinder thoroughly (fig. 2) before use to avoid ice forming during ice-cream preparation, thus prolonging the ice-cream preparation time.

The appliance must not be laid on its side or turned upside down.

Important information for correct disposal of the product in accordance with EC Directive 2002/96/EC.



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.