

## RADIANT HEATER


### Technical Data

| Type             | Category | Maximum Input |     | Medium Input |     | Low Input |     | Gas pressure |
|------------------|----------|---------------|-----|--------------|-----|-----------|-----|--------------|
| see rating label |          | KW            | g/h | KW           | g/h | KW        | g/h |              |
|                  |          | 4.20          | 305 | 2,85         | 207 | 1,50      | 109 |              |

This appliance is designed to operate with Butane, propane or mix LPG at nominal pressure:  $28 \div 30$  mbar. For a correct gas combustion the required air quantity is  $8,4 \text{ m}^3/\text{h}$ .

### WARNINGS

- ALWAYS use heater in accordance with instructions. Read the instructions book carefully and keep it in a safe place.
- This appliance requires a rubber tube and a pressure regulator in accordance with the law in force. If not supplied check with your gas supplier.
- Use ONLY in a well ventilated area.
- This appliance MUST NOT be used in basements, high rise flats, bathrooms or bedrooms and in rooms having volume less than  $15 \text{ m}^3$  ( $30 \text{ m}^3$  in living rooms).
- This appliance emits the combustion residues in the room in which is used.
- DO NOT place clothes or other materials on the heater, as apart from the danger of fire their presence could affect the efficient working of the appliance (fig. 1).
- DO NOT move heater from room to room when it is lit (fig. 2).
- DO NOT position heater alongside a wall or near curtains or arm-chairs etc. (fig. 3 - 4).

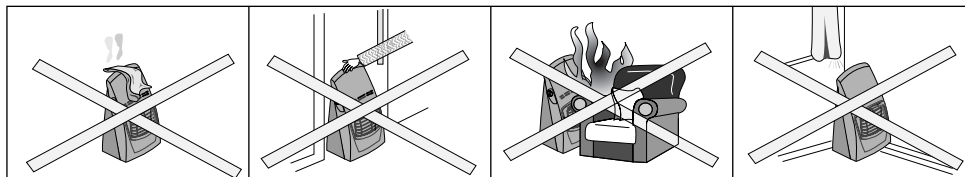

- ALWAYS face heater towards centre of room. Special care should be taken if the heater is on a surface where it can move or twist on its wheels or castors if knocked by a child or dog, etc.
- Minimum Clearance : 200 mm from sides, 1500 mm from front.
- Be sure installation is complying to local standard.
- The heater you have purchased is fitted with safety devices which come on in the event of malfunctioning while the appliance is in use. If the pilot light (placed opposite the burner) accidentally goes out, or if the room is not sufficiently ventilated, the safety device will block the gas flow, causing the heater to go off.
- Do not use the heater at high altitudes.

### Gas leakages

If a leak is suspected, turn off gas at the gas bottle, open the window and air the room. DO NOT disconnect the pressure regulator. Extinguish all naked lights. Slowly turn the gas on and brush the connections with soapy water or liquid detergent - a gas leak will form bubbles. If a leak is found, turn the gas off and inform your Dealer. DO NOT use the heater again until it has been inspected by your Dealer.

NEVER USE MATCHES TO FIND LEAKS.


## ASSEMBLY

- 1) Remove the polystyrene fixing the heater base plate and the heater front panel.


Remove the heater base plate from the polystyrene.

Place the heater base plate on the floor or on a flat surface.

Remove the two screws from the holes "A" (fig.5).

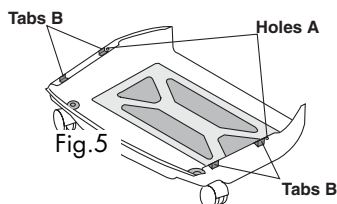


- 2) Position the heater's front panel assembly over the base plate, and align the four tabs "B" on the base with the four slots "C" in the bottom of the front panel assembly. With the four tabs correctly engaged, push the front panel assembly forwards as far as the tabs will slide in their slots to align the screw holes "A" in the base plate with the screw holes "D" in the bottom of the front panel assembly (fig.6).

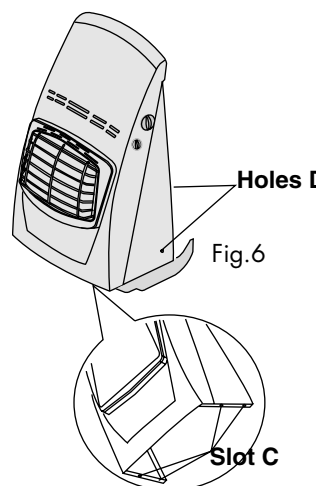


- 3) Fit the front panel assembly to the base plate by fixing the two screws (removed previously) through the aligned screw holes (holes D and A) (fig.7).

Place the gas cylinder in the gas cylinder compartment and connect the regulator to the cylinder as shown on page 4.

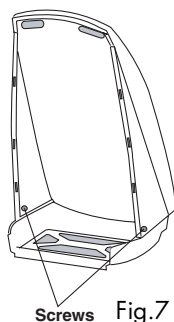

- 4) Finally, fit the flexible rear panel. First, engage the two clips located on the top cover, in order to bend the panel and fix it into shape. Then insert the four tabs in the six slots at the rear of the heater body **Attention:** to unhook press on the relevant clips (fig.8).

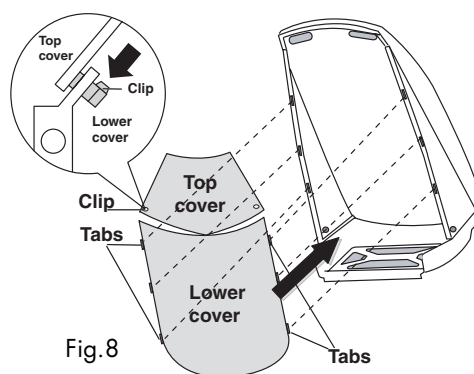

## GENERAL SAFETY INSTRUCTIONS

### Gas bottle

Gas Bottle with 15 kg of maximum capacity can be installed.

Changing of gas bottle must not be carried out in the presence of a naked flame.

Use the gas bottle always in upright position. If a screw on regulator is used ensure that the regulator washer is present and in good condition -replace if in any doubt.

To place the bottle in position, remove the rear panel which faces the inside during transport, by unfastening the screws; than put the bottle in position and replace the panel.

Do not turn the bottle upside down to use completely its content.

### Pressure regulators, rubber tubes and clips

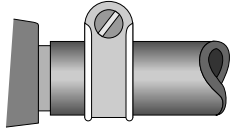


fig. 9

CHECK that tubing is completely over the nozzles at each end of the tubing and that it is held firmly in place by tube clips (See fig.9). Examine flexible tubing regularly and get your Dealer to fit new tubing 400 mm long complying to local standard, if perished, worn or damaged. In any case replace the tube every 5 years.

When connecting the pressure regulator to the gas bottle avoid undue twisting of the flexible tubing.

A 28 ÷ 30 mbar (11.2 in w.g.) pressure regulator for Butane or Propane complying to local standard must be connected to the appliance with the above tubing, using suitable tube clips.

### Ventilation

#### USE ONLY IN A WELL VENTILATED ROOM

Adequate ventilation must be provided in rooms in which the heater is used. This ensures removal of the products of combustion and allows the entry of replacement air.

The following table shows the smallest size of room suitable for each heat setting and the dimensions of the aperture which must be provided equally divided between high and low level, according with the maximum, medium or minimum power.

| Control knob setting                                                                                                             | Room Size           | Room Aperture       |
|----------------------------------------------------------------------------------------------------------------------------------|---------------------|---------------------|
| 1) Position <br>small flame<br>(low rate)     | 15 m <sup>3</sup>   | 105 cm <sup>2</sup> |
| 2) Position <br>big flame<br>(maximum rate)   | 28.5 m <sup>3</sup> |                     |
| 3) Position <br>medium flame<br>(medium rate) | 42 m <sup>3</sup>   |                     |

### Safety guard

The guard is to prevent risk of fire and no part of it should be permanently removed.

**It does not give full protection for young children or the infirm.**

## OPERATING INSTRUCTIONS

### Lighting the heater

1. Turn on the gas at the gas bottle tap.
2. FROM « ● » POSITION, fully depress the control knob for 10 seconds and turn to  (Small Flame) position. (If pilot flame does not ignite return to starting position and repeat). Continue to fully depress the knob for a further 20 seconds to allow the thermocouple probe to heat up, then turn the knob to select the desired setting as follows:  
 (Small Flame) Low Input                       (Medium Flame) Medium Input,  
 (Big Flame) Maximum Input,

### Auxiliary ignition

Should piezoelectric starter fail to work, repeat operation on control knob and use a match to light pilot flame.

### Turning off the heater

Turn off the gas bottle tap.

The Heater will be totally "OFF" only if the tap at the gas bottle is turned off.

### Important

When the operating knob is left at the end of the starting time (see rating plate), this must move up about 5 mm and return to his starting height. If this does not happen, shut the gas valve and contact your aftersales service centre. Do not let the item work with the operating knob pressed downwards by force.

## MAINTENANCE

Wipe your appliance with a soft damp cloth and only when it is switched off, cold and unplugged. Do not use solvents or abrasives detergents.

Check that there is no dust blocking the air inlet or outlet grids. Clean using a vacuum cleaner. When not in use remove plug from socket and store cable as shown in Fig. 6. When not in use the heater should be covered and stored in a dust-free place. Refer any major maintenance to your Local Authorised Dealer. Major servicing should be carried out every 2 - 3 years. If in doubt refer to your nearest authorised dealer.