

IMPORTANT

Read this manual thoroughly before using the appliance. This will ensure optimum results and maximum safety. Save these instructions for future reference.

IMPORTANT SAFEGUARDS

Read the following instructions carefully.

- Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate.
Connect the appliance to an efficiently earthed power supply and sockets with a minimum current rating of 10 A only.
- If the socket and power cable plug are incompatible, the socket should be changed by a qualified professional only.
- The safety of this appliance is guaranteed only if correctly connected to an efficient earth system as specified by current electrical safety standards and regulations.
- The manufacturer cannot be considered responsible for damage caused by the absence of an earth connection on the power supply line. If in doubt, consult a qualified professional.
- Do not leave the iron unattended when plugged in.
- Never leave the appliance filled with water in a room where it will be subject to a temperature below or equal to 0°C.
- After removing the packing, make sure the appliance is not damaged.
If in doubt, do not use the appliance and contact a qualified professional.
- Do not leave packaging (plastic bags, polystyrene foam, etc) within reach of children as it could be dangerous.
- Adapters, multiple sockets and/or extensions should not be used.
If their use is necessary, only adapters, multiple sockets and extensions complying with current safety standards and regulations should be used, taking care not to exceed the power limit indicated on the adapter.
- This appliance is intended for household use only. Any other use is considered improper and thus dangerous.
- Noises could occur when the steam generator is heating up or cooling down. This is due to normal expansion of the metal it is made from.
- The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.
- If the tank door is damaged, replace it with an original spare part.
- To repair or if the power cable is damaged and requires replacement, contact an authorised Customer Service Centre in order to avoid compromising the efficiency of your appliance and guarantee the validity of the guarantee.
For the same reasons, you are always recommended to use original spare parts.
- Use the iron rest provided ONLY. If it is damaged, use an original replacement only.
- **IMPORTANT!!**
In the case of malfunction, steam is discharged through a safety valve on the bottom of the control unit. You will hear a loud whistling noise caused by opening of the valve. You should immediately turn the appliance off, unplug and contact an authorised service centre. Do not use the ironing system for dry ironing without the steam generator!!

The use of all electrical appliances implies the observance of some fundamental rules.

IN PARTICULAR:

- Never touch the appliance with wet or damp hands or feet.
Never immerse the appliance in water.
 - Never use the appliance in bathrooms.
 - Never pull the power cable or the appliance with wet or damp hands or feet.
 - Never let children or unfit persons use the appliance without supervision.
 - Never leave the appliance plugged in as it could be a safety hazard.
 - **IMPORTANT: the tube connecting the iron to the steam generator may become hot.**
 - Before cleaning or servicing, disconnect the appliance by unplugging from the mains.
 - In the event of malfunction or faulty operation, switch off and do not attempt to repair.
For all repairs contact a Customer Service Centre appointed by the manufacturer only and ask for original spare parts.
Failure to respect the above could reduce the safety of the appliance.
 - When the appliance is to be discarded, after unplugging from the mains, the cable should be cut to make the appliance unusable.
 - The power cable of this appliance should not be changed by the user.
If it is damaged or needs replacing, contact a Customer Service Centre appointed by the manufacturer.
 - To add water, use the switch (7) to turn the ironing system off. Never fill the appliance under running water.
 - All contact between the hot base and cables must be rigorously avoided.
 - If the safety thermistor is activated, the appliance switches off automatically.
Before re-use, it must be serviced by a qualified professional.
 - Do not direct the steam jet toward people as this could be dangerous.
 - Do not use the iron on excessively damp clothes.
 - After ironing, allow the iron to cool before putting away.
 - NEVER mix the water in the tank with stain removers, additives or perfumed oils.
This reduces the safety of the appliance and irreparably damages the steam generator which would have to be replaced.
 - Unplug the appliance when not in use.
Do not leave plugged in unnecessarily.
 - During use, the steam generator should not be moved.
 - If the ironing system is dropped causing visible damage to the appliance (steam generator or iron), do not use. Take to an authorised service centre.
 - The steam generator should be placed on a flat surface extremely resistant to high temperatures.
 - The appliance must be used on a stable ironing board
- This appliance complies with directive 89/336/EEC on radio interference suppression.

DESCRIPTION

- 1) Steam button lock (certain models only)
- 2) Steam discharge button
- 2A) Steam discharge trigger (certain models only)
- 2B) Steam discharge wheel with top and bottom activation and end lock for continuous delivery (certain models only).
- 3) Iron thermostat knob
- 4) "Iron at temperature" indicator light
- 5) Cable wands
- 6) Iron rest
- 7) ON/OFF switch
- 8) Cable winder (certain models only)
- 9) Housing for cable wands
- 10) Steam regulation knob
- 11) "No water" indicator
- 12) Water fill door
- 13) "Steam ready" indicator light

USEFUL TIPS

- The original appearance and softness of fabrics such as velvet or wool, or gloves, bags etc. can be restored by passing the iron a short distance away with the steam jet in operation.
- To remove the marks left by furniture and restore carpets to new, allow the steam to penetrate into the flattened pile and brush lightly.
- Do not rest or use the iron on zips, hooks, rings etc to avoid scratching the plate.
- Keep the surface of the plate clean. To clean, when cold, wipe the surface with a damp cloth. The iron must never be treated with descaling products.
- After use, always wait for the iron to cool down before putting away. When the iron is hot, take care not to touch the tank.
- Store the iron in a dry place.
- After ironing, the water remaining in the tank need not be drained.
However, the appliance should be drained of water if left unused for long periods.
- Separate clothes according to the recommended ironing temperature and begin ironing with items requiring the lowest temperatures.
- Silk may be dry-pressed on the reverse.
- Wool, cotton and fine linen can either be steam-ironed on the reverse or on the right side, inter-

posing a thin cloth between the iron and the fabric to avoid "shine".

- Starched fabrics require greater moisture.
- Iron whites and light colours on the right side and dark colours on the reverse. Embroidery should also be ironed on the reverse to make it stand out.
- Linen can be steam-ironed with abundant steam. Iron dark colours on the reverse to avoid "shine".
- Iron lapels on the right side to make them stand out.
- Each time the iron is used (including for the first time) or if you have not used the steam for several minutes, press the steam button several times away from the ironing board.
This will eliminate cold water from the steam circuit.
- During use, the iron can be rested in a "vertical" position (fig. 4). However, make sure the surface is even to avoid the iron falling over.
- The ironing system has two cable wands.
Before starting to iron, you should put the cable wand in the correct position to optimise movement of the iron feed tube and avoid obstructing ironing.
If you are right-handed, extract the left wand by pulling out first the back part then the front with an upwards movement (fig. 1). Then position the wand in the housing in line with the other wand (fig. 2).
If you are left-handed, perform the above operation with the right wand (fig. 3).
To put the wand away after ironing, perform the operation in reverse, inserting first the front part, then the back.

Important: during ironing, the wand fixed to the base of the control unit could become hot. Do not touch!

INSTRUCTIONS

STEAM IRONING

Before steam ironing, make sure the fabric is suitable for this kind of ironing.

The machine works with **normal tap water**. In case of very hard water (hardness above 27°F) we suggest using 50% distilled water diluted with tap water.


Never use distilled water alone.

Never use chemical substances or detergents (eg perfumed water, essences, descaling solutions, etc).

Filling the tank and connecting to the mains

Make sure the power cable is unplugged from the mains socket.

Always top up the tank before starting to iron.

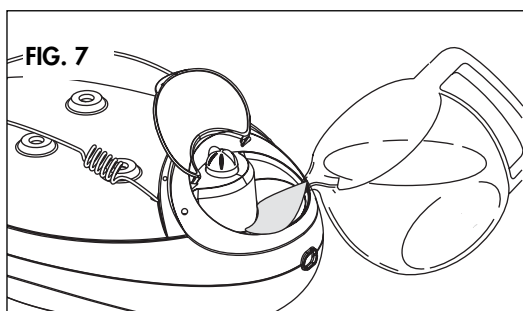

Lift the fill door (12) using the special tab.

Top up until you see water appear in the filling area (fig. 7).

Always top up with water each time you turn your ironing system on, even if you want to dry iron.

This will prolong the life of your ironing system and once working pressure has been reached (about 2 minutes), the resistor will be disconnected, enabling you to save electricity.

Then plug the appliance into the mains.

Operation

Push the ON/OFF switch (7) to turn power to the steam generator on. The "steam ready" light (13) and "iron at temperature" light (4) come on.

NB: When used for the first time, the appliance may give off smoke and an odour for several minutes. This is caused by heating and subsequent drying of the sealers used in assembling the steam generator and iron.

The room should be ventilated.

It is also normal to hear the noise of the pump conveying water to the steam generator.

Position the thermostat regulation knob (3) in the area indicated in the figure according to the type of fabric to be ironed (fig. 5).

Wait for the "steam ready" (13) and "iron at temperature" (4) lights to go out before starting to iron.

NB: both indicator lights will go on and off during ironing, according to the temperature reached by the steam generator and iron.

This is part of normal operation and is not a cause for concern.

While ironing, it is normal to hear the water fill pump come on and go off.

This is caused by transfer of water from the tank to the steam generator.

This is part of normal operation and is not a cause for concern.

The steam regulation knob (10) enables the quantity of steam to be increased or decreased.

NB: When you turn the iron on, you are recommended to turn the steam regulation knob to the maximum steam position.

Steam discharge in models with professional iron

To obtain steam, press the steam button (2) located on the iron.

NB: If your iron has both the button (2) and trigger (2A), you can choose to use either the top button or the bottom trigger as you prefer.


In certain models with professional iron, a slide (1) allows a **continuous output of steam** to be obtained by keeping the steam button pressed down mechanically, avoiding the need to do so manually.

To use, simply press the button (2) and slide the lock backwards.

To release the button, slide the lock forwards.

Steam discharge in models with domestic iron

To obtain steam discharge, rotate the wheel (2B) forwards. The wheel can be rotated from the bottom of the handgrip (fig. 8).

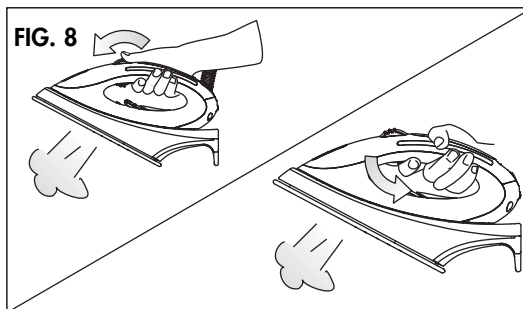

To obtain **continuous steam** rotate the wheel forwards until it locks into place.

Topping up the tank with water

When the water in the steam generator runs out, the light (11) comes on. You should top-up the water in the tank as soon as possible (max. 2 minutes) following the same procedure as filling for the first time. This will enable you to continue ironing without interruption.

If you top up too late (more than 2 minutes), the system will stop discharging steam. Once the level of water in the tank has been topped up, the appliance will operate as if turned on for the first time.

Steam will be ready in 5 minutes and during these 5 minutes you can hear the pump fill 4 or 5 times for about 30 seconds.

The steam generator is now stabilised and will operate as normal, filling the water every now and then.

When the "no water" light (11) comes on, you should not continue steam ironing with the pump vibrating.

If this practice is continued, in the long run it could irreparably damage internal components.

- When the water in the tank has run out, the pump becomes noisier. This is part of normal operation and is not a cause for concern. However, as described above, you should immediately top up the water in the tank.

- Never leave the water fill door (12) open: after topping up the level of water in the steam generator, you should close it to avoid ruining the iron plate.
after finishing ironing, you should put the ironing system away with the door tightly closed to avoid dust and foreign bodies falling into the tank and possibly jeopardising operation of the pump.

DRY IRONING

Plug the appliance into the mains.

Press the switch (7) to turn power to the appliance on. The indicator lights (4) and (13) come on.

Position the thermostat regulation knob (3), according to the type of fabric to be ironed (fig. 5).

When dry ironing, do not use the steam control (2 or 2B).

NB: When the iron has reached the selected temperature, the indicator light (4) goes out.

AFTER IRONING

Wait until the iron has cooled down, then put the iron rest back in its original position.

When the iron is hot, take care not to touch the tank.

Certain models are provided with a cable winder.

Subject to changes