

**IMPORTANT**

Read this manual thoroughly before using the appliance. This will ensure optimum results and maximum safety. Save these instructions for future reference.

**WARNINGS**

Carefully read the following instructions.

- Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate. Only connect the appliance to a power supply and sockets with a minimum current rating of 10 A and provided with an earth connection.
- If the socket and mains lead plug are incompatible, the socket should be changed by qualified personnel only.
- The safety of this appliance is guaranteed only if correctly connected to a proper and effective earth connection as specified by current electrical safety standards and regulations. The manufacturer cannot be considered responsible for damage caused by the absence of an earth connection on the power supply line. If in doubt, consult an expert.
- Do not leave the iron unsupervised when plugged into the power socket.
- Never leave the appliance filled with water in a room where it will be subject to a temperature below or equal to 0°C.
- After removing the packing, make sure the appliance is not damaged. If in doubt, do not use the appliance and consult an expert.
- The packing elements (plastic bags, polystyrene foam, etc.) should be kept out of the reach of children as they are a safety hazard.
- When unpacked, the removable water tank is detached from the appliance and in a separate bag.
- Adapters, multiple sockets and/or extensions should not be used. If their use is necessary, only adapters, multiple sockets and extensions complying with current safety standards and regulations should be used, taking care not to exceed the power limit indicated on the adapter.
- This appliance is intended for household use only. Any other use is considered inappropriate and consequently dangerous.
- Noises could occur when the steam generator is heating up or cooling down. This is due to normal expansion of the metal it is made from.
- The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.
- If the water tank is damaged, replace with original spare parts.
- For all repairs and for replacement of the mains lead if damaged contact an authorised service centre to maintain the efficiency of your appliance and the validity of the guarantee. For the same reasons, you are always recommended to use original spare parts.
- **Use the iron rest provided ONLY. If it is damaged, use only an original replacement.**
- **IMPORTANT!!**  
In the event of malfunction, the appliance has a safety valve which discharges the steam from the bottom of the steam generator. On opening of the valve, you will hear a loud whistle. Immediately turn the iron off, unplug it from the mains and contact an authorised Customer Service Centre.

The use of all electrical appliances implies the observance of some fundamental rules.

**IN PARTICULAR:**

- Never touch the appliance with wet or damp hands or feet. Never place the appliance in water.
- Never use the appliance in bathrooms.
- Never pull the mains lead or the appliance with wet or damp hands or feet.
- Never let children or unfit persons use the appliance without supervision.
- Never leave the appliance plugged in as it could be a safety hazard.
- Before cleaning or servicing, disconnect the appliance by removing the plug from the socket.
- In the event of malfunction or faulty operation, switch off and do not attempt to repair. For all repairs contact a Customer Service Centre appointed by the manufacturer only and ask for original spare parts. Failure to comply with this warning could compromise the safety of the appliance.
- When the appliance is to be discarded, after unplugging from the mains, the lead should be cut to make the appliance unusable.
- The mains lead of this appliance should not be changed by the user. If it is damaged or needs replacing, contact a Customer Service Centre appointed by the manufacturer.
- Before adding water, always remove the tank from the appliance: never fill the appliance under running water.
- Never use the drain cap to fill the steam generator except when rinsing.
- All contact between the hot base and cables must be rigorously avoided.
- If the safety thermistor is activated, the appliance switches off automatically. Before re-use, it must be serviced by qualified personnel.
- Do not direct the steam jet toward people as this could be dangerous.
- Do not use the iron on excessively damp clothes.
- After ironing, allow the iron to cool before putting away.
- To unscrew the steam generator drain cap, always wait until the generator is cold and has been unplugged for more than two hours.
- NEVER mix the water in the tank (5) with stain removers, additives or perfumed essences. This would jeopardise the safety of the appliance and irreparably damage the steam generator, possibly requiring it to be replaced.
- Unplug the appliance when not in use. Do not leave plugged in unnecessarily.
- During use, the steam generator should not be moved.
- The steam generator should be placed on a flat surface extremely resistant to high temperatures.

This appliance complies with directive 89/336/EEC on radio interference suppression.

## DESCRIPTION

- 1) Steam button lock (certain models only)
- 2) Steam discharge button
- 2A) Steam discharge button (certain models only)
- 3) Iron thermostat knob
- 4) "Iron at temperature" indicator light
- 5) Removable water tank
- 6) Tank cap
- 7) Iron rest
- 8) "Steam ready" indicator light
- 9) Steam regulation knob
- 10) "Iron on" indicator light
- 11) "Steam generator on" indicator light
- 12) Cable winder (certain models only)
- 13) Iron ON/OFF switch
- 14) Steam generator ON/OFF switch
- 15) Separate iron mat (certain models only)
- 16) Cable wand (certain models only)
- 17) Steam generator drain cap

## USEFUL HINTS

- The original appearance and softness of fabrics such as velvet or wool, or gloves, bags etc. can be restored by passing the iron a short distance away with the steam jet in operation.
- To remove the marks left by furniture and restore carpets to new, allow the steam to penetrate into the flattened pile and brush lightly.
- Do not rest or use the iron on zips, hooks, rings etc to avoid scratching the plate.
- Keep the surface of the plate clean. To clean, when cold, wipe the surface with a damp cloth. The iron must never be treated with descaling products.
- After use, always wait for the iron to cool down before putting away.  
Avoid touching the water tank while the iron is hot.
- Store the iron in a dry place.
- It is not necessary to empty the tank after ironing. However, the appliance should be drained of water if left unused for long periods.
- Separate clothes according to the recommended ironing temperature and begin ironing with items requiring the lowest temperatures.
- Silk may be dry-pressed on the reverse.
- Wool, cotton and fine linen can either be steam-ironed on the reverse or on the right side, interposing a thin cloth between the iron and the fabric to avoid "shine".

Starched fabrics require greater moisture. Iron whites and light colours on the right side and dark colours on the reverse. Embroidery should also be ironed on the reverse to make it stand out.

- Linen can be steam-ironed with abundant steam. Iron dark colours on the reverse to avoid "shine". Iron lapels on the right side to make them stand out.
- Each time the iron is used (including for the first time) or if you have not used the steam for several minutes, press the steam discharge button several times away from the ironing board. This will eliminate cold water from the steam circuit.
- This iron for domestic use is fitted with a special device to obtain either steam discharge over the whole plate or concentrated in one point.  
If you require steam discharge over the whole plate, press the steam discharge button (2) with the iron in a horizontal position.  
Hold the button (2) down and move the iron into a vertical position to obtain continuous steam discharge over the whole plate.  
If, on the other hand, you require steam discharge concentrated in one point, push the steam discharge button (2) with the iron in a vertical position. To obtain point discharge in a horizontal position, hold the button down.
- The separate iron mat and cable wand (for mounting either on the right or left, see fig. 2) provided with certain models enable the appliance to be arranged as you wish.  
Note: use the iron mat on the ironing board only.

## INSTRUCTIONS FOR USE

### STEAM IRONING

Before steam ironing, make sure the fabric is suitable for this kind of ironing. The machine works with normal tap water. In the event of very hard water (hardness above 27°F) we suggest using distilled water diluted 50% with tap water. **Never use distilled water alone.** Never use chemical substances or detergents (eg perfumed water, essences, descaling solutions, etc).

### Filling the water tank and connecting to the mains

Make sure the mains lead is unplugged from the mains socket. Remove the tank and the cap, then fill with water. Replace the cap.

Place the iron rest in a raised position (fig. 1), lifting it by the special indents on both sides.

Plug into the mains socket.

### Functioning

Press the ON-OFF switch (14) to turn power to the steam generator on. The "steam ready" and "steam generator on" (11) indicator lights come on.

Press the ON-OFF switch (13) to turn on the iron. The "iron at temperature" (4) indicator light and "iron on" indicator light (10) come on.

**NB: When used for the first time, the appliance may give off smoke and an odour for several minutes. This is caused by heating and subsequent drying of the sealers used in assembling the steam generator and iron. You are recommended to ventilate the room.**

It is normal to hear the noise of the pump conveying the water to the steam generator.

Position the thermostat regulation knob (3) in the area shown in figure 1 or 2 (according to the model) depending on the type of fabric to be ironed (fig. 2). Wait for the "steam ready" (8) and "iron at temperature" (4) indicator lights to go out before starting ironing.

**NB: both indicator lights will go on and off during ironing, according to the temperature reached by the steam generator and iron. This is part of the normal functioning of the iron and not a cause for concern.**

**During steam ironing, it is normal to hear the water pump come on and go off. This is due to transfer of water from the tank to the steam generator. It is part of normal iron operation and not a cause for concern.**

To discharge steam, press the steam button (2) on the iron.

NB: If your iron has both buttons (2) and (2A), you can choose to use either the top or the bottom button as you prefer.

### Steam button lock (1)

This device allows a continuous output of steam to be obtained by keeping the steam button pressed down mechanically, avoiding the need to do so manually.

To use, simply press the button (2) and slide the lock backwards. To release the button, slide the lock forwards.

**IMPORTANT: the tube connecting the iron to the steam generator may become hot.**

The steam regulator (9) enables the quantity of steam to be increased or decreased.

NB: When switching on the iron, keep the knob in the maximum steam discharge position.

### Topping up the tank with water

When the water in the tank reaches about 2 cm from the bottom, you must top up the level as follows:

- Turn the steam generator and iron off using the switches (13 and 14).
- Unplug from the mains socket.
- Remove the tank and the cap, fill with water then replace the cap.

If you inadvertently allow the water in the tank to run dry, you can continue ironing for about 10-15 minutes depending on the quantity of steam used. If the tank is not filled, the pump vibrates and steam is no longer generated.

When the tank is topped up with water, the appliance operates as when first turned on. Steam will be ready in 5 minutes. During this time, you will hear the pump fill 4 or 5 times for about 30 seconds. After this time, the steam generator is stabilised and normal operation is resumed with water being pumped intermittently.

***You should not continue steam ironing with no water in the tank and the pump vibrating. This could irreparably damage internal components.***

- Replace the tank on the appliance, making sure it is correctly positioned.

**IMPORTANT: it is normal for there to be water on the surface the iron is resting on. This is due to a drainage hole in the tank housing.**

**Leakage of small amounts of water is normal and is caused by movement of the tank for filling.**

## DRY IRONING

Plug the appliance into the mains.  
Press the switch (13) to turn power to the iron on.  
The indicator lights (4) and (10) come on.  
Position the thermostat regulation knob (3) according to the type of fabric to be ironed (fig. 2).  
When dry ironing, do not use the steam control (2).

**NB: When the iron has reached the selected temperature, the indicator light (4) goes out.**

## AFTER IRONING


Wait for the appliance to cool down, then return the iron rest to the original position.  
Avoid touching the water tank while the iron is hot.  
Some models are fitted with a cable winder.

## CLEANING THE STEAM GENERATOR

To maintain optimum performance for as long as possible, rinse the steam generator with water about every ten times you use the iron.


Proceed as follows:

- **wait at least 2 hours after turning off the appliance to allow it to cool down completely.**
- unplug from the mains socket;
- remove the tank;
- place the appliance on a sink or basin;
- open the steam generator drain cap (17) on the bottom of the appliance (fig. 3) then completely empty the water in the steam generator;

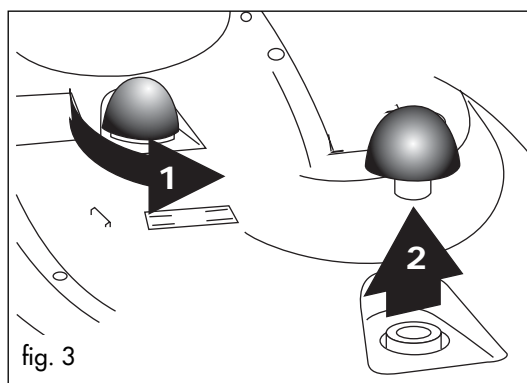

- use a jug to fill the steam generator with a quarter of a litre of water;  
***rinse the steam generator with tap water only, never use descaler or detergent***
- shake the steam generator, then empty completely into the sink or basin;
- repeat at least once more;
- when the steam generator is completely empty, screw the cap back in place (17).

## IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

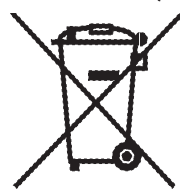

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment

and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Subject to changes