

**Please read this instruction booklet carefully before installing the appliance and keep it handy for future consultation. In so doing you will obtain the best result and maximum safety in its use.**

### DESCRIPTION OF THE APPLIANCE

The following terms are used throughout the instruction manual

- A. Water tank
- B. Cap with safety valve
- C. Steam knob
- D. Steam tube
- E. Drip tray
- F. Cup tray
- G. Carafe with lid
- H. Cappuccino nozzle
- I. Adaptor for caps (if fitted)
- J. Filter holder
- K. Filter
- L. Measuring spoon
- M. ON/OFF Switch
- N. Boiler outlet
- O. Flow regulator (if fitted)

### SAFETY WARNINGS

- This machine has been built to “make coffee” and to “reheat beverages”; please be careful to avoid burns from the sprays of hot water or steam and avoid any improper use.
- When the appliance is in use, do not touch any of the machine’s hot surfaces.
- After unpacking, make sure that the machine is complete and undamaged. In case of doubt, do not use the appliance and seek the advice of a qualified service professional.
- Packaging materials (plastic bags, foam polystyrene, etc.) should not be left within the reach of children as this could be a potential source of danger.
- This appliance is to be utilised for domestic use only. Any other use is to be considered improper and therefore, dangerous.
- The manufacturer takes no responsibility for damage derived from improper use.
- Never touch the appliance with wet or damp

hands.

- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- In case of breakdown or malfunctioning, turn off the appliance immediately and do not touch it. For repairs, please contact a Service Centre authorised by the manufacturer and request the use of original replacement parts only. The lack of respect for this point may compromise the safe use of the appliance.
- The power supply cable of this appliance must never be replaced by the user, because its replacement requires the use of special tools. If the cable should become damaged, or in case it needs to be replaced, please go to a Service Centre authorised by the manufacturer.
- When the appliance is not in use, turn off and disconnect the plug from the socket.
- As with any electrical appliance, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of young children.

### INSTALLATION

- Place the coffee maker on flat work surface at a safe distance from taps and sinks.
- Check that the voltage corresponds to that indicated on the appliance rating plate. The appliance must always be connected to a well-earthed socket rated at 10 A minimum. The manufacturer is not liable for damage caused by inadequate earthing of the appliance.
- In the event of incompatibility between the plug on the appliance and the socket, have the plug replaced with another of the right type by a qualified professional.  
If the cable is damaged or requires replacing, contact a service centre authorised by the manufacturer only.
- Never install the machine in an environment that can reach a temperature less than or equal to 0°C (if the water in it freezes, the coffee maker may be damaged).
- In the event of breakdowns or malfunctioning, do not tamper with the appliance and switch it off by unplugging it.

## HOW TO MAKE A PERFECT ESPRESSO COFFEE

- 1 Unscrew the water tank cap by turning it counter-clockwise.
- 2 Using the carafe supplied (fig. 1) pour water into the boiler (fig. 2) according to the amounts shown in the table at the end of the text. **Do not exceed the amounts shown as this could cause the appliance to malfunction.** While filling the boiler make sure the ON/OFF switch is in the OFF position.
- 3 Carefully close the boiler cap by turning it clockwise.
- 4 Insert the filter into the filter-holder. (fig. 3).
- 5 Put the coffee evenly into the filter according to the amounts shown in the table following (fig. 4). It is important to use medium ground coffee. (Avoid using too finely ground coffee otherwise the filter could become blocked, MOKA coffee is suitable).
- 6 Remove excess coffee from the filter rim (fig. 5).
- 7 To attach the filter-holder to the machine place the filter holder under the heater-faucet (fig. 6). At this point press filter-holder upwards while at the same time rotating counter-clockwise all the way. It does not matter if the filter housing bowl's handle is not centrally aligned with the machine. It is important that the bowl be firmly set in its housing.
- 8 The carafe with the lid must be positioned under the filter holder so that the spout is inside the opening on the carafe's lid (fig. 7). Make sure that the steam knob is turned off.
9. If the machine is supplied with a flow regulator, position the lever within the desired area according to the type of coffee desired: "light", "medium" or "strong" (fig.8).
- 10 Press the ON/OFF switch (fig.9). The pilot lamp will light.
- 11 About three minutes are required before the coffee begins to be discharged. Turn off power switch after coffee has been discharged.

- 12 **Before unscrewing the boiler cap or removing the filter holder, residual pressure must be released by slowly turning the steam knob (fig. 10) so that the residual steam can escape.**

**Note:** for safety reasons, it is not possible to open the boiler cap when the boiler is hot as the cap turns without unscrewing. If it has to be removed for any reason, it is always necessary to let off steam from the boiler using the steam knob as described immediately above.

- 13 To detach the filter holder, turn the handle from right to left.  
To remove coffee grounds from the filter holder, turn upside down and knock it repeatedly until all grounds have been removed (fig. 11), or rinse the filter holder unit under running water and let drip dry.

**NOTE: To eliminate the "new" smell, the first time you use the appliance, perform the coffee-making cycle a couple of times without drinking the coffee.**

### Coffee flowed directly in the cups

The carafe can be used to brew 2 or 4 cups of coffee. If you prefer to brew 2 cups only, fit the adaptor to the lower section of the filter-holder (fig. 12) and place the cups directly underneath the nozzles. In this way, the coffee will flow directly into the cups.

### MAKING CAPPUCCINO

A cappuccino is an espresso coffee with a froth topping made by heating milk.

- 1 Using the following table as a guide pour the required amount of milk into carafe. The best results will be achieved using fresh milk, not skimmed, which should be at refrigerator temperature.
- 2 Transfer the milk into a jug. The jug should be large enough to allow the milk to expand to around treble its volume.

### Models fitted with flow regulator

- 3 Follow steps 1-10 in the section "Making Espresso Coffee".  
Note that the amount of water needed to make 2 cups of cappuccino is greater than that required for 2 cups of normal coffee as it also necessary to produce the steam to emulsify the milk. You are recommended to position the flow regulator on "MEDIUM".
- 4 Allow the coffee to drip into the jug until it reaches the number 2 marked on the side of the jug, then select "CAPPUCCINO".

When the coffee starts to drip from the filter holder, place the steam nozzle in the milk ensuring that the nozzle opening is just under

the surface of the milk, as shown in fig. 13 and open the steam valve by turning the steam knob counter clockwise.

- 5 Move the jug up and down under the steam nozzle as in fig. 14 (this will give maximum froth). **Froth the milk until the steam in the boiler has been completely used up**, then turn the steam knob in a clockwise direction in order to close the steam valve and set the ON/OFF switch to "OFF"

**Warning: always empty the boiler of any residual water or steam after using the appliance by turning on the steam knob.**

- 6 Pour gently or preferably spoon the frothy milk onto the coffee, then sprinkle on a little chocolate powder for perfect cappuccino coffee.

#### **Models without flow regulator**

- 3 Follow steps 1-10 in the section "Making Espresso Coffee".

Note that the amount of water needed to make 2 cups of cappuccino is greater than that required for 2 cups of normal coffee as it also necessary to produce the steam to emulsify the milk.

- 4 When the coffee starts to drip from the filter holder, place the steam nozzle in the milk ensuring that the nozzle opening is just under the surface of the milk, as shown in fig. 13 and open the steam valve by turning the steam knob counter clockwise.
5. Move the jug up and down under the steam nozzle as in fig. 14 (this will give maximum froth). **Froth the milk until the steam in the boiler has been completely used up**, then turn the steam knob in a clockwise direction.
- 6 Allow the remaining coffee to drip through the filter holder into the carafe, it takes about 3 minutes, then switch the appliance OFF.

**Warning: always empty the boiler of any residual water or steam after using the appliance by turning on the steam knob.**

- 7 Pour the coffee into cups, gently pour, or preferably spoon the frothy milk onto the coffee, then sprinkle on a little chocolate powder for perfect cappuccino coffee.

#### **Cleaning the cappuccino nozzle**

Clean the steam tube (with the cappuccino nozzle) of milk immediately after use, as dried milk can be difficult to remove.

**Remember:** You do this by turning the steam control knob counter clockwise.

**IMPORTANT: always clean the milk frother and steam nozzle immediately after use. Proceed as follows:**

- By turning the steam knob (fig. 15), allow a little steam to come out for a few seconds.
- Check that the 3 holes shown in fig. 16 are not blocked. If necessary, clean them with the help of a pin
- Wash the cappuccino maker and steam nozzle thoroughly with warm water.
- Re-attach the cappuccino maker.

#### **HINTS**

Making good espresso and cappuccino is not difficult however it does require practice. The following tips will help you get the best results from your machine:

- Warm the cups before filling with coffee.
- Use a dedicated espresso coffee for best results. They are now widely available from supermarkets.
- Freshly ground coffee provides the best flavour. To maintain flavour, fresh coffee is best stored in an airtight container in a cool place, even in the fridge.

#### **CLEANING AND MAINTENANCE**

1. Do not use solvents or detergents in cleaning the coffee maker. Use a soft, damp cloth.
2. Clean the filter-holder, filter and drip tray regularly.

**ATTENTION: during cleaning, never immerse the unit in water – it is an electrical appliance.**

#### **CLEANING THE FILTER HOLDER**

About every 300 coffees, clean the filter holder for ground coffee as follows:

- Remove the filter
- Clean the inside of the filter holder. Never wash in a dishwasher.
- Rinse all components and clean the metal filter thoroughly in hot water using a brush (fig. 17). Make sure the holes in the metal filter are not blocked. If necessary, clean with a pin (fig. 18).

Failure to clean as described above invalidates the guarantee.

**CLEANING THE ESPRESSO BOILER OUTLET**

About every 300 coffees, the espresso boiler outlet must be cleaned as follows:

- check that the coffee machine is not warm and the plug is detached from the mains;
- using a screwdriver, unscrew the two screws that hold the outlet of the espresso boiler (fig. 19);
- clean the boiler with a damp cloth (fig. 20);
- clean the outlet thoroughly in hot water using a brush. Make sure the holes are not blocked. If necessary, clean with a pin.
- rinse the outlet under the tap, still scrubbing it;
- replace the outlet of the espresso boiler.

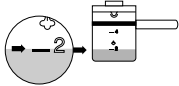

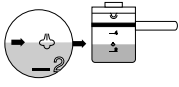
 
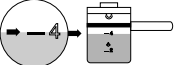
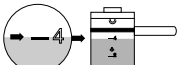
 
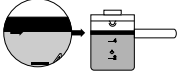

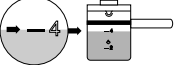
Failure to clean as described above invalidates the guarantee.

**DESCALING**

You are recommended to descale the coffee machine about every 300 coffees. You should use a commercially available product specifically for descaling espresso coffee machines. If you cannot obtain such a product, you can also follow the procedure below.

1. First clean the coffee machine, turn off and unplug from the mains.

2. Fill the jug to the brim.
3. Dissolve 1 spoonful (about 10/15 g) of citric acid (obtainable from chemist's or drug stores);
4. Pour the solution into the boiler.
5. Replace the boiler cap and leave the solution to work for about 30 minutes.
6. Place the selector in the "LIGHT" position.
7. Put the filter and filter holder in position (without coffee).
8. Position the jug on the drip tray.
9. Plug into the mains.
10. Turn the coffee machine on. After a few minutes, the hot solution will start to flow through the filter holder on the jug.
11. Place the steam tube in a glass or cup. Open the steam knob for a few seconds while the descaling solution flows through the filter holder. This cleans all residues of milk from inside the tube.
12. Close the steam knob (the descaling solution will continue to flow into the jug).
13. When the solution stops flowing into the jug, turn off and allow the machine to cool down. Remove the filter holder, filter and jug and rinse with hot water.
14. To remove traces of descaler, perform at least 2 coffee-making cycles without coffee.

To make	Water quantity in the carafe	Coffee quantity in the filter	Milk quantity in the carafe
2 espresso's			
2 cappuccino's	Water level must coincide with steam symbol on the carafe 		Use Max. 1 carafe filled to the level 4 
4 espresso's			
4 cappuccino's	Water level must coincide with the bottom part of the metal band 		Use Max. 2 carafes filled to the level 4 

## ELECTRICAL CONNECTION (UK ONLY)

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.  
**WARNING:** Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.  
 With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse.  
 If the plug is a moulded-on type, the fuse cover must be re-fitted

The wires in the mains lead are coloured in accordance with the following code:

Green and yellow:	Earth
Blue:	Neutral
Brown:	Live




As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.

- B) If your appliance is not fitted with a plug, please follow the instructions provided below:

**WARNING - THIS APPLIANCE MUST BE EARTHED  
IMPORTANT**

The green and yellow wire must be connected to the terminal in the plug marked with the letter E or the earth symbol  or coloured green or green and yellow.

The blue wire must be connected to the terminal marked with the letter N or coloured black.

The brown wire must be connected to the terminal marked with the letter L or coloured red.