


1	Description of the appliance	22
2	Safety warning	23
3	Installation	23
4	Preparing the coffee maker	24
4.1	Filling the water tank	24
4.2	Filling the container with coffee beans	24
4.3	Using the coffee maker for the first time	24
5	Preparing the coffee (using coffee beans)	25
6	Adjusting the coffee grinder	27
7	Preparing espresso coffee with ground coffee (instead of beans)	28
8	Hot water delivery	28
9	Preparing cappuccinos (using steam)	29
10	Cleaning and maintenance	30
10.1	Cleaning the coffee maker	30
10.2	Cleaning the infuser	31
10.3	Descaling	32
10.4	Setting the water hardness	33
11	Meaning of the normal operation indicator lights	34
12	Meaning of the alarm indicator lights and what to do when they are on	35
13	Problems that can be resolved before calling the service centre	36

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

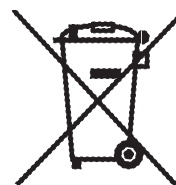

1. DESCRIPTION OF THE APPLIANCE (SEE PAGE 3)

- A. Cup warmer tray
- B.