

## ENGLISH

*Dear Customer,*

*Thank you and congratulations on your purchase of our appliance.*

*All our products are the result of highly accurate planning and meticulous technical testing. We have prepared this manual to help you make the most of your deep-cleaner and to fully appreciate its superb quality.*

*We are certain that, if you follow our suggestions, this appliance will give you maximum satisfaction and many years of service.*

*This appliance uses steam power to help you take the hard work of day-to-day household cleaning.*

*By using steam power, you will contribute to reduce pollution derived from the dispersion of chemical household detergents into the environment.*

*It has been designed to obtain greater hygiene of all hard surfaces and upholstery.*

### Description

1. Cover
2. Removable liquid/solid tank
3. Air flow conveyer
4. Liquid filter
5. Tank cover
6. Tank removal handle
7. Air filter
8. Float
9. Handle
10. Front cover trigger
11. Rear cover
12. Boiler cap
13. Monotube inlet port
14. Outlet cover
15. On/off button
16. On/off boiler button
17. Power indicator
18. Boiler on indicator
19. Steam ready light
20. Water out indicator
21. Steam adjustment knob  
(only for some models)
22. Pressure gauge
23. Suction button ON/OFF
24. Suction adjustment button
25. Steam output button
26. Monotube plug-in
27. Bayonet coupling
28. Full flexible hose
29. Rigid extension tubes

### Accessories provided

**(depending on the model)**

#### Vacuuuming accessories

30. Multipurpose brush
31. Dry vacuum frame
32. Round dusting brush
33. Multi-purpose attachment
34. Crevice tool
35. Radiator brush attachment
36. Carpet/floor brush
37. Parquet attachment
38. Turbo brush

#### Tools and accessories-extraction steam

39. Floor cloth Clips
40. Steam frame
41. Floor cloth
42. Large triangular nozzle
43. Small triangular nozzle
44. "T" nozzle
45. Squeegee insert
46. Bristle-tipped insert
47. Squeegee
48. "T" nozzle with brush-tipped steam insert
49. Steam accessory connector
50. Triangular brush
51. Crevice tool
52. In-line brush
53. Brush

## 1. Important

- 1) Read the instruction booklet carefully.
- 2) When in use, the appliance contains pressurized steam: incorrect use could be dangerous. The appliance is only for domestic uses as shown in the booklet. The manufacturer disclaims all responsibility for damage caused by incorrect use of the appliance.
- 3) **Always unplug the appliance before refilling the boiler or carrying out any maintenance or cleaning work on the machine.**
- 4) Before using, check that the mains voltage corresponds to the voltage specified on the rating plate of the appliance.
- 5) Plug the appliance into power outlets of 10A current rating and provided with good earthing.
- 6) **Do not aim the steam jet at electrical sockets, pressurized elements as you may damage them and get an electric shock.**
- 7) Do not aim the steam jet at the appliance itself.
- 8) Do not unplug by pulling the electrical lead or the appliance.
- 9) To avoid damage to the insulation, do not run the appliance over the electrical supply lead.
- 10) **Make sure the cap is firmly screwed on and remove any water residue from the cavity before you switch on the boiler.**
- 11) **Do not plug in the boiler without water in it. To add water, unplug the appliance and wait for about 15 minutes to avoid steam release from the cap. Place the cloth over the cap and unscrew slowly allowing residual steam to escape gradually.**
- 12) **DO NOT UNSCREW THE BOILER CAP WHEN UNDER PRESSURE.**
- 13) **Unplug all electrically operated objects or appliances (stove, fridge, oven hood, etc.) from their power points before steam cleaning. Before plugging in again, ensure they are completely dry as any remaining water could cause electrical discharges.**
- 14) Avoid steam contact with the skin – the high temperature can cause serious burns. Never aim the steam jet at persons or animals, or use on objects unable to withstand high temperatures.
- 15) **Do not touch the plug with wet hands.**
- 16) When in use, hold the appliance only by the handle: the machine contains a boiler so its surface heats up during normal use. Persons with a pathological insensitivity to heat must exercise particular care when using this appliance.
- 17) **Always keep the appliance level while in operation.**
- 18) Do not put detergents or other cleaning agents in the tank. Use only water.
- 19) **Do not wash the appliance with trichloroethylene or other solvents. Use only water with ordinary liquid detergent.**
- 20) Do not shut the power cord in doors or rub against sharp corners. Keep away from hot surfaces.
- 21) Do not use the appliance to pick up inflammable liquids.
- 22) Avoid vacuuming hard or sharp objects that could damage the appliance.
- 23) Before switching on ensure that the right filters are correctly set .

- 24) Do not use the appliance without the polyurethane filter fitted over the float holder.
- 25) Water is always necessary if the appliance is going to be used for dry vacuuming.
- 26) Be especially careful when using the appliance on stairs
- 27) Keep away from children or persons unfit to use it.**
- 28) Do not use the appliance if it seems defective. Return it to the place of purchase or contact an authorized Technical Service Centre.
- 29) If the overheating safety control is activated, the iron and controls will cease to function. The appliance can only be re-set by an authorized Technical Service Centre.
- 30) Do not expose the appliance to atmospheric agents (rain, frost, sun, etc.)
- 31) The noises produced when the boiler heats up or cools down are due to the normal dilation of the stainless steel with which it is made.
- 32) For all repairs apply only to the place of purchase or to an authorized Technical Service Centre, this is to maintain the effectiveness of your appliance and the validity of the guarantee. For the same reason, use only original parts.

**33) Always have the power cord replaced at an Authorized Service Centre only.**

## KEEP THESE INSTRUCTIONS

The manufacturer reserves the right to modify the appliance and/or accessories without prior notice.

This appliance is manufactured to comply with the current legislation on electrical safety and electromagnetic compatibility.

## ELECTRICAL CONNECTION (UK ONLY)

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.

**WARNING:** Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.

With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse.

**WARNING - THIS APPLIANCE MUST BE EARTHED**

### IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Green and yellow:

Blue:


Brown:



If the plug is a moulded-on type, the fuse cover must be refitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.


- B) If your appliance is not fitted with a plug, please follow the instructions provided below:

As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The green and yellow wire must be connected to the terminal in the plug marked with the letter E or the earth symbol  or coloured green or green and yellow.


The blue wire must be connected to the terminal marked with the letter N or coloured black.

The brown wire must be connected to the terminal marked with the letter L or coloured red.

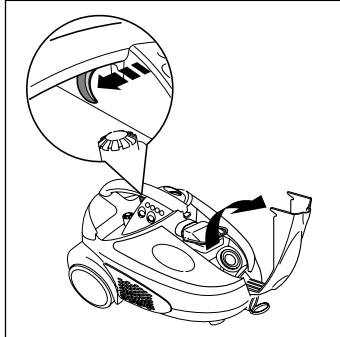


## 2. Setting up the appliance for dry/wet vacuuming

Open the front cover (1) by pulling trigger (10) placed under the handle of the appliance.

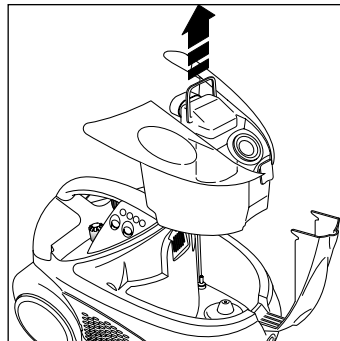

Remove the water tank by pulling the trigger and at the same time lifting the tank by the handle (6).

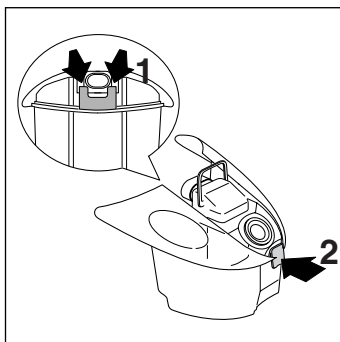

By means of the hooks, remove the tank cover with float system.


To extract the cover correctly, position the thumbs inside the central cavity in contact with the two projecting edges of the tank.

Press on the two projecting edges to facilitate release of the cover tooth from the slot.

Use the handle to facilitate extraction of the cover from the front lock.

Press on the bottom of the front locking device to free the tooth from the slot.


You can also act on the top of the hook to facilitate the operation. Lift the cover and empty the tank.

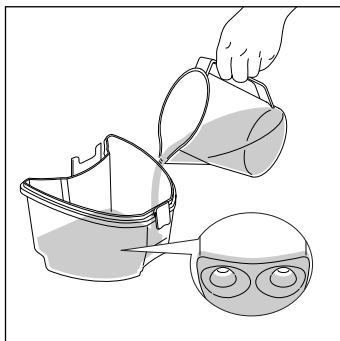

Remove the air flow conveyer (3) and pour water into the tank until the two projections on the base of the tank are covered (about 800 cc)


Re-insert the air flow conveyer, to its original position. Replace the tank cover pressing down firmly to ensure the cover is locked in position. Hold down the trigger (10) and replace the tank to its final position. Close the cover.

**N.B.: No water is necessary if the appliance is going to be used for wet vacuuming.**

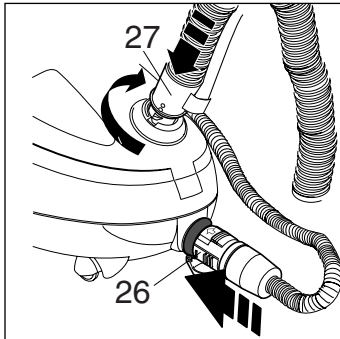


Fit the appliance with flexible hose (28). Insert bayonet coupling (27) into the hole on front cover (1), pressing it in firmly and rotating clockwise until it stops.

Open safety hatch (14) and plug in connector (26) into socket (13) on the bottom of the machine, making sure the reference arrow is pointing upward. Push in firmly until securely locked in place.

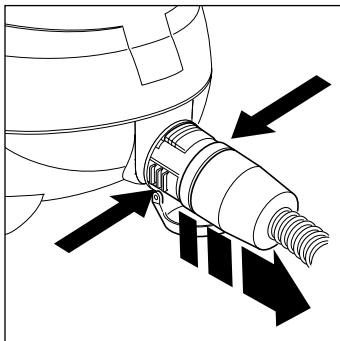


To disconnect, push on the two side locking tabs and pull.

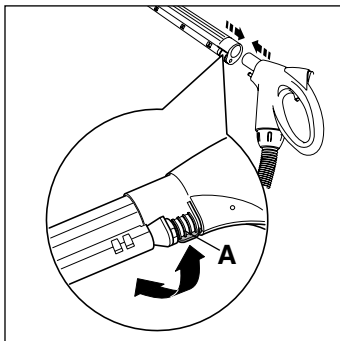


Insert extension tube (29) onto the flexible hose handgrip making sure the handgrip coupling is perfectly connected with the extension tube coupling. Push firmly all the way in, then **lock into position by rotating the locking ring (A)**.

Try to pull the extension tube out to make sure the connection is perfectly secure.


To add the second extension tube or the brush nozzle, proceed as described above.

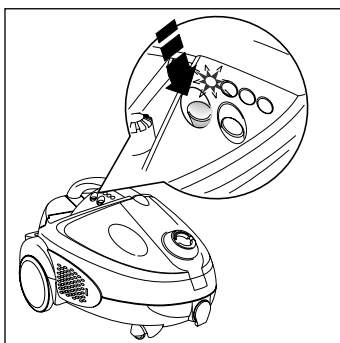

Connect the power cord to the mains, press on/off button (15) and indicator light (17) will come on. Now your appliance is ready to start.

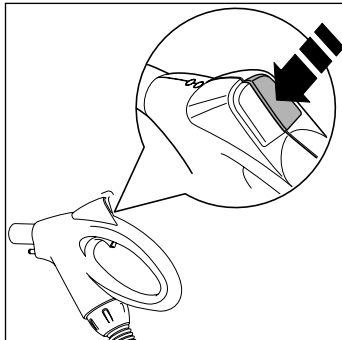

To activate vacuuming, press Suction button ON/OFF (23) on the handgrip of the flexible hose. The appliance will reach maximum vacuuming power in a few seconds. To deactivate suction, press Suction button ON/OFF (23) once more.

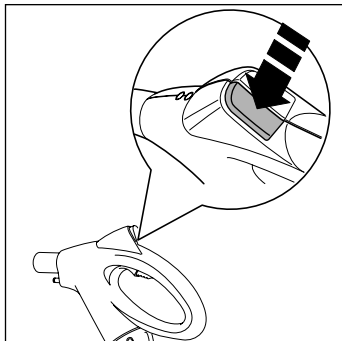


To decrease or increase suction power, press button (24) keeping it depressed until the desired suction power has been reached.

**N.B.: Do not press button (16) to power the boiler when the appliance is used for vacuuming only.**

**Important notice:** during wet vacuuming, when tank (2) is full, a special device will shut suction off and the motor will rev up. At this point, switch off the appliance by pressing button (15), disconnect it from the mains, and empty out the wet/dry tank. The above device will be activated also when filters (7) and (4) are exhausted – in this case, remove them and clean them (see chap. 4)

The suction shut-off device may be triggered off also by any violent impact or shock to the machine. In this case, switch the motor off and wait a few seconds before starting the machine once again.

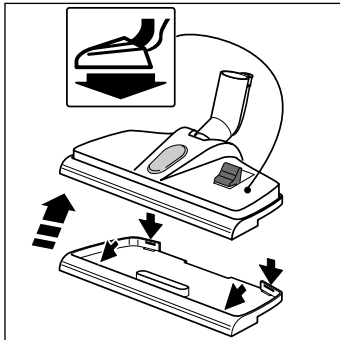

### **Vacuuming accessories (depending on the model)**


#### **Multipurpose brush (30)**

With this brush attachment you can pick up liquids as well as dry-vacuum.

When using as a dry-vacuum, you can get better result if you add brush frame (31).

Before you add the frame, make sure the brush bristles are withdrawn and check that the pedal is in the position shown in the picture.

Fit the frame onto the brush taking care to insert the four connection points into their slots.

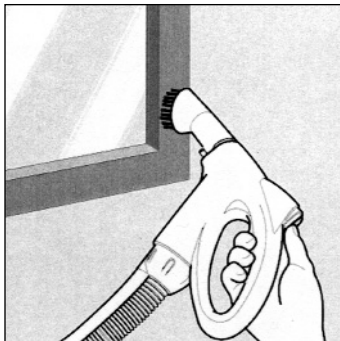


#### **Round dusting brush (32)**

The attachment swivels to facilitate cleaning operations. Suitable for removing dust from upholstery, furniture, books, drapes, picture frames, and clothes.




#### **Multi-purpose attachment (33)**

For cleaning sofas, upholstery, car interiors, curtains etc. When vacuuming drapes, decrease suction power if necessary by adjusting regulating button (24) on the handgrip.

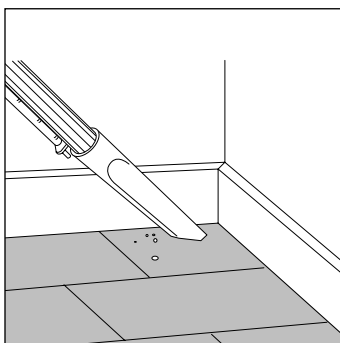

#### **Crevice tool (34)**


Useful to vacuum crumbs, dust and other small debris. Ideal for all those hard-to-reach places

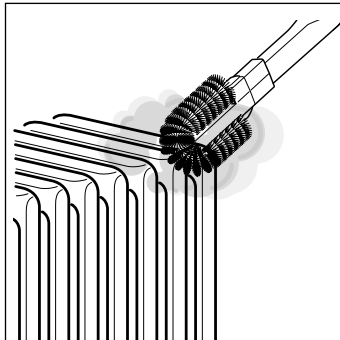

### Radiator brush attachment (35)

Ideal for vacuuming between the elements of central heating radiators.


Fit onto the crevice tool.

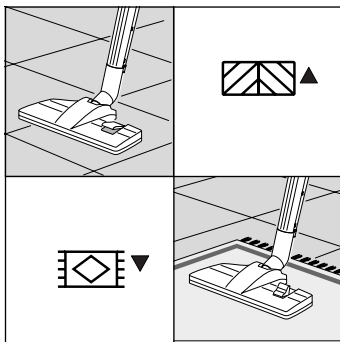

### Carpet/floor brush (36)


Effectively vacuums up dust from both hard floors and carpets or rugs. For hard floors, the brush lever should be set to the (□▲).

For carpets or rugs, the lever should be set to the opposite side (◻▼).

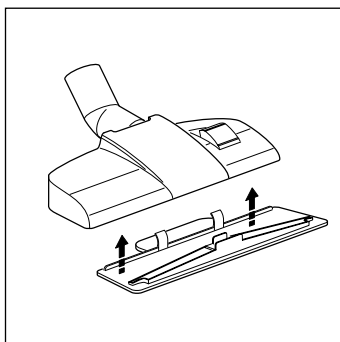

### Parquet Attachment (37)

Ideal for vacuuming wood floors. Fit the accessory onto the floor/carpet brush as shown.

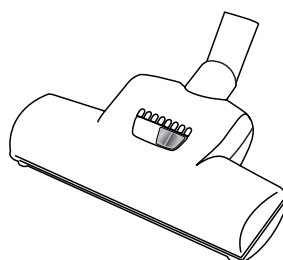


Position of selector switch for long pile rugs and carpets

### Turbo-brush (38)

Fit the turbo brush accessory in place of the carpet and floor brush supplied.

When the cleaner is turned on, the passage of air activates the rotating brush.

Avoid touching the underneath of the turbo brush when the cleaner is in operation. Always turn the motor off before cleaning the roller. Avoid passing the brush over the fringe as this could be damaged by the movement of the roller. Avoid frequent use of the turbo brush on particularly delicate rugs or carpets as over time the fabric could be damaged.

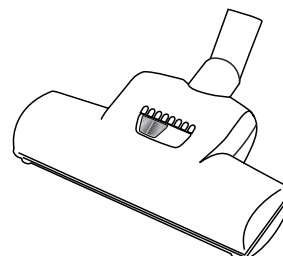


Position of selector switch for short pile rugs and carpets




### 3. Setting up the appliance for steam cleaning

#### Steam extraction cleaner


Remove rear cover (11), unscrew boiler cap (12) and fill the chamber with water **without adding any detergent** (the particular shape of the cap seat allows filling without the use of a funnel). Remove any water residue from the cap cavity, secure cap and rear cover.

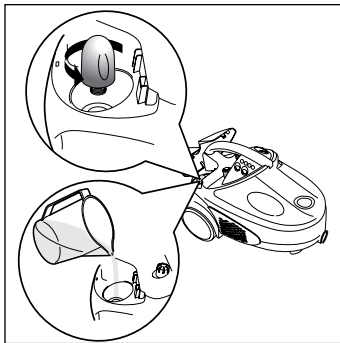

Fit the machine with flexible hose (28), extension tubes (29) and brush nozzle (30) following the assembly instructions for the tubes, hose, and brush container in chapter 2.

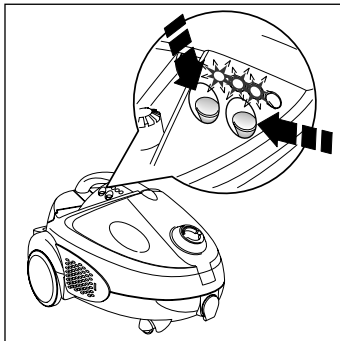


Connect the plug of the power cord to the mains, press on/off button (15) and boiler power button (16). At this point, indicator lights (17 – power) and (18 boiler on) and will come on. When the steam-ready light (19) comes on, your cleaner is ready for use.

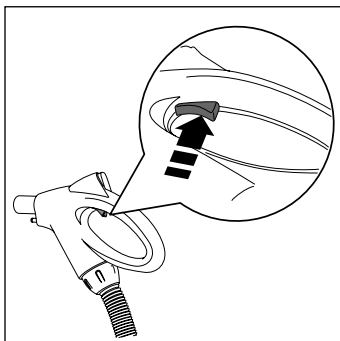

**For steam output, keep button (25) under the handgrip of the flexible hose pressed and release when you want to stop steam output. Start suction by pressing the ON/OFF button (23), in this way the appliance will wash and vacuum at the same time. In case of stubborn stains, first steam and then vacuum the area (See section on "Extraction cleaning technique", p. 30.)**


**N.B.: When the appliance is used for the first time, it may give off a particular smell for a few minutes due to heating and the consequent drying of the sealants used in assembling the boiler.**

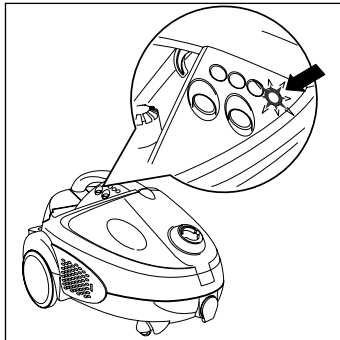

When the water in the boiler is about to run out, the water out indicator light (20) will come on. Fill the tank as follows:

Switch off the appliance by pressing button (15) and the boiler by pressing button (16). **Disconnect from the mains.** Wait for 10-15 minutes until the appliance has cooled down, then place a cloth over cap (12) and unscrew slowly allowing residual steam to escape gradually. Proceed to fill the chamber again as described above.

**Important notice! Never unscrew cap with the boiler under pressure and never operate it without water.**

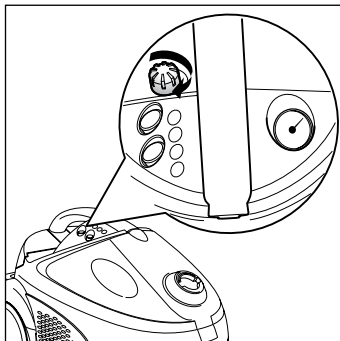


### Steam adjustment knob (21)

(only for some models)

Use to adjust steam output.

Keep the knob on the maximum steam output setting when switching on the appliance.

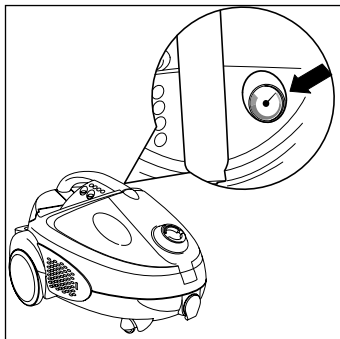

### Pressure gauge (22)

(only for some models)

Allows you check the pressure in the boiler.

Depending on the model, the manometer has a graduated 0-6 bar scale or coloured segments:


- The normal operating pressure of the appliance is around 3 - 4 bars (green segment).
- If the pressure remains above 5 bars or around 0 (red or yellow segment), contact an authorised Service Centre.

### Extraction cleaning technique

For extraction cleaning, proceed as follows:

- Spray the steam jet onto the surface to be treated by pressing spray trigger (25) while simultaneously vacuuming using ON/OFF button (23).
- Go over the area to be treated several times using dry vacuum only, after depressing the pedal to withdraw the bristles: The treated surfaces will be almost fully dry and dirt will have been effectively removed.

**N.B.: Regulate suction power at its maximum output.**

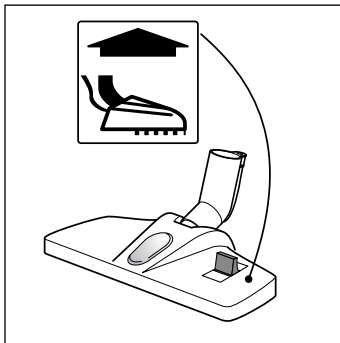

### Steam cleaning without suction

To use the appliance as a steam cleaner, proceed as described above without activating the vacuuming system – do not press suction button (24).


### Tools and accessories- extraction steam

(depending on the model)

#### Multipurpose brush (30)

To use the brush for steam extraction cleaning hard flooring, rotate the pedal to extend the bristles. This way, the combined action of steam + brush will give you more effective cleaning power.

**Caution! Not recommended for fired clay tiles, waxed floors and parquets.**

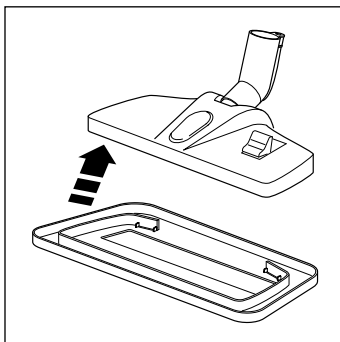



#### Frame (40), cloth (41) and clips (39)

For Steam cleaning without suction, fit brush with frame (40).

After fitting the frame to the brush, secure floor cloth (40) by means of its clips (39)


**N.B.:** this type of cleaning is particularly effective on tiled floors.

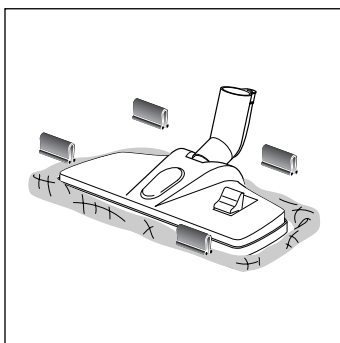

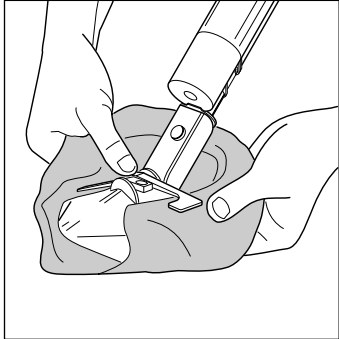

#### **Triangular brush (50)**

Recommended for cleaning roller blinds and vertical surfaces. Can be fitted with the cloth by using the spring clips.

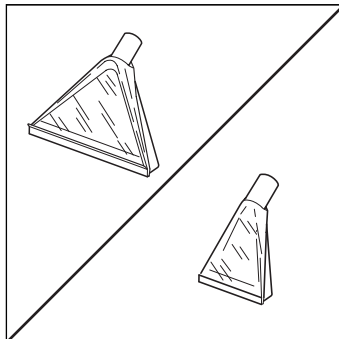

#### **Triangular nozzles (42 e 43)**

Fit directly onto the extension tube or the handgrip making sure the coupling is perfectly connected with the extension tube or the handgrip coupling. Push firmly all the way in, then **lock into position by rotating the locking ring.**


##### **Large triangular nozzle**

The large triangular nozzle is indicated for washing and wet vacuuming on carpeting, carpets and rugs.

##### **Small triangular nozzle**

The small triangular nozzle is indicated for washing and wet vacuuming on upholstery, sofas, furniture, and vertical fabric coverings.

**Important:** To avoid damage to delicate colours and fabrics, test colourfastness on a small inconspicuous area of the carpet or upholstery to be cleaned.

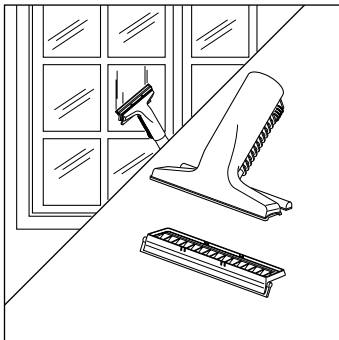


#### **“T” nozzle (44)**

This attachment can be used together with the squeegee or the brush-tipped insert. After fitting the desired insert, fit the “T” nozzle onto the extension tube or directly onto the handgrip. Secure with the locking ring provided.


#### **Squeegee insert (45)**

Ideal for cleaning small glass surfaces and panes.

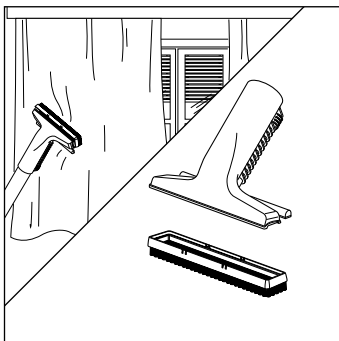

#### **Bristle-tipped insert (46)**


Ideal for fabrics (drapes, clothes, upholstery, etc.).

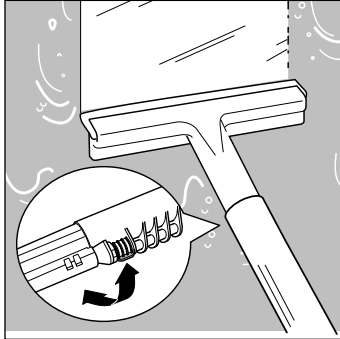**Squeegee (47)**


The squeegee attachment is a very practical tool for cleaning windows and large glass surfaces. Fit directly onto the extension tube or the handgrip making sure the coupling is perfectly connected with the extension tube or the handgrip coupling. Push firmly all the way in, then **lock into position by rotating the locking ring**.

Spray steam onto the surface to be cleaned. To dry it, skew the squeegee to let it perfectly adhere to the surface to dry.


**Important notice:** at low temperatures, it is advisable to warm window panes with a weak jet of steam to avoid breakages and cracks due to the sudden change in temperature.

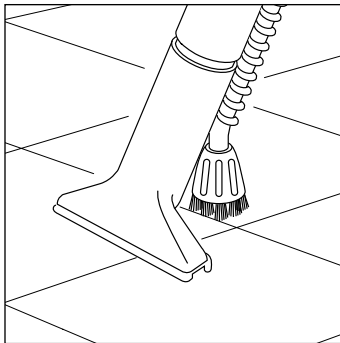**“T” nozzle with brush-tipped steam insert (48)**

Fit directly onto the extension tube or the handgrip making sure the coupling is perfectly connected with the extension tube or the handgrip coupling. Push firmly all the way in, then **lock into position by rotating the locking ring**. Tile grouting, radiators, bathroom fixtures and all other nooks and crannies will be easily dealt with by using the crevice tool together with the bush-tipped steam insert. To vacuum and dry the surface more effectively, remove the brush.

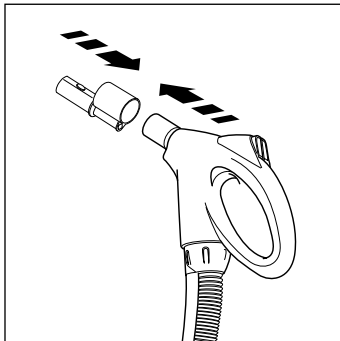**Steam accessory connector (49)**

It allows you to use more specific attachments for steam cleaning and can be fitted directly onto the flexible hose handgrip or the extension tube.

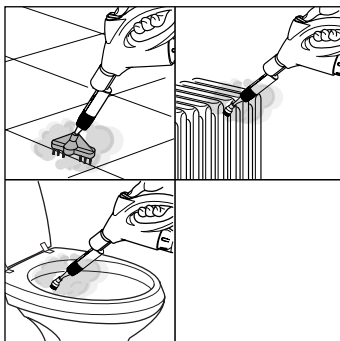**Crevice tool (51) +brushes (round and in-line) (52)**

The crevice tool can be fitted with one the brush inserts provided. The brushes are colour-coded, so that each can be used for the same task without mixing them (e.g., red for oven cleaning, yellow for bathroom fixtures, etc.). The in-line brush insert is particularly indicated for cleaning tile grouting.

**Important:** After fitting the desired accessory onto the machine, proceed with cleaning operations as indicated in your instruction manual

## 4. Care and maintenance of the appliance

**Caution: Always disconnect the appliance from mains outlet before performing any cleaning or maintenance operation.**



After the appliance has been used for extraction cleaning or wet vacuuming, the tools and accessories on the machine should be rinsed to ensure maximum hygiene before storing. Clean nozzle, tubes and hose by vacuuming up a few litres of clean water.

Always empty out the dirty-water tank after use.

If the appliance must be stored away for long periods, remove all water from the boiler.

After having emptied out the wet/dry tank, remove the liquid filter, rinse it under running water and dry thoroughly

The filter must be stored dry to prolong its life.

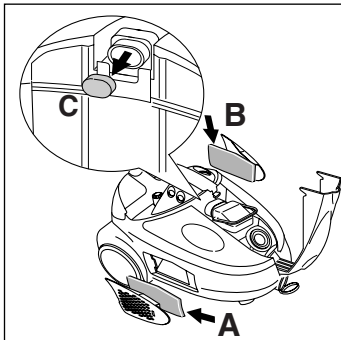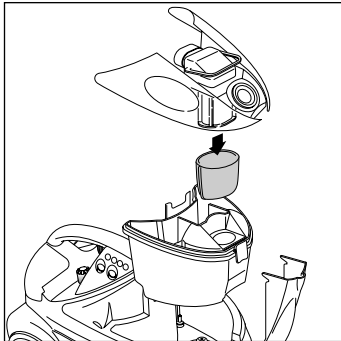


Exhaust air is filtered by a **high-efficiency filter (A)** that captures and retains particles with a size of over 3 microns. When dirty, the filter must be replaced.

Filters **B** and **C** can be washed when dirty, carefully dried and reinserted.

It is important to maintain the filters efficiency unimpaired as they guarantee the optimal functioning of the machine.

Spare filters are available at your Authorized Service Centre.

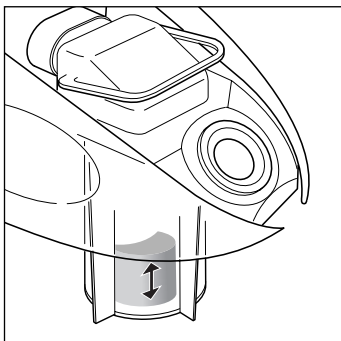

Periodically check to see that the floater is moving freely in its casing, and that wet filter (4) and air filter (7) are in place and correctly positioned in their seats.

## 5. Warranty

For repairs and spare parts (including accessories, filters or attachments) contact your dealer or an authorised Service Centre.

The warranty runs for 12 months from the date of purchase and includes replacement of any faulty parts and labour involved.

Use only original spare parts and attachments.

This is to maintain the effectiveness of your appliance and the validity of the warranty.

The manufacturer reserves the right to modify the appliance and/or accessories without prior notice.

## Technical characteristics

<b>Voltage / frequency</b>	230 V / 50 Hz	
<b>Engine, absorbed power</b>	rated output	max
	1000 Watt	1200W
<b>Boiler, absorbed power</b>	1400 Watt	
<b>Boiler capacity</b>	1,5 Litres (2 Litres, in some models)	
<b>Operating pressure</b>	rated output	max
	3.5 bar	3.8 bar
	350 Kpa	380 Kpa
<b>Commands on machine</b>	ON/OFF BUTTON	
	ON/OFF BOILER BUTTON	
<b>Indicator lights</b>	Power on indicator	
	Boiler power indicator	
	Steam ready light	
	Water finished light	
<b>Safety low-voltage commands on handgrip</b>	Suction activation	
	Suction power variation	
	Steam delivery	
<b>Liquid suction safety</b>	Float	
<b>Inlet filtration</b>	Water filter with 1.3 lt of water	
	Stainless steel 304 mesh micro-filter	
	Polyurethane pre-filter	
	Engine inlet polyurethane filter	
<b>Outlet filtration (exhaust air)</b>	HEPA filter	
<b>Engine-cooling air filter</b>	Polyurethane filter	
<b>Total levels of filtration</b>	8 stages	
<b>Removable collection tank capacity</b>	rated output	max
	2.3 litres	2.7 litres
<b>Cable winding</b>	manual	
<b>Power supply cable</b>	3x1 length: 6 m	
<b>Approval</b>	IMQ	
<b>Weight in operation (without tubes)</b>	12 kg (approx.)	
<b>Dimensions</b>	length	L = 550
	depth	P = 370