

## ENGLISH

### Descrizione


1. Flexible hose
2. Power cord
3. Handle
- 4a. ON/OFF switch
- 4b. Pump switch
5. Motor unit
6. Cord winder
7. Solution hose inlet
8. Shampoo solution injection system
9. Motor unit housing
10. Internal shampoo tank
11. Motor unit fastening catches
12. Plastic tank
13. Trolley
14. Handgrip
15. Spray trigger
16. Suction power selector
17. Solution dispenser fastening clips
18. Solution dispenser
19. Solution dispenser nozzle
20. Suction inlet port

### Accessories\*

21. Flexible hose with handgrip
22. Large transparent "wash-dry" attachment for carpets/floors
23. Squeegee attachment for floors
24. Multi-purpose nozzle
25. Two extension tubes
26. Crevice tool
27. Carpet-floor brush
28. Accessory holder (if supplied)
29. Polyurethane foam water shield filter
30. Motor filter
31. Large-size paper dustbag
32. 1 bottle shampoo

\* The attachments supplied with the appliance may vary according to model.

### Important information

1. Read the instruction booklet carefully before using the appliance.
2. Before using, check that the mains voltage corresponds to the voltage indicated in the specifications label under the handle.
3. Connect your cleaner only to power outlets with a minimum of 10 amps V, and make sure the outlet is earthed. For machines with double insulation (see symbol  on specifications label) earthing is not necessary.
4. **Always disconnect the appliance from mains outlet when not in use or before any maintenance or care operation.**
5. Do not clean the appliance with trichloroethylene or other solvents.
6. Do not tug on the power cord to disconnect the appliance from mains outlet.
7. Do not leave your cleaner unattended while it is running. Keep it away from the reach of children and persons unfit to use it.
8. Do not run the appliance over the power cord as this may damage the insulation.
9. Do not use to pick up flammable liquids.
10. Do not use the appliance to pick up matches, hot ash, or burning cigarette ends.
11. This cleaner is intended for domestic use only, and must be used in accordance with the operating instructions contained in this booklet.
12. Particular care must be taken when using the appliance on stairs.
13. Be especially careful when using the appliance on stairs.
14. Do not attempt to use the appliance if it appears to be faulty. For all repairs, always have your appliance serviced at an authorized Technical Service Centre.

The manufacturer reserves the right to change the specifications of the appliance and/or accessories without prior notice.

**Caution:** make sure that all the fabrics and surfaces to be cleaned are colourfast and sturdy enough for extraction cleaning. Do not use the cleaner on delicate hand-woven rugs and carpets.

If in doubt, spot-test in an inconspicuous area and wait until completely dry before checking the results.

*The manufacturer disclaims any liability for damage to rugs, carpets, chairs, upholstery, etc., resulting from the use of detergents other than those provided with the appliance.*

Use only original spare parts and accessories so as to maintain the appliance in good working order and NOT invalidate the warranty.

This appliance complies with CEE 87/308 Directive.

## Extraction cleaning (fig. 1)

The shampoo solution is sucked up from the tank by a pump and sprayed through a nozzle onto the surface to be cleaned; the shampoo penetrates the fibres, dissolving even the most stubborn dirt. The transparent wash-dry attachment vacuums up the dirty water, which is then collected in the wet tank, leaving the surface clean and almost dry. Extraction cleaning deep-cleans rugs, carpets, fabrics and floors, restoring their colour, improving their appearance and making them last longer.

## Assembly and setting up your machine

**Caution:** while assembling and preparing the appliance for use, make sure that it is not plugged in.

- a) Remove the motor unit by releasing the catches (fig. 2). Lift off motor unit by the easy-grip handle and remove tools from inside the tank (fig. 3).
- b) Attach the accessory holder (30) by pressing it firmly onto the trolley (if supplied) (Fig. 4)
- c) Check that the polyurethane foam filter (31), required for both wet vacuuming and extraction cleaning, is fitted into the motor protection housing (Fig. 5).
- d) Remove the shampoo tank (Fig. 6) – capacity around 3.0 litres – and fill it with shampoo and water, according to the following proportions:
  - 200 ml of shampoo
  - 2800 ml of water
- e) Re-attach motor unit to the tank, making sure to line it up with the notch over the suction inlet port (fig. 7).
- f) Insert the flexible hose into the suction inlet by turning the coupling (bayonet fitting) clockwise and insert the solution hose into the corresponding inlet, located above the suction inlet (Fig. 8).
- g) Attach solution dispenser to the flexible hose using the plastic clips.

- h) Fit the two extension tubes, connecting one end to the hose handgrip and the other end to the transparent “wash-dry” attachment (fig. 9).

Connect solution dispenser (previously fitted to the “wash-dry” attachment) to the hose handgrip, and attach the clips to the extension tubes (fig. 9A).

Your extractor cleaner is now ready to clean carpets and rugs.

## OPERATING THE APPLIANCE

Plug the appliance into the power outlet and press the ON/OFF switch on the top of the appliance. Start the pump by pressing the corresponding switch (Fig. 10).

**CAUTION:** never press the pump button when the shampoo solution tank is empty or when the cleaner is being used as a wet or dry vacuum cleaner. The incorrect use of the pump may compromise the operation of the appliance.

To clean carpets, rugs and floors in general, proceed as follows:

- lower the handgrip over the surface being cleaned, while at the same time pressing the spray trigger (Fig. 11 A).
- place the wash-dry nozzle on the surface being cleaned;
- release the spray trigger and return the handgrip to the starting position (Fig. 11B)
- continue vacuum-only operation, with the spray trigger released, moving the wash-dry nozzle over the cleaned surface.

During this operation, the dirty water vacuumed up by the appliance can be seen inside the transparent wash-dry nozzle. If the water inside the nozzle is clean, the surface too is perfectly clean. When no more water is vacuumed up, the surface is almost dry and the operation is complete.

Always use the original no-foam shampoo.

If the fabric has previously been treated with a shampoo other than the product suggested for extraction cleaning, excessive foam may form inside the dirty-water tank.

If foam is released from the top of the applian-

ce, turn it off immediately and empty the tank (see "Care and maintenance").

When the dirty-water tank is full, a ball cock will shut suction off automatically and speed of the motor will increase (Fig. 12).

At this point, empty the dirty-water tank (see "Care and Maintenance").

## Extraction cleaning: Cleaning hard floors

*(ceramic tiles, fired clay tiles, marble, linoleum, vinyl, etc.)*

Fit the transparent wet-dry nozzle (22) by inserting it from left to right (Fig. 13) and proceed as indicated in the operating instructions.

## Wet vacuuming

**Caution:** check that the appliance is not plugged in to the power outlet.

This function will help you to cope with those little emergencies, such as:

- unclogging a drain or a blocked sinks, minor floods (washing machines, dishwashers), spilt liquids, defrosting refrigerators and freezers, etc.

Make sure that the polyurethane foam filter (31) is fitted on the motor protection housing.

Fit the cleaning attachment most suited to the type of operation to be performed onto either the extension tube or directly onto the handgrip. Use the crevice nozzle or multi-purpose nozzle.

Plug the appliance in and switch it on by pressing the ON/OFF switch.

**Caution:** never press the pump button when the cleaner is being used for wet or dry vacuuming.

Upon completion of the operations, empty the water tank (see "Care and maintenance").

## Dry vacuuming

**Caution:** check that the appliance is not plugged in to the power outlet.

Make sure that the motor-protection paper bag or cloth bag (where provided) is fitted over the motor housing. Secure the filter with the special elastic ring (where provided) or an ordinary elastic band (fig. 4).

Fit the appliance with the attachment most suited to the task to be performed, either directly

onto the handgrip or on the extension tubes. Plug the appliance in and switch it on by pressing the ON/OFF switch.

Thanks to the wide range of attachments available, your cleaner will effectively vacuum up:

- dust from carpets, matting, rugs, and hard floors. use the carpet/floor brush (29)
- dust, crumbs, small debris from radiators, drawers, cobwebs from corners: use the crevice tool (28).
- oil, saw dust, wood shavings, etc, from all types of floors, car interiors, garages, cellars: use either the suction hose or the multi-purpose nozzle (24) which can also be used to pick up dust, crumbs, fluff, etc.

**Caution:** never press the pump button when the cleaner is being used for wet or dry vacuuming.

Upon completion of the operations, empty the water tank (see "Care and maintenance").

## Use a large dustbag (33) (if supplied)

**Caution:** the large paper dustbag must only be used for dry vacuuming (dust or solids). The bag should be fitted inside the tank by sliding the cardboard collar around the inside of the suction inlet port and pressing it firmly into place. Replace the bag when full (Fig. 15).

## Care and Maintenance

Always disconnect the appliance from the mains before starting any maintenance operation.

Always empty, clean and dry the wet/dry tank after use. To ensure perfect hygiene and lengthen the working life of your appliance, never leave any dirt inside the tank.

To empty the dirty water tank, remove the solution hose from the top of the appliance, the flexible hose, and lift off the top of the appliance after having released it, remove the internal shampoo tank and then empty the water.

**Polyurethane foam filter maintenance:** After using the appliance always wash the polyurethane foam filter under running water and allow it to dry thoroughly before repositioning it.



**Paper and cloth filter maintenance:** When using the appliance as a dry or wet vacuum cleaner, replace the motor protection filter regularly. The cloth filter (where provided) should be washed periodically with soap and water.

Make sure the cloth filter is completely dry before reusing it.

Periodically replace the microfilters located inside the exhaust port hatches on motor unit (fig. 16).

Periodically check that the float inside the motor unit cage is free to move in its housing (fig. 12) by lifting motor unit and shaking it.

To store the appliance, place all the accessories inside the dirty water tank or on the accessory holder (if supplied) and wind the cord (checking for damage or abrasions) around the cord winder (Fig. 17).

## Guarantee

The guarantee certificate is printed on the packaging and must be cut out, filled in, and kept together with a proof of purchase including the date of the sale. You will be requested to produce these documents to the Technical Service in case of repairs. This appliance is guaranteed against faulty manufacture and defective parts for a year from date of purchase.

## ELECTRICAL CONNECTION (U.K. ONLY)

A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.

**WARNING:** Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard. With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse. If the plug is a moulded-on type, the fuse cover must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer.

The colour of the correct replacement fuse cover is that as marked on the base of the plug.

B) If your appliance is not fitted with a plug, please follow the instructions provided below:

### IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Blue:	Neutral
Brown:	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

