

Dear customer,

Congratulations and thank you for choosing our company.

All our products are the result of meticulous design and technical testing.

We have produced this manual to enable you to get the best from your appliance and appreciate its quality to the full.

If you follow our tips, we are sure the appliance will give you complete satisfaction and long and faithful service.

By exploiting the power of steam, it helps reduce air pollution caused by the dispersion of chemical detergents.

This appliance exploits the power of steam to facilitate everyday cleaning in the home or for gardening, hobbies and DIY.

It has been designed to improve the hygiene of household surfaces and upholstery.

Accompanied by an iron, it makes an effective ironing system to satisfy the needs of every family and a valuable aid for everyday household tasks.

DESCRIPTION

- A** Pressure gauge (if fitted)
- B** Filter
- C** Hose socket with cover
- D** Boiler cap
- E** Condensate collection tank + filter
- F** Suction outlet
- G** Tank release slide
- H** Steam regulator
- I** "ON/OFF" indicator light
- J** Steam ready indicator light
- K** No water indicator light
- L** ON/OFF switch
- M** Rear grill
- M1** Rear filter

STANDARD TOOLS*

- O** Extension tubes
- P** Large triangular nozzle
- Q** Rubber insert
- P** Small triangular nozzle
- S** Multi-purpose nozzle
- S1** Squeegee insert
- S2** Bristle insert
- T** Squeegee
- U** Multi-purpose nozzle with brush
- V** Iron
- W** Iron mat

* The tools supplied vary according to the specific model.

IMPORTANT**1) Read the instructions carefully**


- 2) The appliance contains pressurised steam. Incorrect or improper use could be dangerous. The appliance is designed for household use or for gardening, hobbies or DIY. All types of industrial use are excluded. The manufacturer declines all liability for damage deriving from improper use of the product.
- 3) Do not leave the iron unattended when plugged in.
- 4) Always unplug before filling the boiler tank, performing maintenance or cleaning the appliance.
- 5) Before use, make sure the mains voltage corresponds to the voltage indicated on the rating plate on the bottom of the appliance.
- 6) Plug the appliance into an efficiently earthed socket with a minimum rating of 10 A.
- 7) Never direct the steam jet towards the socket or live parts, they could be damaged, with the risk of dangerous electrical discharges.
- 8) Never direct the steam jet towards the appliance.
- 9) Never unplug the appliance by pulling the power cable or appliance itself.
- 10) To avoid damaging the insulation, do not run the appliance over the power cable.

Never place the appliance in a vertical position.

- 11) Do not open the cap while using the appliance or before all the water has been exhausted. This occurs when steam is no longer discharged by the iron or tools. To add water, unplug and wait about 15 minutes to avoid sudden temperature changes. Place the cloth over the cap and unscrew slowly to allow residual steam to escape slowly.
- 12) Before steam cleaning electrically-powered objects or household appliances (electric oven, refrigerator, extractor fan, etc), unplug these appliances from the mains.
Before plugging in again, make sure they are perfectly dry as residual water could cause electrical discharges.
- 13) Avoid the steam coming into contact with the skin. The high temperature could cause serious burns. Never direct the steam jet towards persons or animals or towards surfaces or objects which could be damaged by high temperatures.
- 14) To move the appliance, hold it by the handgrip. As it contains a boiler, its surfaces become hot during use. Persons affected by particular pathologies causing abnormal sensitivity to heat should take special care when using this appliance.
- 15) Do not add detergent to the tank. Use water only.
- 16) If not used for long periods, you are recommended to evaporate the water completely before putting the appliance away.
- 17) Use the iron mat provided only. If it is lost or damaged, use only an original replacement only.
- 18) Never place the iron in a vertical position.
- 19) Keep the appliance out of reach of children or persons not capable of using it without supervision.
- 20) After ironing, allow the plate of the iron to cool before putting away.
- 21) Do not use the appliance if it appears to be faulty. Contact the dealer or authorised service centre.
- 22) If the temperature safety switch trips, the iron or device shuts down.
To use again, contact specialist personnel.
- 23) Protect the appliance from atmospheric agents (rain, frost, sun, etc).
- 24) To repair or if the power cable is damaged and requires replacement, contact an authorised service centre in order to avoid compromising the efficiency of your appliance and guarantee the validity of the guarantee. For the same reasons, you are always recommended to use original spare parts.

This appliance complies with EEC Directive 73/23 and 93/68 CEE and 89/336 CEE on electromagnetic compatibility.


KEEP THESE INSTRUCTIONS CAREFULLY

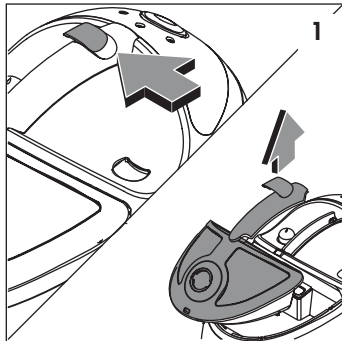

ASSEMBLY AND PREPARATIONS FOR USE

Before performing maintenance or cleaning the appliance, make sure it is unplugged from the mains.


Remove the condensate tank using the slide on the handle (fig. 1).

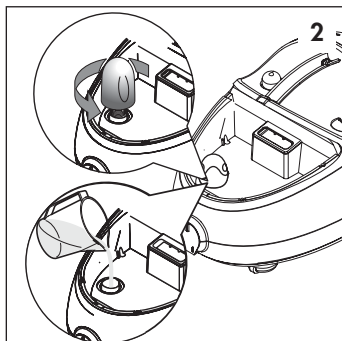

To open the boiler, unscrew the cap (fig. 2).

Fill the tank with a maximum quantity of about 1.5 litres of tap water (without adding detergent).

Screw the cap up completely.

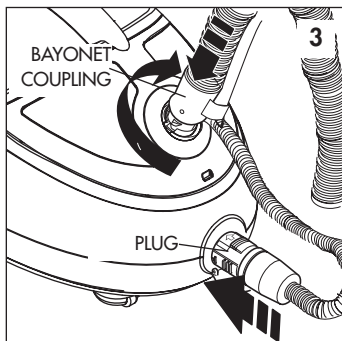


PREPARING THE CLEANING TOOLS


Fit the hose onto the appliance (fig. 3).

Insert the bayonet coupling into the socket on the cover, press down and rotate clockwise until it stops.

Open the safety hatch and insert the plug into the socket on the bottom of the appliance, making sure that the arrow points upwards. Push down until it locks into place.

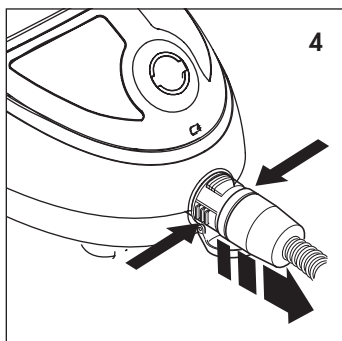

To remove, press the locking fins at the side and pull (fig. 4)

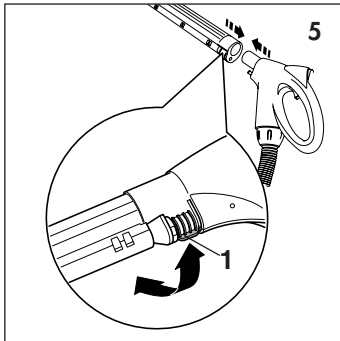

Insert the extension tube onto the hose handgrip, making sure the handgrip coupling is perfectly connected to the extension tube coupling by pushing firmly together. **Lock in place by rotating the locking ring (1)** (fig. 5).

To make sure it is fitted correctly, attempt to remove the extension tube.

To insert the second extension tube or brush, proceed as described above.


USING THE APPLIANCE

Plug into the mains socket.


Press the "ON/OFF" button.

At this point, the power on indicator light comes on.


When the "OK steam ready" indicator light also comes on, the appliance is ready for use (fig. 6) and in models where present, the needle of the pressure gauge is in the green zone (about 3-4 bars) (fig. 7). This requires about 15 minutes.

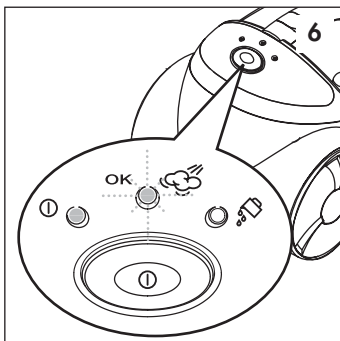

During operation, the steam ready indicator light goes on and off. This is part of normal operation.

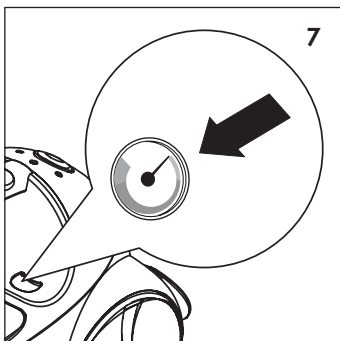


NB: When used for the first time, the appliance may give out smoke and an odour for several minutes. This is caused by heating and subsequent drying of the sealers used in assembling the boiler. You are recommended to ventilate the room.

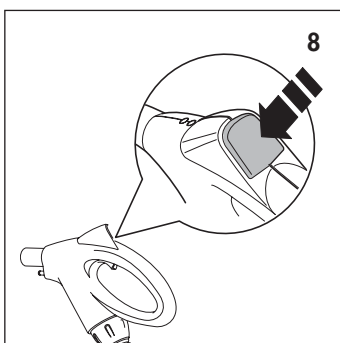

To deliver steam, hold the button on the bottom of the hose handgrip down. Release it to stop delivery. Activate suction by pressing the ON/OFF button (fig. 8). The appliance will then wash and vacuum clean at the same time.


In the case of persistent marks, you are recommended to steam first, then use suction.

(See paragraph "extraction washing technique").

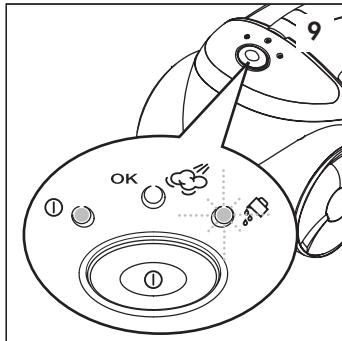

When the water in the boiler is about to run out, the "no water" indicator light comes on (fig. 9). To refill, proceed as follows:


Turn the appliance off by pressing the ON/OFF button. Unplug from the mains socket. Remove the condensate tank using the handgrip slide (fig. 1). Wait 10-15 minutes until the appliance cools down. Open the cap slowly using a cloth to allow residual steam to escape. Refill as described above.

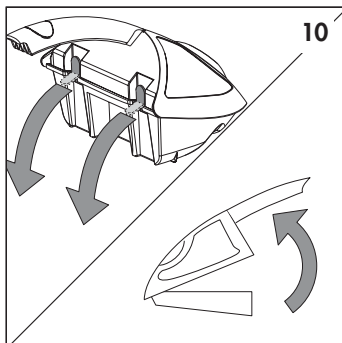

Important! Never unscrew the cap with the boiler under pressure and never operate the appliance without water.

Whenever you top up with water, remove the condensate tank using the slide on the handgrip, then remove the cover by unhooking from the tank (fig. 10).

Empty the condensate water and rinse the internal filters (fig. 11). Replace the filters in the housing and then close the tank by pressing at the front until it hooks into place. Replace the tank by placing it on the appliance and closing the slide.

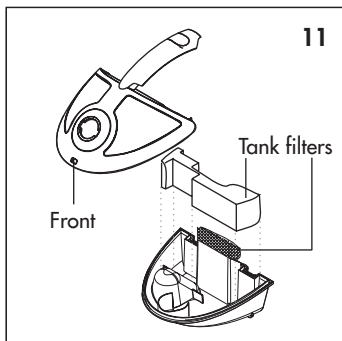

STEAM REGULATION KNOB (FIG. 12)

Regulates the quantity of steam delivered.


When turning on, you are recommended to rotate the knob to the maximum steam delivery position.

PRESSURE GAUGE (certain models only)

Regulates boiler pressure.

Depending on the model, the pressure gauge scale is graduated from 0-6 bars or in coloured sectors.

- Normal working pressure is about 3-4 bars (green sector).
- If pressure is constantly above 5 bars or near the 0 (red sector), you should contact an authorised service centre.

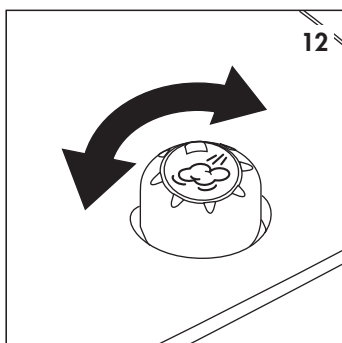

TIPS FOR CLEANING

Extraction washing technique

The extraction washing technique is as follows:

Aim the steam jet at the surface to be treated using the steam delivery button and at the same time activate suction using the ON/OFF button on the hose handgrip.

Pass a number of times over the surface to be treated using suction only. The treated surfaces will be almost completely dry and the dirt will be removed.

Steam cleaning without suction

To use the appliance as a steam cleaner only, proceed as above, but without activating the suction system. You must **not** press the suction button on the hose handgrip

EXTRACTION AND STEAM WASHING TOOLS (the standard tools supplied vary according to the model)

Triangular nozzles (fig. 13)

Fit to the extension tube or directly onto the handgrip. Make sure it fits perfectly into the coupling on the handgrip or the extension tube, push firmly together, **then lock by rotating the locking ring.**


Large triangular nozzle


The large triangular nozzle can be used to wash and wet vacuum carpets and rugs.

Small triangular nozzle

The small triangular nozzle can be used to wash and wet vacuum upholstery, sofas, furniture and vertical textiles.

To avoid damaging colours and delicate fabrics, you should first test on a concealed part of the carpet or upholstery to be cleaned.

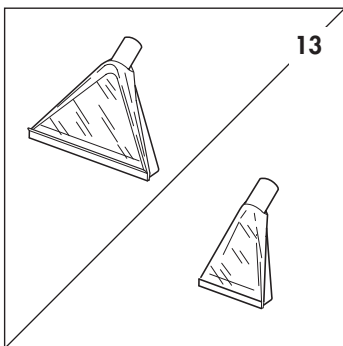

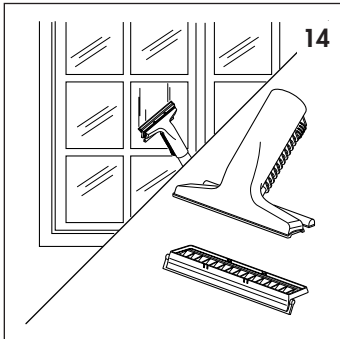


Multi-purpose nozzle

This nozzle can be used with either the squeegee or bristle inserts. After fitting the required insert, attach the multi-purpose nozzle to the extension tube or directly to the handgrip and lock it in place with the locking ring.


Squeegee insert (fig. 14)

Ideal for cleaning small windows (lattice, etc).

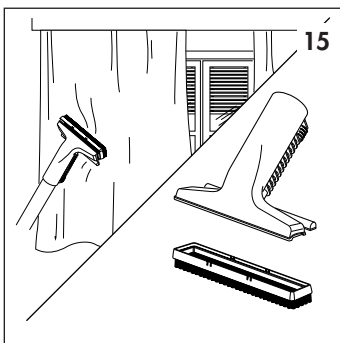

Bristle insert (fig. 15)

Ideal for refreshing fabrics (curtains, clothes, upholstery etc).

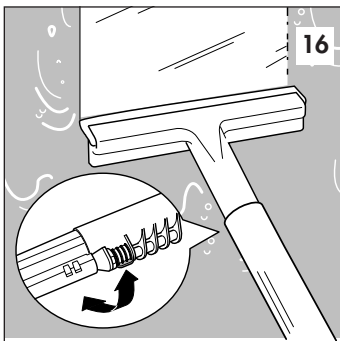


Squeegee tool (fig. 16)

The squeegee tool is extremely useful for cleaning glazed surfaces. Fit to the extension tube or directly onto the handgrip. Make sure it fits perfectly into the coupling on the handgrip or the extension tube, push firmly together, then lock by rotating the locking ring.





Aim the jet at the surface to be washed. To dry, slope the tool in such a way that the squeegee adheres perfectly to the surface to be dried.

Tips: in low temperatures, you are recommended to warm the windows first with a weak jet of steam to avoid the risk of breakage due to sudden temperature changes.

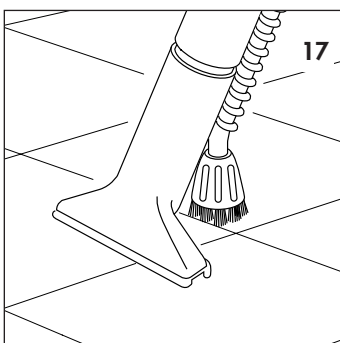

Nozzle with steam insert and brush (fig. 17).

Fit to the extension tube or directly onto the handgrip. Make sure it fits perfectly into the coupling on the handgrip or the extension tube, push firmly together, then lock by rotating the locking ring. Combined with steam, the brush facilitates removal of the dirt from joints between tiles, radiators, bathroom fittings and all difficult to reach points.

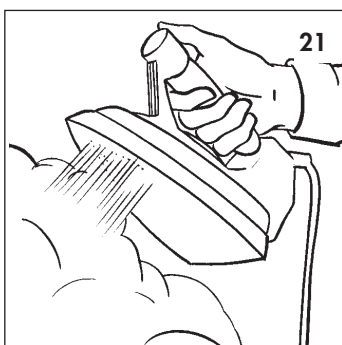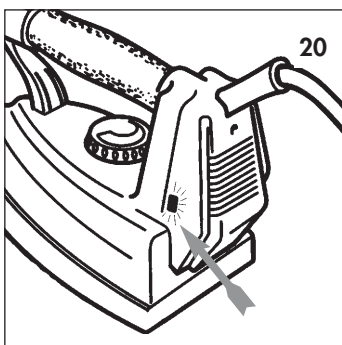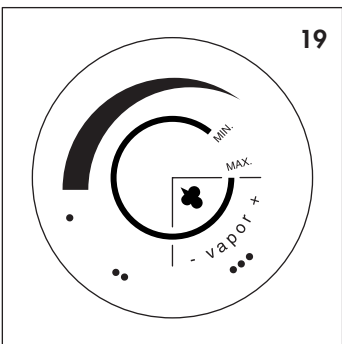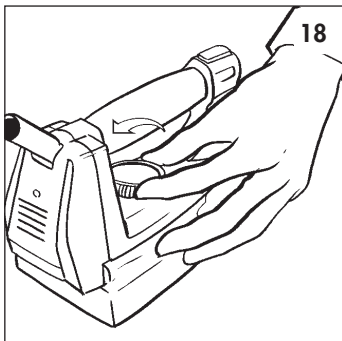

USING THE IRON (if provided)

To operate the boiler, see the above instructions.

Setting up the ironing system

To connect the iron to the appliance:

Plug the iron into the socket and press until the release button clicks.

Make sure the plug is fully inserted by attempting to remove it without using the release button.

To turn on the appliance, follow the above instructions.

When the iron is started up for the first time, you are recommended to discharge the steam onto a cloth for a moment in order to eliminate possible impurities deposited in the iron. Do this by pressing the "steam required" button on top of the iron.

NB: When used for the first time, the appliance may give off smoke and an odour for several minutes. This is caused by heating and subsequent drying of the sealers used in assembling the boiler and iron. You are recommended to ventilate the room.

Operation

Select the required temperature by rotating the thermostat knob (fig. 18/19) to one of the marked sectors according to the type of fabric to be ironed. Wait until the "iron at temperature" indicator light (fig. 20) goes out before beginning to iron.

NB: the indicator light goes on and off during ironing according to the temperature of the iron.

To obtain the supply of steam, press the steam button on the iron (fig. 21).

Use the steam flow regulator (H) to obtain the required quantity of steam.

NB: When turning the iron on, you are recommended to rotate the knob into the maximum steam discharge position.

IMPORTANT: the tube connecting the iron to the boiler may become hot.

The iron can also generate steam in a vertical position, enabling fabrics to be easily restored by steaming.

DRY IRONING

Turn on using the ON/OFF switch (L) and select the temperature on the iron thermostat.

Wait for the indicator light on the iron to go off before starting to iron. Do not use the steam button on the iron.

REFILLING THE BOILER

The tank cannot be refilled until steam production has ceased. Proceed as follows:

- **Never open the cap until the water is completely finished.**
- **With the appliance still on, discharge all steam using the switch on the handgrip or the steam delivery button on the iron.**
- Turn the appliance off using the ON/OFF switch and unplug from the mains socket.
- Wait a few minutes before refilling the tank to avoid sudden temperature changes.
- Place a cloth over the tank cap when opening. Open the cap slowly and carefully to allow residual steam to escape. Refill the tank as described above.

TURNING THE APPLIANCE OFF

The appliance can also be turned off when the boiler is still under pressure.

You are, however, recommended to release residual pressure using the lever on the handgrip until the steam is exhausted.

Wait at least 15 minutes after turning off the appliance before opening the cap.

TIPS FOR PERFECT IRONING.

- The original appearance and softness of fabrics such as velvet or wool, or gloves, bags etc. can be restored by passing the iron a short distance away with the steam jet in operation.
- To remove the marks left by furniture and restore carpets to new, allow the steam to penetrate into the flattened pile and brush lightly.
- Do not rest or use the iron on zips, hooks, rings etc to avoid scratching the plate.
- Keep the surface of the plate clean. To clean, when cold, wipe the surface with a damp cloth. Descaling products must not be used in the iron.
- After use, always wait for the iron to cool down before putting away.
- Store the iron in a dry place.
- After ironing, the water remaining in the boiler need not be drained.
- Separate clothes according to the recommended ironing temperature and begin ironing with items requiring the lowest temperatures.
- Silk may be dry-pressed on the reverse.
- Wool, cotton and fine linen can either be steam-ironed on the reverse or on the right side, interposing a thin cloth between the iron and the fabric to avoid "shine". Starched fabrics require greater moisture. Iron white and light coloured fabrics on the right side and dark colours on the wrong side. Embroidery should also be ironed on the wrong side to make it stand out.
- Linen fabrics can be steam ironed by steaming abundantly and ironing dark fabrics on the wrong side only to avoid a "shiny" effect. Iron cuffs and lapels on the right side to make them stand out.
- Every time the iron is used (including for the first time) or if you have not used the iron for several minutes: push the steam button several times. This enables the cold water to be eliminated from the steam circuit.

TABLE FOR PERFECT IRONING

Acetate – Acrylic – Nylon



VERY LIGHT DRY IRONING

Polyester - Rayon



DRY IRON ON THE WRONG SIDE OF THE GARMENT AT
MINIMUM TEMPERATURE

Silk



DRY IRON ON THE WRONG SIDE OF THE GARMENT

Wool – Fine cotton – Fine linen



STEAM IRON ON THE WRONG SIDE OF THE GARMENT
USING A FINE CLOTH ON TOP OF THE FABRIC

Cotton – Fine linen – Starched fabrics



STEAM. IRON WHITE AND LIGHT COLOURS ON THE RI-
GHT SIDE, DARK COLOURS ON THE WRONG SIDE

Linen



A STEAM IRON WITH ABUNDANT STEAM ON THE
WRONG SIDE OF DARK FABRICS

CLEANING AND MAINTENANCE

Important: Before cleaning or maintenance, always unplug from the mains socket.

After using the appliance, to improve hygiene you should rinse the tools.

You are recommended to empty the condensate tank after each use and to clean the filter in the tank.

If not used for long periods, you are recommended to empty the boiler before putting the appliance away.

After emptying and rinsing the tank, remove the filter (B), wash with running water and leave to dry. To improve the working life of the filter, keep it dry.

From time to time, remove the grill (M) at the back of the appliance, remove the filter M1, wash the filter with running water then allow to dry.

When dry, replace the filter and reattach the grill to the back of the appliance, making sure the guide shown in fig. 22 is positioned facing downwards.

The rear grill can also serve as a cord winder (see figure 23).

