

## ENGLISH

*Dear customer,*

*Congratulations and thank you for choosing our company.*

*All our products are the result of meticulous design and technical testing.*

*We have produced this manual to enable you to get the best from your appliance and appreciate its quality to the full.*

*If you follow our tips, we are sure the appliance will give you complete satisfaction and long and faithful service.*

*You have just bought a Wet & Dry Vacuum Cleaner with a Bagless System which uses water to reduce dust and as a first filter stage.*


*This introduces a new way of working, making the appliance unique, ultra-simple to use and with extraordinary performance.*

## DESCRIPTION

---

- A) Air outlet grill with microfilter
- B) Handle
- C) ON/OFF switch
- D) Motor head
- E) Suction port + suction hose coupling
- F) Motor housing
- G) Motor protection polyurethane filter
- H) Diffuser cone
- I) Suction conveyor
- J) Bottom plate
- K) Motor head clips
- L) Drum
- M) Tool trolley
- N) Castors
- O) Vacuum hose
- P) Handgrip
- Q) Telescopic tube
- R) Crevice tool
- S) Multi-purpose nozzle
- T) Carpet and floor nozzle
- U) Wet cleaning brush
- V) Rubber insert

## WARNINGS/IMPORTANT SAFEGUARDS

- **Read these instructions carefully.**
- This appliance is intended for household use only. It must not therefore be used for other purposes, modified or tampered with in any way.
- Before use, make sure the mains voltage corresponds to the voltage indicated on the rating plate on the bottom of the appliance.
- Connect the appliance to an efficiently earthed socket with a minimum current rating of 10 A only. It is not necessary to earth double insulated appliances (see  symbol on rating plate).
- When not in use or before cleaning or maintenance, always unplug the appliance from the mains socket.
- DO NOT wash the appliance with triethylene or other solvents.
- DO NOT unplug the appliance by pulling the power cable or the appliance itself.
- DO NOT leave the appliance turned on when unattended. Keep away from children and unfit persons.
- DO NOT run the appliance over the power cable to avoid damaging the cable insulation.
- DO NOT vacuum up inflammable or corrosive liquids.
- DO NOT vacuum up matches, ash or cigarette ends when still lit.
- Vacuuming up large quantities of ash or particularly fine dust could reduce the efficiency of the filtering system.
- Do not use the appliance if it appears to be faulty.
- Take the utmost care when using the appliance to clean stairs.
- For repairs or to purchase tools, contact an authorised Customer Service Centre only.
- Bear in mind that a considerable quantity

of air is given off from the air outlet grill during use. This could be unpleasant if directed at people, particularly the face.

The manufacturer reserves the right to modify appliances and tools without warning.

Original spare parts and tools should be used to maintain the efficiency of your appliance. Failure to do so INVALIDATES the guarantee.

## ASSEMBLY AND PREPARATIONS FOR USE AS A WET & DRY VACUUM CLEANER

**Important: during assembly and preparation for use, make sure the appliance is UNPLUGGED from the mains.**

- Release the cover by pulling the clips outwards (fig. 1).
- Remove the diffuser cone, suction conveyor and, finally, the bottom plate (fig. 2).
- Turn the appliance upside down and fix the four castors in place by pushing them into the holes in the bottom of the drum (fig. 3).
- Make sure the polyurethane filter is in place on the motor housing (fig. 4).
- Insert the bottom plate J, fixing it to the drum as shown in fig. 5. Insert the diffuser cone H and suction conveyor I (fig. 6).

### Using as a dry vacuum cleaner

- To use the appliance as a dry vacuum cleaner, pour about two litres of water into the drum. **The water should never reach above the bottom plate (J).**  
*The water filters the dust, preventing it from being dispersed in the atmosphere.*
- Fasten the head back on the drum.
- Attach the hose to the suction port (fig. 7). To remove, press the locking fins and pull (fig. 8).
- Fit one end of the telescopic tube to the handgrip and the other to the most suitable tool for the operation to be performed.

med.

- Plug the appliance into the mains socket and turn on by pressing the ON/OFF switch on the head.

#### Using as a wet vacuum cleaner

This function enables the appliance to be used to tackle such minor household emergencies as:

- blocked sinks or drains, small floods (washing machine, dishwasher), accidental spills of liquid, refrigerator or freezer defrosting, etc.



**Important:** The liquid collection drum can contain about 8 litres of water. After this, a device shuts off suction and the motor revolutions increase. The motor must be turned off, the appliance unplugged and the liquid collection drum emptied. Extract the polyurethane filter **G** from the motor housing **F**, dry and replace.

**Note: after using the appliance as a dry vacuum cleaner, the drum does not require emptying before wet vacuuming.**

- After preparing the appliance (as described for dry vacuuming), plug into the mains and turn on by pressing the ON/OFF switch on the head.


## TOOLS


#### Telescopic tube (fig. 9)

To elongate the tube to the required length, rotate the swivel joint in the direction shown by the symbol  and pull out the tube. To fix the tube at the required length, rotate the swivel joint to the  position.

#### Carpet/floor brush (fig. 10)

Efficiently removes dust from floors (marble or tiled), rugs or carpets.

When the pedal is pushed towards the "hard floors" symbol (  ), the bristles protrude to clean hard floors more efficiently. This position is recommended for in-depth cleaning of floors and for floors with pronounced joints.

When the pedal is pushed towards the "carpets" symbol (  ), the bristles retract and the brush is ready to clean fabric surfaces and delicate floors such as parquet, marble, etc.

#### Crevice tool (fig. 11)

Can be used to collect crumbs, dust and small debris. Perfect for hard-to-reach corners.

#### Multipurpose nozzle (fig. 12)

Use to clean sofas, upholstery, car interiors, curtains, etc.

When cleaning curtains, reduce suction by adjusting the slide on the handgrip to partially or completely close the hole (fig. 15).

#### Wet vacuum brush (fig. 13)

Designed to vacuum up liquids, this brush has a removable insert with a rubber element which facilitates wet pick-up. To remove the rubber insert, press the two fins on the sides downwards.

#### Tool trolley (fig. 14).

To put the appliance away, place the tools on the tool trolley.

#### Mechanical regulation of suction power (fig. 15)

The hose handgrip incorporates a mechanical suction regulator. This enables suction power to be regulated rapidly and practically by simply moving the slide.

## CLEANING AND MAINTENANCE

**Important: before cleaning and maintenance, make sure the appliance is unplugged from the mains socket.**

To guarantee hygiene, after wet vacuuming, rinse the tools by vacuuming up several litres of clean water. This will clean the tools and the inside of the hose. To empty the drum, release the head of the appliance, then remove the cone conveyor, diffuser cone and bottom plate.

Empty the drum (fig. 16).

Replace the bottom plate, taking care to push it down until it rests firmly on the base of the drum (fig. 5).

***You should always empty the drum each time you use the appliance.***

After emptying and rinsing the drum, remove the polyurethane filter, wash with running water and leave to dry.

To extend the working life of the filter, keep dry otherwise the filters will deteriorate.

Check that the float in the motor housing is free to move by raising the head of the appliance and shaking (fig. 17).

### **Cleaning the microfilter**

The microfilter in the air outlet grill retains dust, pollen etc. To maintain efficiency, it should be replaced every 2/3 months according to use. To replace, remove the grill by pulling upwards (fig. 18).

Remove the exhausted filter and insert the new one, making sure it is hooked correctly in place (fig. 19).

Having positioned the new filter, replace the grill by inserting it from the top and sliding it down with the hand (fig. 20).

To put the appliance away, place the tools on the tool-holder (fig. 14), wrap the cable around the handle and fix with the special clip.

### **Carpet/floor brush (T)**

After using the appliance, make sure no dirt is left on the brush, tubes or castors.