


DRY/WET VACUUM CLEANER

Important

- **Read these instructions carefully.**
- Before use, check that the mains voltage corresponds to the voltage indicated on the rating plate under the handle of the appliance.
- Connect the appliance to an efficiently earthed socket with a minimum current rating of 10 A only.
It is not necessary to earth double insulated appliances (see symbol  on rating plate).
- **When not in use or before cleaning or maintenance, always unplug the appliance from the mains socket.**
- NEVER wash the appliance with triethylene or other solvents.
- NEVER unplug the appliance by pulling the power cable or the appliance itself.
- NEVER leave the appliance turned on when unattended.
Keep away from children and unfit persons.
- NEVER run the appliance over the power cable to avoid damaging the cable insulation.
- NEVER vacuum up inflammable or corrosive liquids.
- NEVER vacuum up matches, ash or cigarette ends when still lit.
- DO NOT use the appliance if it appears to be faulty.
- For all repairs and for replacement of the power cable if damaged contact your dealer or an authorised service centre to maintain the efficiency of your appliance and the validity of the guarantee. For the same reasons, you are always recommended to use original spare parts.
- Bear in mind that a considerable quantity of air is given off from the air outlet grill during use. This could be unpleasant if directed at people, particularly the face.

DESCRIPTION

- 1) Air outlet grill with microfilter
- 2) Handle
- 3) ON/OFF switch
- 4) Motor head
- 5) Suction outlet + suction hose coupling
- 6) Motor housing
- 7) Motor head clips
- 8) Drum
- 9) Tool trolley
- 10) Castors
- 11) Motor protection polyurethane filter
- 12) Dust bag holder accessory
- 13) Large dust bag (if provided)
- 14) Hose
- 15) Handgrip
- 16) Telescopic tube
- 17) Crevice tool
- 18) Multipurpose nozzle
- 19) Wet vacuum brush
- 20) Rubber frame
- 21) Carpet/floor brush

Assembly instructions

Release the cover by pulling the clips outwards (fig.1).

Remove the accessories from the drum (fig.2).

Turn the appliance upside down and fix the castors in place by pushing them into the holes in the bottom of the drum (fig. 3).

Make sure the polyurethane filter is in place in the protective motor housing (fig. 4).

Attach the hose to the suction outlet (fig. 5). To remove, press the tabs and pull (fig. 6).

Fit one end of the telescopic tube to the handgrip and the other to the most suitable tool for the operation to be performed.

The hose handgrip incorporates a mechanical suction regulator. Suction can be adjusted rapidly and practically by simply moving the slide (fig. 7).

Plug the appliance into the mains socket and turn on by pressing the ON/OFF switch on the cover.

Wet vacuuming

 
To tackle those minor household emergencies such as:

- blocked sinks or drains, small floods (washing machine, dishwasher), accidental spills of liquid, refrigerator or freezer defrosting, etc.

Remove the holder and dust bag and make sure the polyurethane filter (11) is in place on the motor housing (fig. 4).

Fit the most suitable cleaning tool for the operation to be performed directly onto the handgrip. You can use the crevice tool, multipurpose nozzle or wet vacuum brush.

Designed for wet vacuuming, the wet vacuum brush has a detachable frame with a rubber element to facilitate vacuuming up of liquids. To replace the detachable frame, press the two tabs on the sides of the frame downwards.

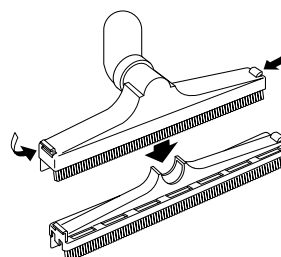


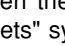
Dry vacuuming


Make sure the polyurethane filter (11) is dry, clean and in place on the motor housing (fig. 4).

Rest the cardboard part of the dust bag on the bottom of the bag holder (fig. 8) then push from the top to secure it firmly in place in the holder guides. Finally, fit the bag holder with bag onto the tube connected to the suction outlet of the appliance (fig. 9). Make sure the arrow marked on the tool is facing towards the suction outlet (5).

Two-position multipurpose brush


Efficiently removes dust from floors (marble or tiled), rugs or carpets.

 When the pedal is pushed towards the "hard floors" symbol (), the bristles protrude to clean hard floors more efficiently. This position is recommended for in-depth cleaning of floors and for floors with pronounced joints. When the pedal is pushed towards the "carpets" symbol (), the bristles retract and the brush is ready to clean fabric surfaces and delicate floors such as parquet, marble, etc.

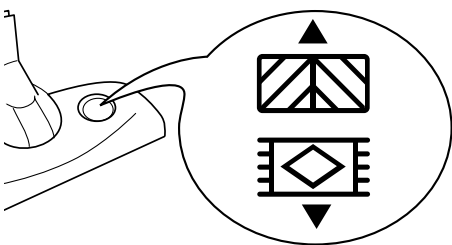


Crevice tool

 Can be used to collect crumbs, dust and small debris. Perfect for hard-to-reach corners such as radiators, car interiors, etc.

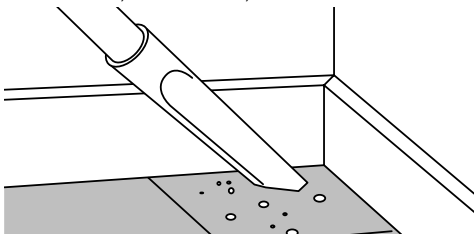

Multipurpose nozzle

 Use to clean sofas, upholstery, car interiors, curtains, etc.

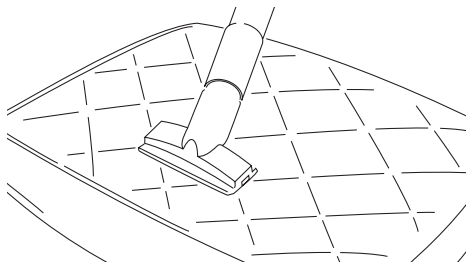

Cleaning and maintenance

IMPORTANT: before cleaning and maintenance, make sure the appliance is unplugged from the mains socket.

To guarantee hygiene after wet vacuuming, rinse the tools by vacuuming up several litres of clean water. This will clean the tools and the inside of the hose.

After wet vacuuming, always empty the liquid collection drum.

After emptying and rinsing the drum, remove the polyurethane filter, wash with running water and leave to dry.

 
To extend the working life of the filter, keep dry otherwise the filters will deteriorate.

After dry vacuuming, remove the polyurethane filter and clean. The polyurethane filter should always be kept clean as dust could obstruct the normal passage of air, reducing the vacuuming capacity of the appliance.

When the dust bag is full, replace.

Cleaning the microfilter

The microfilter in the air outlet grill retains dust, pollen etc. To maintain efficiency, it should be replaced every 2/3 months. To replace, remove the grill by pulling upwards (fig. 10). Remove the exhausted filter and insert the new one, making sure it is hooked correctly in place.

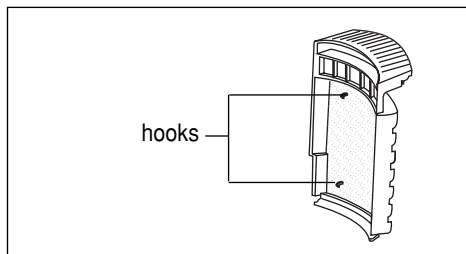

The manufacturer reserves the right to modify appliances and tools without warning. Original spare parts and tools should be used to maintain the efficiency of your appliance. Failure to do so invalidates the guarantee.

Having positioned the new filter, replace the grill by inserting it from the top and sliding it down with the hand.



Check regularly that the float in the motor housing is free to move (fig. 11) by raising the head of the appliance and shaking.

To put the appliance away, place the tools on the tool-holder (fig. 12), wrap the cable around the handle and fix with the special clip.

ELECTRICAL CONNECTION (U.K. ONLY)

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.

WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard. With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse. If the plug is a moulded-on type, the fuse cover must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer.

The colour of the correct replacement fuse cover is that as marked on the base of the plug.

- B) If your appliance is not fitted with a plug, please follow the instructions provided below:

WARNING: THIS APPLIANCE MUST BE EARTHED

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Blue:	Neutral
Brown:	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.