

ENGLISH

Dear customer,

Congratulations and thank you for choosing our company.

All our products are the result of meticulous design and technical testing.

We have produced this manual to enable you to get the best from your appliance and appreciate its quality to the full.

If you follow our tips, we are sure the appliance will give you complete satisfaction and long and faithful service.

This appliance exploits the power of steam to facilitate everyday cleaning in the home.

By exploiting the power of steam, it helps reduce air pollution caused by the dispersion of chemical detergents.

It has been designed to improve the hygiene of household surfaces and upholstery.

DESCRIPTION

1. Front cover
2. Removable liquids/solids collection drum
3. Air/water conveyor
4. Filter for liquids
5. Drum cover
6. Drum handle
7. Air filter
8. Float valve
9. Handle
10. Front cover release catch
11. Rear cover
12. Steam generator cap
13. ON/OFF button
14. Steam generator ON/OFF button
15. Power on light
16. Steam generator ON light
17. Steam ready light
18. "No water" light
19. Suction ON/OFF button
20. Steam button
21. Bayonet coupling
22. Complete hose
23. Rigid extension tubes

STANDARD TOOLS

Dry vacuuming

24. Multipurpose brush
25. Dusting brush
26. Crevice tool

Steam and extraction washing

24. Multipurpose brush
27. Crevice tool
28. "Bristles in line" brush
29. Brush
30. Squeegee

IMPORTANT


- 1) Read the instructions carefully
- 2) The appliance contains pressurised steam. Incorrect or improper use could be dangerous. The appliance is designed for household use only as described in the manual. The manufacturer declines all liability for damage deriving from improper use of the product.
- 3) **Always unplug the appliance from the mains socket before starting to fill the steam generator or before cleaning or maintenance.**
- 4) Before use, make sure the mains voltage corresponds to the voltage indicated on the rating plate on the bottom of the appliance.
- 5) Plug the appliance into an efficiently earthed socket with a minimum rating of 10 A.
- 6) **Never direct the steam jet towards power sockets or appliances containing electrical components such as those inside ovens. They could be damaged.**
- 7) Never direct the steam jet towards the appliance.
- 8) Never unplug the appliance by pulling the power cable or appliance itself.
- 9) To avoid damaging the insulation, do not run the appliance over the power cable.
- 10) **Before turning the steam generator on, make sure the cap is firmly closed and remove any water left in the cavity.**
- 11) **Do not turn the steam generator on when it is empty. To add water, unplug from the mains, wait about 15 minutes to avoid steam discharges from the cap. Place a cloth over the cap and unscrew slowly to allow residual steam to escape gradually.**
- 12) **DO NOT OPEN THE STEAM GENERATOR CAP WHEN UNDER PRESSURE.**
- 13) Avoid the steam coming into contact with the skin. The high temperature could cause serious burns. Never direct the steam jet towards persons or animals or towards surfaces or objects which could be damaged by high temperatures.
- 14) **Do not touch the plug with wet hands.**
- 15) When in operation, hold the appliance by the handgrip. As it incorporates a steam generator, surfaces become hot during use. Persons affected by particular pathologies causing abnormal sensitivity to heat should take special care when using this appliance.
- 16) **Always keep the appliance in a horizontal position when in use.**
- 17) Do not add detergent to the steam generator. Use water only.
- 18) **Never wash the appliance with triethylene or other solvents. Use water with normal liquid detergents only.**
- 19) Avoid closing the door on the cable or rubbing it over sharp edges. Keep it away from hot surfaces.
- 20) Do not vacuum up inflammable liquids.
- 21) Avoid vacuuming up hard or sharp objects as they could damage the appliance.
- 22) Before starting the appliance, make sure the filters are in position.

- 23) Never use the appliance without the polyurethane filter in place on the float valve housing.
- 24) Always fill the drum with water before using the appliance as a dry vacuum cleaner.
- 25) Take particular care when using the appliance on stairs.
- 26) Keep the appliance out of reach of children or persons not capable of using it without supervision.**
- 27) Do not use the appliance if it appears to be faulty. Contact your local dealer or an authorised service centre.
- 28) If the temperature safety switch trips, the appliance shuts down. To reuse the appliance, contact an authorised technical service centre.
- 29) Protect the appliance from atmospheric agents (rain, frost, sun, etc).
- 30) Heating up and cooling down of the steam generator could cause noises associated with normal expansion of the stainless steel it is made from.
- 31) For repairs contact your local dealer or an authorised service centre in order to avoid compromising the efficiency of your appliance and to maintain the validity of the guarantee. For the same reasons, you are always recommended to use original spare parts.
- 32) The power cable must always be replaced by an authorised service centre only.**

KEEP THESE INSTRUCTIONS CAREFULLY

The manufacturer reserves the right to modify appliances and tools without warning.

This appliance conforms to current electrical safety and electromagnetic compatibility legislation.

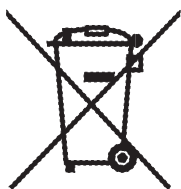


Important information for correct disposal of the product in accordance with EC Directive 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste.


It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

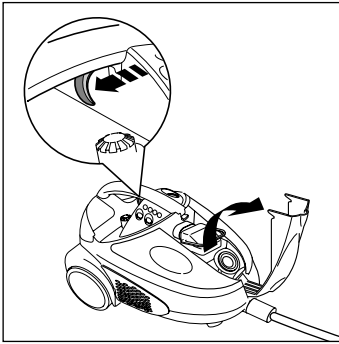


Preparing the appliance for dry or liquid vacuuming.

Release the catch (10) under the handle of the appliance and open the front cover.

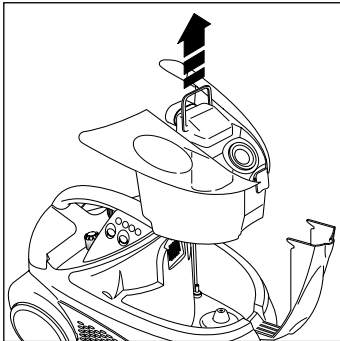


Remove the liquids/solids collection drum by pressing the catch and lifting the tank by the handle (6).

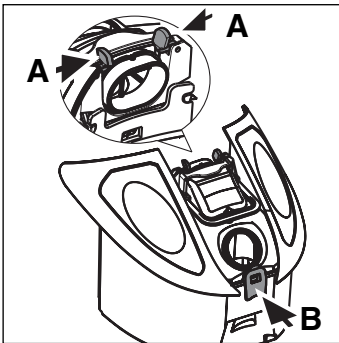

Remove the drum cover with float valve system.

To remove the cover correctly, press the release levers marked with the letter **A** and at the same time press lever **B** at the bottom of the cover to release it.

Hold levers **A** down, lift the lid and empty the drum.

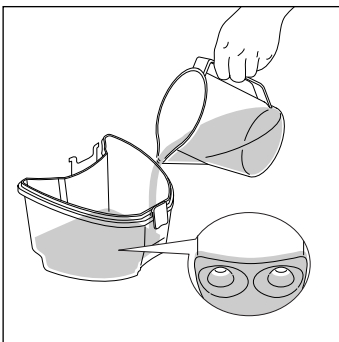


Remove the air/water conveyor (3) and pour the water into the drum until it covers the two projections on the bottom of the tank (about 800 cc).


Replace the conveyor, insert the drum cover and press down as far as it will go until it hooks into place, then holding the catch (10) down, replace the drum.

Close the front cover.


N.B.: To use the appliance as a wet vacuum cleaner, you do not need to fill the drum with water.

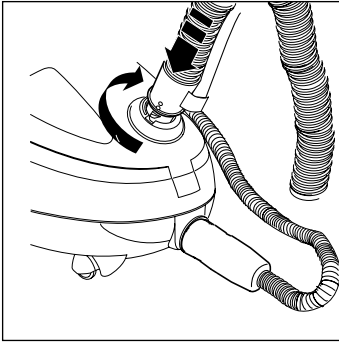


Fit the hose onto the appliance (22).
Insert the bayonet coupling (21) into the socket on the cover (1), press down and rotate clockwise as far as it will go.

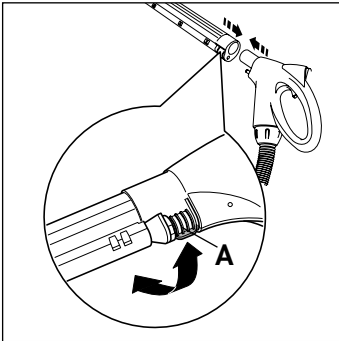

Insert the extension tube (23) onto the hose handgrip, making sure the handgrip coupling is perfectly connected to the extension tube coupling by pushing firmly together. **Lock in place by rotating the locking ring (A).**
To make sure it is fitted correctly, attempt to remove the extension tube.
To insert the second extension tube or brush, proceed as described above.

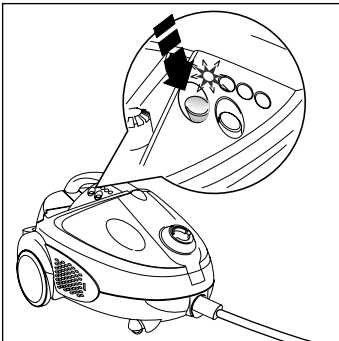

Plug into the mains socket and press the ON/OFF button (13). Light (15) comes on. Power to the appliance is now on.

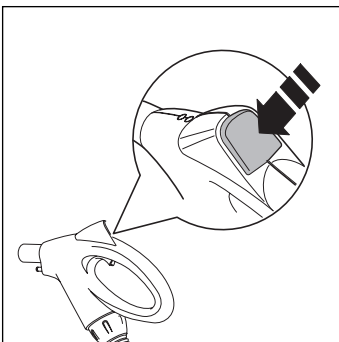

To turn the vacuum function on, press the suction ON/OFF button (19) on the hose handgrip. The appliance will be at maximum suction power.
To turn suction off, press the suction ON/OFF button (19) again.

N.B.: Do not press button (14) to turn power to the steam generator on when the appliance is being used as a vacuum cleaner only.

Important: while vacuuming up liquids, when the drum (2) is full of water, a device shuts off suction and motor revolutions increase.


You must turn the appliance off by pressing the ON/OFF button (13).

Unplug from the mains socket and empty the drum.

This device may also trip when the filters (7) and (4) are exhausted. In this case, remove and clean them (see chapter 4, "Cleaning and maintenance of the appliance).

The suction shut-off device may also trip when the appliance is knocked violently.


In this case, turn off the motor and wait a few seconds before turning the appliance back on.

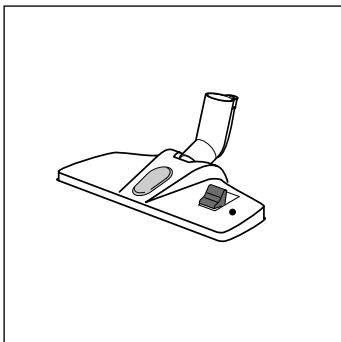

VACUUMING TOOLS


Multipurpose brush (24)

Use this brush to vacuum up liquids and dust. Should be used on hard floors only.

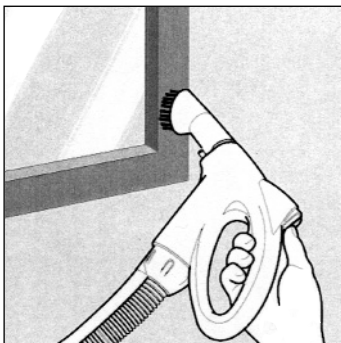

Dusting brush (25)

Jointed to facilitate cleaning. Particularly suitable for eliminating dust from upholstery, furniture, books, curtains, frames and clothes.

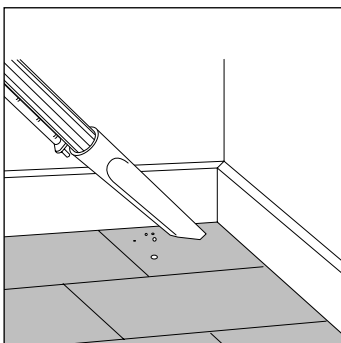

Crevice tool (26)



Can be used to collect crumbs, dust and small debris. Perfect for hard-to-reach corners.

Preparing the appliance for steam cleaning

Extraction steam cleaner

Remove the rear cover (11), unscrew the steam generator cap (12) and fill with water **without detergent** (the opening is designed in such a way that you can fill the steam generator without requiring a funnel). Eliminate any residual water from the cap cavity, replace the cap and the rear cover.

Fit the hose (22), extension tubes (23) and brush (24) following the instructions for assembling the tubes and brush given in the chapter "Preparing the appliance for dry or liquid vacuuming".

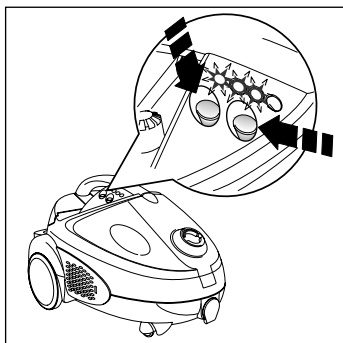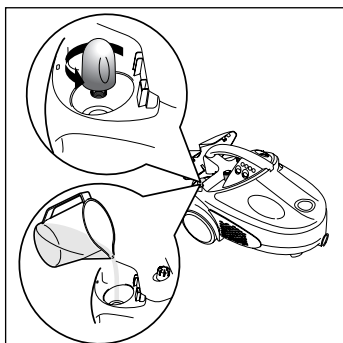


Plug into the mains socket.

Press the power ON/OFF button (13) and steam generator ON/OFF button (14).

At this point, the power on (15) and steam generator on (16) lights will come on.

When the steam ready light (17) comes on, the appliance is ready for use.

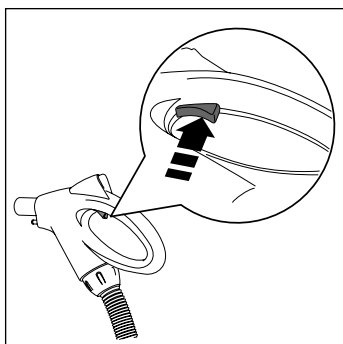


To deliver steam, hold the button (20) on the bottom of the hose handgrip down. Release it to stop delivery.

Activate **suction by pressing the ON/OFF button (19).** The appliance will then wash and vacuum at the same time. In the case of persistent marks, you are recommended to steam first, then vacuum.

(See paragraph "Extraction washing technique" on page 21).

N.B.: When used for the first time, the appliance may give out smoke and an odour for several minutes. This is caused by heating and subsequent drying of the sealers used in assembling the steam generator.

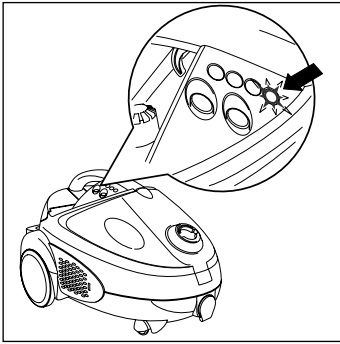

When the water in the steam generator is about to run out, the "no water" indicator light comes on (18).

To fill again, proceed as follows:

Turn the appliance off by pressing the ON/OFF button (13) and the steam generator ON/OFF button (14).

Unplug from the mains socket. Wait 10-15 minutes until the appliance cools down, then open the cap (12) slowly using a cloth to allow residual steam to escape.

Refill as described above.

Important! Never unscrew the cap with the steam generator under pressure and never operate the appliance without water.

Extraction washing technique

For extraction washing, proceed as follows:

- Aim the steam jet at the surface to be treated using the steam button (20) and at the same time activate suction using the ON/OFF button (19).
- Retract the brush bristles by pressing the pedal, then pass a number of times over the surface to be treated using suction only. The treated surfaces will be almost completely dry and the dirt will be removed.

Steam cleaning without extraction

To use the appliance as a steam cleaner only, proceed as above, but without activating the vacuum system, in other words, without pressing the vacuum button (20).

Extraction and steam cleaning tools


(the exact tools supplied vary according to model)


Multipurpose brush (24)

To use the steam extraction washing brush on hard floors turn the pedal until the bristles are protruding.

This obtains a combined steam+brush action for more efficient cleaning.

Tips: not recommended for treated terracotta floors, waxed floors and parquet.

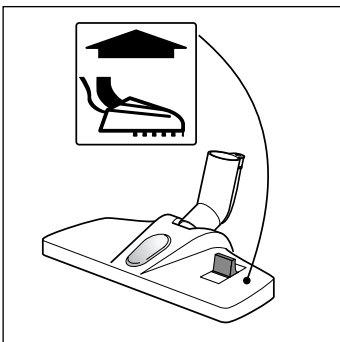

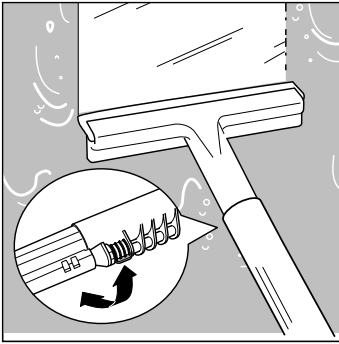

Squeegee tool (30)


The squeegee tool is extremely useful for cleaning glazed surfaces.

Insert the extension tube either directly onto the handgrip, making sure the coupling is perfectly connected to the handgrip coupling or to the extension tube, pushing firmly together and then **locking by rotating the locking ring**.

Aim the jet at the surface to be washed.

To dry, slope the tool in such a way that the squeegee adheres perfectly to the surface to be dried.

Tip: in low temperatures, you are recommended to warm the windows first with a weak jet of steam to avoid the risk of breakage due to sudden temperature changes.

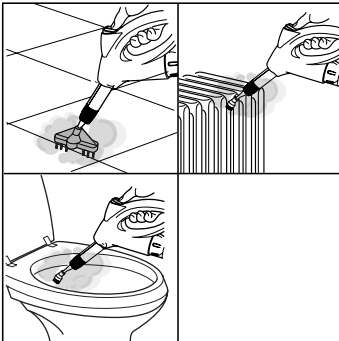

Lance (27) + brushes (round 29 and in-line 28)

After fitting the crevice tool, attach one of the brushes provided.

The brushes are different colours, so you can reserve each one for a specific purpose (eg. red for the oven, yellow for sanitary fittings, etc).

The "bristles in line" brush is particularly suitable for cleaning joints between tiles.

Important warning: After fitting the required tool, follow the instructions in the manual to operate the appliance.

Cleaning and maintenance

Important: Before cleaning or maintenance, always unplug from the mains socket.




After using the appliance, to improve hygiene you should rinse the tools by sucking up clean water. This will clean the tools and the inside of the hose.

You should empty the liquid collection drum each time you use the appliance.

If not used for long periods, you are recommended to empty the steam generator before putting the appliance away.

After emptying and rinsing the drum, remove the polyurethane filter for liquids, wash under running water and leave to dry.

To improve the working life of the filter, keep it dry.

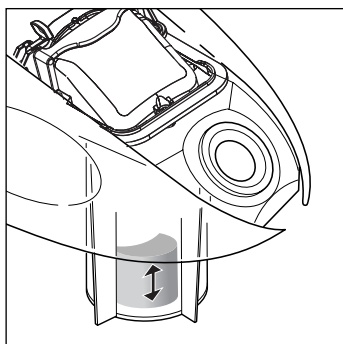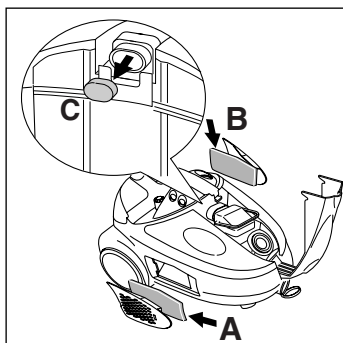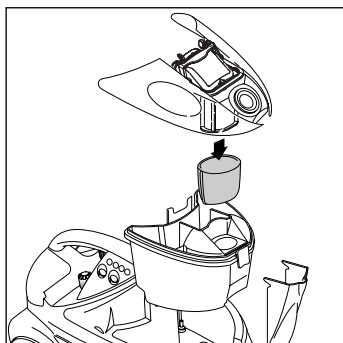

The exhaust air is filtered through a **high efficiency filter (A)** able to retain particles larger than 3 microns.

This filter must be replaced when dirty.

When dirty, filters **B** and **C** can be washed, dried and replaced.

Efficient filters are important to keep the appliance working effectively.

Filters can be obtained from authorised service centres.

Check the float valve in the motor housing regularly to make sure it is free to move. Also check that the liquids filter (**4**) and air filter (**7**) are always present and inserted correctly.