
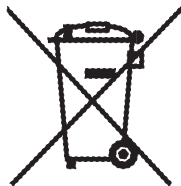 


DRY VACUUM CLEANER

OPERATING INSTRUCTIONS

Important information

- **Read the instruction booklet carefully**
- Before using, check that the mains voltage corresponds to the voltage indicated on the specifications label under the handle.
- Connect your cleaner only to power outlets with a minimum of 10 amps and make sure the outlet is earthed. For machines with double insulation (see the  symbol on the specifications label), earthing is not necessary.
- **Always disconnect the appliance from mains outlet when not in use or before any maintenance or care operation.**
- Do not clean the appliance with benzine or other solvents. Use soapy water only.
- Do not tug on the power cord, or the machine itself, to disconnect the appliance from mains outlet.
- Do not leave the appliance unattended while it is running. Keep it away from the reach of children and persons unfit to use it.
- Do not run the appliance over the power cord as this may damage the insulating sheath.
- Do not use to pick up flammable or corrosive liquids and liquids in general.
- Do not use to pick up matches, hot ash, or burning cigarette ends.
- Do not attempt to use the appliance if it appears to be faulty.
- To repair or if the power cable is damaged and requires replacement, contact the dealer or authorised service centre in order to avoid compromising the efficiency of your appliance and guarantee the validity of the guarantee. For the same reasons, you are always recommended to use original spare parts.
- During operation a significant quantity of air is blown out from the air exhaust grill, which may be an annoyance if directed towards the person, especially the face.



 
IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.


Description

- 1) Exhaust port
- 2) Motor unit
- 3) ON/OFF switch
- 4) Catch
- 5) Suction inlet port
- 6) Tank
- 7) Motor-protection paper bag
- 8) Extension tube
- 9) Flexible hose
- 10) Carpet and floor brush with two settings
- 11) Multi-purpose nozzle
- 12) Crevice tool

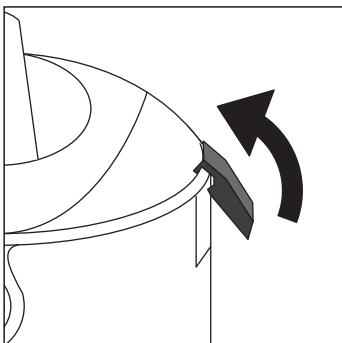


Preparing for use

 Remove the motor unit by pulling the catches outwards to release.

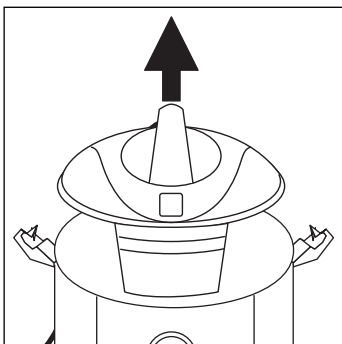


Lift off motor unit by the easy-grip handle, remove tools out of the tank and fit the tools for the task required onto your cleaner.

 Turn the appliance over and fit with the wheels provided, pushing them into the slots on the base of the tank (some models come with pre-mounted wheels).

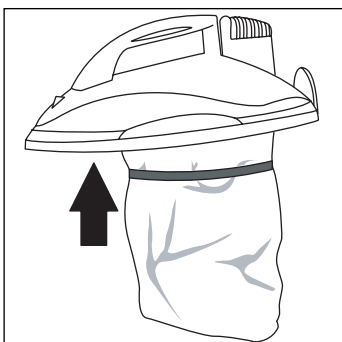

Make sure that the motor-protection paper bag is fitted over the motor housing.
Secure the paper filter with an ordinary elastic band.

 Reposition the cover checking that the cord is on the opposite side of the suction inlet port.

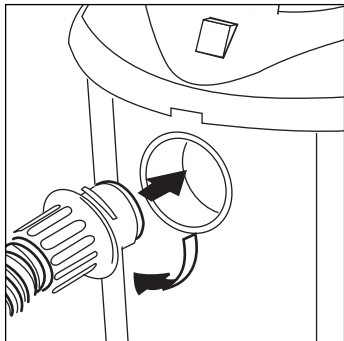


Connect the flexible hose to the inlet port of your cleaner by rotating the hose coupling clockwise until securely attached.

Fit one end of the extension tube to the handgrip and the desired tool to the other end.

Plug in the appliance and switch it on by depressing the ON/OFF button on the cover.

Tools and accessories

Carpet and floor brush with two settings

Setting 1: to clean hard floors, with the brush positioned outwards ().


Setting 2: to clean rugs and carpets, with the brush positioned inwards ().

Crevice tool

You can use this tool to pick up crumbs, dust, and other fine debris. Ideal for cleaning those hard-to-reach places like radiators, car interiors, awkward corners, and all nooks and crannies.

Multi-purpose nozzle

 For cleaning upholstery, sofas, car interiors, drapes, curtains, etc.

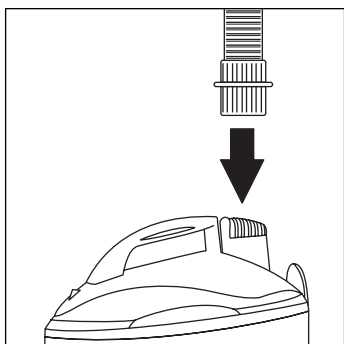


Blower

Fit the flexible hose onto the exhaust port hatch on the motor unit, and switch the machine on by depressing the ON/OFF button.



Care and maintenance of the appliance

 CAUTION: Always disconnect the appliance from mains outlet before performing any cleaning or maintenance operation.

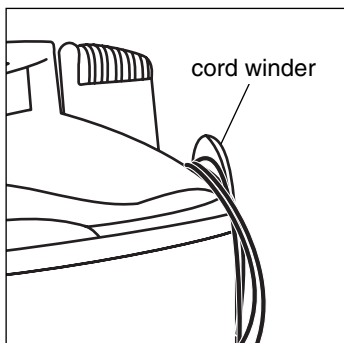

Always remove cover and empty out the tank after use to ensure maximum hygiene and a long working life for your appliance.

To store the appliance, place the accessories on the tool slots and wind the cord around the cord winder.

Paper filter care and maintenance

Periodically replace the protection filter on the motor unit.

If vacuuming up particularly fine dust, such as talcum powder or masonry dust, the paper filter, even if appears clean may in reality be impregnated with these substances, which impede the normal flow of air and affect the suction capacity of the appliance.

In such cases, it is preferable to replace the filter.

The manufacturer reserves the right to change the specifications of the appliance and/or accessories without prior notice.

Use only original spare parts and accessories so as to maintain the appliance in good working order and NOT invalidate the warranty.