

*Dear Customer,  
Thank you for the confidence you have placed in our company.*

*All our products are the result of consolidated experience in the design and production of appliances for household cleaning, and have been subject to meticulous technical tests.*

*This manual is designed to help you make the most of your appliance and to fully appreciate its superb quality.*

*We are certain that if you follow our suggestions, this appliance will give you absolute satisfaction and many years of service, while also easing your daily household cleaning tasks.*

## Description

1. On-Off switch
2. Handle
3. Handle release button
4. Electronic power adjustment (electronic versions)
5. Full paper bag indicator
6. Front panel opening catch
7. Front panel
8. Suction nozzle

## Accessories

9. Carpet/floor brush\*
10. Multi-purpose nozzle
11. Crevice tool
12. Extension pipe
13. Flexible suction hose
14. Electro-brush\* (if provided)
15. Shoulder strap (if provided)
16. Round dusting brush (if provided)

## INDEX

Important safeguards	p.	11
Assembling the appliance	p.	12
Using the appliance	p.	13
Cleaning and maintenance	p.	14

\*The carpet/floor brush (9) and electro-brush (14) may be different from those shown in the illustration. They are only different in appearance - the operating instructions are the same.

## ENGLISH

 
- 1) Read the instruction booklet carefully**
- 2) Never use the appliance on wet surfaces.**
- 3) Always unplug the appliance when not in use and before carrying out any maintenance or cleaning work on the appliance itself.**
- 4) The appliance is only intended for domestic use, as shown in the booklet, and only with the accessories supplied.
- 5) Do not leave the appliance unattended when switched on. Keep away from children and unfit persons.**
- 6) Do not handle the power plug with wet hands.
- 7) Keep clothing, hair, fingers and all parts of the body away from the suction nozzle and moving parts (electro-brush roller).
- 8) To avoid damage to the insulation, do not run the appliance over supply cord.
- 9) Do not unplug by pulling the electric cord.
- 10) Do not use the electric cord as a handle. Do not jam the cord in doors, nor allow it to rub against corners. Keep away from heated surfaces.
- 11) Do not allow the appliance to pick up matches, hot ashes or cigarette ends.
- 12) Do not use for liquids of any kind.
- 13) Avoid vacuuming hard or sharp objects that could damage the paper bag and the appliance itself. Do not vacuum nails, pins, screws, coins or metal objects.
- 14) Do not use without a filter paper dust collection bag. The use of plastic or non-filter paper bags affects the operation of the appliance and may cause serious damage.
- 15) Before starting the appliance, ensure that the correct filters are properly in place.
- 16) Check the filters regularly and, if necessary, clean or replace them.
- 17) After washing dirty filters, ensure they are completely dry before putting them back in place.
- 18) Do not introduce foreign objects into the suction nozzle. Do not use the appliance if any aperture is obstructed. Keep the suction nozzle free of dust, hair, gauze and any other material that could restrict suction.
- 19) Do not wash the appliance with trichloroethylene or other solvents. Use only water with ordinary liquid detergents.
- 20) Be especially careful when using the appliance on stairs.
- 21) Do not switch on the appliance if it seems defective. Do not use if the electric cord or power plug is damaged. If the appliance is dropped, left outside, gets wet or is immersed in water, take it to an authorized Technical Service Centre.
- 22) The power cable of this appliance may not be replaced by the customer. Any time the cable has been damaged, or any time you just wish to replace it, please contact only authorized technical support centres.
- 23) The appliance is not intended for use by young children or infirm persons without supervision.
- 24) Young children should be supervised to ensure that they do not play with the appliance.
- 25) For all repairs, apply only to the place of purchase or directly to an authorized Technical Service Centre.

### KEEP THESE INSTRUCTIONS


The manufacturer reserves the right to modify the appliance and/or accessories supplied without prior notice.  
This appliance conforms to the EN 55014 standard for radio interference.

## ASSEMBLING THE APPLIANCE


Release the handle by pushing the two buttons (A and B, fig.1) at the sides of the handle seat. Raise to a vertical position until you hear it click (fig.2). To unlock, press the button (3) and fold it back (fig.3).

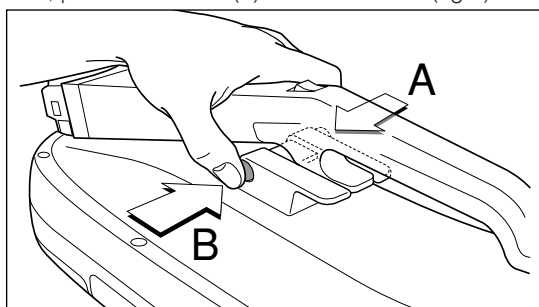

**1**

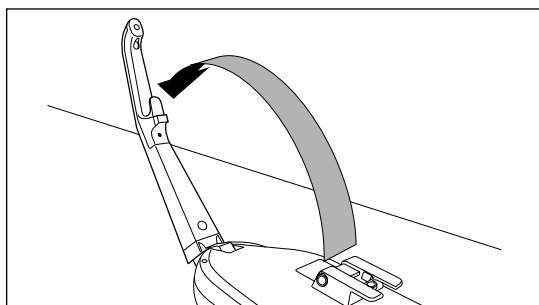 


**2**

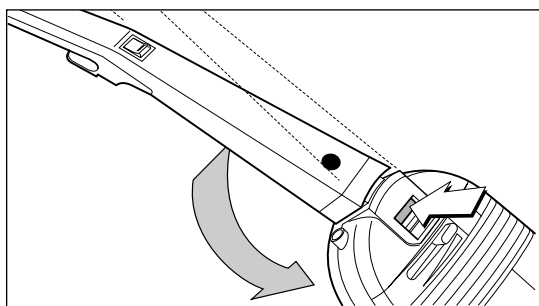 

**3**


Attach the carpet/floor nozzle to the end of the vacuum cleaner, pushing it in well. Cleans dust efficiently from both hard floors or mats and carpet.

 Thanks to the articulated fins, this model is particularly suited to cleaning right up close to furniture and into corners. (fig. 4).

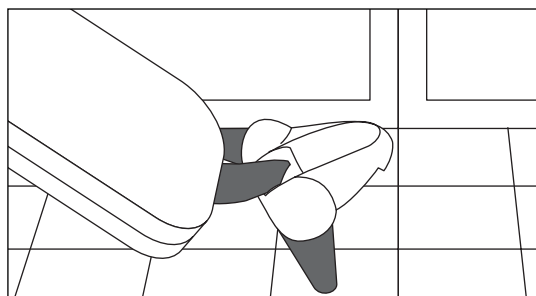

**4**

 
For cleaning wider areas, simply rotate the brush to use the total width (fig. 5).

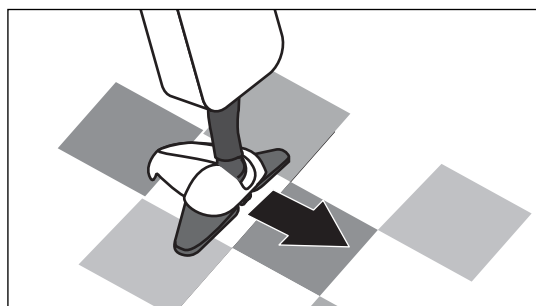

**5**

Open the front panel by pulling the catch (A, fig.6) and check that the paper bag is properly inserted.

 
If the bag is not positioned correctly, the safety device lever (B, fig.6) will prevent the panel being closed again.

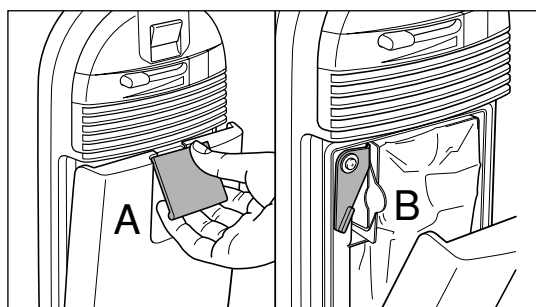

**6**

## USING THE APPLIANCE

 The appliance is equipped with a variable suction slide control (fig. 7).

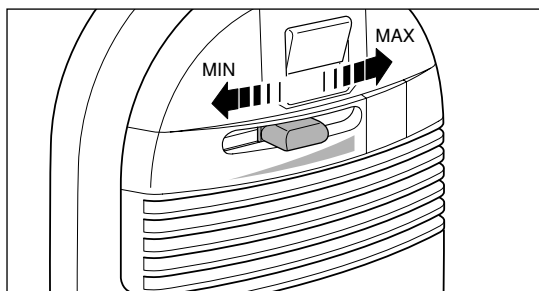


7

It is advisable to set the slide control to minimum before turning on the appliance.

- **Maximum power:** recommended for heavy dirt (small stones, soil etc.) on hard floors, fabric covered floors, deep pile carpets, corners, edges etc.
- **Medium power:** saves energy and reduces the noise level of the appliance. This is quite sufficient for removing dust from hard floors and fabric furnishings.
- **Minimum power:** perfect for vacuuming light, delicate objects and light fabric coverings as it prevents the material being sucked into the appliance making it difficult to clean.

 
Plug in the power cord and turn on the appliance with the switch on the handle (fig. 8).

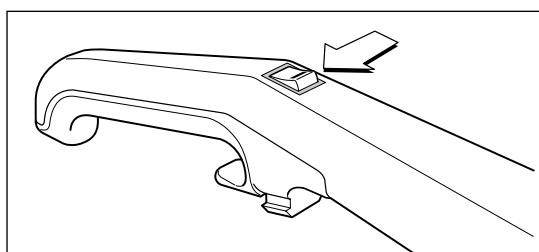

8

### For cleaning under low furniture.

 To make cleaning under low furniture easier, attach the extension pipe and insert the required tool (fig. 8). When using the carpet/floor brush, for maximum suction efficiency, turn the swivel joint of the brush 180°. (fig. 9)

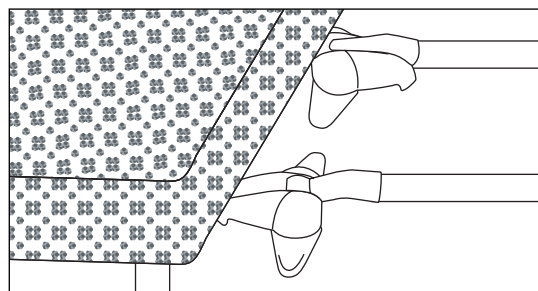


9

### Using the electro-brush (available on request)

 Electronic versions can be fitted with an electro-brush to clean carpets and rugs.

Attach the electro-brush (14) to the suction nozzle (8), pushing it in well. Connect the electro-brush plug to the power take-off on the body of the appliance (fig. 10). When the appliance is turned on, the electro-brush motor starts automatically. The appliance can now be used for cleaning all types of textile surface.

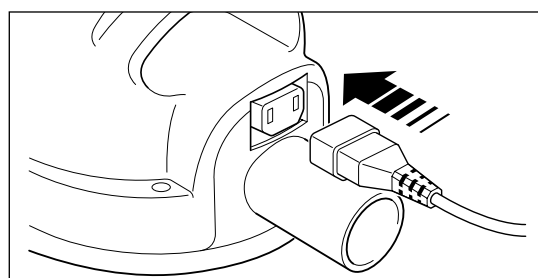

10


**WARNING:** do not use the electro-brush on rug fringes as these could become entangled in the roller.

### Using as a vacuum cleaner, and shoulder strap models

 For cleaning upholstery, sofas, mattresses, furniture etc., the appliance can easily be transformed into a practical, portable vacuum cleaner.

Fold back the handle and hook it to the back of the appliance. Attach the flexible hose plus appropriate tool to the end of the vacuum cleaner (fig.11) (multi-purpose nozzle for curtains and sofas, crevice tool for corners and cracks, round dusting brush for the surface of furniture, central heating radiators, door jambs etc.)

This allows the appliance to be moved by hand for easier cleaning.

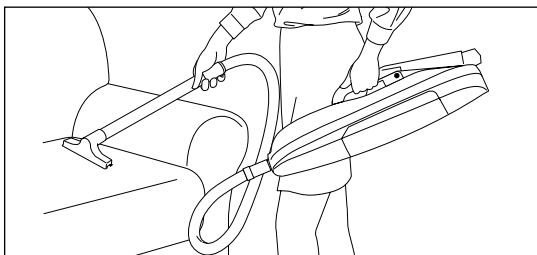


**11**

The appliance is easier and more comfortable to use with the shoulder strap (fig.13) attached.

#### To attach the shoulder strap (if provided):

 - fold away the vacuum cleaner handle;
- attach the rectangular ring to the rear of the appliance, sliding it around the handle release button (3) until it clicks (A, fig. 12).
- slip the shoulder strap ring over the suction nozzle (8), then attach the required accessory (B, fig. 12).

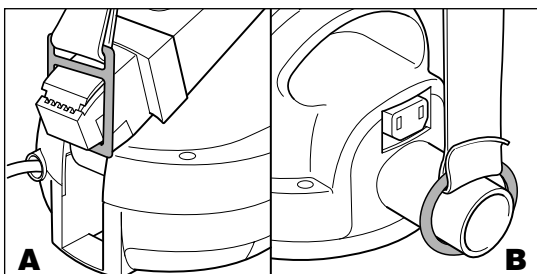

**12**



**13**

## CLEANING AND MAINTENANCE

**Always unplug the appliance before carrying out any maintenance or cleaning work.**

### Insufficient suction

The full bag indicator (5) on the front panel becomes red when the dustbag needs replacing or if the air flow is obstructed.

In the second case, check the suction nozzle (8) and remove the obstruction that caused the light to come on.

 
### Replacing the paper bag

Pull out the catch (A, fig.6) and open the front panel (7).

Remove the paper bag by pulling out the cardboard collar (fig.14), and replace it with a new one.

To insert the new bag, just slide the cardboard collar into the special guides, pushing the anti-closing device (B, fig. 6) at the same time.

Push it down well and close the panel.

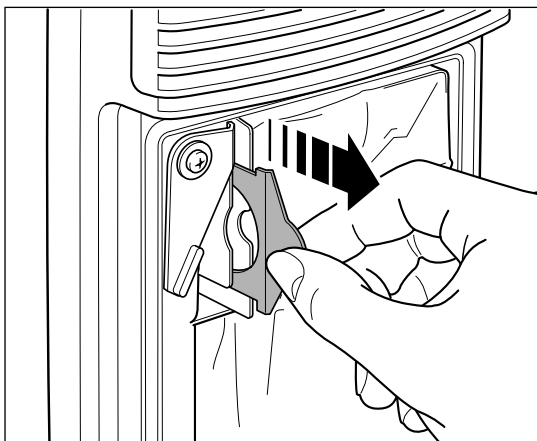


14

### Replacing the microfilter

 Open the small hatch at the rear of the appliance (fig. 16), remove the microfilter, replace it with a new one and close.

The microfilter should be changed often (after every 2-3 dust bag replacements) to prevent the circulation of bacteria in the room.

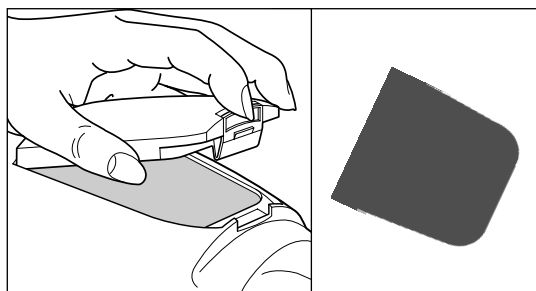

16

17


If your appliance is fitted with an active carbon filter (fig. 17), this should also be changed after every 2-3 dust bag replacements or when it has become stiff, to ensure effective filtration of unpleasant odours.

### Motor filter maintenance

 The motor filter must always be kept clean to ensure the absolute cleanliness of the air expelled by the appliance, and to give maximum suction and optimum motor cooling.

Open the front panel (A, fig. 6), remove the filter holder (A, fig. 15), raise the small grid and remove the motor filter (B, fig. 15).

To maintain efficiency, just wash it occasionally in water and normal detergent.

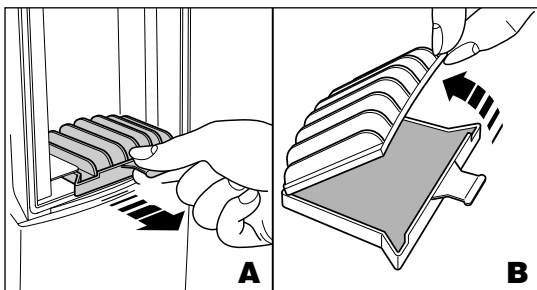


15

B

### Storing the appliance

 Wind the cord around the special winding lugs on the appliance (fig. 18).

The appliance may be hung on a wall by fixing a screw and dowel to the wall and attaching the unit by way of the hole at the back of the handle (A, fig. 18), or it may be placed in a vertical position and leant against the wall.

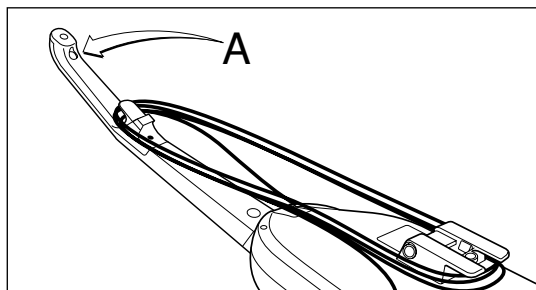

18