

ENGLISH



**Read
Operating
Instructions
Carefully**

*Save this
booklet*

*Dear Customer,
each of our products IS
the result of meticulous
technical tests supported
by many years of
experience in planning
and in the production of
electrical appliances for
household cleaning.
We have prepared this
booklet in order to allow
you to make full use of*

*the various applications of this appliance.
We therefore recommend you read all of it very
carefully before using it we are sure that if you
follow our suggestions you will be able to use it
for a long time with great satisfaction.*

Description

- 1) Handle
- 2) Power cable
- 3) ON/OFF and speed control knob
(Electronic version)
ON/OFF switch (Automatic version)
- 4) Air exhaust microfilter compartment door
- 5) Upper body
- 6) Body aperture lever
- 7) Lower body
- 8) Brush for carpets/floors
- 8a) Parquet attachment (if provided)
- 9) Full-bag indicator

Important Safeguards

- 1) Before using check that the electricity corresponds to that indicated on the appliance's information plate. Only plug in the appliance to power sockets having a minimum voltage of 1 OA if 220/240V, 1 6A if 120V and that are sufficiently earthed.
- 2) Before turning on the appliance, check that all the necessary filters are in place.
- 3) Check the filters regularly; if necessary, brush them clean or replace them.
- 4) If necessary, wash the filters. Allow the filters to dry completely before replacing them.
- 5) Never place the vacuum nozzle near eyes, ears or nose when the appliance is in operation.
- 6) Do not use the appliance to vacuum burning objects (cigarette ends, hot ashes, etc.).

- 7) Always remove the plug from the power socket when the appliance is not in use and before carrying out any maintenance or cleaning.
- 8) Do not switch on the appliance if it appears to be malfunctioning in any way.
- 9) Do not run the vacuum cleaner over the power cable, as this might damage the insulating sheath.
- 10) Never pull the power cable or the appliance itself to remove the plug from the socket.
- 11) Do not allow children or the infirm to use the appliance.
- 12) This appliance is designed exclusively for domestic use as described in the instruction booklet.
- 13) For all repairs, contact your local dealer or an authorised Service Centre.

The manufacturer reserves the right to modify the appliance and the relative accessories without prior notice. In order to maintain the efficiency of the appliance and to comply with the requirements of the guarantee, always use original spare parts and accessories.

Assembly

(fig.1 & fig.2)

Check that the filter is correctly positioned in the lower section of the body (7). Connect the two sections ensuring that the latch of one section (5) engages with the notch on the other (7). Fit the lever (6) of the lower section to the latch (A) of the upper section of the vacuum cleaner and press the lever downwards until it clicks into position.

Fitting the handle (fig. 3)

- Unscrew the screw for fitting the handle.
- Fit the handle and press down firmly, ensuring that the holes for the screw in the handle and in the vacuum cleaner itself correspond. The cable has to pass through the groove at the base of the handle; care must be taken not to damage the cable during this operation.
- Insert the screw and tighten well.

Fitting the accessories

The accessories should be pushed firmly into position on the lower section of the appliance for a perfect fit

- A) Carpet/floor brush: efficiently vacuums dust from hard floors as well as carpets and rugs. In order to vacuum on hard floors the brush

lever has to be pressed so that the symbol (▲) far extended bristles appears. To vacuum carpets and rugs the lever will have to be pressed in the apposite direction so that the symbol (▲) far bristles retracted appears.

Parquet attachment (if provided): Ideal for vacuuming wood floors. Fit the accessory onto the floor/carpet brush as shown.

- B) All-purpose nozzle: particularly suitable for cleaning sofas, chairs, upholstery, car seats, blankets, mattresses, curtains etc..
- C) Narrow nozzle: very useful for cleaning corners, edges, drawers and all the places that are usually hard to reach.

Instructions for use

Switching on the appliance

Automatic version (fig. 4): press the ON/OFF switch (3).

Electronic version (fig. 4a): turn the knob (3) clockwise and proceed as follows:

- Maximum power: advisable for carpets and rugs, corners, edges and heavy dirt (such as gravel, crumbs, etc.)
- Medium power: allows you to save electricity, is quieter when operating and is more than sufficient to remove dust from hard floors and upholstery.
- Minimum power: necessary for vacuuming on delicate or light objects such as upholstery made of light material, in order to avoid the material being sucked into the nozzle thereby making the cleaning operation difficult.

Power cable release (fig. 5)

In order to release the power cable (from the two hooks it is wound around) more quickly, all that need be done is to turn the upper hook downwards and the cable is released immediately.

Cleaning under low furniture (fig. 6)

Connect the rigid extension tube to the appliance, then connect the desired accessory suitable for cleaning to the extension tube. For most effective cleaning, rotate the body of the vacuum cleaner right and left while moving the cleaning head forwards/backwards in order to clean.

Cleaning high areas and ceilings

Connect, pushing fully into position, the rigid extension tube and, the suitable cleaning accessory. Use both hands to hold the vacuum cleaner.

Full-bag indicator (9)

The full-bag indicator is on the lower part of the broom and is activated when the suction hose is blocked or the dust bag is excessively full.

Replacing the dust bag (fig. 7)

Release the lever (6) which fixes the lower body to the upper body, raise the small handle and pull the filter-holder outwards. Take out the dust bag and replace it with a new one inserting the cardboard collar in the filter-holder grooves. Replace the filter-holder, making sure that it is in alignment with the two upper guides on the lower section of the appliance and push firmly into position.

Cleaning and maintenance of the appliance

Before carrying out any maintenance operation disconnect the plug from the power socket.

Care of the motor filter (fig. 8)

In order to maintain the maximum suction efficiency; to ensure that the motor performs at its best and that the air vented from the appliance contains no dust particles, the appliance's filter (A) must be kept clean and washed periodically with cold water and normal household detergent. Check that the filter is thoroughly dry before reusing it.

Cleaning and substituting the air exhaust microfilters (fig. 9).

The air exhaust microfilters must be kept clean and replaced every 2-3 months (approximately) so as to avoid the spread of bacteria in the air. Open the grille pressing lightly downwards on the small lever and then pull outwards. Proceed with cleaning or substituting the microfilters.

Storing the appliance

Wind the cable around the purpose-made hooks (fig. 5) and using the hole located in the upper part of the handle hang the vacuum cleaner to a hook or nail fixed to the wall.