 


IMPORTANT

 
- Read this manual carefully and keep for future reference.
 - Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate.
 - Connect the appliance to sockets with a minimum current rating of 10 A only.
 - When not in use or before cleaning or maintenance, always unplug the appliance from the mains socket.
 - Never clean the appliance with triethylene or other solvents.
 - Never vacuum up liquids.
 - Never leave the appliance turned on when unattended. Keep away from children and unfit persons.
 - Use the appliance for domestic use only as described in the instructions.
 - If the appliance appears defective, do not use.
 - For repairs or to buy accessories, contact an authorised technical service centre only.
 - The manufacturer cannot be held responsible for any damage caused by tampering or improper or incorrect use of the product.
 - If the power cable is damaged, it must be replaced by the manufacturer or an authorised technical service centre in order to avoid all risk.
 - Never allow the appliance to be used by persons (including children) with psychological, physical or sensory impairments or with insufficient knowledge, unless closely supervised and instructed by someone responsible for their safety.
- Always supervise children. Make sure they do not play with the appliance.

The manufacturer reserves the right to modify appliances and tools without warning.


Never unplug the appliance by pulling the power cable or the appliance itself.

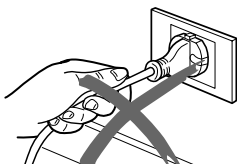

Never use the appliance on wet surfaces.

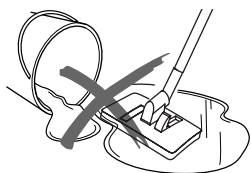

 Make sure the power cable does not tangle in the wheels of the appliance.

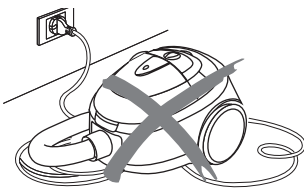


Do not obstruct the suction port or the air vent grille.



Never vacuum up matches, ash or cigarette ends when still lit.



 Never vacuum up needles, staples or wire.

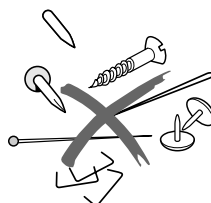

DESCRIPTION

A	Telescopic tube (various, according to model)	H	Handle
B	Hose/handgrip	I	Air outlet filter
C	ON/OFF pedal	L	Air outlet grille
D	Cable wind pedal	M	Dust bag compartment release button
E	Power regulator	N	Two position carpet/floor brush
F	Crevice tool		
G	Dust bag full indicator		

ASSEMBLY INSTRUCTIONS

Always unplug from the mains before attaching or removing tools.

Assembling the appliance

Insert the hose (**B**) in the coupling on the appliance and turn clockwise until it hooks into place (Fig. 1). To remove, turn anticlockwise and pull out (Fig. 2).

Vacuum tubes

Connect the telescopic tube to the end of the hose handgrip.

Plastic telescopic tube

Once the telescopic tube has been attached to the handgrip, press the release button and hold it down while you pull the tube out (Fig. 2).

When you have pulled out the required length, release the button. Now fit the chosen tool to the other end of the tube.

Metal telescopic tube

Once the telescopic tube has been attached to the handgrip, turn the release ring then hold it there while you pull the tube out (Fig. 4).


When you have pulled it out to the required length, release the ring.


Now fit the chosen tool to the other end of the tube.

USING THE CLEANING TOOLS

All vacuuming tools can be connected either directly to the hose handgrip or to the telescopic extension

Two position carpet/floor brush


Pos.1: to clean hard floors, bristles out  (Fig.5).

Pos.2: to clean carpets and rugs, bristles in  (Fig. 6).


Crevice tool (Fig. 7)

To clean radiators, corners, edges, drawers, etc.

INSTRUCTIONS

Before using the appliance, extract the power cable completely and plug into the mains.
To rewind the cable, unplug and press the cable wind pedal  (L) (Fig. 8).

Turning on:

To turn the appliance on and off, press the ON/OFF pedal switch  (N) (Fig. 9).

Electronic suction power regulation (Fig. 10)

The electronic regulator on the appliance varies the suction power.

The electronic regulator enables suction power to be varied according to the type of surface to be cleaned.

The maximum power of the appliance can therefore be exploited to vacuum dust from carpets or hard floors (marble, ceramics, cotto, etc) and a lower suction power to clean curtains or other light fabrics.

Manual suction power regulation (Fig. 11)

The hose handgrip incorporates a mechanical suction regulator. This enables suction power to be varied rapidly and practically by simply moving the slide.

CLEANING

Dust bag full indicator (Fig. 12)

The dust bag full indicator indicates when the dust bag needs changing or the vacuum hose is blocked.

You should change the bag before the full length of the indicator turns red to maintain the vacuuming efficiency of the appliance at maximum.

Replacing the bag

To change the paper dust bag, press the bag compartment release button and lift the cover (Fig. 13).

Remove the bag carefully by pressing the fixing lever and at the same time pushing the bag slightly backwards. The bag can then be easily removed (Fig. 14).

If the bag is made from paper, throw it away in the rubbish and replace with a new one following the instructions below.

If the bag is made from fabric, place it over a rubbish bin and remove the plastic closure by sliding it sideways (Fig. 15).

Shake the bag to remove all the dust, then close. To maintain the efficiency of the appliance, the bag must be washed regularly in warm water and left to dry thoroughly before replacing.

To insert the new bag correctly, remember to position the longest side of the cardboard horizontally.

To replace the bag, insert the rigid part in the groove in the dust bag compartment (see Fig. 16). Make sure the hose is correctly attached to the opening in the bag and fix the bag using the lever.

The paper dust bag should be replaced frequently when vacuuming up very fine dust such as flour, talcum powder and similar.

The lid of the appliance cannot be closed without the bag in place.

Motor protection filter

To guarantee a long working life and safeguard the motor, the motor protection filter must be kept clean.

To access the filter, open the dust bag compartment, extract the dust bag and remove the filter holder (Fig. 17).

If it is not very dirty, removing the dust is sufficient.

If it is particularly clogged, it should be washed and dried.

Make sure it is completely dry **before replacing in the appliance.**

Never use the appliance without the filter.

Never wash the filter in the washing machine or dry with a hairdryer.

Back filter

Remove the rear grille, take out the filter and wash with water.

When completely dry, put back in place.

After replacing the filter, reposition the grille correctly (Fig. 18).

Never wash the filter in the washing machine or dry with a hairdryer.

PARKING" POSITION

In models with metal telescopic tube, the tube can be housed on the base of the cleaner (Fig. 19). Insert the bracket on the telescopic tube in the housing on the back of the appliance.

IMPORTANT WARNING

Malfunction of the appliance (low power, unusual noise or complete breakdown) could be caused by obstructed nozzles or hoses or faulty electrical components.

Check the nozzles and motor protection filter.

If this does not resolve the problem, take the appliance to an authorised service centre.

Important information for correct disposal of the product in accordance with EC Directive 2002/96/EC.



At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a

crossed-out wheeled dustbin.