

GENERAL DIRECTIONS

- After having removed the appliance from the packaging, make sure that it is complete in all of its components. If there is any doubt, do not use the appliance and return it to be checked by qualified personnel.
- The plastic bag containing the appliance should be kept away from children as it may represent a suffocation hazard.
- In the case that the plug is not compatible with the electrical outlet being used, have it substituted with a suitable one by qualified personnel. The use of adapters, multi-way plugs, and/or extension cords is not recommended. Wherever their use might become necessary, use simple or multiple adapters and/or extension cords conforming to the safety laws, taking care to not exceed the power limits marked on the adapter or the extension cord.
- The models fitted with earth must be connected to an effective earth system, in compliance with the electrical safety standards in force.
- Should the appliance stop working, go to an authorised service centre.
- The appliance should be destined exclusively to the use for which it has been created. Any other use is to be considered inappropriate and therefore dangerous. The maker cannot be held responsible for any damage caused by improper, erroneous or irresponsible use and/or by repairs made by unqualified personnel.
- Be careful that hands, hair, clothing or kitchen utensils are not in the jug before operating the appliance. **The blades are very sharp: handle them with care.**

Note the following fundamental safety rules:

- Do not touch the appliance with wet or damp hands.
 - Do not use the appliance with bare or wet feet.
 - Do not unplug the appliance by pulling the plug out of the outlet by the cord.
 - Do not leave the appliance exposed to atmospheric agents (rain, sun, freezing temperatures, etc.)
 - The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
 - Remove the plug from the electrical outlet when the appliance is not in use.
 - Do not leave the appliance on when not in use as this may potentially be hazardous.
 - Do not immerse the appliance in water.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent in order to avoid a hazard.
 - Before beginning any cleaning or maintenance procedures, disconnect the plug of the appliance from the electrical outlet.
 - In case of malfunction and/or breakdown, turn the appliance off without touching it. For eventual repairs, go to a qualified service centre requesting the use of original parts or accessories.
 - Should it be decided to eliminate the appliance definitively, after having disconnected the plug from the electrical outlet, it is recommended that the appliance be rendered useless by cutting the power cord.
 - Keep these instructions for further reference.
- Materials and accessories coming into contact with food conform to EC regulation 1935/2004.

BEFORE USE

Before using the appliance for the first time, carefully wash all the accessories, being careful of the blades (which are very sharp); use a damp cloth to clean the motor.

Do not immerse the motor in water!

Check that the voltage of the electrical outlet corresponds to the voltage level indicated on the label of the appliance.

sponds to the voltage level indicated on the label of the appliance.

HOW TO USE

- Place the appliance on a flat, dry surface. **DO NOT CONNECT THE APPLIANCE TO AN ELECTRICAL OUTLET UNTIL THE ACCESSORIES HAVE BEEN CORRECTLY ASSEMBLED.**

- Place the jug on the motor assembly, taking care to line up the arrow on the jug with the arrow on the motor.
- To use the measure (1), turn it upside down. In this way, it can be used either as a measure or to add ingredients through the hole in the cover during processing (with the appliance turned off)., it is now possible to use it as a measuring cup and also add ingredients to the blender jar through the hole on the lid while working (while the appliance is turned off).
- Pour the ingredients into the blender jar.
This operation may be done the following ways:
1.removing the entire lid (1+2)
2.inserting the lid (2) without the measuring cup (1)
- In models with a glass jug, remove the measure (1) , turn it in a counter-clockwise direction until the grooves of the lid (2) and the protrusions on the cup line up and remove it.
- In models with a plastic jug, remove the measure (1) by rotating anticlockwise until the two tabs coincide with the guides on the cover (2), then extract.

Attention:

- **Never use the appliance for more than 90 seconds consecutively. Then leave to cool before reusing.**
- Cut solid food into cubes and add water.
- **When in use, make sure the cover is well closed.**
- **To begin processing the ingredients, simply rotate the selector to the required speed (1 or 2).**
- When the ingredients have reached the desired consistency, turn the dial back to the **0** position.
- The **PULSE** position is used to operate the appliance at the maximum speed, allowing better control over short processing.

To clean the jug, proceed as follows:

- Pour a cupful of lukewarm or hot water into the blender jar.
- Position the ON-OFF/speed selector repeatedly on AUTO CLEAN.
The appliance will function intermittently enabling rapid cleaning of the jug. Empty the jug, rinse and dry.

CLEANING OF THE APPLIANCE

Never immerse the motor housing in water.

- All of the remains of the ingredients must be

removed with a spatula. In the models having a plastic blender jar, use a rubber spatula so as to not scratch the surface.

- Pour lukewarm water into the blender jar, filling to the halfway point. Operate the appliance for a few seconds then empty the jar.
Repeat the operation if possible.

The blender jar and all the plastic components should not be washed in the dishwasher or in boiling water.

- Remove the blender jar, the lid, and the measuring cup before washing them in lukewarm water and mild detergent. The rinse and dry thoroughly.
- The glass jug (where provided) is made from top quality unbreakable glass for maximum resistance. In any case, it is advisable to take the necessary precautions in order to avoid violent knocks.
- Use a damp cloth or sponge to clean the motor housing and the electrical cord. Dry thoroughly with a soft cloth.
- Wrap the cord carefully around the base of the motor housing.

SUGGESTIONS FOR USE

1 General

- In order to get results and not risk that the ingredients spill out of the blender jar, add the ingredients to the jug a little at a time.
- Do not fill the jar more than 3/4 full – the movement of the blades will increase the volume of the ingredients in the jug. The recipes which use large quantities of ingredients should be processed in batches.
- Pour in the liquid ingredients before the solid ones, as long as the recipe doesn't say otherwise. The liquid will facilitate the processing and will allow for the use of lower speed. Always add a cup of water before processing ice.
- Blend for 5 – 30 seconds and then check the consistency. Continue to process the ingredients in this way until the desired consistency is obtained. Be sure to not process the ingredients too much; this would cause a loss of consistency to the entire recipe.
- Always use the blender with the lid well inserted.
- DO NOT remove the blender jar from the motor housing while the appliance is in use.
- In order to avoid the possibility of injury to the user or damage to the appliance, do not insert

hands or utensils into the jar while the appliance is operating. It is possible to utilise a spatula while the appliance is turned off.

2 Solid ingredients

- It is necessary to pay particular attention during the processing of fine ingredients. In this case, it is necessary to interrupt the processing from time to time, take off the lid and scrape the ingredients down off the sides of the jar and the blades. Then reinsert the lid and continue processing. If the processing becomes lengthy in this way, select a higher speed.
- To add solid ingredients to the blender jar, remove the measuring cup from the lid and add them a little at a time through the hole in the lid. The vegetable and cheese ingredients must always be cut into cubes before being added to the jar.
- If the appliance is used to prepare fruit, remember to remove the stones first.

3 Hot preparations

It is always necessary to remove the measuring cup from the lid before beginning the preparation of hot recipes.

- Slowly add the hot ingredients, maximum 2 cups at a time, through the hole in the lid.

USING THE COFFEE GRINDER (CERTAIN MODELS ONLY)

How to use

- Place the appliance on a dry flat surface. Do not plug the appliance into the mains socket until it is correctly assembled.

HOW TO USE YOUR COFFEE GRINDER

- Place the appliance on a flat surface.
- Turn the lid in an anti-clockwise direction and lift it off (Fig.1). Fill the container with the desired amount of coffee beans (Fig. 2).
- Re-close the cover by rotating anti-clockwise until it hooks into place.
- Pull out the length of cord required and plug into the socket.
- Place the coffee grinder accessory on the motor assembly and rotate anticlockwise until the arrows on the coffee grinder and motor assembly coincide.
- Rotate the ON-OFF/speed selector to the required speed (1 or 2) to obtain the desired degree of grinding, then

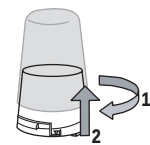 


Fig.1

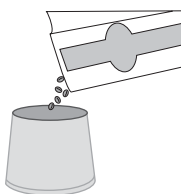 


Fig.2

- place the selector in the 0 position.
- Remove the coffee grinder accessory by rotating clockwise. To facilitate opening, turn it upside down (see figure 3)
- Rotate the base of the coffee container clockwise and extract. The coffee is thus positioned on the cover which acts as a container.

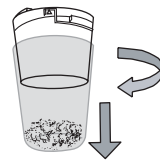 


Fig.3

RECOMMENDATIONS FOR USE

- Always keep the lid of the coffee bean container tightly closed so as to keep in all the flavour and aroma of the coffee beans.
- Do not operate the appliance continuously for more than 60 seconds. Allow the appliance to cool down before using again.
- To ensure that you always have the best quality in terms of freshness, always clean the appliance after each use, especially if coffee is ground after grinding other products (e.g. sugar). However it is inadvisable to grind oily beans (e.g. peanuts) or products that are too hard (e.g. rice).

CLEANING

- Wash the coffee container and coffee container cover thoroughly with water and neutral soap.
- Use a small brush to remove any coffee grinds left inside the mechanism.

Important information for correct disposal of the product in accordance with EC Directive 2002/96/EC.



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.