


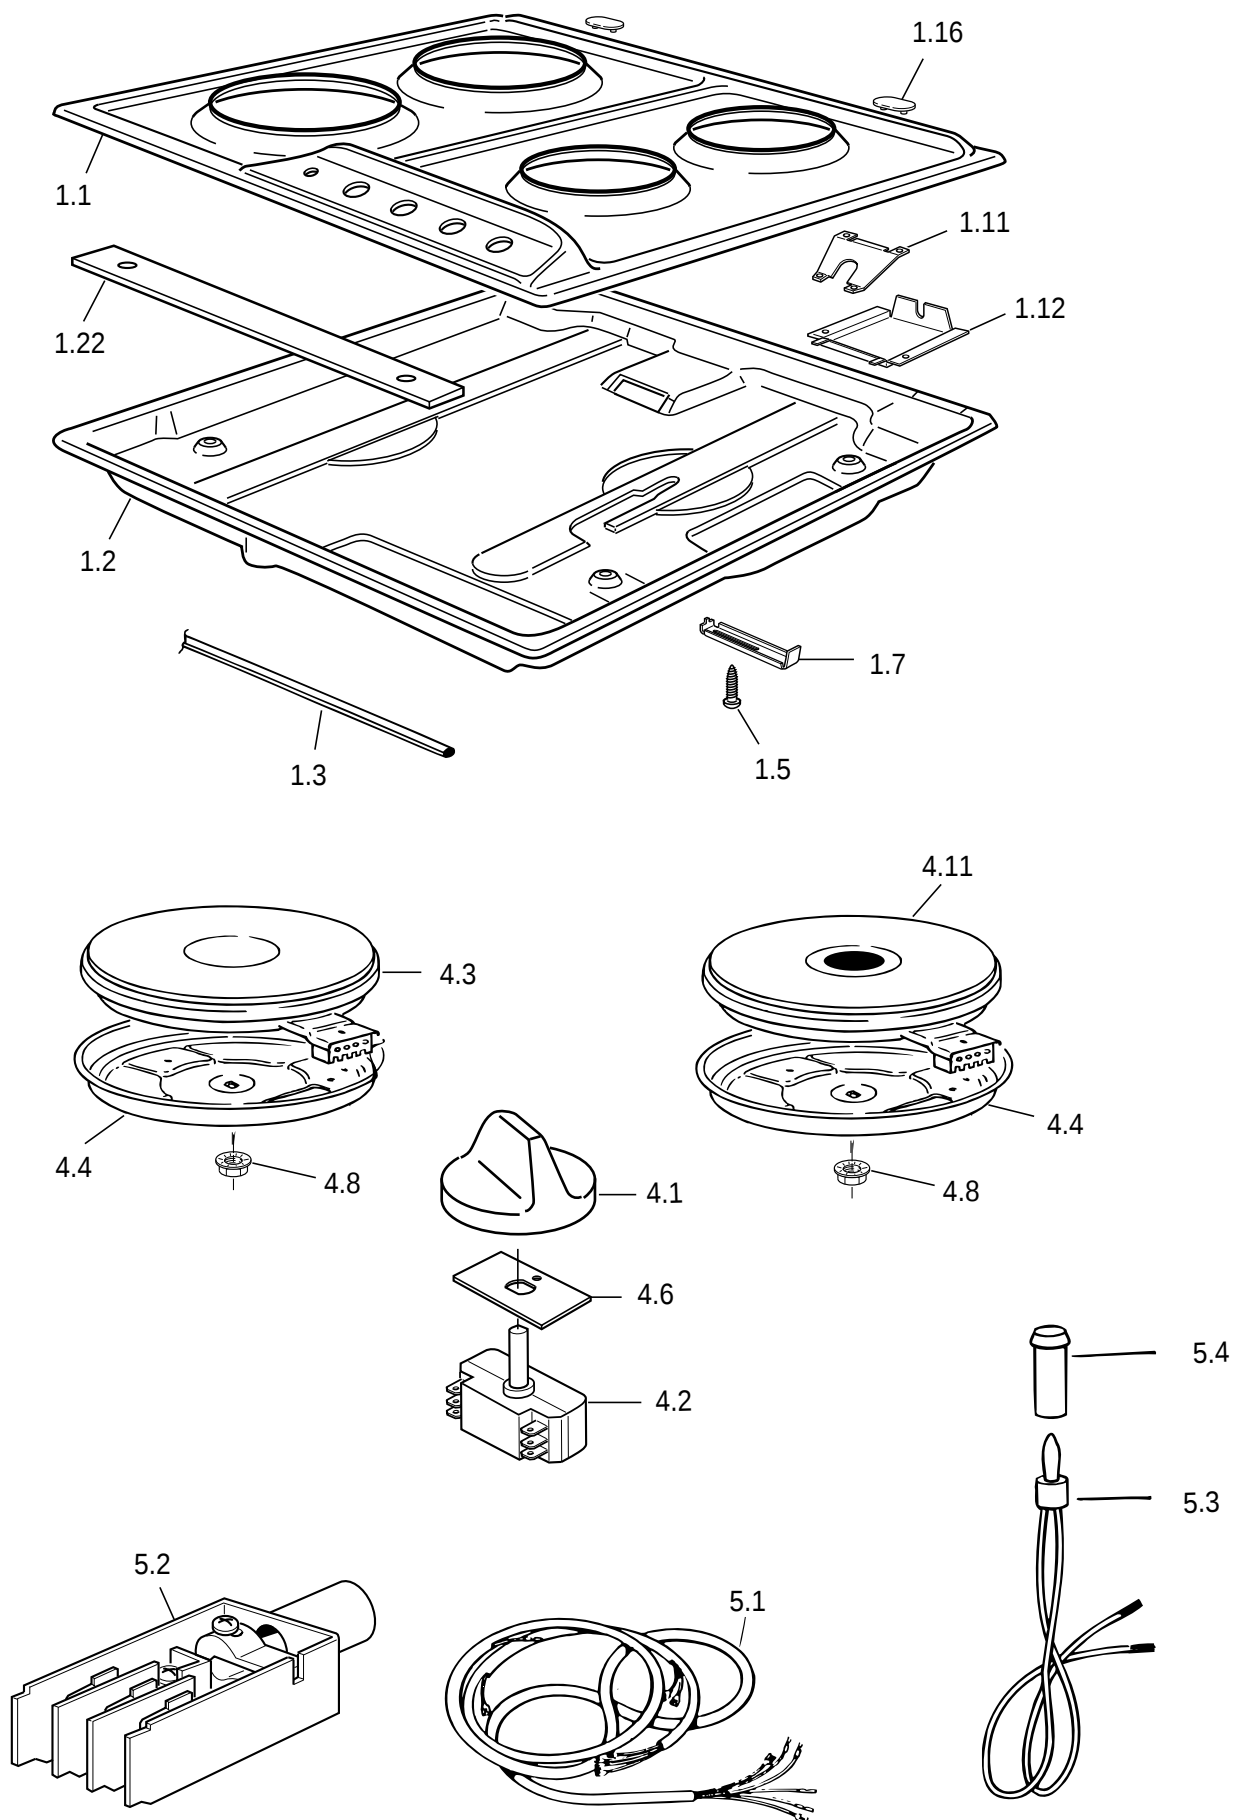

Electric built-in
cooking hob

LEHS60



REF.	CODE	DESCRIPTION
1.1	336D041SDA	Hob top
1.2	4116D03	Burner casing
1.3	053065	Seal
1.5	001221	Screw
1.7	094338	Fixing bracket
1.11	094345	Bracket
1.12	094346	Terminal block protection
1.16	10348100X	Plug
1.22	58B6303	Bar
4.1	2183009363	Knob
4.2	050033	Normal/rapid electric plate switch
4.3	04725230	Normal electric plate - Ø 145 - 1000 W - 230 V
=	04726230	Normal electric plate - Ø 180 - 1500 W - 230 V
4.4	103084R	Normal/rapid plate protection - Ø 145
=	103081R	Normal/rapid plate protection - Ø 180
4.6	053055	Switch gasket
4.8	214055	Nut
4.11	04727230	Rapid electric plate - Ø 145 - 1500 W - 230 V
=	04763230	Rapid electric plate - Ø 180 - 2000 W - 230 V
5.1	1131062	Wiring
5.2	051055	Terminal block
5.3	073058	Control lamp L 230
5.4	073057	Control lamp cover
–	1102322	Instruction booklet