

KENWOOD

Oven MO280/ MO286 series

instruction


instruction

istruzioni

yönergeler

تعليمات

دستور العمل ها

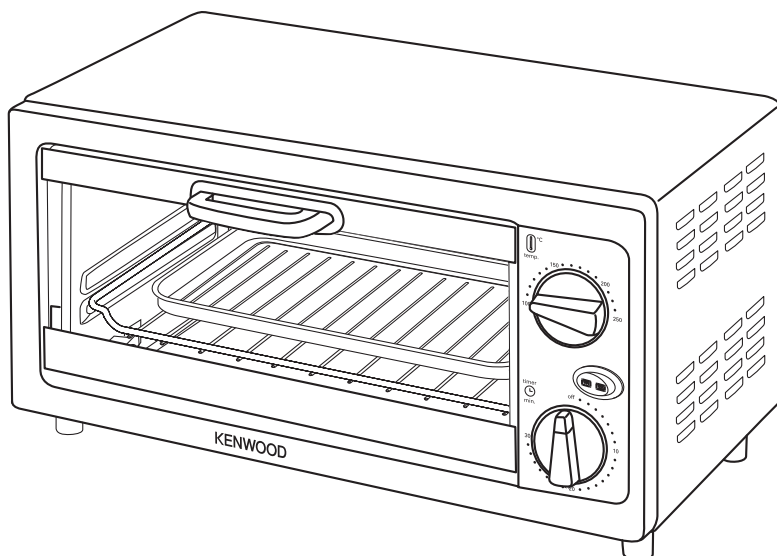

English	3 - 12
Français	13 - 23
Italiano	24 - 34
Türkçe	35 - 45
عربي	46 - 56
فارسی	57 - 69

ABOUT YOUR KENWOOD OVEN

Your new Kenwood oven is an 1100 watt max model with useable capacity of 10 litres. This multi-function oven can be used for grilling, baking and toasting and so makes good use of your kitchen space through having all these functions in one appliance which is compact and easy to use and clean.

IMPORTANT SAFEGUARDS

- ❶ **IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY BEFORE USING THE OVEN AND KEEP FOR FUTURE REFERENCE.**
- ❷ **DO NOT** under any circumstances use this appliance for anything other than its intended domestic purpose. Do not use outdoors.
- ❸ **DO NOT** immerse this appliance or its power cord or plug in water or other liquids.
- ❹ **DO NOT** put this oven on or near a hot electric element or gas flame or any other oven. DO NOT put this oven on top of any other appliance.
- ❺ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❻ **ALWAYS** operate this appliance on a stable, flat and heat resistant surface and away from walls which might be discoloured by its heat. Do not operate on a cloth surface or near curtains or other flammable materials.
- ❼ **DO NOT** touch hot surfaces. The door and parts of the exterior and all of the interior can become hot during use. Always use the product's handles or knobs to operate it. Allow the oven to cool before cleaning any parts.
- ❽ **TAKE EXTRA CARE** when removing a hot roasting dish or disposing of hot oil or grease. Use oven mitts whenever handling hot racks or dishes.
- ❾ Children should be supervised to ensure that they do not play with the appliance.
- ❿ **WARNING:** The appliance is not intended for use by young children or infirm persons without supervision. Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- ⓫ **DO NOT** let the power cord hang over the edge of the table or work surface, or touch hot surfaces.
- ⓬ **DO NOT** place anything on top of the oven. Do not allow anything to cover the sides or rear of the oven or block any of the oven's air vents.

IMPORTANT SAFEGUARDS

- ⑬ **DO NOT** use the oven for storing food or other items when not in use. Store only the wire rack, handle and the cooking dish.
- ⑭ **DO NOT OPERATE IF THE CORD HAS BEEN DAMAGED OR THE OVEN DROPPED OR DAMAGED IN ANY MANNER.** The oven and cord must for safety reasons only be repaired by Kenwood or an authorized Kenwood repairer.
- ⑮ The oven should be cleaned regularly and any food deposits removed.
- ⑯ Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- ⑰ If smoke is observed, keep the oven door closed and switch off and disconnect the power supply. Leave well alone until the smoke has ceased.

before plugging in


- Before switching on make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.
- The appliance must be earthed.

Note: This appliance conforms to EC directive 2004/108/EC on Electromagnetic Compatibility.

before using for the first time

- Remove all labels and any packaging from inside the oven.
- Remove any promotional stickers or protective films from the oven.
- Wash the trays & racks and other accessories in warm sudsy water and dry thoroughly.
- Wipe the inside walls, floor & roof with a damp cloth, then wipe dry.
- To ensure adequate ventilation make sure there is 10cm of clear space behind and on each side of the oven, and 30cm of space above the oven.
- During the first heating up period there may be traces of smoke visible. this is normal for newly manufactured electrical heating appliances and there should be no cause for alarm.
- Plug the powercord in and switch the power on. Set the temperature control knob to 220°C and put the setting knob to operate both upper and lower elements. Turn the timer knob to 15 minutes and allow the oven to operate.
- Allow the oven to cool and it is now ready for use.


KNOW YOUR KENWOOD OVEN

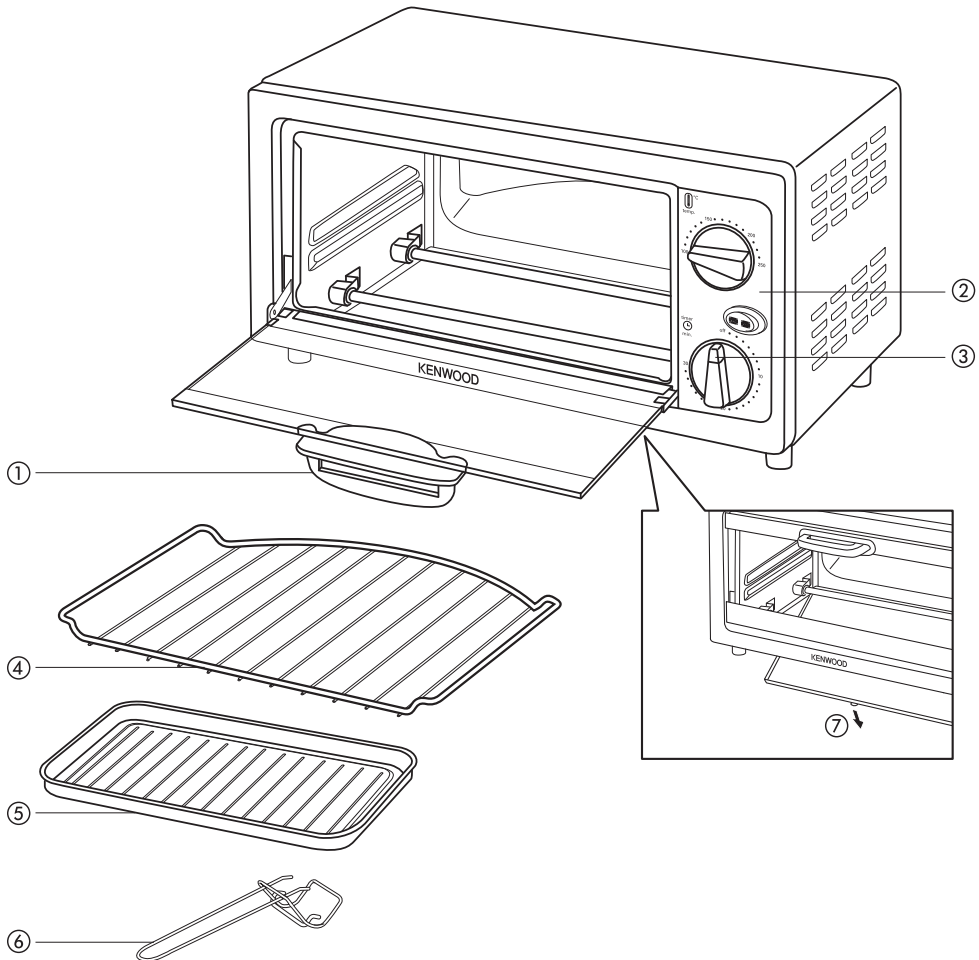

key


- | | |
|----------------------|--------------------|
| ① door handle | ⑤ cooking dish |
| ② control panel | ⑥ tray/dish handle |
| ③ power 'on' light | ⑦ crumb door |
| ④ slide-in wire rack | |

THE CONTROL PANEL

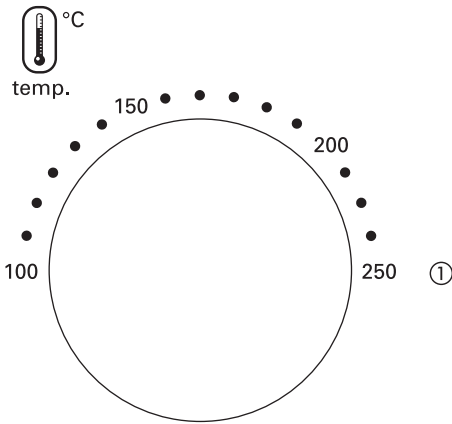

key


- ① temperature control knob
- ② function selector switch
- ③ timer knob

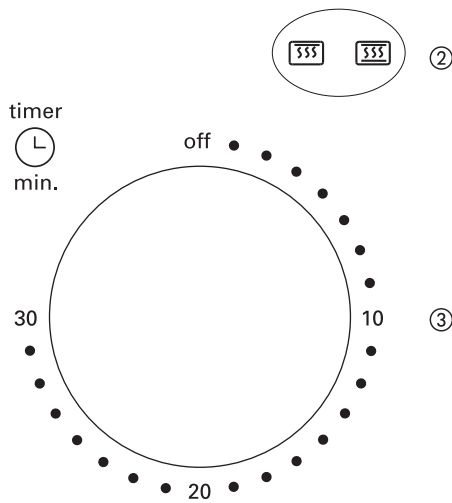


USING YOUR KENWOOD OVEN

- These ovens have 2 height settings for trays. Depending on the recipe and quantity of food being cooking, the upper level should be used for grilling and toasting; the lower level for baking.
- When setting the timer to run for short periods, say 5 or 10, minutes, it will operate more accurately if the timer knob is turned round to 15 minutes and then back to the desired setting.
- When the timer completed its operation, a bell sounds to signal that the timer and cooking have finished.
- The power 'on' light operates whenever the timer function is operated.
- Similarly, the elements themselves operate only when the timer is in operation. So for cooking for long periods such as baking for more than 30 minutes, it is necessary to reset the timer after the first and subsequent periods of 30 minutes have finished.
- For grilling use the upper elements only; for toasting use upper + lower; for baking use lower or upper+lower according to preference.
- For baking it is recommended that the oven is pre-heated before cooking starts. The oven can be pre-heated by setting the temperature control knob to the required temperature and then operating the oven without the food in it for 10 or 15 minutes.
- At the end of any cooking, turn the temperature control and the timer knobs back to their start positions.
- Other heat resistant baking dishes can be used in the oven, but for the slide-in rack **use only the accessories provided.**



GRILLING

- Switch the function selector to the upper position ().
- Turn the temperature control knob to desired temperature, for grilling this is usually close to 250°C
- Put the slide-in wire rack into the oven. Put the food to be grilled onto the cooking dish and place it on the rack. For easy cleaning put cooking foil under the food.
- Turn the timer knob to the desired cooking time.

TOASTING

- Switch the function selector to the upper+lower position ().
- Turn the temperature control knob to desired temperature, for grilling this is usually close to 200°C
- Put the slide-in wire rack into the oven. Put the food to be toasted onto the cooking dish.
- Turn the timer knob to the desired cooking time.

BAKING

- Switch the function selector to upper () or upper+lower () according to preference.
- Turn the temperature control knob to the desired temperature.
- Pre-heat the oven to between 200 and 250°C according to personal preference.
- Put the slide-in wire rack into the oven. Put the food to be baked onto the cooking dish and place it on the wire rack. For easy cleaning put cooking foil under the food. The oven door should be closed.
- Set the temperature control knob to the desired baking temperature.
- Set the timer knob to the desired baking time.

COOKING HINTS

- Personal recipes will vary in results from oven to oven. Feel free to vary cooking temperatures and times to achieve the best taste results.
- Food items that could bubble or spread during cooking, such as pies and pizzas etc should be placed on a baking tray to prevent splashing onto the bottom elements.
- When cooking for short times better results will usually be obtained if the oven is pre-heated first.
- Remember when setting the timer to run for short periods, say 5 or 10 minutes, it will operate more accurately if the timer knob is turned round to 15 minutes and then back to the desired setting.
- Even cooking can be improved by turning pans or trays around half way through the cooking.
- Preheating for baking will assist getting the desired uniform cooking result.
- When toasting several successive items, the later ones will not take as long to toast as the first.

CLEANING

Turn the oven off and unplug from the wall and allow it to cool down before cleaning.

Cleaning inside the oven : wipe with a damp cloth. Stubborn stains or burnt-on residues should be removed using a damp cloth or foam based cleaner or soft plastic scouring pad.

Do not use an abrasive cleaner or pad as these can scratch or damage the surfaces.

After cleaning, dry with a paper towel or soft, dry cloth.

Take care when cleaning around the element.

Cleaning the outside and door : clean the outside and door with a non-abrasive cleaner or wipe with a damp cloth; dry thoroughly.

Wire rack, cooking dish and handle: wash immediately after use in warm sudsy water, rinse and dry.

It is recommended that the oven is cleaned after each use to prevent any build up of grease or odors.

SERVICE AND CUSTOMER CARE

- If the cord is damaged it must, for safety reasons, be repaired by Kenwood or an authorized Kenwood repairer.

If you need help with :

- using your oven, or
- servicing or repairs (in or out of guarantee) contact the Kenwood distributor or authorized Kenwood repairer. Have your model number ready - it's on the rear of the oven.



**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN
ACCORDANCE WITH EC DIRECTIVE 2009/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.