



VITROCERAMIC COOKING HOBS



Instructions for the use - Installation advices
KEEP IN A SAFE PLACE

Before operating this cooking hob,
please read these instructions carefully

Dear Customer,

Thank you for having purchased and given your preference to our product.

The safety precautions and recommendations reported below are for your own safety and that of others. They will also provide a means by which to make full use of the features offered by your appliance.

Please preserve this booklet carefully. It may be useful in future, either to yourself or to others in the event that doubts should arise relating to its operation.

This appliance must be used only for the task it has explicitly been designed for, that is for cooking foodstuffs. Any other form of usage is to be considered as inappropriate and therefore dangerous.

The manufacturer declines all responsibility in the event of damage caused by improper, incorrect or illogical use of the appliance.

DECLARATION OF CE CONFORMITY


- This appliance has been designed to be used only for cooking. Any other use (such as heating a room) is improper and dangerous.
- This appliance has been designed, constructed, and marketed in compliance with:
 - Safety requirements of the "Low voltage" Directive 2014/35/EU;
 - Safety requirements of the "EMC" Directive 2014/30/EU;
 - Requirements of EU Directive 93/68/EEC;
 - Requirements of EU Directive 2011/65/EU.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2012/19/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

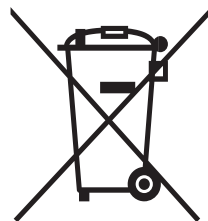

IMPORTANT SAFETY PRECAUTIONS AND RECOMMENDATIONS

IMPORTANT: This appliance is designed and manufactured solely for the cooking of domestic (household) food and is not suitable for any non domestic application and therefore should not be used in a commercial environment.

The appliance guarantee will be void if the appliance is used within a non domestic environment i.e. a semi commercial, commercial or communal environment.

Read the instructions carefully before installing and using the appliance.

- After having unpacked the appliance, check to ensure that it is not damaged.
In case of doubt, do not use it and consult your supplier or a professionally qualified technician.
- Packing elements (i.e. plastic bags, polystyrene foam, nails, packing straps, etc.) should not be left around within easy reach of children, as these may cause serious injuries.
- Some appliances are supplied with a protective film on steel and aluminium parts. **This film must be removed before using the appliance.**
- **IMPORTANT:** The use of suitable protective clothing/gloves is recommended when handling or cleaning this appliance.
- Do not attempt to modify the technical characteristics of the appliance as this may become dangerous to use. The manufacturer declines all responsibility for any inconvenience resulting from the inobservance of this condition.
- Do not operate your appliance by means of an external timer or separate remote-control system.
- Do not carry out cleaning or maintenance operations on the appliance without having previously disconnected it from the electric power supply.
- Do not use a steam cleaner because the moisture can get into the appliance therefore making it unsafe.

- Do not touch the appliance with wet or damp hands (or feet).
- Do not use the appliance whilst in bare feet.
- If you should decide not to use this appliance any longer (or decide to substitute another model), before disposing of it, it is recommended that it be made inoperative in an appropriate manner in accordance to health and environmental protection regulations, ensuring in particular that all potentially hazardous parts be made harmless, especially in relation to children who could play with unused appliances.
- The various components of the appliance are recyclable. Dispose of them in accordance with the regulations in force in your country. If the appliance is to be scrapped, remove the power cord.
- After use, ensure that the knobs are in the off position.
- Children less than 8 years of age shall be kept away unless continuously supervised.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The manufacturer declines all liability for injury to persons or damage to property caused by incorrect or improper use of the appliance.
- **WARNING:** During use the appliance and its accessible parts become hot; they remain hot for some time after use.
 - Care should be taken to avoid touching heating elements on the hob.
 - To avoid burns and scalds, young children should be kept away.
- Make sure that electrical cables connecting other appliances in the proximity of the cooktop cannot come into contact with the hob.

- **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- **WARNING:** Danger of fire: do not store items on the cooking surfaces.
- Do not place or leave empty pans on the glass ceramic hob.
- Do not allow heavy or sharp objects to drop on the glass ceramic hob.
- Do not scratch the hob with sharp objects. Don't use the hob as a work surface.
- **WARNING:** If the hob is cracked or otherwise damaged by falling objects etc., disconnect the appliance from the electrical power supply to avoid the possibility of electric shock and call Customer Service.
- **WARNING:** When correctly installed, your product meets all safety requirements laid down for this type of product category. However special care should be taken around the underneath of the appliance as this area is not designed or intended to be touched and may contain sharp or rough edges, that may cause injury.
- **CAUTION:** The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
- If the power supply cable is damaged, it must be replaced only by an authorized service agent in order to avoid a hazard.

ENERGY LABELLING/ECODESIGN

- Commission regulation (EU) No 66/2014 (implementing Directive 2009/125/EC of the European Parliament and of the Council).

Reference to the measurement and calculation methods used to establish compliance with the above requirements:

- Standard EN 60350-2 (hobs: electric cooking zones and/or areas).

USE OF THE APPLIANCE, ENERGY SAVING TIPS

HOB

ELECTRIC COOKING ZONES AND/OR AREAS

- Avoid keeping a zone/area on without something on it (without pot).
- Avoid pouring liquids on the zones/areas while they are hot.
- Use flat-bottomed (electric hotplate type) pots and pans only.
- Use cooking receptacles which cover as much of the surface of the cooking zone/area as possible.
- To save electricity, use lids whenever possible.
- When the pan comes to the boil, turn the heat down to the level desired. Remember that the cooking zone/area will continue to produce heat for about five minutes after it has been turned off.

60 cm models

Fig. 1.1

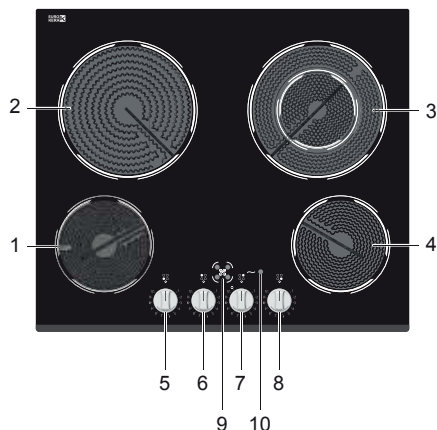
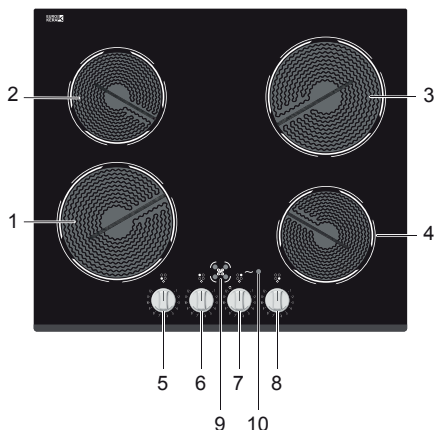


Fig. 1.2

**Electrical insulation Class I****COOKING POINTS** (fig. 1.1)

1. Hi-light cooking zone Ø 140 mm - 1200 W
2. Hi-light cooking zone Ø 210 mm - 2300 W
3. Double hi-light cooking zone Ø 210/120 mm - 2200/750 W
4. Hi-light cooking zone Ø 140 mm - 1200 W

CONTROLS DESCRIPTION

5. Left front zone (1) control knob
6. Left rear zone (2) control knob
7. Right rear zone (3) control knob
8. Right front zone (4) control knob
9. Residual heat indicators
10. Power on indicator light

Electrical insulation Class I**COOKING POINTS** (fig. 1.2)


1. Hi-light cooking zone Ø 180 mm - 1800 W
2. Hi-light cooking zone Ø 140 mm - 1200 W
3. Hi-light cooking zone Ø 180 mm - 1800 W
4. Hi-light cooking zone Ø 140 mm - 1200 W

CONTROLS DESCRIPTION

5. Left front zone (1) control knob
6. Left rear zone (2) control knob
7. Right rear zone (3) control knob
8. Right front zone (4) control knob
9. Residual heat indicators
10. Power on indicator light

80 cm models

Fig. 1.3

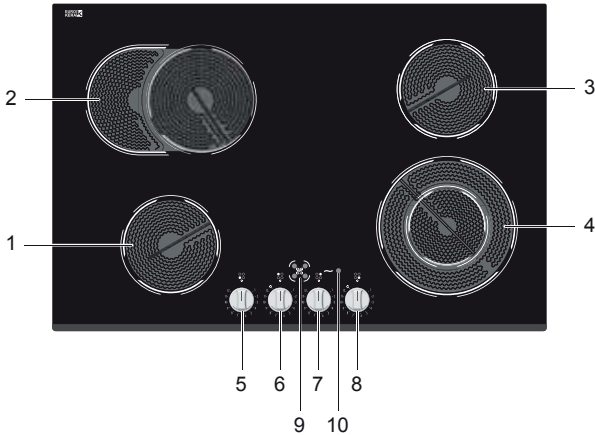

Electrical insulation Class I

COOKING POINTS (fig. 1.3)


1. Hi-light cooking zone Ø 140 mm - 1200 W
2. Oval double hi-light cooking zone Ø 180 x 260 mm - 800/2200 W
3. Hi-light cooking zone Ø 140 mm - 1200 W
4. Double hi-light cooking zone Ø 210/120 mm - 2200/750 W

CONTROLS DESCRIPTION

5. Left front zone (1) control knob
6. Left rear zone (2) control knob
7. Right rear zone (3) control knob
8. Right front zone (4) control knob
9. Residual heat indicators
10. Power on indicator light

90 cm models

Fig. 1.4

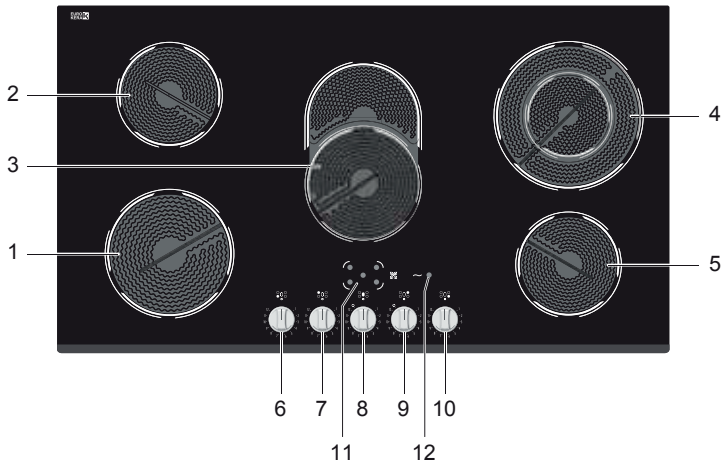

Electrical insulation Class I

COOKING POINTS (fig. 1.4)

1. Hi-light cooking zone Ø 180 mm - 1800 W
2. Hi-light cooking zone Ø 140 mm - 1200 W
3. Oval double hi-light cooking zone Ø 180 x 260 mm - 800/2200 W
4. Double hi-light cooking zone Ø 210/120 mm - 2200/750 W
5. Hi-light cooking zone Ø 140 mm - 1200 W

CONTROLS DESCRIPTION

6. Left front zone (1) control knob
7. Left rear zone (2) control knob
8. Central zone (3) control knob
9. Right rear zone (4) control knob
10. Right front zone (5) control knob
11. Residual heat indicators
12. Power on indicator light

2 HOW TO USE THE HOB

The ceramic surface of the hob allows a fast transmission of heat in the vertical direction, from the heating elements underneath the ceramic glass to the pans set on it.

The heat does not spread in a horizontal direction, so that the glass stays “cool” at only a few centimeters from the cooking plate. The cooking zones are shown by painted disks on the ceramic surface.

Before switching on the cooktop make sure that it is clean.

IMPORTANT NOTE:

 
The heating elements incorporate a thermolimiter that switches the element ON/OFF during all settings to protect the ceramic glass from overheating.

The use of incorrect pans and/or wrong pan positioning will cause the temperature limiter to operate more frequently, resulting in a reduction of cooking performance.


The temperature limiter can be seen under the glass dissecting the element.

This is not a fault with the appliance.

Hi-light
cooking zone
Ø 140 mm



Hi-light
cooking zone
Ø 180 mm

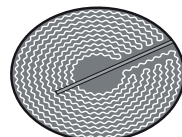

Hi-light
cooking zone
Ø 210 mm

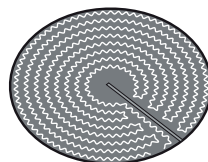


Fig. 2.1


HI-LIGHT RADIANT ZONES (fig. 2.1)

The heating element is formed of a coil of resistant material which reaches the working temperature quickly.

These zones are controlled by a continuous energy regulator switch (figs. 2.2a - 2.2b).

The heat intensity can be regulated continuously from “0” to “12” (max).

Check that the hob is clean and then switch on by turning the control knob.

When the hob is working, the pilot light  will be on.

WARNING:

If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.

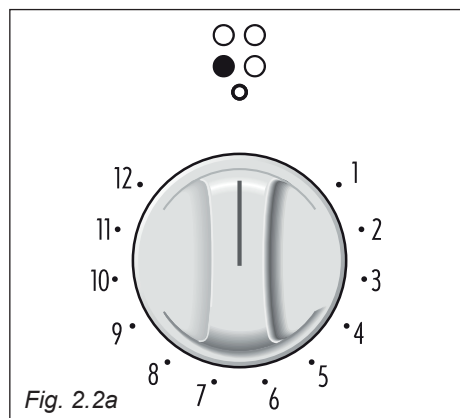


Fig. 2.2a

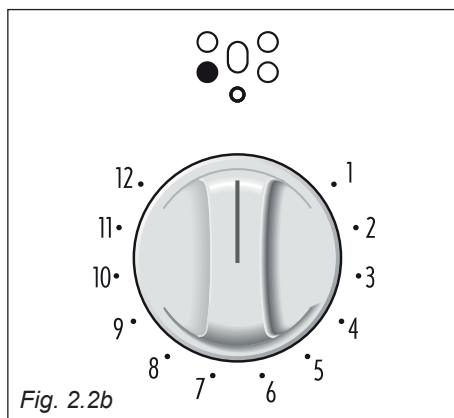


Fig. 2.2b


HI-LIGHT DOUBLE ZONE and HI-LIGHT OVAL ZONES

The heating element is formed of a 2 coils of resistant material which reaches the working temperature quickly.


These zones are controlled by a continuous energy regulator switch (figs. 2.3a - 2.3b).




The heat intensity can be regulated continuously from “O” to “12” (max).

Check that the hob is clean and then switch on by turning the control knob.

When the hob is working, the pilot light  will be on.

By switching on the second element (fig. 2.4), the surface area of the double and oval hilight zones can be extended.

For this purpose, turn the control knob (figs. 2.3a - 2.3b) fully to the right (position ).

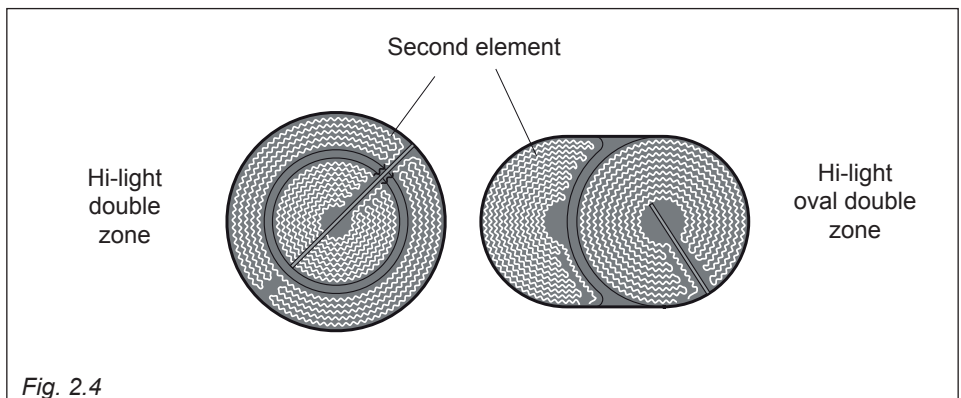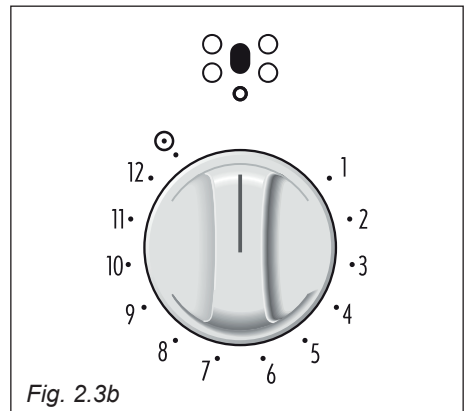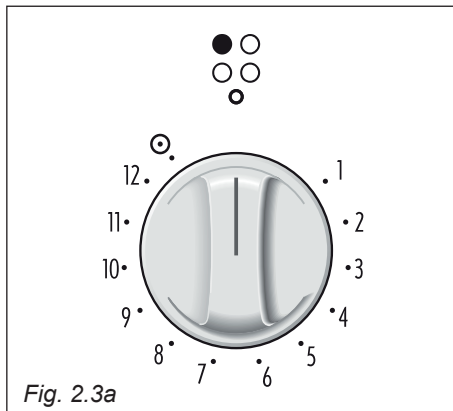

COOKING HINTS

Cooking
zone
knob
setting



1



 
2




3



4



5

 

6



7



8



9



10



11



12



⊙



Heating



Cooking



Roasting-frying

Fig. 2.5

Knob setting	TYPE OF COOKING
0	Switched OFF
1 2	For melting operations (butter, chocolate).
2 3 4	To maintain food hot and to heat small quantities of liquid (sauces, eggs).
4 5 6	To heat bigger quantities; to whip creams and sauces (vegetables, fruits, soups).
6 7	Slow boiling, i.e.: boiled meats, spaghetti, soups, continuations of steam cooking of roasts, stews, potatoes.
7 8	For every kind of frying, cutlets, uncovered cooking, i.e.: risotto.
8 9 10	Browning of meats, roasted potatoes, fried fish, omelettes, and for boiling large quantities of water.
11 12	Fast frying, grilled steaks, etc.
⊙	Switching on the second element (Double and oval zones only)

After a short period of use, experience will teach you which setting is the right one for your needs.

RESIDUAL HEAT INDICATORS

The hob also features 4 or 5 warning lamps which are wired to the corresponding plate.

When the temperature of a cooking plate is over 60°C, the relevant warning lamp is also lit up to warn of heat on the surface of the hob.

These lamps also stay on after the cooking plates have been switched off to show that the hob surface is still hot.

This residual heat will last for a long time after the cooking plate has been switched off.

During this time you should avoid touching the hob surface over the cooking area.

Please pay special attention to ensure that children are not allowed near the hob.

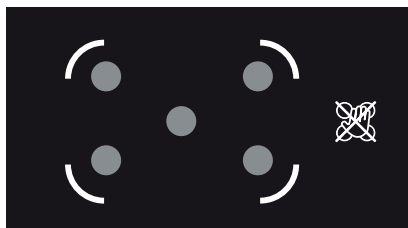


Fig. 2.6

The lamps will switch off automatically as soon as the surface temperature of the cooking zone falls below 60°C.

COOKING HINTS

- To reduce the cooking time, you can turn the control knob to the max when you switch the plate on. After a short time you will set the control knob to the required position for the cooking.
- You should use pots and pans with flat bases (pans with the test mark for glassceramic hobs are available from specialist shops).
- The diameter of the pan should match that of the cooking plate (or be slightly bigger) to make the most of the energy.
- Since the cooking surface stays hot for a certain time after the plate has been switched off, you can switch it off 5 or 10 minutes before the end of the cooking. The residual heat of the hob will complete the cooking.
- To save electricity, use pan lids whenever possible.

Caution!

**The cooking hob becomes very hot during operation.
Keep children well out of reach.**



Never cook the food directly on the glass ceramic cooktop, but in special pans or containers.

WARNING: Hobs become very hot with use, and retain their heat for a long time after cooking has finished (about 30 minutes).

Children should be supervised at all times and be prevented from touching the hot surfaces, until such time as the appliance has cooled.

SAFETY HINTS

- Before you switch the hob on, make sure you know which knob controls the required cooking zone. We advise you to set the pan over the cooking zone before switching it on.
- Do not use pots and pans with rough bases (pay attention to cookware made of cast-iron). Rough bases can damage the glass surface of the hob (scratches).
- Always ensure that the base of your saucepan is clean and dry before placing on the hob.
- Pots with aluminium bottoms may leave silver streaks or spots on the hob.
- Do not leave wet or damp lids on the hob.
- The glass-ceramic surface and pans must be clean. Carefully eliminate any food remains (especially containing sugar), dirt etc. with the aid of a cleansing agent.
- Pan handles should never stand out beyond the kitchen worktop, as there is a great danger of knocking the pan over.
- **This will also ensure that children cannot reach them.**
- **Do not use the hob if the glass surface is broken or cracked in any way. Please disconnect the hob from the mains and contact the after-sales service.**
- Do not lean over the cooking plate when in use.
- Do not lay cooking foil or plastic materials on the ceramic surface when it is hot.
- Remember that the surface remains hot for a long time (about 30 min.) after the cooking plate has been switched off.
- Follow the cleaning instructions carefully.
- Never use the glass surface for storage.

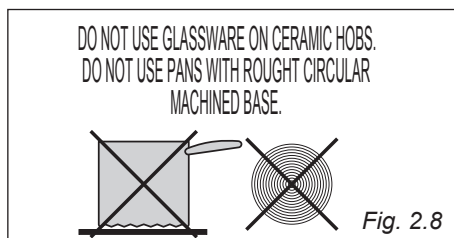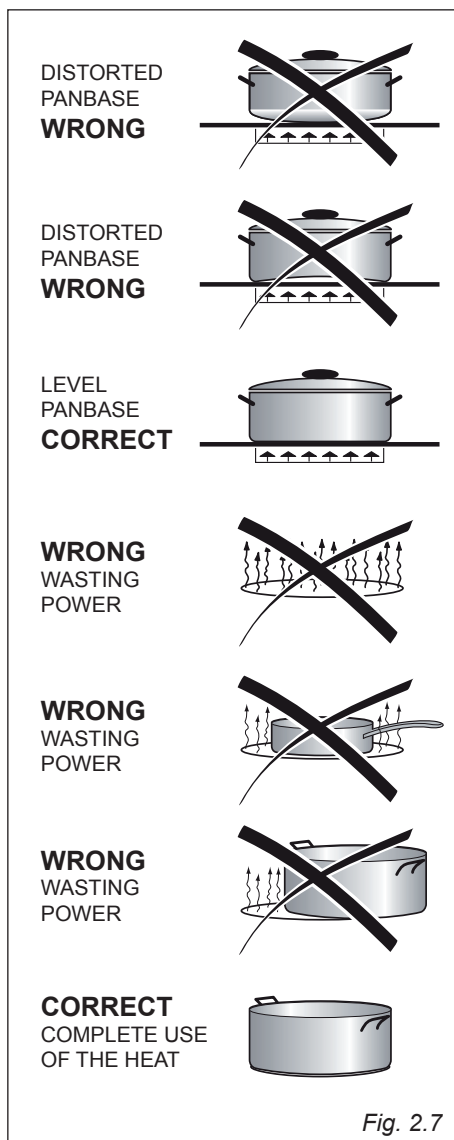

CLEANING THE CERAMIC HOB

Before you begin cleaning make sure that the hob is switched off.

- Remove spillages and other types of incrustations.
- Dust or food particles can be removed with a damp cloth.
- If you use a detergent, please make sure that it is not abrasive or scouring. Abrasive or scouring powders can damage the glass surface of the hob.
- All traces of the cleaner must be removed with a damp cloth.
- Dust, fat and liquids from food that has boiled over must be removed as soon as possible.
- If they are allowed to harden they become increasingly difficult to remove.

This is especially true in the case of sugar/syrup mixtures which could permanently pit the surface of the hob if left to burn on it.

- If any of these products has melted on the ceramic surface, you should remove it immediately (when the surface is still hot) by using a scraper to avoid any permanent damage to the surface of the hob (available under part no. 103138).
- Do not put articles on the hob which can melt: i.e plastic, aluminium foil, sugar, sugar syrup mixtures etc.
- Avoid using a knife or other sharp utensil as these may damage the ceramic surface.
- Do not use steel wool or an abrasive sponge which could scratch the surface permanently.

STAINLESS STEEL ELEMENTS (only models with side stainless steel trims)

- Stainless steel parts must be rinsed with water and dried with a soft and clean cloth or with a chamois leather.
- For persistent dirt, use specific non-abrasive products available commercially or a little hot vinegar.

CONTROL KNOBS

- The control knobs may be removed for cleaning but care should be taken not to damage the seal.

Do not use a steam cleaner because the moisture can get into the appliance thus make it unsafe.

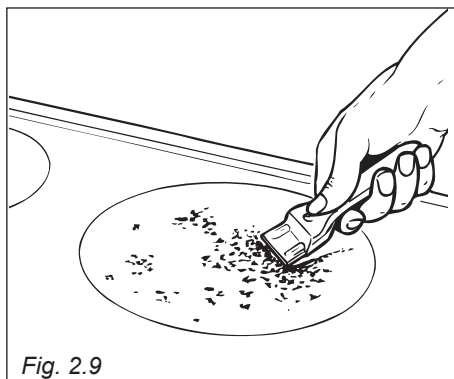


Fig. 2.9

Advice for the installer

3

INSTALLATION

CAUTION:

- This appliance shall only be serviced by authorized personnel.
- This appliance is to be installed only by an authorised person according to the current local regulations and in observation of the manufacturer's instructions.
- Incorrect installation, for which the manufacturer accepts no responsibility, may cause personal injury or damage.
- Always disconnect the cooktop from mains power supply before carrying out any maintenance operations or repairs.

WARNING !

- We would point out that the adhesive which bonds the plastic laminate to the furniture must withstand temperatures not less than 150 °C to avoid delamination.
- The appliance must be housed in heat resistant units.
- The walls of the units must be capable of resisting temperatures of 75 °C above room temperature.

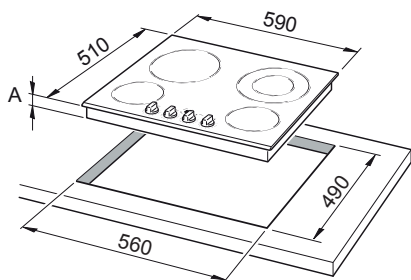


Fig. 3.1a

A	45 mm	from the top of cut-out to bottom metal cover
	58 mm	from the top of cut-out to terminal block

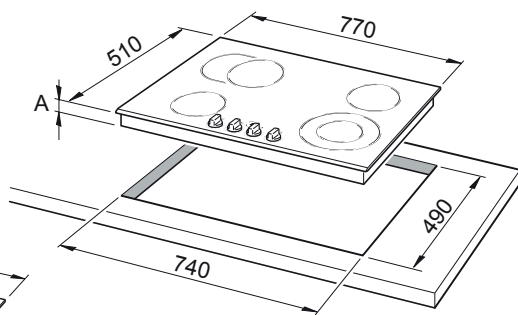


Fig. 3.1b

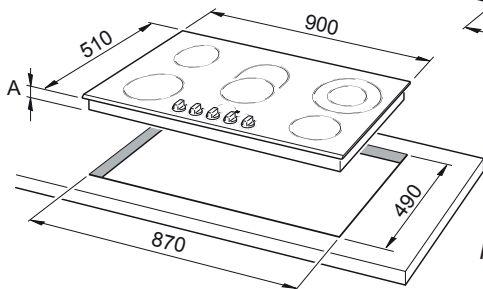


Fig. 3.1c

This cooktop can be built into a working surface 30 to 40 mm thick and 600 mm deep.

In order to install the ceramic hob into the kitchen fixture, a hole with the dimensions shown in figures 3.1a,b,c has to be made, keeping in consideration the following:

- **NOTE:** A partition should be fitted a minimum of 2 cm below the base of the hob (fig. 3.2).
- the ceramic hob must be kept no less than 50 mm away from any side wall;
- the rear wall must be at least 50 mm from the ceramic hob;
- there must be a distance of at least 650 mm between the hob and any wall cupboard or extractor hood positioned immediately above (see fig. 3.3);
- the coatings of the walls of the unit or appliances near the cooktop must be heat resistant.
- **Do not install the appliance near inflammable materials (eg. curtains).**

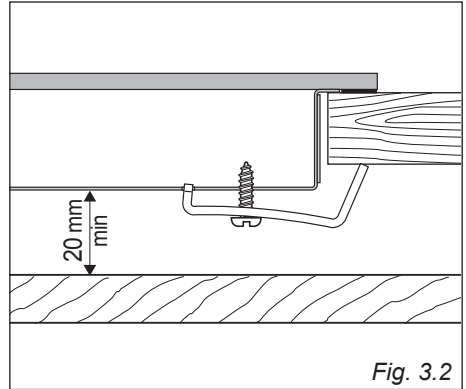


Fig. 3.2

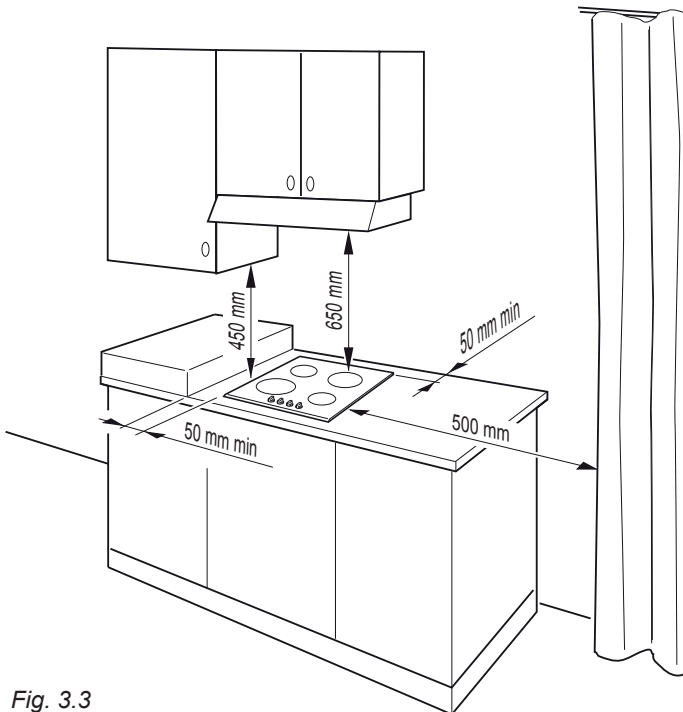




Fig. 3.3

FASTENING THE COOKTOP

Each cooktop is supplied with a set of tabs and screws to fasten it on units with a working surface from 3 to 4 cm deep.

The kit includes 4 tabs "A" and 4 self-threading screws "B" (fig. 3.4).

- Cut the unit.
- Turn the hob upside down and rest the glass side on a cloth.
- Spread the seal "C" around the edge of the hob (fig. 3.5).
- Put tabs "A" into the mountings; only tighten screws "B" a few turns. Make sure that the tabs are mounted correctly as shown in the figures 3.4, 3.5.
- Put the cooktop into the hole cut into the unit and position it correctly.
- Put tabs "A" into place, tooth "D" of the tabs should go into the hole.
- Tighten screws "B" until the cooktop is completely secured.
- Using a sharp tool cut off the part of gasket "C" which protrudes from the cooktop. Take care not to damage the workbench.

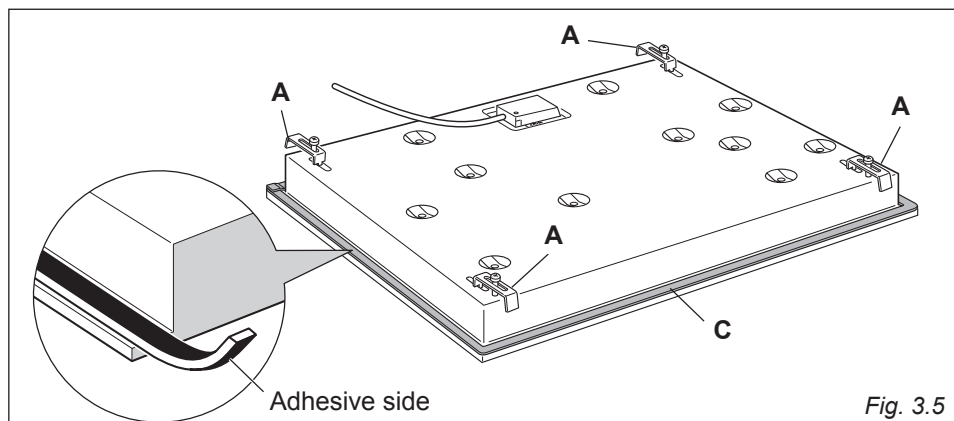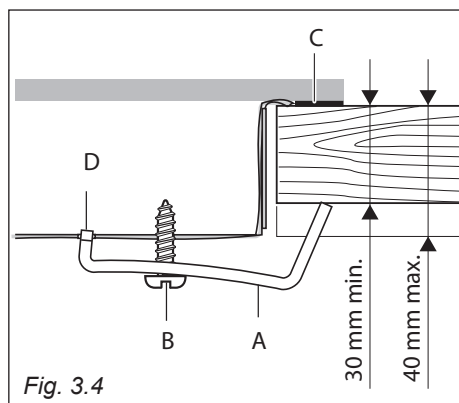

4 ELECTRICAL SECTION

for the UNITED KINGDOM only

IMPORTANT: The appliance must be installed by a qualified technician according with the current local regulations and in compliance with the manufacturer instructions. Incorrect installation might cause harm and damage to people, animals or objects, for which the manufacturer accepts no responsibility.

Connection to a good earth wiring system is absolutely essential.

The manufacturer accepts no responsibility for any inconvenience caused by failure to comply with this rule.

Before carrying out any work on the electrical section of the appliance, it must be disconnected from the mains.

DETAILS

- The hob must be installed by a qualified electrician in line with all electrical and installation requirements published by the Institute of Electrical Engineers. We recommend that the appliance is connected by a qualified electrician, who is a member of the N.I.C.E I C. and who will comply with the I.E.E. and local regulations.
- Before carrying out the connection to the power supply, the voltage rating of the appliance (stamped on the appliance identification plate) must be checked for correspondence to the available mains supply voltage, and the mains electric wiring should be capable of handling the appliance's power rating (also indicated on the identification plate).
- This appliance must be connected by a competent person, using fixed wiring via an omnipolar switch (with 3 mm minimum distance between the contacts).
Use an appropriate fuse suitable for the appliance rating - see data plate.
- The double pole switch must be provided no further than 2 metres from the appliance to the electrical supply. All supply current and earth conductors must be able to withstand an ambient temperature of 75°C.
- After having installed the appliance, the power switch must always be in a accessible position.

- The wires in the mains lead are coloured in accordance with the following code:
Green & Yellow = Earth
Blue = Neutral
Brown = Live.

As the colours of the wires in the mains lead for the appliance, may not correspond with the coloured markings identifying the terminals in your spur box, proceed as follows:

1. The wire which is coloured green and yellow must be connected to the terminal marked "E" (Earth) or \perp or Green coloured.
2. The wire which is coloured blue must be connected to the terminal marked "N" (Neutral), or coloured Black.
3. The wire which is coloured brown must be connected to the terminal marked "L" (Live), or coloured Red.



N.B. For connections to the mains power supply, never use adaptors, reductions or multiple power points as these may overheat and catch fire.

In the event that installation should require modifications to the mains supply wiring system, it is recommended that a qualified technician be called to carry out substitution. The technician will also have to verify that the cross-section of the electric cables on the power point match the appliance's power rating.

If the hob surface is cracked disconnect the appliance from the mains and contact the After-Sales Service.

IMPORTANT: This cooktop must be connected to a suitable double pole control unit adjacent to the cooktop.

NO DIVERSITY CAN BE APPLIED TO THIS CONTROL UNIT.

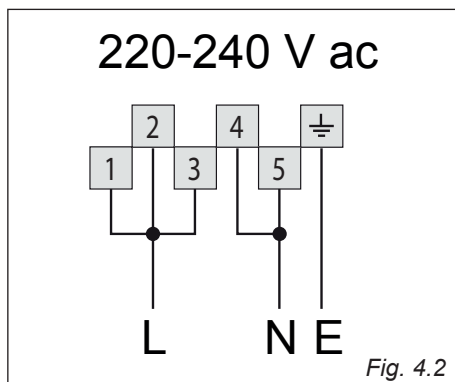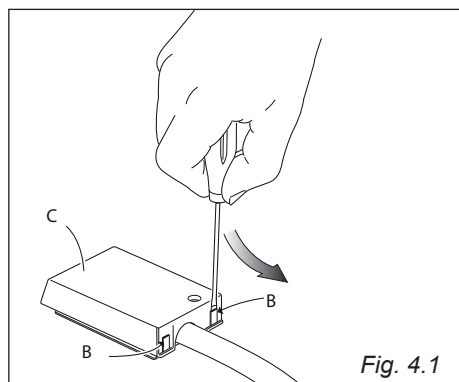

CONNECTING THE FEEDER CABLE

To connect the feeder cable to the hob it is necessary to carry out the following operations:

- Unlock the 2 clips “B” and open the cover “C”.
- Unscrew the screw “D” and open completely the cable clamp “E” (fig. 4.3).
- Position the U bolts “F” onto terminal board “G” (fig. 4.3) according to the diagram in fig. 4.2.
- Connect the phase and earth wires to terminal board “G” according to the diagram in figs. 4.2 and 4.3.
- Strain the feeder cable and block it with cable clamp “E” (by screwing screw “D”).
- Close the cover “C” of the terminal board “G” and block it.

FEEDER CABLE SECTION

“Type H05VV-F or H05V2V2-F or H05RR-F”

220-240 V ac 3 x 2,5 mm² (**) for 60 cm and 80 cm models

220-240 V ac 3 x 4 mm² (**) for 90 cm models

(**) Connection with wall box connection.

- Diversity factor applied.
- A diversity factor may be applied to the total loading of the appliance only by a suitably qualified person.

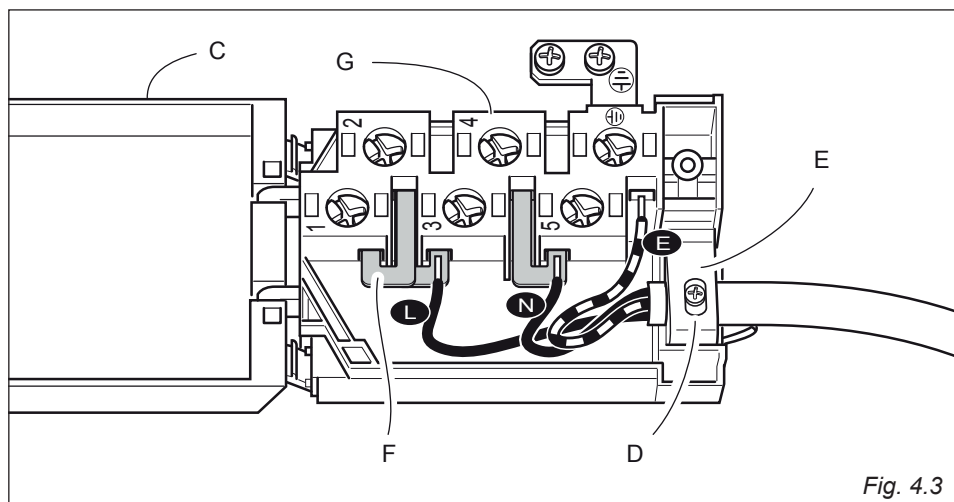


Fig. 4.3

for the other countries

IMPORTANT: The appliance must be installed by a qualified technician according with the current local regulations and in compliance with the manufacturer instructions. Incorrect installation might cause harm and damage to people, animals or objects, for which the manufacturer accepts no responsibility.

Connection to a good earth wiring system is absolutely essential.

The manufacturer accepts no responsibility for any inconvenience caused by failure to comply with this rule.

Before carrying out any work on the electrical section of the appliance, it must be disconnected from the mains.

ELECTRICAL REQUIREMENTS

- Connection to the electric power supply must be carried out by a qualified technician and following the appropriate safety regulations.
- The appliance must be connected to the mains checking that the voltage corresponds to the value given in the rating plate and that the electrical cable sections can withstand the load specified on the plate.
- The appliance can be connected directly to the mains placing a two pole switch with minimum opening between the contacts of 3 mm between the appliance and the mains.
- The power supply cable must not touch the hot parts and must be positioned so that it does not exceed 50°C above ambient.
- Once the appliance has been installed, the switch must always be in a accessible position.

N.B. For connections to the mains power supply, never use adaptors, reductions or multiple power points as these may overheat and catch fire.

In the event that installation should require modifications to the mains supply wiring system, it is recommended that a qualified technician be called to carry out substitution.

He should also check that the domestic electrical system is suitable for the power absorbed by the appliance.

If the hob surface is cracked disconnect the appliance from the mains and contact the After-Sales Service.

CONNECTION OF THE POWER SUPPLY CABLE

Important! This cooktop must be connected to the electricity supply only by an authorised person.

WARNING: If the power supply cable is damaged, it must be replaced only by an authorised service agent in order to avoid a hazard.

To connect the feeder cable to the hob it is necessary to carry out the following operations:

- Unlock the 2 clips “B” and open the cover “C”.
- Unscrew the screw “D” and open completely the cable clamp “E” (figs. 4.6 - 4.7 - 4.8).
- Position the “U” bolts “F” onto terminal board “G” (figs. 4.6 - 4.7 - 4.8) according to the diagrams in fig. 4.5.
- Connect the phase and earth wires to terminal board “G” according to the diagrams in fig. 4.5.
- Strain the feeder cable and block it with cable clamp “E” (by screwing screw “D”).
- Close the cover “C” of the terminal board “G” and block it .

MODELS SUPPLIED WITH POWER CORD ALREADY FITTED TO THE APPLIANCE

FEEDER SPECIAL CABLE SECTION

WARNING - VERY IMPORTANT: THIS APPLIANCE IS SUPPLIED WITH POWER CORD FOR SINGLE PHASE CONNECTION ONLY (220-240 V 50/60Hz)

For 60 cm and 80 cm models: “Type H05V2V2-F (resistance to temperatures of 90°C)”

220-240 V ac 3 x 4 mm² (**)

(**) Connection with wall box connection.

For 90 cm models: “Type H05BB-F (resistance to temperatures of 90°C)”

220-240 V ac 3 x 6 mm² (**)

(**) Connection with wall box connection.

MODELS SUPPLIED WITHOUT POWER CORD ALREADY FITTED TO THE APPLIANCE

FEEDER CABLE SECTION

“Type H05VV-F or H05V2V2-F or H05RR-F”

For 60 cm and 80 cm models:

220-240 V ac 3 x 2.5 mm² (**)

380-415 V 3N ac 5 x 1.5 mm² (**)

380-415 V 2N ac 4 x 2.5 mm² (**)

For 90 cm models:

220-240 V ac 3 x 4 mm² (**)






380-415 V 2N ac 4 x 2.5 mm² (**)

380-415 V 3N ac 5 x 2.5 mm² (**)

(**) Connection with wall box connection.

– Diversity factor applied.

– A diversity factor may be applied to the total loading of the appliance only by a suitably qualified person.

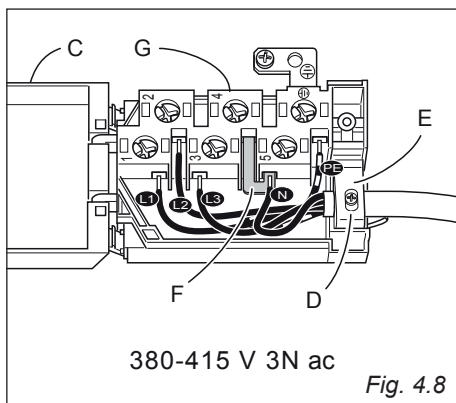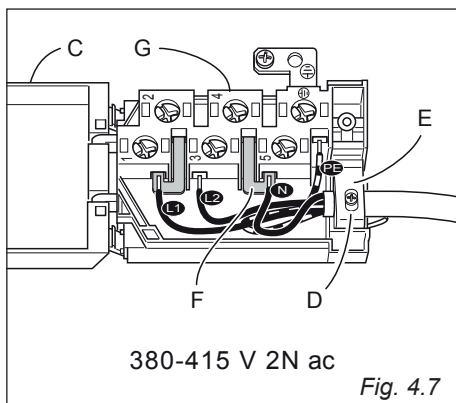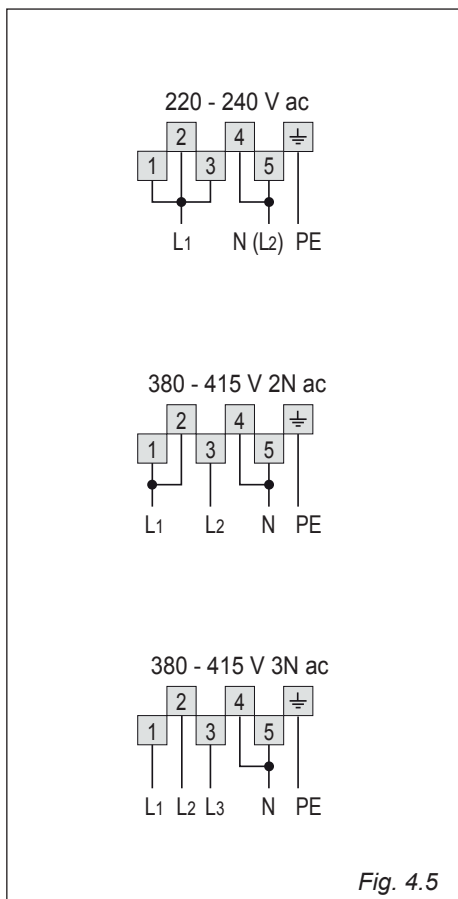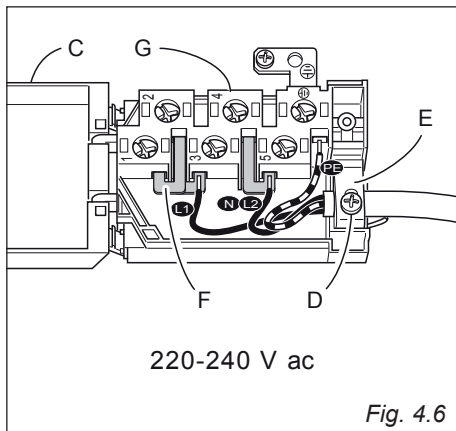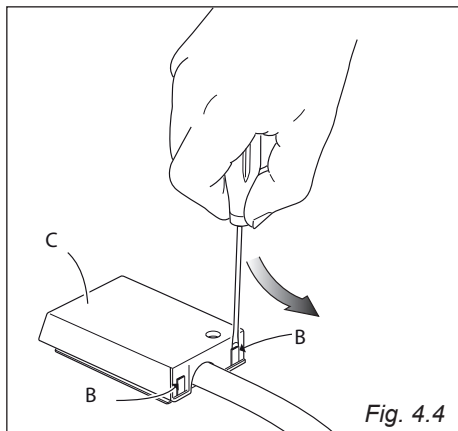

The manufacturer cannot be held responsible for possible inaccuracies due to printing or transcription errors in the present booklet.

The manufacturer reserves the right to make all modifications to its products deemed necessary for manufacture or commercial reasons at any moment and without prior notice, without jeopardising the essential functional and safety characteristics of the appliances.