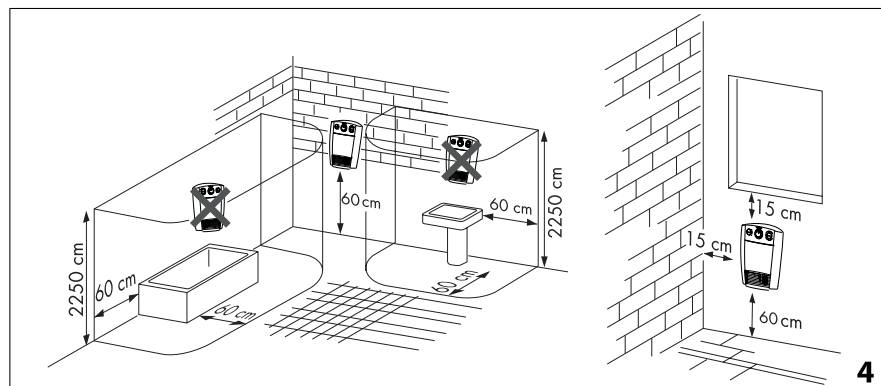 
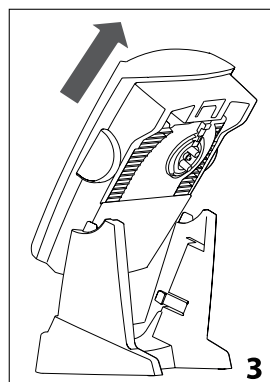 
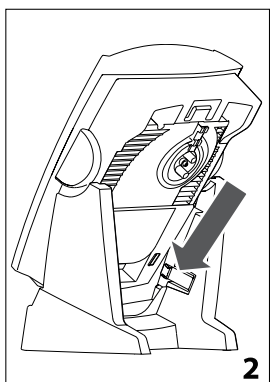 
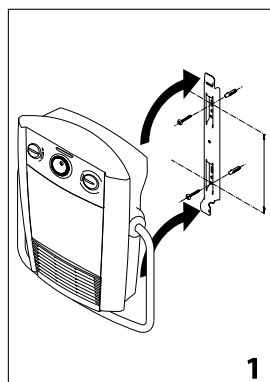 
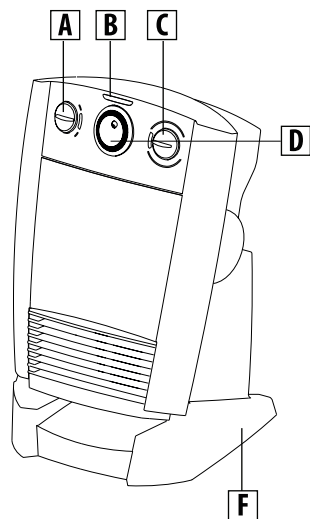 
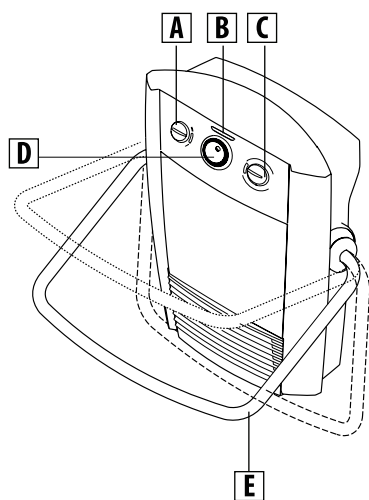 

HWB Series

FAN HEATER
暖風機



DeLonghi



ELECTRICAL CONNECTION (UK ONLY)

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.

WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.

With alternative plugs not incorporating a fuse, the circuit must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.

- B) If your appliance is not fitted with a plug, please follow the instructions provided below:

Important

The wires in the mains lead are coloured in accordance with the following code:

Blue:	Neutral
Brown:	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

電源接駁 (只限英國)

- A) 您的電器附有一個電插頭，並配合 13 安培的保險絲。如果它與您的電插孔不相配，請將主電源插頭切除，換上合適的插頭，如下列所示。

警告：移除保險絲後，請小心處理被切除的插頭：切勿將它裝設於在屋內其他任何地方的 13 安培電插，以免有觸電危險。

如果新的插頭不帶有保險絲，在更換 13 安培 Asta 認可的保險絲至 BS1362，電路板必須重新裝設。如果遺失了保險絲護蓋，插頭絕不能使用，請先務必到您最近的電器代理商選購新的保險絲護蓋替代。保險絲護蓋的顏色可見於電插頭的底部。

- B) 若您的電器不附設電插頭，請按照以下指示：

重要提示

主電源裡的電線以不同顏色區分，標示如下：

- 藍：中線
- 褐：火線

由於主電源的電線顏色未必與您電插標示接頭顏色相同，請參考如下指示：

藍色電線必須接駁到印有英文字母 N 或黑色的接頭。

褐色電線必須接駁到印有英文字母 L 或紅色的接頭。

IMPORTANT INFORMATION



Danger!

Failure to observe the warnings may result in life-threatening injury by electric shock.

- The device should not be placed immediately under a fixed power socket.
- Do not use the appliance near showers, bathtubs, sinks, swimming pools, etc.
- If the power cable is damaged, it must be replaced by the manufacturer, its service centre or a qualified electrician so as to eliminate all risk.
- The appliance must be installed so that the controls are not accessible by those who are using a bath or shower.



Important!

Failure to observe the warning could result in injury or damage to the appliance.

- This appliance can be used by children at least 8 years old and by persons with reduced physical, mental and sensory capacities or with inadequate experience and knowledge, as long as they are carefully supervised or instructed on how to safely use the appliance and the hazards involved.

Make sure that children do not play with the appliance. Cleaning and maintenance performed by the user must not be performed by children without supervision.

- Children less than 3 years old should be kept away from the appliance unless continuously supervised.
- Children between 3 and 8 years old may only switch the appliance on and off, provided that it has been placed or installed in its normal operating position, they are carefully supervised and

instructed concerning use of the appliance in a safe way and they understand the hazards involved.

Children between 3 and 8 years old should not insert the plug, adjust and clean the appliance or perform maintenance on it.

ATTENTION: Some parts of the appliance can become very hot and cause burns. Pay particular attention when children and vulnerable persons are present.

- **IMPORTANT:** To avoid the risk of the safety cutoff device resetting accidentally, this appliance must not be powered through an external on/off device such as a timer, nor connected to a circuit which is turned on and off regularly by the energy supplier.



Danger of burns!!

Failure to observe the warning could result in burns.

- **IMPORTANT:** To avoid overheating, never under any circumstances cover the appliance during operation as this would lead to a dangerous rise in temperature.



Note:

This symbol indicates recommendations and important information for the user.

- Always use the appliance in an upright position.
- The use of extension leads is not recommended. However if they cannot be avoided, carefully follow the instructions accompanying the extension lead, taking care to not exceed the power limit marked on the extension lead.
- There must be no furniture or other objects in the 50 cm in front of the appliance.
- Do not use the appliance in rooms whose surface area is less than 4 m².
- Before moving the appliance, make sure it is completely turned off and it is unplugged from the power socket.
- Do not position it in dusty atmospheres.

- Do not rest anything on the appliance.
- Do not obstruct the air intake and outlet grilles (danger of overheating).
- Do not use the appliance near walls, furniture, curtains, etc.
- When you first use the device it may release an odour due to heating up. It is advisable to ventilate the room.

Safety features

- **Safety device:** the appliance is fitted with a safety cut-off device which switches it off in the event of accidental overheating (e.g. obstruction of air intake and outlet grilles, motor turning slowly or not at all).
To reset the cutoff, disconnect the appliance from the power socket for a few minutes, remove the cause of overheating then reconnect to the power supply.
If the problem persists or the appliance does not return to normal operation, do not use it and contact an authorised service centre to resolve the problem.

Disposing of the appliance



The appliance must not be disposed of with household waste but must be taken to an authorised waste separation and recycling centre.

DESCRIPTION

(see p. 3)

- A** Function selector
- B** Warning lamp
- C** Room thermostat
- D** Timer (if provided)
- E** Towel rail (select models only)
- F** Pedestal (select models only)

USE

Electrical connection

- Before plugging into the power socket, make sure that the voltage of your power system corresponds to the value in Volts indicated on the appliance and that the power socket and power line are suitable for the electrical load.
- THIS APPLIANCE COMPLIES WITH DIRECTIVE 2004/108/EC ON ELECTROMAGNETIC COMPATIBILITY.

Installation

The device should only be used in an upright position.

Models with towel rail

Some models are equipped with a towel rail (E) that provides

a drying function and can be used only with the appliance fixed to the wall.

If the unit is used in a bathroom, to avoid hazards, it must be installed as shown in fig. 4. If installed in another room the minimum distances shown must be respected.

The wall-mount kit includes:

- 1 bracket
- 2 x screws
- 2 x wall plugs (0.6x30)

Install as follows:

1. Remove the bracket mounted on the back, pulling it downwards.
2. Choose the point to install the appliance ensuring that:
 - a. The plug and the socket are easily accessible after installation.
 - b. Neither the electrical cables nor other pipework can be damaged.
 - c. Curtains or other flammable material are kept away from the appliance.
3. Before drilling the wall, mark the exact points as shown in fig.1.
4. For brick walls, use a 6 mm masonry bit. Drill and insert the wall plugs provided. (For plasterboard or false walls we suggest that you locate the wooden battens behind and use wood screws size 6 directly into the wood or special anchors.
For any other type of wall ask the advice of a specialist.
5. Secure the bracket with the two screws provided.
Next, insert the appliance into the top and bottom hooks of the bracket, and then lightly press the unit down.

Slowly lift the rail (E) to the first stop. To avoid overheating problems in this mode, the heat setting should not exceed 1000W.

At this point you can hang towels or sheets on the rail for drying. When the appliance is not used in drying mode lift the arm upwards up to the top which unlocks it and then bring it down.



Attention! Do not overload the towel rail (E) and pay special attention to drying of delicate fabrics.

Models with pedestal

Models equipped with pedestal (F) can be used in a portable version with the pedestal or wall-mounted, excluding the need for the pedestal in the second case.

To remove the pedestal (F) press the two tabs on the back of the base while pushing the heater forwards then raise the ap-

pliance. The two tabs are identified by the word "PUSH" (figure 2/3). If you want to install it to the wall, however, proceed as described for models with towel rail.

OPERATION AND USE

1. Make sure the appliance is turned off before inserting the plug into the power socket and turning on the socket switch if necessary.
2. Turn on the appliance by placing the thermostat (C) in the maximum position and the function selector (A) in one of the following positions: ❄️/1/2.
 - **Summer** (fan only): turn the function selector (A) knob clockwise to position.
 - **Min power operation:** Turn the function selector (A) to position "1". The red warning lamp lights up.
 - **Max power operation:** Turn the function selector (A) to position "2".
 - **To switch off the appliance:** Turn the function selector to position "●".

Adjusting the thermostat

When the room has reached the desired temperature, slowly move the thermostat counterclockwise until the indicator light turns off and no further.

The temperature thus fixed will be automatically maintained by the thermostat.

Freezing prevention

With the thermostat knob at the minimum position ❄️ and the function selector at pos. 2 the appliance keeps the ambient temperature at about 5°C, preventing freezing with a minimum expenditure of energy.

MODELS WITH 24-HOUR TIMER (if provided)

To program the heating proceed in the following way:

Look at the time on your watch. If it is 10.00 for example, turn the numbered programmer disk until the number 10 coincides with the index mark ▲ imprinted on the programmer. Set the periods of time that you want the appliance to function, pushing the teeth toward the centre. Each tooth corresponds to a period of time of 15 min. At this point you will see the red sectors that correspond to the periods of operation. Set up in this way, the unit will work automatically every day during the scheduled periods. (Important: the plug must be always inserted in the power socket and the socket switched on if necessary).

- To change the programming, simply return the red teeth to the initial position and set the new operating periods.
- If you want to operate the appliance without program-

ming, push all the teeth toward the centre. In this case, for total shutdown of the appliance, as well as turning off the switches, it is also necessary to remove the plug from the power socket, to avoid unnecessary operation of the programmer.

MAINTENANCE

- Before cleaning, always remove the plug from the power socket.
- Regularly clean the air intake and outlet grilles.
- Never use abrasive powders or solvents.

TECHNICAL CHARACTERISTICS

Power supply	See appliance rating plate
Power consumption	"

重要資料



危險！

不遵守以下警告有機會因觸電而造成危及生命的傷害。

- 本機不可放在固定式插座的正下方。
- 切勿在浴缸、花灑、水槽或游泳池附近使用本機。
- 如電線損毀，必須由生產商、獲授權的服務中心或合資格的電工更換，以免發生意外。
- 本機應安裝於固定位置，而安裝的位置需避免於沐浴或淋浴其間容易觸碰到。



重要事項！

不遵守以下警告有機會造成危險或損毀本機。

- 本機適用於8歲以上兒童或在監護人的安全監督或指導下，具有身體、感官或精神缺陷的人士，或者缺乏相關經驗和知識的人士，並知悉洩及危險下可使用本機。
兒童不可把玩本機，不應由沒有監督的兒童清潔及維修。
- 除非有長期監督，3歲以下兒童應遠離本機。
- 3歲至8歲的兒童只可在本機已安置下啟動本機開/關制或設置於預期運作地點及兒童在監護人監督或安全指導下使用本機並知悉所洩及危險。

- 不應由3歲至8歲的兒童插上電源、操控及清潔本機或進行維修。


注意—本產品某些部份會發出高熱及導致燙傷，兒童及易受傷人士在場需特別注意。

重要事項：為免安全系統意外重置，本機不可外設開/關裝置(例如計時器)，或接駁至由供電商定期開關的電路。



燙傷危險！！

不遵守以下警告有機會造成燙傷

警告：為免過熱，切勿以任何物件覆蓋正在運作的暖風機。因會 造成危險。



請注意

以下的標示是對用戶的建議及重要資料。

- 保持本機直立
- 不建議使用拖板。若必須使用拖板，請遵照拖板的使用說明，切勿讓拖板的負荷超出所標示的電力限制。
- 暖風機必須放置於距離傢俱或其他物件至少50厘米的範圍。
- 切勿在面積少於4平方米的房間內使用本機。
- 移動本機前，應確保已完全關機，而且已拔除插頭。
- 切勿儲存本機於多塵的環境。
- 切勿將任何物品放於本機上。
- 切勿使用本機烘乾衣物，切勿堵塞入風口和出風口格柵，以免本機過熱。
- 切勿在牆壁、傢俱、窗簾等附近使用本機。
- 當第一次使用本機，運作時有機會發出異味，建議將本機置於通風的房間。

安全功能

- **安全裝置：**本機設有安全裝置，在過熱的情況下會自動關閉(例如：入風口和出風口堵塞，馬達轉動過慢等)。

如要重新啟動，請將本機從主電源插座拔出數分鐘，解決過熱問題後再重新接駁電源。

如本機操作有問題，請聯絡指定的客戶服務中心。

處置本機



本機不可與家居垃圾一同處置，而是應當送到授權的垃圾分類和回收中心進行處置。

描述 (參看第三頁)

- A** 功能選擇
- B** 警告燈示
- C** 恆溫器
- D** 時間掣 (如有提供)
- E** 毛巾架 (只供某些型號)
- F** 底座 (只供某些型號)

使用

電源接駁

- 將插頭連接到主電源前，確保主電源的電壓與本機所標示的電壓(伏)相同，以及插座和電線能應付暖風機所需之負荷。
- 此暖風機的電磁相容性符合歐盟2004/108/EC指令。

安裝

本機只可垂直放置。

備有毛巾架的型號

有些型號的暖風機裝有毛巾架(E)，這提供了烘乾功能，但只用於掛牆型號。

如本機用於浴室內，為避免危險，需依照圖.4的安裝方式。如安裝於其他房間，需遵照說明書所述最少需保持的距離。

掛牆式的配件包括：

- 1個支架
- 2枚螺絲
- 2枚牆塞鑽咀 (0.6x30)

安裝步驟如下：

1. 將暖風機背面的支架向下拉。
2. 選擇一個正確的安裝點來安裝本機：
 - a. 安裝後插頭及插座都置於容易觸及的位置。
 - b. 安裝的位置不會損毀牆內的電線及其他管道。
 - c. 窗簾或其他易燃的物料需遠離本機。
3. 鑽牆前，需標示出正確安裝點，如圖.1。
4. 磚牆的話，可用電鑽裝上6毫米電鑽頭，然後將提供的牆塞鑽入。(如膠板或假牆，建議您可於牆背先裝上木條然後用尺寸6的鑽木螺絲直接鑽入牆身。其他物料的牆壁，需向專人諮詢。
5. 用提供的2枚螺絲將支架穩固地安裝於牆上。然後將本機裝進支架的上下鉤內，再輕力將本機向下按。

慢慢將毛巾架 (E) 移至第一個定點。避免機身過熱，溫度設定應低於1000W(瓦特)。

此時您可將毛巾置於架上烘乾。當不使用烘乾功能時，將毛巾架推向頂部來解鎖再向下移。




注意！毛巾架不可放置太多毛巾或衣物，以免過重及當烘乾名貴物料時需加以留意。

有底座的型號

裝有底座的型號 (F) 可作便攜式或掛牆式使用。如掛牆式使用便不需裝上底座。

拆除底座 (F) 可按下底座背部的卡位並向前推然後提起本機。底座背部的2個卡位有“PUSH”(推)的字樣(圖.2/3)。如想安裝於牆上，可參看安裝備有毛巾架的暖風機型號。


操作與使用

- 1. 將本機插頭插進電源插座前，需確定本機的開關掣已關上。
- 2. 要啟動暖風機，請將恆溫器(C)調校至最高位置同時將模式選擇(A)調校到以下其中一個位置： 1/2。
- **夏日模式**(風扇)：將功能選擇(A)旋鈕順時針方向調校至所需位置。
- **低功率運作**：將功能選擇(A) 調校至位置「1」，紅色警示燈會亮起。
- **高功率運作**：將功能選擇 (A) 調校至位置「2」。
- **關機**：將功能選擇調校至位置「●」。

調校恆溫器

 
當室溫達到所需溫度時，緩慢地以逆時針方向轉動恆溫器，直到指示燈熄滅。
恆溫器會自動將室溫保持在您選擇的水平。

防結霜模式

將恆溫器旋鈕調校至最低位置 ，以及將功能選擇調校至「2」，本機會將室溫維持於攝氏約5度，以最低的能源消耗來防止結霜。

24小時時間掣型號〈如有提供〉

可按以下程序來設定暖風機運作時間掣：

舉例若您現時手錶的時間是10:00，而您想將本機的開啟時間設定到與手錶相同。可將時間掣的數字圓盤轉到數字10並與指標  位置相對應。要設定本機運作的時段，您可將輪齒推向中心，每個輪齒代表的時間為15分鐘。您會發現紅色輪齒區域跟已設定的運作時段相對應。本機每天便會按照已設定的時間來操作。〈重要事項：本機插頭需長時間插進主電源插座而電源掣是已開啟的〉。

- 如想改變設定，只需將紅色輪齒回轉到最初位置然後重新設定運作時段。
- 如想取消所有的時間設定，只需將所有輪齒推向中心。若想完全關閉本機，應將插頭從主電源拔出。

保養

- 清潔前必須將暖風機從插座中拔出。
- 定期清潔入風口和出風口格柵。
- 切勿使用磨蝕性的清潔粉末或溶劑來清潔本機。

技術特點

電源	見技術規格
消耗功率	"



De'Longhi Kenwood A.P.A.Ltd Consumer Care Centre
De'Longhi Kenwood A.P.A.Ltd 客戶服務中心

客戶服務熱線 Customer Service Hotline: 2237-1313

網頁 Website: www.delonghigroup.com

電子郵件 E-mail: info.hk@delonghigroup.com

維修地址(香港)：香港德輔道中288號易通商業大廈6樓C室

Address (HK Island) : 6/F, Flat C, Eton Building, 288 Des Voeux Road Central, HK

維修地址(九龍)：葵涌葵昌路56號貿易之都1603室

Address (Kowloon) : Room 1603, Millennium Trade Centre, 56 Kwai Cheong Road, Kwai Hing