


Ariete

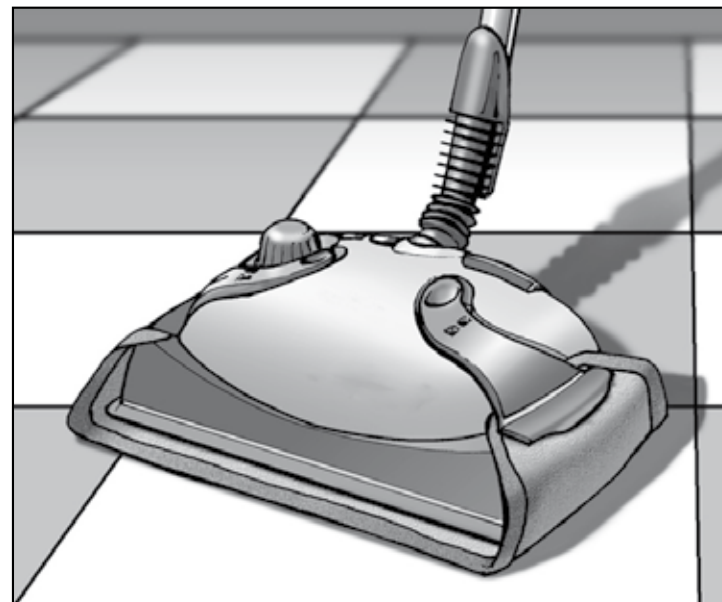

STEAM MOP 2000

Ariete

Distributed by Tempo (Aust) Pty Ltd
PO Box 6056, Frenchs Forest DC 2086

After Sales Support:
1300 886 649
info@tempo.org



4101

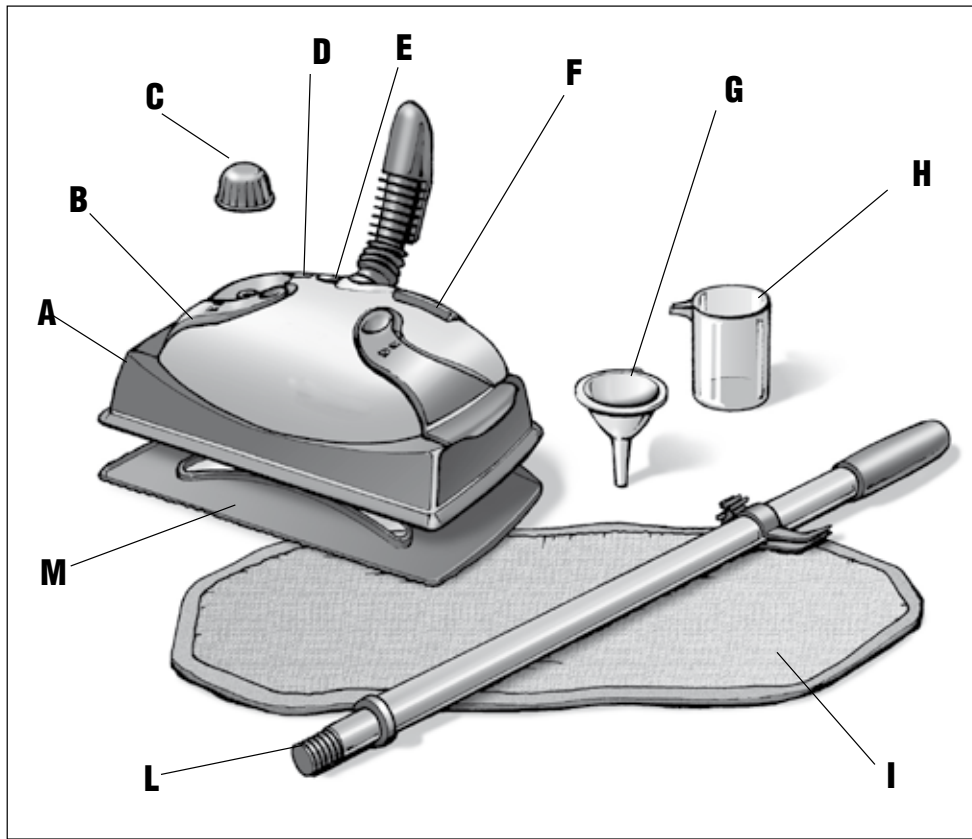


Fig. 1

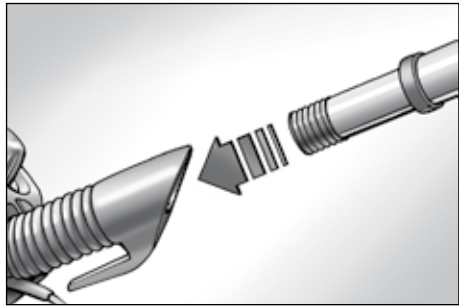


Fig. 2

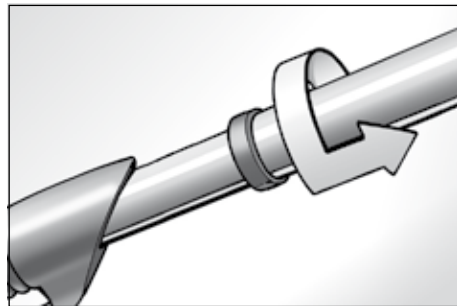


Fig. 3



Fig. 4

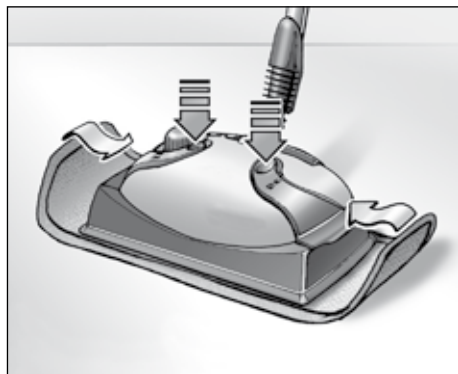


Fig. 5

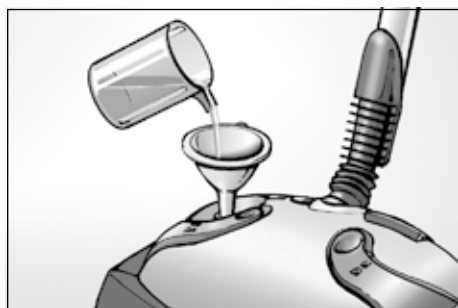


Fig. 6

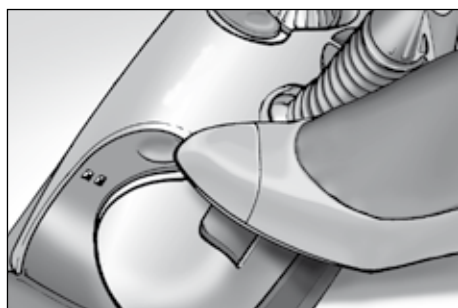


Fig. 7

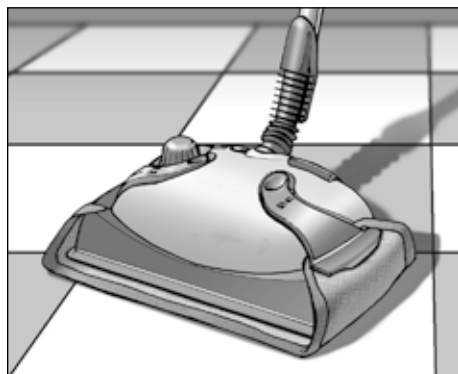


Fig. 8

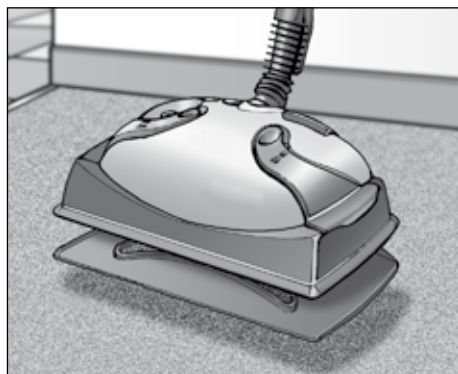


Fig. 9

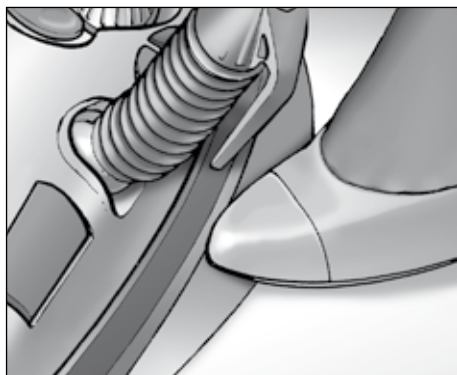


Fig. 10






Fig. 11

EN

IMPORTANT SAFEGUARDS

CAREFULLY READ THESE INSTRUCTIONS BEFORE USE


1. Before plugging in the appliance, check that the voltage of your domestic supply corresponds to the voltage indicated on the appliance.
2. Do not leave the appliance exposed to the weather (rain, sun, etc.).
3. Always connect the appliance with a grounded outlet.
4. Never leave the appliance unattended when it is connected with the electric network.
5. Do not immerse the appliance in water or other liquids.
6. Do not overturn the appliance when it is in operation.
7. Always unplug the appliance when it is refilled with water.
8. **ATTENTION! When the appliance is first filled, small quantities of water may pour out of the tank. This is normal and will no longer occur when the tank is refilled.**
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
10. Children should be supervised to ensure that they do not play with the appliance.

11. **NEVER ADD DECALCIFICATION, AROMATIC, ALCOHOLIC OR CLEANSING AGENTS TO THE WATER IN THE BOILER, AS THESE MAY DAMAGE THE APPLIANCE OR RENDER IT UNSAFE.**
12.  Avoid directing the steam jet towards people, animals or equipment with electrical components (e.g. ovens).
13.  **CAUTION: DANGER OF BURNS**
Do not touch hot surfaces while the appliance is being used. Allow the attachments to cool down before replacing them.
 **DO NOT OPEN THE SAFETY CAP (C) WHILE THE APPLIANCE IS BEING USED.**
14. Attention: before unscrewing the cap (C), carry out the following operations:
 - unplug the power cord from the outlet
 - slowly unscrew the cap (C) and wait for a few seconds before unscrewing it completely.
15. When carrying the appliance, place the extension tube so that it is upright. Never tilt the appliance by more than 45° as this could cause hot water to pour out.
16. Do not use the appliance if it is damaged. Any repairing including the replacement of the power cord must only be carried out by an approved service centre or by a person with a similar qualification to prevent any risk.
17. Do not operate any unit with a damaged power cord or plug; all repairs must be carried out by an authorised service centre or by authorised technicians so as to prevent any risks.
18. ATTENTION: never drape the cord across your hand when using the steam mop connected to the power supply source.
19. This appliance is for domestic use only.
20. This appliance must be used exclusively for the purpose for which it was designed and in the manner indicated in the instructions for use. Any other use will be considered improper and therefore, dangerous. The manufacturer refuses to accept any liability for damages deriving from improper or incorrect use.
21. In the event that you decide to dispose of the appliance, we advise you to make it inoperative by cutting off the power cord. We also recommend that any parts that could be dangerous be rendered harmless, especially for children, who may play with the appliance or its parts.
22. Packaging must never be left within the reach of children since it is potentially dangerous.

- 23. RCD:** The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.)

ALWAYS KEEP THESE INSTRUCTIONS

DESCRIPTION OF THE APPLIANCE (Fig. 1)

- A. Appliance body
- B. Cloth clip
- C. Safety cap
- D. Pilot lamp
- E. Tank empty light
- F. Main switch 
- G. Funnel
- H. Measuring jug of 175ml
- I. Cloth
- L. Extension tube
- M. Carpet attachment

This STEAM MOP 2000 has been designed for thorough cleaning of marble, ceramic, storeware, linoleum, brick and parquet floors. To avoid wax or other substances with which the floors may have been treated being removed by the heat and steam produced by the appliance, we suggest you read and follow the instructions provided by the manufacturer and then try out the appliance in a hidden corner. Do not clean outside floors during the winter season as to protect the floor against thermal shocks.

ATTENTION! If the appliance is left standing on the floor while it is in operation, you may notice a whitish ring. Do not be alarmed because this can be removed with a decalcification agent or with some drops of vinegar.

INSTRUCTIONS FOR USE

Using the appliance is very easy.

- Fig. 2** Once the appliance has been unpacked, fit the extension tube in the appliance's body and then extend it to the desired length (**Fig. 3**). Fix the top part of the tube by turning it in a clockwise direction.
- Fig. 4** Introduce the cord into the hook located along the tube.
- Fig. 5** Press the top part of the cloth clips (B), as shown in the figure. Afterwards, apply the provided cloth (I) or any other floor cloth as shown in the figure.
- Fig. 6** Unscrew the cap (C) and pour 2 measuring jugs (H) of water into the tank using the provided funnel (G). Afterwards, screw the safety cap on tightly. Do not introduce too much water into the tank because hot water may pour out of the appliance. Now insert the plug of

the power cord into a grounded outlet making sure that the voltage of your domestic supply corresponds to the voltage indicated on the appliance.

- Fig. 7** Press the switch (F), the pilot lamp (D) will go on. Do not leave the appliance unattended while you are waiting for the water to start boiling.
- Fig. 8** When steam starts coming out, slowly run the appliance over the surfaces to be cleaned. This way your floors will become perfectly clean.
- Fig. 9** Use the provided attachment (M) to clean carpets. After removing the cloth, apply the plate under the appliance by pressing it slightly.
- Fig. 10** To remove the attachment, press your foot on the point shown in the figure and lift the appliance.

When STEAM MOP 2000 stops producing steam and the tank empty light (E) goes on it means that the water is running out (every 15 minutes' use).

In this case, press the switch (F), unplug the appliance and pour the water into the tank as described at point **Fig. 6**. During this operation, mind not to touch the appliance's hot parts. Press the switch (F) again. The STEAM MOP 2000 will restart producing steam. Wash the cloth with water and soap or in a washing machine.

ATTENTION: EVERY TIME YOU REPLACE THE CLOTH, TURN OFF THE SWITCH (F) AND DO NOT TOUCH THE APPLIANCE'S HOT PARTS.

After using and before putting the appliance back, wind the power cord around the provided hooks (see fig. 11).

WARNING: NEVER TILT THE APPLIANCE BY MORE THAN 45° AS THIS COULD CAUSE BOILING HOT WATER TO POUR OUT.

BEFORE USING THE APPLIANCE AGAIN, UNWIND THE POWER CORD COMPLETELY. BE SURE THE POWER CORD IS COMPLETELY UNWOUND BEFORE YOU PLUG IT IN.

CLEANING AND MAINTENANCE

Always pull the plug out of the power point before carrying out the following operation.

To ensure the appliance's correct and long-lasting operation, flush the boiler inside to remove the calcareous deposits on a monthly basis. Do not use vinegar or other decalcification agents.

Besides the original cloths (spare cloths are available at your nearest retailer), the STEAM MOP 2000 can also be used with any floor cloths you have at home.

