

Ariete



Cotton Candy

Ariete

Distributed by Tempo (Aust) Pty Ltd
PO Box 6056, Frenchs Forest DC 2086

After Sales Support:
1300 886 649
info@tempo.org



Mod. 2971/1

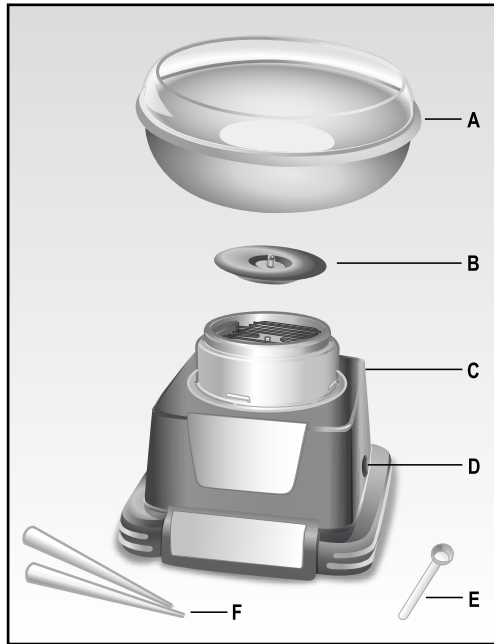


Fig. 1

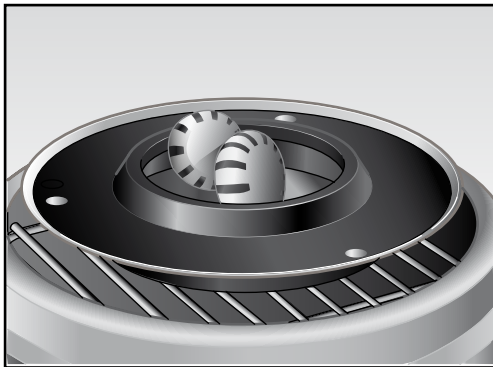


Fig. 2

IMPORTANT SAFEGUARDS

READ THESE INSTRUCTIONS BEFORE USE

The necessary precautions must be taken when using electrical appliances, and these include the following:

1. Make sure that the voltage on the appliance rating plate corresponds to that of the mains electricity.
2. Never leave the appliance unattended when connected to the power supply; unplug it after every use.
3. Never place the appliance on or close to sources of heat.
4. Always place the appliance on a flat, level surface during use.
5. Never leave the appliance exposed to the elements (rain, sun, etc....).
6. Make sure that the power cord does not come into contact with hot surfaces.
7. This appliance must not be used by people (including children) with reduced physical or mental capabilities or by people without the relevant experience or knowledge of the appliance, unless they are carefully supervised or properly trained in its use by a person responsible for their safety.
8. Make sure that children cannot play with the appliance.
9. Never place the appliance body, plug or power cord in water or other liquids; always wipe clean with a damp cloth.
10. Always unplug the power cord from the electricity mains before fitting or removing single attachments or before cleaning the appliance.
11. Always make sure that your hands are thoroughly dry before using or adjusting the switches on the appliance, or before touching the power plug or power connections.
12. To unplug the appliance, grip the plug and remove it directly from the power socket. Never pull the power cord to unplug the appliance.
13. Do not use the appliance if the power cord or plug are damaged or if the appliance itself is faulty; all repairs, including substitution of power cord, must be carried out exclusively by personnel authorised by the distributor in order to avoid all risks. Contact our Customer Support Centre on 1300 886 649 or info@tempo.org.
14. In case of using extension leads, these must be suitable for the appliance power to avoid danger to the operator and for the safety of the environment in which the appliance is being used. Extension leads, if not suitable, can cause operating anomalies.

15. Never allow the cord to dangle in places where it may be grabbed by a child.
16. Do not threaten the safety of the appliance by using parts that are not original or which have not been approved by the manufacturer.
17. This appliance is designed for HOME USE ONLY and may not be used for commercial or industrial purposes.
18. Any changes to this product that have not been expressly authorised by the manufacturer may lead to the user's guarantee being rendered null and void.
19. In the event that you decide to dispose of the appliance, we advise you to make it inoperative by cutting off the power cord. We also recommend that any parts that could be dangerous be rendered harmless, especially for children, who may play with the appliance or its parts.
20. Packaging must never be left within the reach of children since it is potentially dangerous.
21. Never place anything other than the proper candies in the extractor head.
22. Never pour water or any other liquid into the extractor head.
23. Never put fingers on or near the extractor head or heating element while the machine is on or while it is still hot.
24. Check inside part of the heating element, located beneath the extractor head, for foreign objects before switching to the ON position.
25. The heating element will get hot. Avoid contact until fully cooled.
26. Keep hands away from the machine when it is in the ON position and is spinning.
27. Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.

DO NOT THROW AWAY THESE INSTRUCTIONS

The manufacturer reserves the right to make small improvements of colour changes.

APPLIANCE DESCRIPTION (Fig. 1)

- A Bowl
- B Extractor head
- C Appliance body
- D ON/OFF switch
- E Sugar scoop (1 tsp.)
- F Paper cone

The appliance “COTTON CANDY PARTY TIME” transforms hard candies into fluffy, melt-in-your-mouth cotton candy. Simply put yummy candies into the centre receptacle and in a moment you will have a colourful and tasty cotton candy!

Using “COTTON CANDY PARTY TIME” is fun for the whole family: it brings out the kid in everyone and instantly it will seem to be in a real carnival!

“COTTON CANDY PARTY TIME” is really versatile, too: it works both with sugar and with hard candies. You can instantly enjoy a sweet spun sugar cloud just like at the carnival!

HOW TO OPERATE

- Wipe down the bowl (A) with a non-abrasive cloth or sponge before using.
- To attach the extractor head (B), insert it into the central stem on the appliance body (C) making sure the grooves are properly aligned with the stem pegs.
- To attach the bowl (A), push it carefully and turn it counter clockwise until it locks into place.
- Before using, place the appliance on a stable surface by a power socket. Make sure the cord is away from any water source.
- Make sure the appliance is off with the switch (D) on “OFF” position and plug the power cord into a power socket.
- Switch the appliance on by turning the switch (D) to “ON” and let the extractor head heat (B). Let the appliance run at least 2 minutes before adding hard candies and 5 minutes in case of sugar.
- Turn the appliance off by rotating the switch (D) to “OFF” and put no more than two hard candies or one scoop of sugar (1 tsp.) into the extractor head (B). If using candies, make sure they are evenly placed on either side of the extractor head (Fig. 2).

IMPORTANT: always use the measuring spoon included with the appliance to insert foods into the extractor head. Never insert foods directly with hands: risk of scalding.

Note: it is recommended to use small candies or to cut candies in small pieces beforehand.

- Switch the appliance on by turning the switch (D) to “ON”.
- When the cotton candy web begin, collect it quickly by holding the cone vertically. Rotate the cone (F) with your fingers while you circle the bowl (A).
- Once you have collected the cotton candy with the cone (F), hold the cone in a horizontal position over the extractor head (B) while still rotating it with your fingers, making sure all sugar has been collected.
- Repeat the above steps by adding another measure of candies or sugar into the extractor head (B).

WARNING: DO NOT overfill the extractor head (B) by adding more than two candies or 1 tsp. of sugar at a time. This will cause clogging and unit will not work properly.

HELPFUL TIPS

If your cotton candy is not flossing properly or is coming out with a brittle, “hay-like” texture, follow these instructions:

- Insert only 1-2 candies at a time.
- Make sure candies are evenly placed on either sides of the extractor head (B).
- For best results, cut candies in small pieces before using.
- This appliance works with any kind of candy, except the following types:

filled candies with hard sugar shells

gummy or chewy candies

sugar-pressed candies

caramel candies

CLEANING AND MAINTENANCE

WARNING

Carry out disassembling and cleaning of the appliance only after it is completely cooled.

- After cooling, remove the extractor head (B) by firmly holding both sides and pulling upwards.
- Unlock the bowl (A) by rotating it clockwise and lifting it.
- Wash the items with warm water, then rinse and dry thoroughly.
- Use a non-abrasive, slightly damp sponge or cloth to clean the inside and outside part of the appliance, then wipe with a non-abrasive towel.

RECIPES

With this appliance you can use hard candies or sugar according to taste.

Try to mix candies with different flavours together to obtain cotton candy with a very special taste!

For example, apple and cinnamon, or strawberry and orange, pineapple and lemon, etc...

If you want coloured cotton candy, use granulated sugar adding some drops of food colouring, mix thoroughly and follow the instructions.