

over-heating protection

- If the airpot runs out of water it will dry-boil and all the indicators will flash.
- Add cool water immediately.
- Allow to cool down before pressing reboil button to start boiling

Note : if the airpot is allowed to dry-boil excessively, the inner tank may change colour permanently due to high temperature.

care & cleaning

Before cleaning : unplug from power and allow to cool . remove lid and empty any water

to clean the exterior

- wipe with a damp cloth and mild detergent then wipe dry with a soft cloth.
- never use any chemical, steel wool or abrasive cleaners to clean the exterior of the appliance.

to clean the internal filter

- remove and clean with warm water and a soft toothbrush. If necessary use some citric acid.

Ensure the internal filter is replaced before re-using the airpot.

to clean the interior

- Clean regularly with a sponge or damp cloth.
- Dry with a soft cloth.
- The interior can become discoloured because of deposits of limescales and particles after prolonged use. This is not harmful to health but may be cleaned as follows :

1. Make sure the internal filter is clean and installed
2. Fill with water, adding 30g of citric acid.
3. Press and hold the reboil button for 3 seconds.
4. During cleaning the 98°C & 70°C lights will flash alternately.
5. When cleaning is finished all 3 lights will stay on.
6. Press the dispense button to remove as much water as possible.
7. Disconnect from power and allow to cool. Dump out all remaining water.
It is recommended that the airpot is then refilled, boiled and emptied again.
8. Wash the interior with a sponge or damp cloth, rinse, then dry with a soft cloth.

Note : do not use detergent to wash the interior of the airpot as after-taste or frothing may require rinsing out several times.

service and customer care

- if the cord is damaged it must, for safety resons, be replaced by KENWOOD or and authorised KENWOOD repairer.

If you need help with:

- using your airpot or
- servicing or repairs (in or out of guarantee)

contact the Kenwood distributor or your authorised Kenwood repairer.
Have your model number ready - it's on the underside of the airpot.


troubleshooting

PROBLEM	CAUSE	REMEDY
No power.	Loose power connection.	Check connection at the unit and socket.
Cannot switch to boil/reboil.	Water level is too low.	Add water.
Water cannot be dispensed or not dispensing smoothly.	No power.	Check power connection.
	Unit just finished boiling and air bubbles are trapped inside.	Open lid to release air. Close lid.
	Interior is dirty.	Clean.
Water flowing out from unit.	Water added above FULL line.	Do not add water above FULL.
White residues in water.	Mineral deposits (not a defect of the unit).	Clean with Citric Acid.
Boiling sound is excessively loud.	Interior is dirty and filter blocked.	Clean with Citric Acid.

KENWOOD

AP360 series

instructions

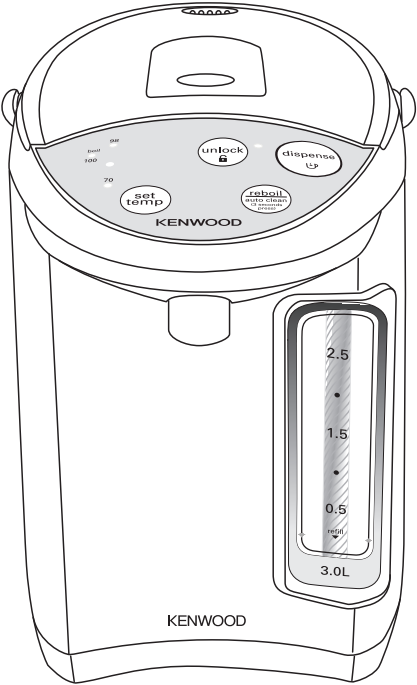

HEAD OFFICE: Kenwood Limited, 1-3 Kenwood Business Park, New Lane, Havant, Hampshire PO9 2NH

kenwoodworld.com

KENWOOD
CREATE MORE



your new Kenwood airpot

safety

- Avoid contact with steam coming out from the airpot steam vent; or from under the lid if it is lifted; or from near the water outlet.
- **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**
- Young children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- **Always unplug your airpot from the power outlet when not in use.** Unplug and allow to cool before cleaning and before removing or replacing the lid.
- **Take extreme care when moving the airpot if it contains hot water.**
- Always attach the power cord to the airpot first, then plug the cord into the wall outlet. Disconnect by removing the plug from the wall outlet.
- Always use the airpot on a flat, stable and heat resistant surface.
- Do not use the airpot outdoors.
- Never overfill – boiling water may splash out. Always make sure that the lid is clipped in place during use.
- **Warning :** do not open the lid while water is boiling.
- Keep small children away from the airpot and do not let the power cord hang down over the worktop edge – a child could grab it and pull the airpot down.
- Never immerse the airpot or power cord in water or other liquids.
- Keep the airpot away from hot surfaces such as cookers, hotplates or gas burners.
- Keep hands clear of the hot water emitted from the spout as splashing can occur and the water can continue to emit for a second or two after the dispense pump is turned off.
- This airpot is for boiling water only.
- This airpot is for domestic use only.
- **Note :** the reboil switch cannot be switched off manually. It will reset after boiling.

before plugging in

- Make sure your electricity supply is the same as the one shown on the underside of your kettle.

Important - UK only

- The wires in the cord are coloured as follows:
Green and Yellow = Earth, Blue = Neutral, Brown = Live.
- This appliance conforms to EC directive 2004/108/EC on Electromagnetic Compatibility.

before using for first time

- Remove all packaging and any labels.
- Clean the airpot by following step 1-4 below, then unplug and allow the water to cool before discarding.
- **Note :** check that the pump filter is correctly in the place in the base of the inner pot.

know your Kenwood airpot

- | | |
|------------------------------|------------------------------|
| ① latch | ⑩ keep warm temp. indicators |
| ② lid | ⑪ unlock button |
| ③ steam outlet | ⑫ unlocked indicator |
| ④ water level indicator | ⑬ dispense button |
| ⑤ water outlet & night light | ⑭ reboil/auto button |
| ⑥ release catch | ⑮ temp set button |
| ⑦ handle | ⑯ boil indicator |
| ⑧ internal filter | |
| ⑨ turntable (underneath) | |

to use your airpot

- **Note :** when any of the button is pressed, a beep will sound and the night light will operate for 15 seconds after pressing.

General


1. Open the lid by releasing the catch
2. Fill water to the Full line on the inside. **Do not overfill.**
3. Close the lid until you hear it 'click' shut. Slide the safety lever to 'Lock'. The dispense button is automatically locked.
4. Attach the power cord to the airpot and then plug into the wall outlet. There will be a beep, the airpot will automatically start to heat the water and the 'boil' indicator light will be on. The 98°C indicator light will flash because after boiling the airpot will keep warm at 98°C unless another temperature is selected.
5. For hot water after boiling or at any time while at the set temperatures press the dispense button.
6. Before re-boiling, make sure the water level is above the "refill" mark. Press the "reboil" button. The boil indicator will be illuminated and the temperature indicator will flash, the airpot will bring the water back to boiling.
7. After boiling, the water will cool to the set temperature which the airpot is set at, the temperature light will be on and the water will be kept at the temperature.
8. When any of the buttons - dispense, re-boil, unlock or set temp - is pressed, the night light will come on and stay on for 15 seconds after pressing.

Do not open the lid during the boiling process

Do not touch the steam outlet

the lid

- To open the lid : lift up the top of the latch until it unclicks, continue lifting to open.
- To close the lid : push it down until it clicks shut.

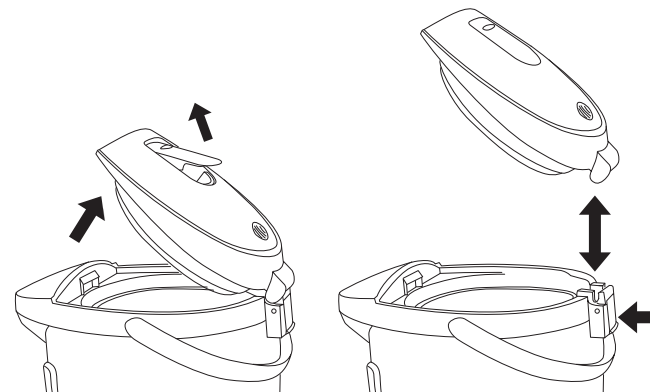

- To remove the lid : push in the release catch at the rear of the airpot; lift the latch until the lid is at 45°C, the lid will now lift away from the body of the airpot.
- To replace the lid : push the release catch in; lower the lid hinge into the body of the airpot and release the catch. Now close the lid until the latch clicks shut.

Note : to check the lid is correctly in place, press any of the buttons on the control panel – a beep should sound.

dispensing water

- Water cannot be dispensed by the electric pump if the unit is locked.
- Hold the cup under the dispensing spout.
- Before dispensing, press the unlock button. The indicator light will come on to show it is unlocked. Press the dispense button and keep pressed until the required amount of water is dispensed.
- After dispensing, the electric lock will automatically come on again after 15 seconds.
- If water does not dispense smoothly, cleaning may be needed – refer 'care & cleaning'
- **Do not turn or move the airpot while dispensing water.**

setting temperature

- Press the temp set button until the indicator light for the desired temperature flashes.
- **Note :** if the setting is changed to a higher temperature, the water will reboil and then cool to the new temperature.
- Auto cool setting. The water will cool to room temperature.
- The automatic temperature setting is 98°C. If the power is disconnected, when it is reconnected the airpot will reboil and then cool to 98°C.