

EASY  
HOME®



# USER GUIDE

## HANDHELD WINDOW VAC CLEANER




---

NOW YOU HAVE PURCHASED AN EASY HOME® PRODUCT  
YOU CAN REST ASSURED IN THE KNOWLEDGE THAT AS  
WELL AS YOUR MANUFACTURER'S WARRANTY YOU HAVE  
THE ADDED PEACE OF MIND OF DEDICATED HELPLINES  
AND WEB SUPPORT

---

### AFTER SALES SUPPORT

☎ 01924 481053  
☎ 014508703 / 014508705  [www.aldi.com](http://www.aldi.com)

MODEL: 4125, 01/2015, 63119

**3**

YEAR WARRANTY

CLEANING

# Index

---

03	Introduction
04	Important safeguards
08	Description of the appliance
09	Instructions for use
12	Cleaning and maintenance
13	Storing the appliance and disposal
15	Warranty Card

# Introduction

---

Congratulations!

You have made an excellent choice with the purchase of this quality EASY HOME® product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of ALDI.

We want you to be completely satisfied with your purchase so this EASY HOME® product is backed by a comprehensive manufacturer's 3 year warranty and an outstanding after sales service through our dedicated Helpline.

We hope you will enjoy using your purchase for many years to come.

If you require technical support or in the unlikely event that your purchase is faulty please telephone our Helpline for immediate assistance. Faulty product claims made within the 3 year warranty period will be repaired or replaced free of charge provided that you have satisfactory proof of purchase (keep your till receipt safe!). This does not affect your statutory rights. However, be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused or disassembled.

The instruction manual is also available from our customer assistance service, in PDF format.

# Important safeguards

---

## SYMBOLS

The information in this manual is labelled as follows:



DANGER for children



DANGER from electricity



DANGER from other causes



IMPORTANT possible damage to materials

READ THESE INSTRUCTIONS BEFORE USE.

KEEP THIS MANUAL AND CONSIGN IT TO THE NEW IF THE APPLIANCE IS SOLD ON.

This appliance conforms to the Directives 2006/95/EC, RoHS 2011/65/EC and EMC 2004/108/EC.



### DANGER to children

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities; or lack of experience and knowledge; unless they are supervised and have been given instructions concerning use of the appliance by a person responsible for their safety. Children should be

# Important safeguards

---

supervised to ensure that they do not play with the appliance. Cleaning and maintenance, that are intended to be carried out by the user, shall not be made by children without supervision.

- When disposing of the appliance as waste, it must be made in-operative by cutting off the power cord. Also remember to make any of the potentially hazardous parts of the appliance safe, as there is a risk that children may use them as playthings.
- Packaging elements must not be left in reach of children as they are potentially hazardous.



## DANGER from electricity

- Make sure that the voltage shown on the rating plate of the appliance corresponds to that of your mains electricity supply.
- Do not insert conductive objects (ex. screwdriver or similar) into the charging socket.
- In the event that fluid should leak from the batteries, do not use the appliance; take it to your nearest Authorised Assistance Centre to replace the batteries.
- This appliance operates using rechargeable Li-ion batteries and therefore, at the end of its useful life, it must not be disposed of with standard household waste. It can be taken to one of the relevant recycling centres operated by your local

# Important safeguards

---

authority or to retailers offering this service. The separate disposal of an electrical or electronic appliance makes it possible to avoid the possible negative consequences to health and the environment of unsuitable disposal methods and it also means it is possible to recover the material used to make it, meaning a significant saving in terms of energy and resources. To point out the obligation for separate disposal of electrical appliances the product has the crossed-out wheeled bin symbol. Never throw batteries into fire.

- Make sure that hands are dry before using or adjusting the appliance switches, before touching the plug or power connections.
- Recharge the appliance using only the supplied charging adapter.



## DANGER from other causes

- Never leave the appliance exposed to the elements (rain, sunshine, etc.).
- Never place the appliance on or near to sources of heat.
- Make sure that the charger and its cord does not come into contact with hot or sharp surfaces.
- Never immerse the body of the appliance, charger and its cord in water or other liquids; clean them with a damp cloth.
- Never use the appliance if the charger and its cord are damaged or if the appliance is faulty / damaged.

# Important safeguards

---


- All repairs, including the replacement of the charger, must only be carried out by an Assistance Centre or by technicians authorised, to do so. Repair by unqualified persons could result in a risk of injury to the user.
- This appliance has been designed for domestic use only and may not be used for commercial or industrial purposes.
- Do not aim the spray jet at eyes. Do not aim the spray jet directly at devices containing electrical components.



## IMPORTANT possible damage to materials

- Use this appliance only to clean damp and smooth surfaces as windows, mirrors or tiles. The appliance must not be used to suck up dust or small items.
- Use this appliance only along with commercially available glass detergents; do not use spirits nor foaming detergents.
- Unplug the appliance by gripping the charger firmly and pulling it out of the power socket; never unplug the appliance by pulling on the cord.
- Any changes to this product not expressly authorised by the manufacturer may make safety devices inoperative and will also render the user's warranty null and void.

# Description of the appliance

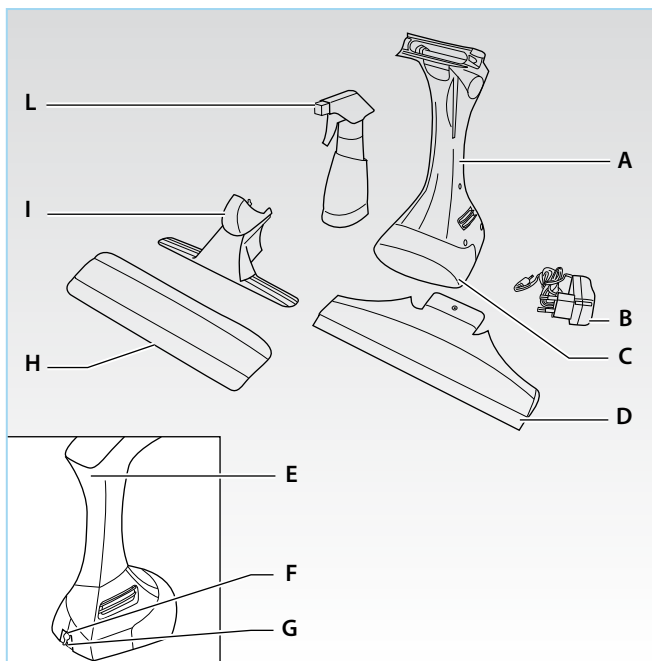

## DESCRIPTION OF THE APPLIANCE

A Appliance body

B Charging adapter

C Dirty water tank

D Squeegee

E ON/OFF switch

F Charging socket

G Charging light

H Microfibre window cleaning cloth

I Cloth holder

L Sprayer

Instruction manual (Not shown)



# Instruction for use

---

## Charging the batteries

ALWAYS CHARGE THE BATTERY COMPLETELY BEFORE USING THE APPLIANCE.

CHARGE THE BATTERY FOR 24 HOURS TO ACTIVATE IT BEFORE USING IT FOR THE FIRST TIME.

Insert the charging adapter pin (B) into the charging socket (F) on the appliance, then plug the charging adapter into a wall socket.

The charging light (G) blinks during recharge.

When the light is steady, the recharge is complete and the appliance will be ready for use.

The light (G) starts flashing slowly again when the battery is becoming discharged and the appliance turns off after a certain period of time. Recharge the battery as required following the instructions above.

## Notes about charging

THE APPLIANCE BODY MAY WARM UP DURING RECHARGE; THIS IS NORMAL.

DO NOT CHARGE THE APPLIANCE AT TEMPERATURES BELOW 5°C (40°F) OR ABOVE 40°C (105°F) AS THIS COULD DAMAGE THE BATTERIES.

IF THE APPLIANCE DOES NOT WORK, CHECK IT IS PROPERLY CONNECTED TO THE CHARGING ADAPTER (B), IT IS POWERED AND CORRECTLY CONNECTED.

If the operating time seems to be shorter after repeated use, it does not mean that the appliance is faulty. This problem can often be overcome by the following:

- Allow the appliance to continue running until the battery is fully discharged and it stops working.
- Recharge the appliance.
- Repeat this procedure several times.
- This should improve the battery capacity and the useful operational time of the appliance.

If the operating time remains short after carrying out this procedure, contact the Service Centre.



# Instruction for use

## Sprayer assembly

Pour the window detergent into the sprayer (L) and close it.

Attach the microfibre cloth (H) to the cloth holder (I) and secure it using the Velcro tabs (Fig. 1).


Insert the cloth holder on the upper end of the sprayer (L), above the cap with the handle, by pressing it slightly (Fig. 2).

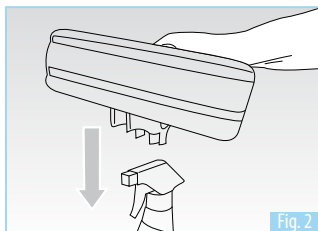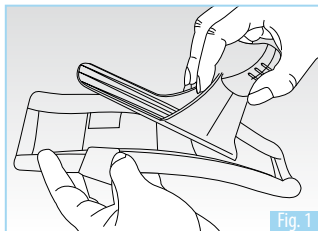

## Sprayer use

Press the lever on the sprayer handle (L) and evenly apply the detergent on the surface to be cleaned. Remove the dirt by wiping the glass with the microfibre cloth (H) - Fig. 3.

**WIPE IN A CIRCULAR MOTION TO COVER THE WHOLE SURFACE.**

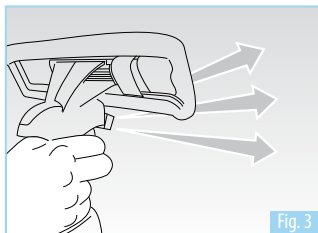



# Instruction for use

## Window cleaner use

Apply the squeegee (D) on the upper part of the appliance body (A), by pushing until it locks (Fig. 4).

Press the ON/OFF switch (E) to start the appliance and then vacuum up the dirty water by making circular movements from top to bottom on the surface to be cleaned (Fig. 5).

DO NOT MAKE CIRCULAR AND HORIZONTAL MOVEMENTS TO PREVENT THE LEAKAGE OF WATER FROM THE TANK.

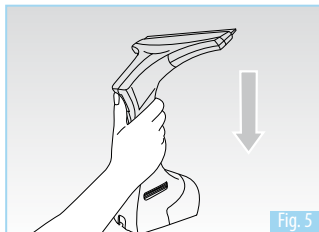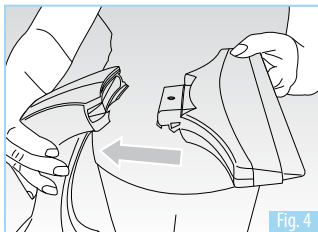

# Cleaning and maintenance

---

After use or when the dirty water in the tank (C) has reached the maximum level, switch the appliance off by pressing the switch (E) and remove the tank (C) - Fig. 6.



Empty the tank and rinse it thoroughly. Position the tank back in its housing on the appliance body (A).

Remove the squeegee (D) from the appliance body (A) by pressing the unlocking button (Fig. 7) and clean it under running water.

The microfibre cloth (H) can be washed in a washing machine up to 60°C without adding softener.

**DO NOT PUT THE WINDOW CLEANER IN THE DISHWASHER.**

**LET THE COMPONENTS DRY WELL BEFORE ASSEMBLING THEM AGAIN.**

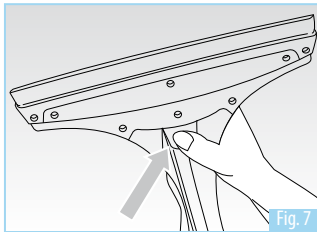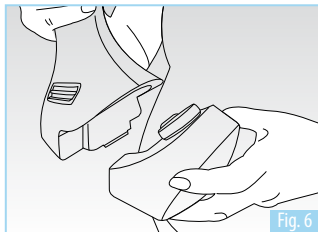

# Storing the appliance and disposal

## Storing the appliance

Store the appliance in a clean, dry place, out of reach of children.

## Disposal Packaging


The product is packaged using recyclable materials, which must be disposed of in the appropriate manner.

## Electronic equipment

Do not dispose of electronic equipment in normal household waste.

Compliant with EU directive 2002/96/EC, at the end of its useful life, the appliance must be disposed of in a suitable manner. This will make it possible to re-use recyclable material, limiting the impact on the environment.

Dispose of the appliance at a collection centre for electrical waste or a recycling centre. For more information, please contact your local disposal company or local authority.

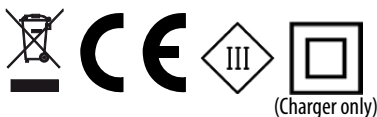

## Technical Specifications

Nominal Battery voltage : 3.7 V

Rated power of appliance : 10 W

Output voltage charger : 5.0V - 600mA

Input charger 100 – 240 V ~50/60 Hz; 0.3 A Maximum

Operating time with full charge : 20 - 30 mins (about)

Charging time for empty battery : max 5 hours

Type of protection : IPX4

Battery Type : Li-ion 2200 mAh



## HANDHELD WINDOW VAC CLEANER

Your details:

Name \_\_\_\_\_

Address \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_ \_\_\_\_\_ E mail \_\_\_\_\_

Date of purchase\* \_\_\_\_\_

\* We recommend you keep the receipt with this warranty card

Location of purchase \_\_\_\_\_






Description of malfunction:

Return your completed warranty card to:

GB  
Jaleno Europe Limited  
Roe Head House  
Far Common Road  
Mirfield  
West Yorkshire  
WF14 0DQ  
England  
HELPLINE 01924 481053

IRE  
Kenilworth Electrical  
Electrolux Complex  
Longmile road  
Dublin 12  
Telephone 014508703 / 014508705

## AFTER SALES SUPPORT

  01924 481053  
  014508703 / 014508705  [www.aldi.com](http://www.aldi.com)

MODEL: 4125, 01/2015, 63119

3

YEAR WARRANTY

