


KENWOOD

BL570 series BL580 series

instructions

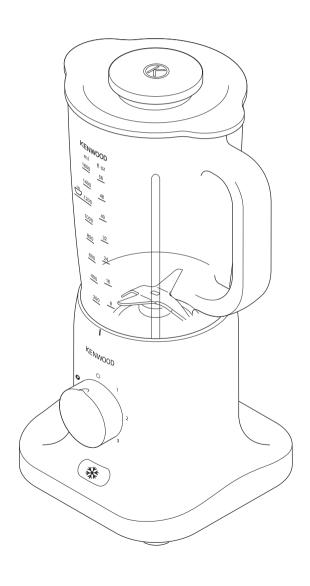

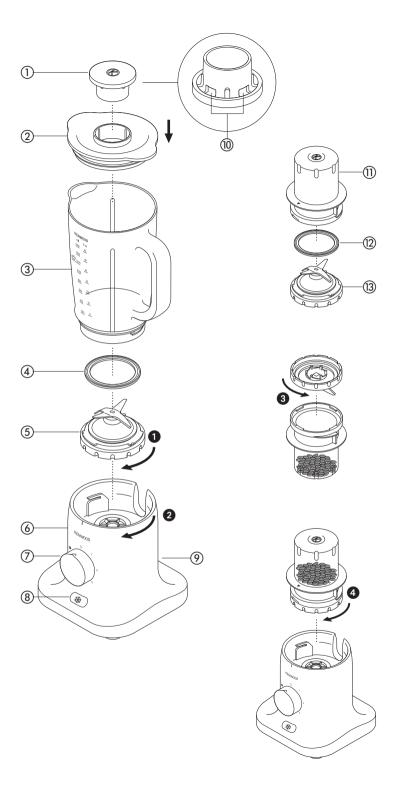

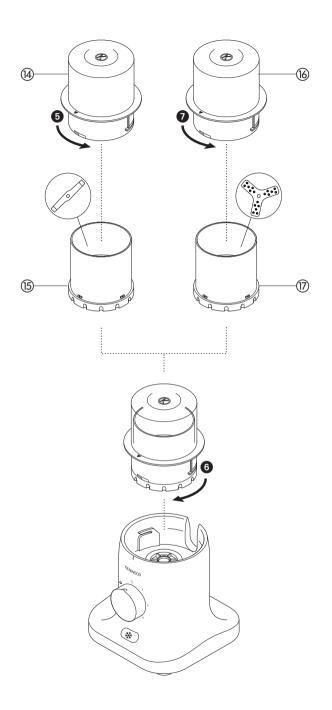

before using your Kenwood appliance

- Read these instructions carefully and retain for future reference.
- Remove all packaging and any labels.
- Wash the parts: see 'care and cleaning'.

safety

- Switch off and unplug:
 - o before fitting or removing parts;
 - o when not in use;
 - before cleaning.
- Never fit the blade unit to the power unit without the blender goblet or mill jar fitted.
- Always unplug the appliance before putting your hands or utensils in the goblet.
- Always take care when handling the blade assembly and avoid touching the cutting edge of the blades when cleaning.
- Only operate the blender with the lid and filler cap in place.
- Only use the goblet with the blade assembly supplied.
- Never let the power unit, cord or plug get wet.
- Never use a damaged appliance.
 Get it checked or repaired: see 'service and customer care'.
- Never use an unauthorised attachment.
- SCALD RISK: Hot ingredients should be allowed to cool to room temperature before blending.
- Never leave the appliance unattended when it is operating.
- When removing the blender or mill from the power unit:
 - wait until the blades have completely stopped;
 - don't accidentally unscrew the goblet or mill jar from the blade assembly.
- Never run the blender empty.
- Never blend more than the maximum capacity stated in the recommended speed chart.
- To ensure long life of your blender and mills, do not run for longer than 60 seconds.

- Smoothie recipes never blend frozen ingredients that have formed a solid mass during freezing, break it up before adding to the goblet.
- Don't use the blender as a storage container. Keep it empty before and after use.
- Always use the blender on a secure, dry level surface.
- Never place this appliance on or near a hot gas or electric burner or where it could touch a heated appliance.
- Important The skirt on the base of the goblet is fitted during manufacture and no attempt should be made to remove it.
- Misuse of your blender can result in injury.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use the appliance for its intended domestic use. Kenwood will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.

safety

555

IMPORTANT: HOT BLENDING INSTRUCTIONS

To minimise the possibility of scalding when blending hot ingredients keep hands and other exposed skin away from the lid to prevent possible burns. The following precautions must be observed:

- CAUTION: Blending very hot ingredients may result in hot liquid and steam being forced suddenly past the lid or filler cap ①.
- We recommend that hot ingredients are allowed to cool before blending.
- NEVER exceed 1200ml / 5 cups capacity if processing hot liquids, such as soups (refer to the markings on the goblet).
- ALWAYS commence blending at a low speed and gradually increase the speed. NEVER blend hot liquids by using the Pulse setting.
- Liquids which tend to foam such as milk, should be limited to a maximum capacity of 1000ml/4 cups.
- Take care when handling the blender as the goblet and its contents will be very hot.
- Take particular care when removing the lid. The lid is designed to be a tight
 fit to prevent leakage. If necessary protect your hands with a cloth or oven
 gloves when handling.
- Ensure the goblet is securely attached to the base and when removing from the appliance, guide the base and ensure it is removed together with the goblet.
- Ensure that the lid and filler cap are securely in place before every blending operation.
- Always ensure that the vents in the filler cap are clear before every blending operation (iii).
- When fitting the lid to the goblet always ensure that the lid and goblet rim are clean and dry to ensure a good seal and prevent spillage.

before plugging in

 Make sure your electricity supply is the same as the one shown on the underside of the appliance.

Important - UK only

 The wires in the cord are coloured as follows:

Blue = Neutral Brown = Live.

 The appliance must be protected by a 13A approved (BS1362) fuse.

Note:

 For non-rewireable plugs the fuse cover MUST be refitted when replacing the fuse. If the fuse cover is lost then the plug must not be used until a replacement can be obtained. The correct fuse cover is identified by colour and a

- replacement may be obtained from your Kenwood Authorised Repairer (see Service).
- If a non-rewireable plug is cut off it must be DESTROYED IMMEDIATELY. An electric shock hazard may arise if an unwanted non-rewireable plug is inadvertently inserted into a 13A socket outlet.
- This appliance conforms to EC directive 2004/108/EC on Electromagnetic Compatibility and EC regulation no. 1935/2004 of 27/10/2004 on materials intended for contact with food.

key

blender

- ① filler cap
- (2) lid
- goblet
- blender sealing ring
- (5) blender blade unit
- 6 power unit
- (7) speed + pulse control
- (8) ice crushing button
- g cord storage
- vents

multi mill (if supplied)

- (11) multi mill jar
- 12 mill sealing ring
- mill blade assembly

grinding mill (if supplied)

- (14) mill jar
- (5) grinding mill blade assembly
- grating mill (if supplied)
- 6 mill jar
- grating mill blade assembly

Note: The mill and goblet blade assemblies are a different size and are not interchangeable.

to use your blender

Use your blender for soups, drinks, pâtés, mayonnaise, breadcrumbs, biscuit crumbs, chopping nuts and crushing ice.

- 1 Fit the blender sealing ring (4) into the blender blade unit (5) - ensuring the seal is located correctly in the grooved area.
- Leaking will occur if the seal is damaged or incorrectly fitted.
- 2 Screw the blade assembly onto the goblet – ensuring the blade assembly is fully tightened 1. Refer to the graphics on the underside of the blade unit as follows:
 - unlocked position
 - locked position
- 3 Put your ingredients into the goblet.
- 4 Fit the filler cap to the lid and push down to secure.
- 5 Fit the lid by pushing down until secure.

- 6 Place the blender onto the power unit with the handle situated to the right hand side and lock by turning clockwise until you hear a "click" 2.
- The appliance won't work if the blender is incorrectly fitted.
- 7 Select a speed (refer to the recommended speed chart).

blender hints

- To blend dry ingredients cut into pieces, remove the filler cap, then with the machine running, drop the pieces down one by one. Keep your hand over the opening. For best results empty regularly.
- The processing of spices is not recommended as they may damage the plastic parts.
- When making mayonnaise, put all the ingredients, except the oil, into the blender. Remove the filler cap.
 Then, with the appliance running, add the oil slowly through the hole in the lid.
- Thick mixtures, e.g. pâtés and dips, may need scraping down. If the mixture is difficult to process, add more liquid.

to use your multi mill (if supplied)

Use your multi mill for milling herbs, nuts, coffee beans and purees.

- 1 Put your ingredients into the jar ①. Fill it no more than half full.
- 2 Fit the mill sealing ring (2) into the mill blade unit (3) - ensuring the seal is located correctly in the grooved area.
- Ensure that the seal is fitted correctly.
- 3 Turn the blade unit (3) upside down. Lower it into the jar, blades down (3). Turn anti-clockwise to lock.
- 4 Place the mill onto the power unit and lock by turning clockwise until you hear a "click" 4.
- 5 Select a speed or use the pulse control.

recommended speed chart						
speed	usage/food items	quantity max.	recommended operating time			
1 - 3	Frothing milk	1 litre	10 seconds			
	Light mixes e.g. batters and milkshakes	1 litre	30 seconds			
3	Cold liquids Drinks and cocktails Thicker mixes e.g. pâtés	1.6 litres	15-60 seconds			
	Mayonnaise	3 eggs + 450g oil	60 seconds			
	Smoothie drinks Place the fresh fruit and liquid ingredients in first (includes yoghurt, milk and fruit juices). Then add ice or frozen ingredients (includes frozen fruit, ice or ice cream)	800 mls liquid	30-60 seconds			
	Stock based soups	1.2 litre	- 30 seconds			
	Soups using milk	1 litre				
	We recommend that hot ingredients are allowed to cool before blending. However should you wish to process hot ingredients please read the Hot Blending Safety instructions.					
*	Ice crushing - operate in short bursts until crushed to the desired consistency.	6 cubes 125g	30 seconds			
(P) pulse	Operates the motor in a start/stop action. The pulse will operate for as long as it is held in position.					

to use your grinding mill

(if supplied)

Suitable for grinding spices, coffee beans and processing ginger, garlic and chillies.

- 1 Place your ingredients into the blade assembly (5).
- 2 Fit the jar (4) and turn anti-clockwise to lock (5).
- 3 Place the mill onto the power unit and lock by turning clockwise until you hear a "click" 6.
- 4 Select a speed or use the pulse (P) control.

to use your grating mill (if supplied)

ii supplicu)

- Suitable for grating parmesan cheese, nutmeg, coconut and dried fruit.
- 2 Fit the jar (6) and turn anti-clockwise to lock 7.
- 3 Place the mill onto the power unit and lock by turning clockwise until you hear a "click" 6.
- 4 Select a speed or use the pulse (P) control.

mill recommended speed chart							
ingredients	mill	max qty	speed	operating time			
Herbs - best chopped when clean and dry	Multi	15g	3	5 – 10 secs			
Nuts	Multi or Grinding	50g	3	10 - 15 secs			
Coffee Beans	Multi or Grinding	50g	3	30 secs			
Baby Foods & Purees	Multi	50g	3	30 secs			
Spices – such as black peppercorns, cardamom seeds, cumin seeds, coriander seeds, fennel seeds, whole cloves etc.	Grinding	50g	3	30 - 60 secs			
Chillies	Grinding	30g	3	10 secs			
Fresh Root Ginger	Grinding	30g	3	10 secs			
Garlic	Grinding	4 cloves	3	10 secs			
Parmesan Cheese – cut into 1cm cubes	Grating	60g	3	10secs			
Dried Fruit	Grating	50g	3	10 secs			
Coconut	Grating	50g	3	20 secs			
Nutmeg	Grating	2	3	40 secs			

hints

- For optimum performance when processing spices we recommend that you do not process more than 50g at a time in the mill.
- Whole spices retain their flavour for a much longer time than ground spices so it is best to grind a small quantity fresh at a time to retain the flavour.
- To release the maximum flavour and essential oils whole spices are best roasted prior to milling.

care and cleaning

- Always switch off, unplug and dismantle before cleaning.
- Empty the goblet before unscrewing it from the blade unit.
- Don't immerse the blade unit in water.
- The goblet can be washed in your dishwasher.

power unit

- Wipe with a damp cloth, then dry.
- Don't immerse the power unit in water.
- Store excess cord in the storage area at the back of the power unit (9).

blade assemblies blender and multi mill

 Remove the blade unit from the goblet or mill by turning to the unlock position to release.

grinding and grating mills

- Remove the blade unit from the jar by turning in a clockwise direction.
- 1 blender/multi mill: remove and wash the sealing ring.
- 2 Don't touch the sharp blades brush them clean using hot soapy water, then rinse thoroughly under the tap. Don't immerse the blade unit in water.
- 3 Leave to dry upside down.

other parts

Wash by hand, then dry.

service and customer care

 If the cord is damaged it must, for safety reasons, be replaced by KENWOOD or an authorised KENWOOD repairer.

UK

If you need help with:

- using your appliance or
- servicing, spare parts or repairs (in or out of quarantee)
- a call Kenwood customer care on 023 9239 2333. Have your model number (ie BL570) and date code (5 digit code ie 11H24) ready. They are on the underside of the power unit.
- spares and attachments call 0844 557 3653.
- other countries
 Contact the shop where you bought your appliance.
- Designed and engineered by Kenwood in the UK.
- Made in China.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

guarantee (uk only)

If your blender goes wrong within one year from the date you bought it, we will repair it (or replace it if necessary) free of charge provided:

- you have not misused, neglected or damaged it;
- it has not been modified (unless by Kenwood);
- it is not second-hand:
- it has not been used commercially;
- you have not fitted a plug incorrectly; and
- you supply your receipt to show when you bought it.

This guarantee does not affect your statutory rights.

carrot and coriander soup

25g butter 50g onion chopped 1 clove garlic crushed 640g carrot cut into 1½ cm cubes cold chicken stock 10-15ml (2-3tsp) ground coriander salt and pepper

- 1 Melt the butter in a pan, add the onion and garlic and fry until soft.
- 2 Place the carrot into the liquidiser, add the onion and garlic. Add sufficient stock to reach the 1.6 L level marked on the goblet. Fit the lid and filler cap.
- 3 Blend on maximum speed for 5 seconds for a coarse soup or longer for a finer result.
- 4 Transfer the mixture to a saucepan, add the coriander and seasoning and simmer the soup for 30 to 35 minutes or until cooked.
- 5 Adjust the seasoning as necessary and add extra liquid if required.



HEAD OFFICE: Kenwood Limited, 1-3 Kenwood Business Park, New Lane, Havant, Hampshire PO9 2NH kenwoodworld.com

