



safety

- Take special care when preparing food for babies, the elderly and infirm. Always ensure that the hand blender foot is thoroughly sterilised. Use a sterilising solution in accordance with the sterilising solution manufacturers instructions.
- Never touch the blades while the machine's plugged in.
- Keep fingers, hair, clothing and utensils away from moving parts.
- Unplug from the power supply when not in use.
- Never blend hot oil or fat.
- Never use a damaged hand blender. Get it checked or repaired: see 'service'.
- Never put the hand blender in water or let the cord or plug get wet - you could get an electric shock.
- Never let the cord touch hot surfaces or hang down where a child could grab it.
- Never use an unauthorised attachment.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use the appliance for its intended domestic use. Kenwood will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.

important

- With heavy mixtures, don't use your hand blender for longer than 50 seconds in any four minute period - it'll overheat.
- Your hand blender is not suitable for ice crushing.

before plugging in

- Make sure your electricity supply is the same as the one shown on the hand blender.

Important – UK only

- The wires in the cord are coloured as follows:
Blue = Neutral,
Brown = Live.
- The appliance must be protected by a 3A approved (BS1362) fuse.

Note:

- For non-rewireable plugs the fuse cover MUST be refitted when replacing the fuse. If the fuse cover is lost then the plug must not be used until a replacement can be obtained. The correct fuse cover is identified by colour and a replacement may be obtained from your Kenwood Authorised Repairer (see Service).
- If a non-rewireable plug is cut off it must be DESTROYED IMMEDIATELY. An electric shock hazard may arise if an unwanted non-rewireable plug is inadvertently inserted into a 13A socket outlet.
- This appliance conforms to EC directive 2004/108/EC on Electromagnetic Compatibility and EC regulation no. 1935/2004 of 27/10/2004 on materials intended for contact with food.

before using for the first time

- 1 Remove all packaging and throw away the blade covers.
- 2 Wash the blender foot and beaker : see 'cleaning'.

key

- ① blender foot
- ② blender body
- ③ on/off button
- ④ cord clip
- ⑤ beaker
- ⑥ hanging hook
- ⑦ wall mount

to use the hand blender

- You can blend baby food, soups, sauces, milk shakes and mayonnaise.

for beaker blending

- Don't fill the beaker above 500ml (17fl oz).

for saucepan blending

- Take the pan off the heat and let it cool slightly. Otherwise your hand blender could overheat.

- 1 Plug in. To avoid splashing, place the blade in the food before switching on.
- 2 Hold the beaker steady. Then press the on/off button.
- Move the blade through the food and use a stabbing action.
- If your blender gets blocked, unplug before clearing.
- 3 After use, unplug.

storage

- 1 Wrap the cord around the hand blender, then clip the end into the cord clip ①.
- 2 Either:
 - Clip the hanging hook over a kitchen rack, then attach the hand blender ②.

- Or secure the hanging hook to the wall. Remove the wall mount from the hanging hook and fix to the wall making sure that the rib is uppermost. Before drilling check for hidden gas, electricity and water services. Fit the hanging hook onto the wall mount then attach the hand blender ③.

cleaning

- Always switch off and unplug before cleaning.
- Don't touch the sharp blades.
- Never immerse in water or use abrasives.
- Take special care when preparing food for babies, the elderly and infirm. Always ensure that the hand blender shaft is thoroughly sterilised. Use a sterilising solution in accordance with the sterilising solution manufacturers instructions.
- Some foods, eg carrot, may discolour the plastic. Rubbing with a cloth dipped in vegetable oil helps remove discolouring.

blender body

- Wipe with a damp cloth, then dry.

blender foot

- either
- Wash the blades under running water, then dry thoroughly.
- or
- Part-fill the beaker with warm, soapy water. Then insert the blender foot and switch on.
- Unplug, then dry.

beaker

- Wash up, then dry. Or wash in a dishwasher.

service and customer care

- If the cord is damaged it must, for safety reasons, be replaced by Kenwood or an authorised Kenwood repairer.

UK

If you need help with:

- using your hand blender or
- servicing or repairs (in or out of guarantee)

☎ call Kenwood on **023 9239 2333** and ask for Customer Care. **Have your model number ready** - it's on the back of the hand blender.

● spares and attachments

☎ call 0844 557 3653.

other countries

- Contact the shop where you bought your hand blender.
- Designed and engineered by Kenwood in the UK.
- Made in China.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

guarantee - UK only

If your hand blender goes wrong within one year from the date you bought it, we will repair it (or replace it if necessary) free of charge provided:

- you have not misused, neglected or damaged it;
- it has not been modified (unless by Kenwood);
- it is not second-hand;
- it has not been used commercially;
- you have not fitted a plug incorrectly; and
- **you supply your receipt to show when you bought it.**

This guarantee does not affect your statutory rights.

KENWOOD



Head Office Address:
Kenwood Limited, New Lane, Havant, Hampshire PO9 2NH, UK
www.kenwoodworld.com
Designed and engineered by Kenwood in the UK
Made in China

10194/3

HB150 series