

KENWOOD

Microwave Oven MW485/ MW489 series

instruction


instruction

istruzioni

yönergeler

تعليمات

دستور العمل ها

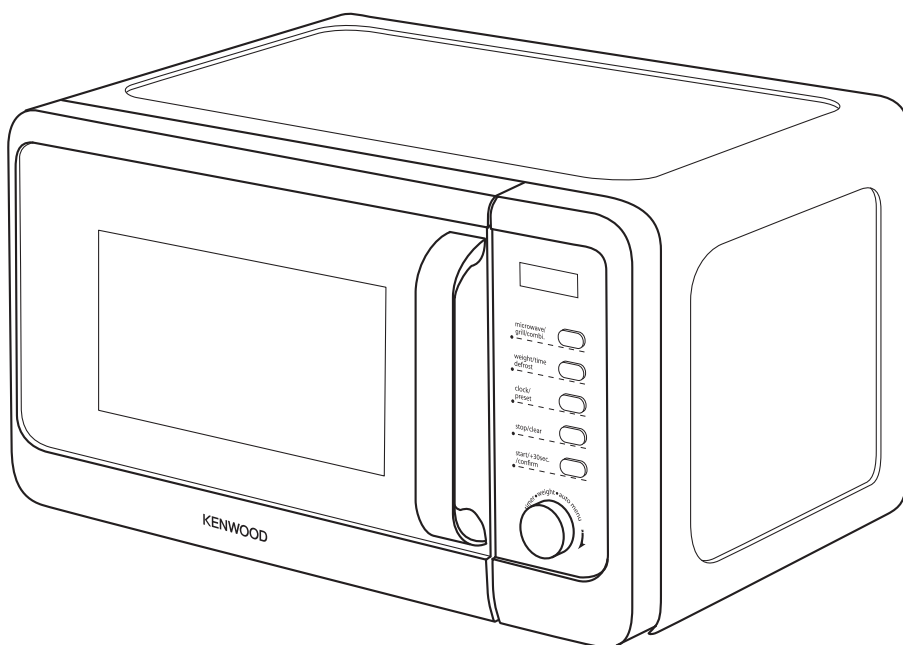

English	3 - 25
Français	26 - 49
Italiano	50 - 73
Türkçe	74 - 97
عربي	98 - 121
فارسی	122 - 145

ABOUT YOUR KENWOOD MICROWAVE OVEN

Your new Kenwood microwave oven has a 800 watt microwave and a 1000 watt grill which can be used with the microwave or separately. It has a 20 litre capacity, 5 microwave power levels, a grill-only function, 2 combination microwave+grill and 8 auto menu programmes. It can be used for defrosting, cooking and reheating.

For your safety and that of those around you, please take care to read the important Safeguards listed here.

IMPORTANT SAFEGUARDS

- 1 IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.**
- 2 DO NOT** under any circumstances use this appliance for anything other than its intended domestic purpose.
- 3 DO NOT** use this appliance if there is any visible sign of damage to the oven, supply cord or door seal or if it has been accidentally dropped.
- 4 DO NOT** immerse this appliance, the supply cord or the plug in water or any other liquid.
- 5 DO NOT** let the electrical supply cord hang over the edge of a work surface or allow it to touch hot surfaces such as a gas or electric hob.
- 6** This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- 7** Children should be supervised to ensure that they do not play with the appliance.
- 8 WARNING:** The appliance is not intended for use by young children or infirm persons without supervision. Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- 9 WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode. Eggs in their shells and whole hard-boiled eggs should not be heated in a microwave oven since they may explode even after microwave heating has ended.
- 10** To reduce the risk of fire in the oven space you should supervise the oven when in use especially when food is heated or cooked in disposable containers of plastic, paper or other combustible materials.
- 11** If smoke is observed, keep the oven door closed and switch off and disconnect the power supply. Leave well alone until the smoke has ceased.
- 12 DO NOT** operate the oven when it is empty as this could seriously damage the oven.
- 13 DO NOT** use the oven space for any type of storage.
- 14 DO NOT** cook foods such as egg yolks, potatoes, chicken livers etc, without first piercing several times with a fork.
- 15 DO NOT** cook foods directly on the glass tray. Place food in a suitable dish before placing in the oven.

IMPORTANT SAFEGUARDS

- 16 **DO NOT** use metal pans or dishes with metal handles. DO NOT use anything with a metal trim, or covered metal twist ties in the oven.
- 17 Only use utensils that are suitable for use in Microwave ovens.
- 18 Before use, check that the utensils are suitable for use in microwave ovens.
- 19 Always test the temperature of cooked food especially if you are heating or cooking foods or liquids for babies. Foods and liquids should be allowed to stand for a few minutes and stirred to distribute heat evenly. Remember to stir with a non-metal utensil to prevent the food or liquid suddenly bubbling over the container.
- 20 There are certain foods such as jam, mincemeat and Christmas pudding, which heat up very quickly, and care should be taken to check the temperature before consuming.
- 21 When heating or cooking certain foods with a high fat or sugar content do not use plastic containers.
- 22 If using a thermometer ensure it is a model specifically for use in microwave ovens.
- 23 **DO NOT** attempt to deep fry food in the microwave.
- 24 Please remember when microwaving liquids that although the container is not hot the liquid inside is, and will release steam or spit as in conventional cooking. Microwave heating of beverages can result in delayed eruptive boiling, therefore care shall be taken when handling the container.
- 25 **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
- 26 **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to microwave energy.
- 27 The oven should be cleaned regularly and any food deposits removed.
- 28 Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- 29 This microwave oven is not suitable for cabinets or built-in situations.
- 30 This microwave oven is not suitable for road vehicles, caravans, campers and other similar vehicles.
- 31 The rear surface of appliance shall be placed against a wall

before Plugging In

- Before switching on make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.
- The appliance must be earthed.

Note: This appliance conforms to EC directive 2004/108/EC on Electromagnetic Compatibility.

radio interference

Operation of the microwave oven can cause interference to your radio, TV or similar equipment.


If interference occurs, it can be reduced by taking the following measures:

- a) Clean the oven door and seals.
- b) Move the radio or television antenna.
- c) Relocate the oven away from the receiver.

before using for the first time

1. Remove all labels and any packaging from inside the oven. **Do not attempt to remove the Mica cover that is screwed to the oven cavity, as it is there to protect the magnetron.**
2. Check the oven for signs of damage, such as misaligned or damaged door, dents in the interior cavity or damaged seals. Do not use the oven if damaged.
3. Do not place anything on top of the oven.
4. To ensure adequate ventilation keep at least 7.5cm clear on each side and back of the oven and 30cm above the oven.
5. Fit the roller support and glass tray.

HOW TO USE YOUR MICROWAVE OVEN

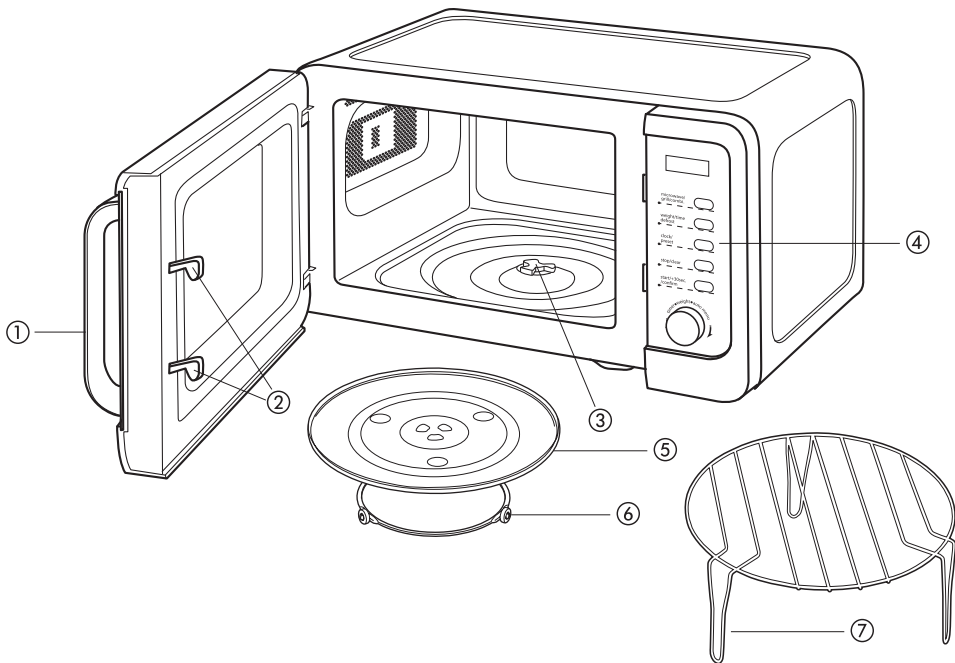


key

- | | | |
|---------------------------|-----------------|--------------|
| ① door handle | ④ control panel | ⑦ grill rack |
| ② door safety lock system | ⑤ glass tray | |
| ③ shaft | ⑥ roller ring | |

WARNING: Avoiding exposure to excessive microwave energy

- **DO NOT** attempt to operate the oven with the door open as this can result in harmful exposure to microwave energy.
- **DO NOT** tamper with the safety interlocks that keep the door closed.
- **DO NOT** operate the oven if it is damaged in any way. It is particularly important that the oven door is closed properly and that there is no damage to the:
 - i. Door (bent)
 - ii. Hinges and Latches (broken or loose)
 - iii. Door seals.
- The oven should not be adjusted or repaired by anyone other than properly qualified service personnel.

THE CONTROL PANEL

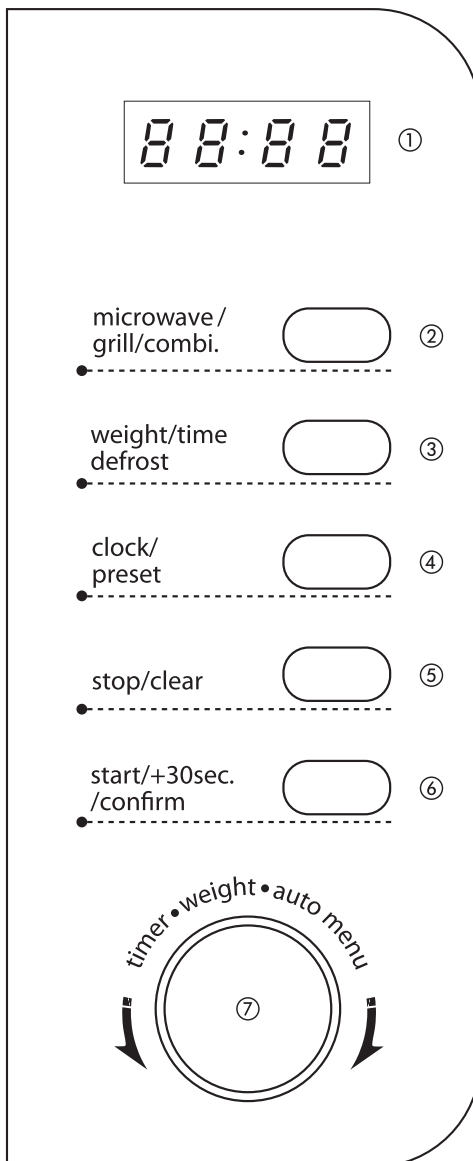

key

- ① display panel
- ② microwave/grill/combi button
- ③ weight/time defrost button
- ④ clock/preset button
- ⑤ stop/clear button
- ⑥ start/+30sec./confirm button
- ⑦ timer/weight/auto menu dial

(Please also see the following pages for more details).

SETTING THE CLOCK

- Switch on the power and a beep will sound.

You will see:

0:00

Note: this clock is a 24-hour clock so, for example, for 10 am you need to set to 10:00 and for 10 pm you need to set to 22:00.

Example setting: to set 10:15 am

- Press “clock/preset” and the hour figures flash ‘0’:00

0:00

- Turn the “timer/weight/auto menu” dial until the hour figure is set at 10:00

10:00

- Press “clock/preset” and the minute figures flash 10:‘00’

10:00

- Turn the “timer/weight/auto menu” dial until the minute figures are set at 10:15

10:15

- Press “clock/preset” and the clock is set.

Note that if the “stop/clear” button is pressed during the setting then the display goes back to 0:00.

COOKING

There are 5 microwave power levels and 3 grill power levels - 2 of these are with the microwave operating at the same time. The oven automatically cooks on high microwave power unless set otherwise.

Display	Microwave power level	Grill power
P 100	High 100%	—
P 80	Medium high 80%	—
P 50	Medium 50%	—
P 30	Medium low 30%	—
P 10	Low 10%	—
G	—	100%
G - 1	Medium 55%	45%
G - 2	Low 36%	64%


- **To set the cooking function** required press the “microwave/grill/combi” button, then turn the “timer/weight/auto menu” dial until the desired setting is reached. Then press “start/+30sec./confirm”.
- **To set the cooking time** turn the “timer/weight/auto menu” dial, Note that this can also be used to set the power level.

Example 1: to set for microwave only cooking at 80% power for 7 minutes 30 seconds cooking:

- Press the “microwave/grill/combi” button, then turn the “timer/weight/auto menu” dial until the display shows P80
Press “start/+30sec./confirm”



- Turn the “timer/weight/auto menu” dial until the display shows 7:30

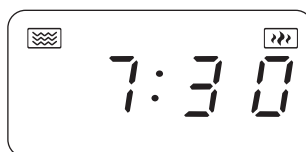

- Press “start/+30sec./confirm” to start cooking.

Note :

- The maximum cooking time which can be set is 95 minutes. The increases in setting of the time are:

From	0 - 1 minute	:	steps of 5 seconds
	1 - 5 minutes	:	steps of 10 seconds
	5 - 10 minutes	:	steps of 30 seconds
	10 - 30 minutes	:	steps of 1 minute
	30 - 95 minutes	:	steps of 5 minutes
- The maximum cooking time which can be set is 95 minutes.
- If you open the door at any point during cooking, this will pause the cooking programme. After closing the door, press “start/+30sec./confirm” to resume the cooking.
- To cancel the cooking at any time, press “stop/clear”.
- At the end of cooking the oven will beep 5 times and the display panel will show the current time.

Example 2: to cook with 64% Grill and 36% microwave for 5 minutes 30 seconds:

- Press the “microwave/grill/combi” button, turn the “timer/weight/auto menu” dial until the display will shows C - 2
Press “start/+30sec./confirm”

C - 2

- Turn the “timer/weight/auto menu” dial until the display shows 5:30

5:30

- Press “start/+30sec./confirm” to start cooking.

Note : When using the grill it is suggested that the food should be turned over at least once during the cooking so that it is grilled on both sides.

For grill settings, when the cooking time reaches half way, the oven will beep twice to remind you to turn the food over. After you have done this, press “start/+30sec./confirm” to recommence.

If there is no action, the oven will continue cooking.

QUICK START

The oven can be started cooking without having to programme a cooking time. Simply press the “start/+30sec./confirm” button and the oven will start cooking at full power for 30 seconds.

Press the “start/+30sec./confirm” button again for further increases of 1 minute.

Note :

- When programmed on microwave, pressing “start/+30sec./confirm” will increase the function time by 30 seconds for each press.
- When not in any programme function, cooking at 100% power can be started by just turning the “timer/weight/auto menu” dial left to set the cooking time and then pressing “start/+30sec./confirm”.

DEFROST BY WEIGHT

The oven defrosts by weight in increases of 100 gm.

Example : defrost 1.2 kg (1200 gm) of frozen food.

- Press “weight/time defrost”.

The display shows dEF1

The digital display shows the text "dEF1" in a stylized, segmented font. The "d" is lowercase, while "EF" and "1" are uppercase. The display is set against a dark background within a rounded rectangular frame.

- Turn the “timer/weight/auto menu” dial until the display show 1200.

The digital display shows the number "1200" in a stylized, segmented font. The digits are clearly defined and spaced out. The display is set against a dark background within a rounded rectangular frame.

- Press “start/+30sec./confirm”. The oven starts defrosting, counting down from the time it has determined is need.
- When defrosting food in plastic non microwaveable containers, only defrost until the food can be removed from the containers and placed in a microwave safe dish to complete the defrosting.

DEFROST BY TIME

Example : defrost for 3 minutes.

- Press “weight/time defrost” twice.
The display shows dEF2

A digital display showing the text "dEF2" in a stylized, segmented font. The display is enclosed in a rounded rectangular frame.

- Turn the “timer/weight/auto menu” dial until the display shows the desire time 3:00

A digital display showing the time "3:00" in a stylized, segmented font. The display is enclosed in a rounded rectangular frame.

- Press “start/+30sec./confirm” The oven starts defrosting. To cancel at any time press “stop/clear”

Note :

- The time defrosting power level is set permanently at 30%

AUTO MENU COOKING

The oven has an auto menu which helps you to quickly programme to cook weights or quantities of 7 different types of foods. These menus are obtained just by turning the “time/weight/auto menu” dial right until the desired menu is displayed as shown here:

Menu	Display	Cook
1	<i>A - 1</i>	Reheat
2	<i>A - 2</i>	Vegetable
3	<i>A - 3</i>	Fish
4	<i>A - 4</i>	Meat
5	<i>A - 5</i>	Pasta
6	<i>A - 6</i>	Potato
7	<i>A - 7</i>	Pizza
8	<i>A - 8</i>	Soup

AUTO MENU COOKING - CONTROL

- Set the menu as per previous page, then press “start/+30sec./confirm”
- Turn rge dial until the desired weight for the menu is shown. Each menu has 2 or 3 weight options as below.
- Press “start/+30sec./confirm” to start cooking

Menu	Weight options (gm)	Display	Power
A-1 Reheat	200	2 0 0	100%
	400	4 0 0	
	600	6 0 0	
A-2 Vegetable	200	2 0 0	100%
	300	3 0 0	
	400	4 0 0	
A-3 Fish	250	2 5 0	80%
	350	3 5 0	
	450	4 5 0	
A-4 Meat	250	2 5 0	100%
	350	3 5 0	
	450	4 5 0	
A-5 Pasta	50 (with water 450 ml)	5 0	80%
	100 (with water 800 ml)	1 0 0	

AUTO MENU COOKING - CONTROL

Menu	Weight options (gm)	Display	Power
A-6 Potato	200	2 0 0	100%
	400	4 0 0	
	600	6 0 0	
A-7 Pizza	200	2 0 0	100%
	400	4 0 0	
A-8 Soup	200	2 0 0	80%
	400	4 0 0	

Example : to cook 350 gm of fish.

- Turn the “timer/weight/auto menu” dial right until the display shows A-3 then press “start/+30sec./confirm”

A digital display showing the text "A - 3" in a stylized, segmented font. The display is enclosed in a rounded rectangular frame.

- Turn the “timer/weight/auto menu” dial to select the weight of the fish, the display shows 350

A digital display showing the number "350" in a stylized, segmented font. The display is enclosed in a rounded rectangular frame.

- Press “start/+30sec./confirm” to start cooking.

MULTI-STAGE COOKING

The oven can be set for two stages of cooking. In multi-stage cooking if defrosting is needed, then defrosting must be set as the first operation.

Example : If you want to defrost food for 5 minutes and then cook with 80% microwave power for 7 minutes, operate it as the following:

- Press “ weight/time defrost ” twice, and the oven will display “dEF2”

The digital display shows the text "dEF2" in a stylized, segmented font, indicating the defrost mode is active.

- Turn the “timer/weight/auto menu” dial to select the defrost time till 5:00

The digital display shows the time "5:00" in a stylized, segmented font, indicating the defrost duration.

- Press “microwave” once, the screen display P100

The digital display shows the text "P100" in a stylized, segmented font, indicating the microwave power level.

- Press “microwave” once again or turn “timer/weight/auto menu” dial to choose 80% microwave power. Press “start/+30sec./confirm” to confirm, and the screen displays P80.

The digital display shows the text "P80" in a stylized, segmented font, indicating the microwave power level is set to 80%.

- Turn “timer/weight/auto menu” to adjust the cooking time till the oven displays 7:00

A digital display showing the time 7:00 in a seven-segment font. The display is located within a rounded rectangular frame that represents the oven's control panel.

- Press “start/+30sec./confirm” to start cooking. The buzzer will sound once to indicate that the defrosting is underway and the display will count down the 5 minutes. When defrosting is complete the buzzer will sound again to indicate that cooking has started and the display will count down the 7 minutes. When all cooking is complete the buzzer will sound five times.

DELAY START

The oven can be programmed to start at a future time. First, make sure the clock is set at the correct time.

Note: Defrosting should not be set to start at a delayed time.

Example : set the oven to start cooking a 400gm Potato at 6:30pm (18:30)

- Turn the dial in the waiting state
- The display will show A - 1

A digital display showing the text "A - 1" in a stylized font.

- Turn the "timer/weight/auto menu" dial until the display shows A - 2

A digital display showing the text "A - 2" in a stylized font.

- Press the "start/+30sec./confirm" button
- Turn the "timer/weight/auto menu" dial to select the weight of the Potato, the display shows 400

A digital display showing the number "400" in a stylized font.

- Press "clock/preset" and the current hour figures flash 'XX':XX
- Turn the "timer/weight/auto menu" dial until the hour figure is set at 18:XX. Press "clock/preset"

A digital display showing the time "18:00" in a stylized font.

- Turn the "timer/weight/auto menu" dial until the minute figure are set at 18:30

A digital display showing the time "18:30" in a stylized font.

- Press "start/+30sec./confirm" to complete delay start setting and the clock displays the present time.

Note : The future time must be within 00:00 to 23:59

If in the process of setting the “Stop/clear” button is accidentally pressed, then the setting will be cancelled.

The clock must be operating to be able to programme a future time.

If the pre-set cooking has not been programmed, then setting the future time acts only as an alarm clock. When the time is reached 5 beeps will sound.

INQUIRY FUNCTION

- To check the microwave power level during cooking, press the “microwave” button and the level will be displayed for 3 seconds.
- During cooking; if the “clock/preset” button is pressed, the present time will be shown.
- To check the future time which has been programmed for delayed start cooking, press “clock/preset”. The preset time will flash for 3 seconds, then the display will return to the normal clock time.

FAN OPERATES AFTER LENGTHY COOKING

After cooking of 5 minutes or more, when the cooking stops the fan will continue to run for 15 seconds to help cool the microwave.

SAFETY LOCK / CHILD LOCK

The oven has a safety lock which prevents the oven being operated

- To lock the oven, press “stop/clear” for 3 seconds. There will be a long beep to signal it is locked and the display will show.



- To unlock the oven, press “stop/clear” for 3 seconds. There will be a long beep to signal it is unlocked. The display will return to normal.

OVEN LIGHT AND OVEN DOOR

If the oven door is kept open without any operation, the oven light will remain on all the time.

COOKING END

At the end of cooking, there are 5 beeps as a reminder that cooking is complete.

CARE AND CLEANING

- ❶ Turn the oven off and remove the plug from the socket before cleaning.
- ❷ Keep the inside of the oven clean by wiping with a damp cloth. If the oven is heavily soiled a mild detergent solution may be used. Do not use harsh or aggressive detergents as this damages the oven. Do not use a knife or any other form of scraper to remove food residues from this oven.
- ❸ The outside of the oven can be cleaned with a warm damp cloth.
- ❹ Keep the control panel free from too much moisture. Clean it with a soft damp cloth only and do not use detergents or abrasives.
- ❺ If condensation accumulates inside or around the outside of the oven door, wipe it clean with a damp cloth. Condensation is quite normal and forms when moisture is present during cooking.
- ❻ Ensure the door seals and adjacent parts are kept clean by wiping with a damp cloth. If the door seals or adjacent parts become dirty wash with warm soapy water; then rinse & dry. If the door seal is damaged in any way the oven must not be used until it has been repaired by a Kenwood Authorised Repairer.
- ❼ It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm soapy water, then rinse and dry thoroughly.
- ❽ The roller ring and bottom surface of the oven should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven using a mild detergent and dry thoroughly with a soft cloth. The roller ring may be washed in mild soapy water, rinsed and dried thoroughly. Be sure to replace the roller ring in the correct position.
- ❾ Remove odours from your oven by combining a cup of water with the juice and rind of a lemon in a deep microwaveable bowl. Microwave for 1 1/2 minutes and then wipe the inside of the oven with a drip cloth.
- ❿ Inspect the oven regularly for signs of corrosion - particularly around the door. If you find any signs of corrosion, arrange for the appliance to be serviced.
- ⓫ For safety reasons the oven light should only be replaced by a Kenwood Authorised Repairer.

SERVICE

If the oven or supply cord are damaged in any way, or it is necessary to replace the oven light, or repair the oven, the work must, for safety reasons, be carried out by Kenwood or a Kenwood Authorised Repairer.

Before you call for assistance please check the following:

- ❶ If the oven will not work at all and the display does not appear, or disappears - check that the oven is plugged in and switched on. If it is, switch it off and check that the fuse in the plug or fuseboard is OK. If necessary try the appliance in a different socket.
- ❷ If the microwave will not function, check to see that the timer is set. Also check that the door is properly shut so that the safety interlocks are fully engaged. If they are not, the oven will not work.
- ❸ Check to see that the child-proof lock is not on the display. If it is, switch it off.

If none of the above actions rectify the situation, contact:

The shop where you bought the microwave - they will advise you.

SPECIFICATION

MWO Power Consumption:	230V ~50Hz, 1,270W
MWO Output:	800W
Grill Output:	1000W
Oven Dimensions:	453mm (L) x 358mm (W) x 258mm (H)
Oven Capacity:	20 Litres
Cooking Uniformity:	Turntable (245mm)
Net Weight:	Approx. 10.5 kg



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2009/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.