



HEAD OFFICE: Kenwood Limited, 1-3 Kenwood Business Park, New Lane, Havant, Hampshire PO9 2NH

kenwoodworld.com


KENWOOD
CREATE MORE

 
41181/1

KENWOOD

Microwave Oven MWT101 series

instructions
instrucciones

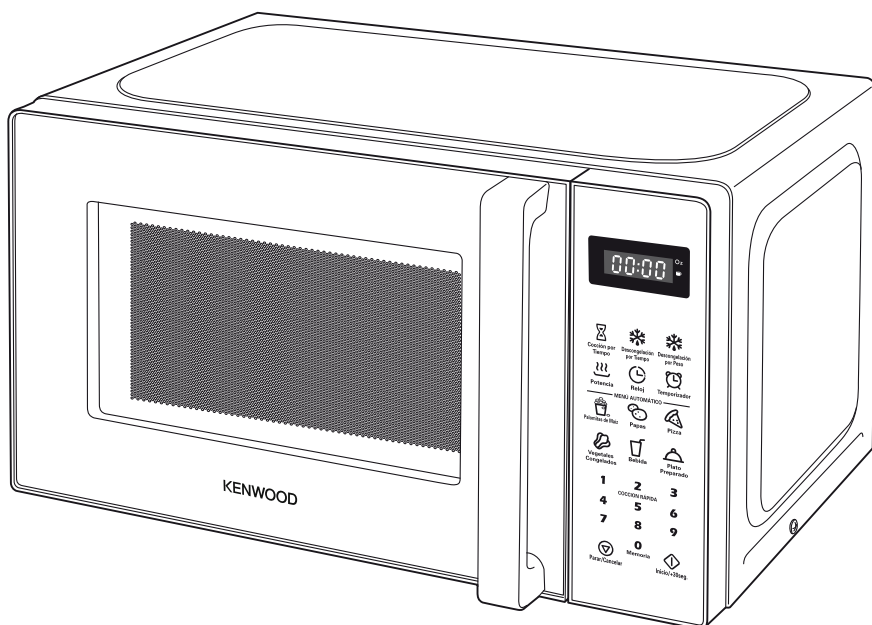



English

2 - 14

Español

15 - 27



- Your new Kenwood microwave oven has a 20 litre capacity a 700watt microwave which has 11 pre-programmed microwave power levels. It has 6 auto menu programmes and can defrost by time or by weight. It can be for defrosting, cooking and reheating.

before using your Kenwood appliance

- Remove all labels and any packaging from inside the oven. **Do not attempt to remove the Mica cover that is screwed to the oven cavity, as it is there to protect the magnetron.**
- Check the oven for signs of damage, such as misaligned or damage to the door, dents in the interior cavity or damaged seals. Do not use the oven if damaged.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and/or personal injury including the following:

• READ ALL INSTRUCTIONS.

- **DO NOT** under any circumstances use this appliance for anything other its intended domestic purpose.
- **DO NOT** use this appliance if there is any visible sign of damage to the oven, supply cord or door seal or if it has been accidentally dropped.
- **DO NOT** let the electrical supply cord hang over the edge of a work surface or allow it to touch hot surface such as a gas or electric hob.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Children should be supervised to ensure that they do not play with the appliance.
- **WARNING:** The appliance is not intended for use by young children or infirm persons without supervision. Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

- **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode. Eggs in their shells and whole hard-boiled eggs should not be heated in a microwave oven since they may explode even after microwave heating has ended.
- To reduce the risk of fire in the oven space you should supervise the oven when in use especially when food is heated or cooked in disposable containers of plastic, paper or other combustible materials.
- If smoke is observed, keep the oven door closed and switch off and disconnect the power supply. Leave well alone until the smoke has ceased.
- **DO NOT** operate the oven when it is empty as this could seriously damage the oven.
- **DO NOT** use the oven space for any type of storage.
- **DO NOT** cook foods such as egg yolks, potatoes, chicken livers etc, without first piercing several times with a fork.
- **DO NOT** cook foods directly on the glass tray. Place food in a suitable dish before placing in the oven.
- **DO NOT** use metal pans or dishes with metal handles. DO NOT use anything with a metal trim, or covered metal twist ties in the oven.
- Only use utensils that are suitable for use in Microwave ovens.
- Before use, check that the utensils are suitable for use in microwave ovens.
- Always test the temperature of cooked food especially if you are heating or cooking foods or liquids for babies. Foods and liquids should be allowed to stand for a few minutes and stirred to distribute heat evenly. Remember to stir with a non-metal utensil to prevent the food or liquid suddenly bubbling over the container.
- There are certain foods such as jam, mincemeat and Christmas pudding, which heat up very quickly, and care should be taken to check the temperature before consuming.
- When heating or cooking certain foods with high fat or suger content do not use plastic containers.
- If using a thermometer ensure it is a model specifically for use in microwave ovens.
- **DO NOT** attempt to deep fry food in the microwave.

- Please remember when microwaving liquid that although the container is not hot the liquid inside is, and release steam or spit as in conventional cooking. Microwave heating of beverages can result in delayed eruptive boiling, therefore care shall be taken when handling the container.
- **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
- **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to microwave energy.
- The oven should be cleaned regularly and any food deposits removed.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- This microwave oven is not suitable for cabinets or built-in situations.
- This microwave oven is not suitable for road vehicles, caravans, campers and other similar vehicles.
- The rear surface of the appliance should be placed against a wall.

before using for the first time

- 1 Do not place anything on the top of the oven.
- 2 The rear surface of the appliance should be placed against a wall. Leave a minimum clearance of 30cm above the oven and a minimum clearance of 20cm is required between the oven and adjacent wall.
- 3 Fit the roller support and glass tray.

SAVE THESE INSTRUCTIONS

For Household use only

before plugging in


- Before switching on make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.
- **This oven must be earthed / grounded. Connect only to properly earthed / grounded power outlet.**

radio interference

Operation of the microwave oven can cause interference to your radio, TV or similar equipment. If interference occurs, it can be reduced by taking the following measures:

- Clean the oven door and seals.
- Move the radio or television antenna.
- Relocate the oven away from the receiver.

how to use your microwave oven

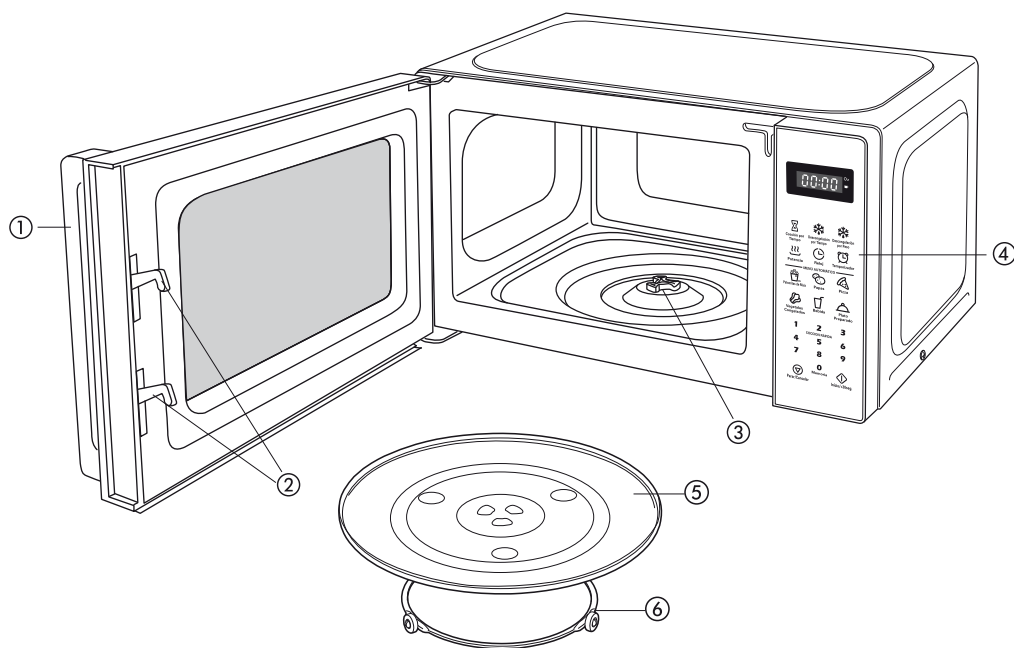

key

- ① door handle
- ② door safety lock system
- ③ shaft
- ④ control panel
- ⑤ glass tray
- ⑥ roller ring
- ⑦ grill rack

WARNING: Avoiding exposure to excessive microwave energy



- **DO NOT** attempt to operate the oven with the door open as this can result in harmful exposure to microwave energy.
- **DO NOT** tamper with the safety interlocks that keep the door closed.
- **DO NOT** operate the oven if it is damaged in any way. It is particularly important that the oven door is closed properly and there is no damage to the:
 - i. Door (bent)
 - ii. Hinges and Latches (broken or loose)
 - iii. Door seals.
- The oven should not be adjusted or repaired by anyone other than properly qualified service personnel.

the control panel

key

- | | |
|--------------------------------|-----------------------------|
| ① display panel | ⑧ stop/cancel button |
| ② time defrost button | ⑨ weight defrost button |
| ③ time cook button | ⑩ kitchen timer button |
| ④ power button | ⑪ clock button |
| ⑤ auto menu buttons | ⑫ 0/memory button |
| ⑥ numbers/express cook buttons | ⑬ start/ +30 seconds button |
| ⑦ number button 7,8 and 9 | |

(Please also see the following pages for more details).

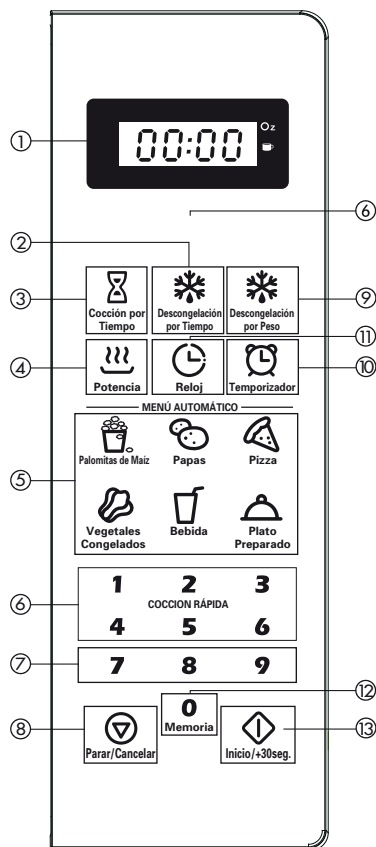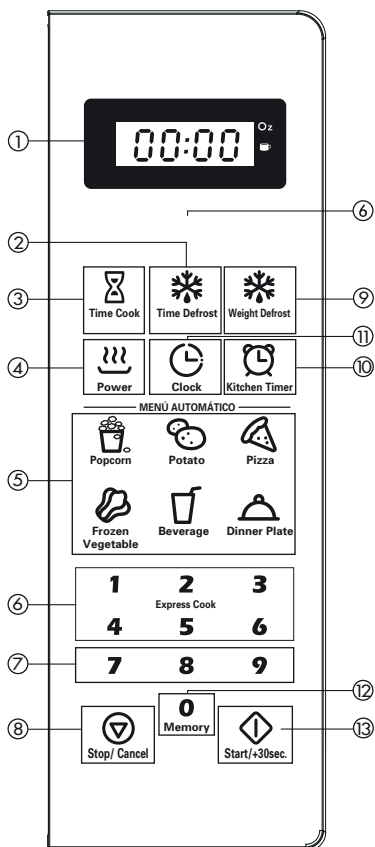

setting the clock

- Switch on the supply and a beep will sound.

You will see:

0:00

Note: this is a 12-hour clock so both 10 am and 10 pm are set as 10:00

Example setting: to set 10:15 am

- Press "Reloj", LED will display 00:00.
The first "0" flashes

Press the number button "1" "0" "1" "5"

10: 15

- Press "Reloj" and the clock is set.
Note that if the "Parar/Cancelar" button is pressed during the setting, or if there is a delay during setting or more than 1 minute then the display goes back to 0:00.

kitchen timer

The clock function can be used as a timer for other activities in the kitchen, but note:

- This is only as a timer for other activities, it is not linked to any cooking function or menu of the microwave oven.
- The maximum time which can be set is 99 minutes and 99 seconds
- While the timer function is being used, the oven cannot be used for other cooking functions

Example setting: set to operate in 45 minutes:

- Press "Temporizador", the clock will show "00:00" and the first figure will flash

You will see:

00:00

- Press the number buttons "4" "5" "0" "0"

45:00

- Press "Inicio/+30seg." to confirm, it will count down the time remaining.
- After 45 minutes the buzzer will sound to advise that the 45 minutes period is finished.

microwave cooking

There are 11 power levels. The oven automatically cooks on high power unless set otherwise.

- To set power level required press the "Potencia" for times as below.

press	power level	display	application
10	High 100%	PL 10	Reheat, heat, water, cook vegetable and chicken
9	90%	PL 9	Cook rice, fish, sea food, cookies and meats
8	80%	PL 8	
7	70%	PL 7	
6	60%	PL 6	Heat milk, cake and cook stews
5	50%	PL 5	
4	40%	PL 4	
3	30%	PL 3	Defrost, keep warm, soften ice cream
2	20%	PL 2	
1	10%	PL 1	
0	0%	PL 0	

Example setting: to cook at 60% microwave power for 12 minutes 30 seconds:

- Press "Cocción por Tiempo" once: the display shows "00:00"
- Press number buttons "1" "2" "3" "0"

The display will show "12:30"

- Press "Potencia" once, then press number button "6" to select 60% power level.
The display shows "PL6"

PL 6

- Press "Inicio/+30seg." and cooking will start.

12:29

Note:

- During cooking the power level can be amended; press "Potencia", the set power will light, press the number button of the desired new power level, the cooking will continue at the new power level for remaining time.
- Maximum cooking time which can be set is 99 minutes 99 seconds.
- If the "Parar/Cancelar" button is pushed once or the door is opened at any time during cooking; the cooking will pause. Once the door is closed, press "Inicio/+30seg." and cooking will restart.
- If the cooking is not started within 1 minute; or if the "Parar/Cancelar" button is pressed twice, the cooking will be cancelled.
- If the zero power level is chosen - "PL0" - the oven will operate with fan but no power. This operation can be used to remove odour from the oven.

speedy cooking

There are several ways the oven can be started cooking at full power without having to programme a cookin time.

1. To cook at 100% power for 1 to 6 minutes, just press the number for the desired number of minutes 1-6, and cooking will commence.

Example: to cook for 3 minutes at 100% power

- Press number button "3", the display will show

3:00

and cooking will commence.

- Press the "Inicio/+30seg." button again for increases of cooking time of 30 seconds per press.
2. Simply press "Inicio/+30seg." button and the oven will start cooking at full power for 30 seconds.

Press the "Inicio/+30seg." button again for increases of cooking time of 30 seconds per press.

Note:

During microwave only cooking and time defrosting, the cooking/defrosting period can be increased by pressing the "Inicio/+30seg." button again for increases of 30 seconds per press.

defrost by weight

Weight range for defrosting by weight is 4 to 100oz.

Example: defrost 50oz of frozen food.

- Press "Descongelación por Peso".
The display shows 'dEF1'

dEF1

- Key in the weight to be defrosted in ounces - press the numbers "5" "0"
- Press "Inicio/+30seg." then oven starts defrosting, counting down from the time it has determined is needed.
- When defrosting food in plastic non microwaveable containers, only defrost until the food can be removed from the containers and placed in a microwave safe dish to complete the defrosting.

defrost by time

- Press "Descongelación por Tiempo",
display will show 'dEF2'

dEF2

- Press the number buttons to set the defrosting time.
- The time defrost will run at power level 3. If this needs to be altered, press "Potencia" and then the number button to change the power level required.
- Press "Inicio/+30seg." defrosting will start and the display will count down the remaining time.

multi-stage cooking

Two stages can be set for cooking; if defrosting is required then that needs to be the first stage.

Example: defrost for 5 minutes; then cook at 80% power for 4 minutes

- Press "Descongelación por Tiempo" once, display shows 'dEF2'

dEF2

- Press the number buttons "5" "0" "0"
- Press "Cocción por Tiempo" and then press "4" "0" "0"
- Press "Potencia" once, then press "8" to select 80% level
- Press "Inicio/+30seg." and cooking starts, and buzzer will sound once for the first section, defrosting time counts down; buzzer will sound once again entering the second cooking. When cooking finish, buzzer sounds five times.

auto menu cooking

The oven has an auto menu which helps you to quickly programme to cook weights or quantities of 6 different types of foods, these menus are obtained just by pressing the number buttons as below:

The auto menu procedure is:

menu	food weight	press times	display
Popcorn (Palomitas de Maíz)	1.75oz	once	88:75
	3.0oz	twice	88:00
	3.5oz	3 times	88:50
Potato (Papas)	1 (approx.8.0oz)	once	88:88
	2 (approx.1lb)	twice	88:88
	3 (approx.1lb 8.0oz)	3 times	88:88
Frozen vegetable (Vegetales Congelados)	4.0oz	once	88:00
	8.0oz	twice	88:00
	16.0oz	3 times	88:00
Beverage (Bebida)	1 (approx.120ml)	once	88:88
	2 (approx.240ml)	twice	88:88
	3 (approx.360ml)	3 times	88:88

The auto menu procedure is:

menu	food weight	press times	display
Ready Meal (Plato Preparado)	9.0oz	once	8 9.0
	12.0oz	twice	12.0
	18.0oz	3 times	18.0
Pizza (Pizza)	4.0oz	once	8 4.0
	8.0oz	twice	8 8.0
	14.0oz	3 times	14.0

Example: to cook 3.5oz of popcorn:

Press "Palomitas de Maíz" three times to select cooking of 3.5oz, display shows "3.5"

Press "Inicio/+30seg." a beep sounds and cooking

- commences and the display shows the remaining time.

3:5

- At end of cooking a beep sounds 5 times.

memory function

The oven can remember 3 cooking programmes for you.

- Press "0/Memoria" to choose which memory/programme. Press once, twice or three times for the display to show memory "1" "2" or "3"
- If you have already stored your programme in selected memory, just press "Inicio/+30seg." and the cooking will start.
- If you want to store a programme, set it as in the "multi-stage cooking" section, then press "Inicio/+30seg." once to save the programme. If "Inicio/+30seg." is pressed again, cooking will start; otherwise the oven will return to stand-by.

Example: to set as the second memory, a programme to cook food with 80% microwave power for 3 minutes and 20 seconds.

- Press "0/Memoria" twice, wait until the screen displays "2"
- Press "Cocción por Tiempo" once, then press number buttons "3", "2", "0"



- Press "Potencia" once and the display will show "PL10" then press number button "8" and the display will show "PL8"



- Press "Inicio/+30seg." to save the programme. The buzzer sounds and the oven returns to stand-by.

Then to cook with the saved programme, just press "0/memoria" twice, the display shows "2", then press "Inicio/+30seg." and cooking starts

If there is a power failure - stored programme will need to be re-stored.

inquiry function

- To check the current time during cooking, press the "Reloj" button and the current timer will be displayed for 3 seconds.
- During microwave and multi-stage cooking, Press "Potencia" and the microwave power level will be displayed for 3 seconds.

safety lock/ child lock

The oven has a safety lock which prevents the oven being operated

- To lock the oven, press "Parar/Cancelar" for 3 seconds, there will be a beep to signal it is locked and the display will show.



- To unlock the oven, press "Parar/Cancelar" for 3 seconds, there will be a beep to signal it is unlocked.

cooking end

At the end of cooking, there are 5 beeps as a remainder that cooking is complete.

care and cleaning

- Turn the oven off and remove the plug from the socket before cleaning.
- Keep the inside of the oven clean by wiping with a damp cloth. If the oven is heavily soiled a mild detergent solution may be used. Do not use harsh or aggressive detergents as this will damage the oven. Do not use a knife or any other form of scraper to remove food residues from this oven.
- The outside of the oven can be cleaned with a soft damp cloth. Dry thoroughly.
- Keep the control panel free from too much moisture. Clean it with a soft damp cloth only and do not use detergents or abrasives. Dry thoroughly.
- If condensation accumulates inside or around the outside of the oven door, wipe it clean with a damp cloth and dry thoroughly. Condensation is quite normal and forms when moisture is present during cooking.
- Ensure the door seals and adjacent parts are kept clean by wiping with a damp cloth. If the door seals or adjacent parts become dirty wash with warm soapy water; then rinse & dry. If the door seal is damaged in any way the oven must not be used until it has been repaired by a Kenwood Authorised Repairer.
- It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm soapy water, then rinse and dry thoroughly.
- The roller ring and base of the oven should be cleaned regularly to avoid excessive noise. Simply wipe the base of the oven using a mild detergent and dry thoroughly with a soft cloth. The roller ring may be washed in mild soapy water, rinsed and dried thoroughly. Be sure to replace the roller ring in the correct position.
- Remove odours from your oven by combining a cup of water with the juice and rind of a lemon in a deep microwaveable bowl. Microwave for 1½ minutes and then wipe the inside of the oven with a dry cloth.
- Inspect the oven regularly for signs of corrosion - particularly around the door. If you find any signs of corrosion, arrange for the appliance to be serviced.
- For safety reasons the oven light should only be replaced by a Kenwood Authorised Repairer.

service

If the oven or supply cord are damaged in any way, or it is necessary to replace the oven light, or repair the oven, the work must, for safety reasons, be carried out by Kenwood or a Kenwood Authorised Repairer.

before you call for assistance please check the following:

- If the oven will not work at all and the display does not appear, or disappears - check that the oven is plugged in and switched on. If it is, switch it off and check that the fuse in the plug or fuseboard is OK. If necessary try the appliance in a different socket.
- If the microwave will not function, check to see whether the timer is set. Also check that the door is properly shut so that the safety interlocks are fully engaged. If they are not, the oven will not work.
- Check to see that the child-proof lock is not on the display. If it is, switch it off.

If none of the above actions rectify the situation, contact:

The shop where you bought the microwave - they will advise you.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

specification

MWO Power Consumption:	120V ~60Hz, 1050W
MWO Output:	700W
Oven Dimensions:	485mm(L) x 370mm(W) x 296mm(H)
Oven Capacity:	20 litre
Cooking Uniformity:	Turntable (255mm)
Net Weight:	Approx. 12.78kg