

DE'LONGHI

COOKING

**INSTALLATION and SERVICE INSTRUCTIONS
USE and CARE INSTRUCTIONS**

DEGMATIK90

BUILT-IN GAS ON GLASS COOKING HOBS

distributed by
DeLonghi Australia Pty Ltd
DeLonghi New Zealand Ltd



Dear Customer,

Thank you for having purchased and given your preference to our product.

The safety precautions and recommendations reported below are for your own safety and that of others. They will also provide a means by which to make full use of the features offered by your appliance.

Please keep this booklet in a safe place. It may be useful in future, either to yourself or to others in the event that doubts should arise relating to its operation.

This appliance must be used only for the task it has explicitly been designed for, that is for cooking foodstuffs. Any other form of usage is to be considered as inappropriate and therefore dangerous.

The manufacturer declines all responsibility in the event of damage caused by improper, incorrect or illogical use of the appliance or by faulty installation.

This cooktop has been designed and constructed in accordance with the following codes and specifications:

AS 5263.0	Approval Requirements for Domestic Gas cooking appliances
AS/NZS 5263.1.1	
AS/NZS 60335.1	Household and similar electrical appliances - Safety General requirements
AS/NSZ 60335.2.102	Safety Particular requirements for gas, oil and solid-fuel burning appliances having electrical connections
AS/NZS CISPR 14.1	Electromagnetic Compatibility Requirements

PRODUCT LABEL



IMPORTANT SAFETY PRECAUTIONS AND RECOMMENDATIONS

IMPORTANT: This appliance is designed and manufactured solely for the cooking of domestic (household) food and is not suitable for any non domestic application and therefore should not be used in a commercial environment.

The appliance guarantee will be void if the appliance is used within a non domestic environment i.e. a semi commercial, commercial or communal environment.

Read the instructions carefully before installing and using the appliance.

- This appliance has been designed and manufactured in compliance with the applicable standards for the household cooking products and it fulfills all the safety requirements shown in this manual, including those for surface temperatures.
Some people with sensitive skin may have a more pronounced temperature perception with some components although these parts are within the limits allowed by the norms.
The complete safety of the appliance also depends on the correct use, we therefore recommend to always pay a extreme attention while using the product, especially in the presence of children.
- After having unpacked the appliance, check to ensure that it is not damaged.
In case of doubt, do not use it and consult your supplier or a professionally qualified technician.
- Packing elements (i.e. plastic bags, polystyrene foam, nails, packing straps, etc.) should not be left around within easy reach of children, as these may cause serious injuries.
- Some appliances are supplied with a protective film on steel and aluminium parts. **This film must be removed before using the appliance.**
- **IMPORTANT:** The use of suitable protective clothing/gloves is recommended when handling or cleaning this appliance.
- Do not attempt to modify the technical characteristics of the appliance as this may become dangerous to use. The manufacturer declines all responsibility for any inconvenience resulting from the inobservance of this condition.

- **CAUTION:** this appliance must only be installed in a permanently ventilated room in compliance with the applicable regulations.
- Do not carry out cleaning or maintenance operations on the appliance without having previously disconnected it from the electric power supply.
- Do not use a steam cleaner because the moisture can get into the appliance therefore making it unsafe.
- Do not cover the hob with aluminium foils.
- Do not touch the appliance with wet or damp hands (or feet).
- Do not use the appliance whilst in bare feet.
- If you should decide not to use this appliance any longer (or decide to substitute another model), before disposing of it, it is recommended that it be made inoperative in an appropriate manner in accordance to health and environmental protection regulations, ensuring in particular that all potentially hazardous parts be made harmless, especially in relation to children who could play with unused appliances.
- The various components of the appliance are recyclable. Dispose of them in accordance with the regulations in force in your country. If the appliance is to be scrapped, remove the power cord.
- After use, ensure that the knobs/controls are in the off position.
- Children less than 8 years of age shall be kept away unless continuously supervised.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The manufacturer declines all liability for injury to persons or damage to property caused by incorrect or improper use of the appliance.
- **WARNING:** During use the appliance and its accessible parts become hot; they remain hot for some time after use.
 - Care should be taken to avoid touching heating elements on the hob.

- To avoid burns and scalds, young children should be kept away.
- Make sure that electrical cables connecting other appliances in the proximity of the cooktop cannot come into contact with the hob.
- **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. **NEVER** try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- **WARNING:** Danger of fire: do not store items on the cooking surfaces.
- Do not place or leave empty pans on the glass ceramic hob.
- Do not allow heavy or sharp objects to drop on the glass ceramic hob.
- Do not scratch the hob with sharp objects. Don't use the hob as a work surface.
- **WARNING:** If the hob is cracked or otherwise damaged by falling objects etc., disconnect the appliance from the electrical power supply to avoid the possibility of electric shock and call Customer Service.
- **WARNING:** When correctly installed, your product meets all safety requirements laid down for this type of product category. However special care should be taken around the underneath of the appliance as this area is not designed or intended to be touched and may contain sharp or rough edges, that may cause injury.
- **CAUTION:** The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
- If the power supply cable is damaged, it must be replaced only by an authorized service agent in order to avoid a hazard.
- **DO NOT USE OR STORE FLAMMABLE MATERIALS NEAR THIS APPLIANCE.**
- **DO NOT SPRAY AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILE IT IS IN OPERATION.**
- **DO NOT MODIFY THIS APPLIANCE.**
- **THIS APPLIANCE SHALL NOT BE USED AS A SPACE HEATER.**
- **WHERE THIS APPLIANCE IS INSTALLED IN MARINE CRAFT OR IN CARAVANS, IT SHALL NOT BE USED AS A SPACE HEATER.**

INSTALLATION

CAUTION:

- **Important:** The use of suitable protective clothing/gloves is recommended when handling or cleaning of this appliance.
- This appliance must be installed in accordance with these installation instructions, local gas fitting regulations, municipal building codes, water supply regulations, electrical wiring regulations, - Gas Installations and any other relevant statutory regulations.
- The appliance must be housed in heat-resistant units.
- We would point out that the adhesive which bonds the plastic laminate to the furniture must withstand temperatures not less than 150°C to avoid delamination.
- Do not instal the appliance near inflammable materials (eg. curtains).
- This appliance is to be installed only by an authorised person.
- This appliance shall be only be serviced by authorized personnel.
- Incorrect installation, for which the manufacturer accepts no responsibility, may cause personal injury of damage.
- Always disconnect the appliance from mains power supply before carrying out any maintenance operations or repairs.
- In the room where the appliance is installed, there must be enough air to allow the gas to burn correctly, according to the current local regulations.

WARNING!

When correctly installed, your product meets all safety requirements laid down for this type of product category. However special care should be taken around the underneath of the appliance as this area is not designed or intended to be touched and may contain sharp or rough edges, that may cause injury.

ELECTRICAL REQUIREMENTS

- The appliance must be connected to the mains checking that the voltage corresponds to the value given in the rating plate and that the electrical cable sections can withstand the load specified on the plate.
- The plug must be connected to an earthed socket in compliance with safety standards.
- If the appliance is supplied without plug, fit a standard plug which is suitable for the power consumed by the appliance.
- The wires in the power cable are coloured in accordance with the following code:
Green/Yellow = Earth, Blue = Neutral, Brown = Active.

If the colours of the wires in the power cable to the appliance do not correspond with the coloured markings identifying the terminals in the junction terminal, proceed as follows:

1. The wire which is coloured green and yellow must be connected to the terminal marked "E" (Earth) or " $\perp$ " coloured Green.
2. The wire which is coloured blue must be connected to the terminal marked "N" (Neutral) or coloured Black.


3. The wire which is coloured brown must be connected to the terminal marked “L” (Live) or “A” (Active) or coloured Red.
- A suitable isolating switch providing full disconnection from the mains power supply (under overvoltage category III conditions) shall be incorporated in the permanent wiring, mounted and positioned to comply with the local wiring rules and regulations. The isolating switch must be of an approved type and provide a 3 mm air gap contact separation in all poles (or in all active [phase] conductors if the local wiring rules allow for this variation of the requirements).
 - The power supply cable must not touch the hot parts and must be positioned so that it does not exceed 50°C above ambient.
 - Once the appliance has been installed, the switch or socket must always be accessible.
 - If the supply cord is damaged it must be replaced by the manufacturer or it's Service Agent or a similarly qualified person in order to avoid a hazard.

N.B. The connection of the appliance to earth is mandatory.

If the installation requires alterations to the domestic electrical system call a qualified electrician.

He should also check that the socket cable section is suitable for the power drawn by the appliance.

Replacing the power cord must be done by a qualified electrician in accordance with the instructions supplied by the manufacturer and in compliance with established electrical regulations.

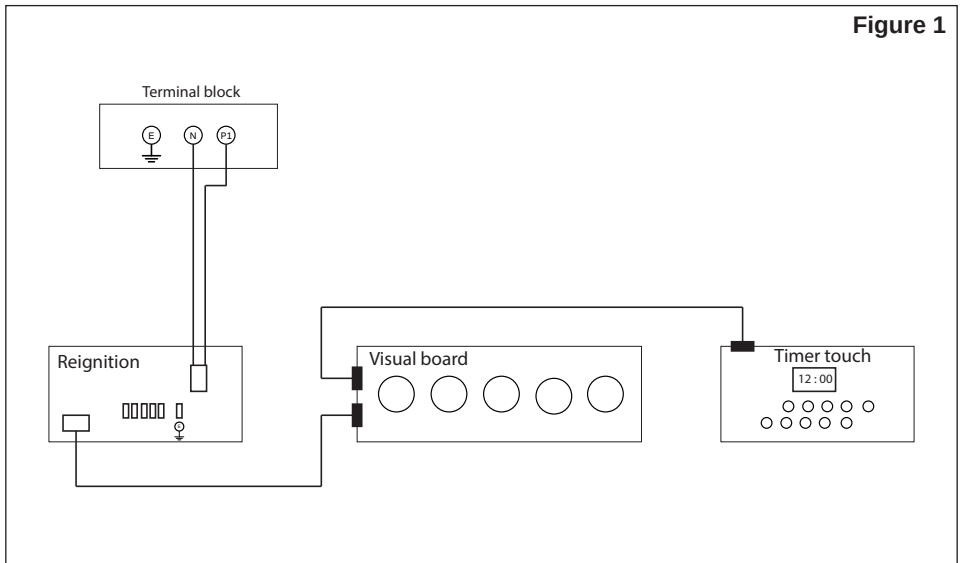

CLEARANCES

Installation clearances and protection of combustible surfaces shall comply with the current local regulations e.g. AS/NZS5601.1 (latest edition) - Gas Installations code.

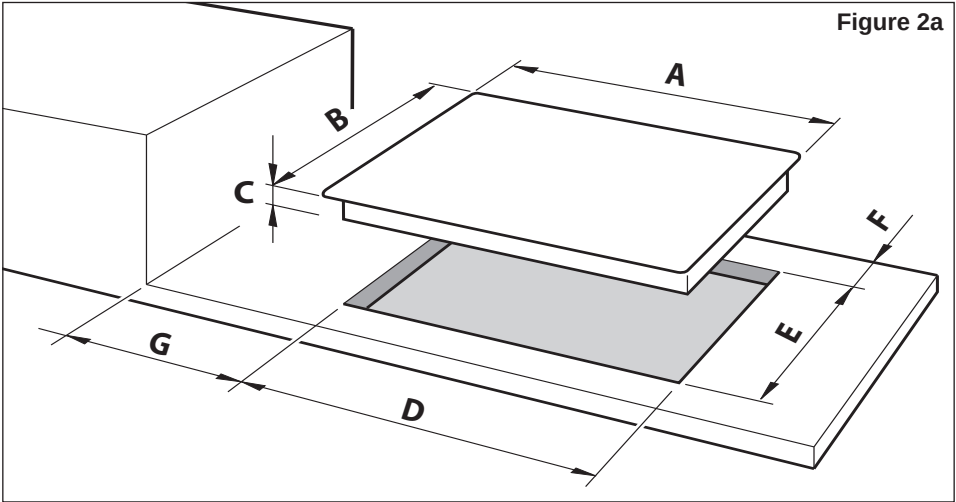


Figure 2a

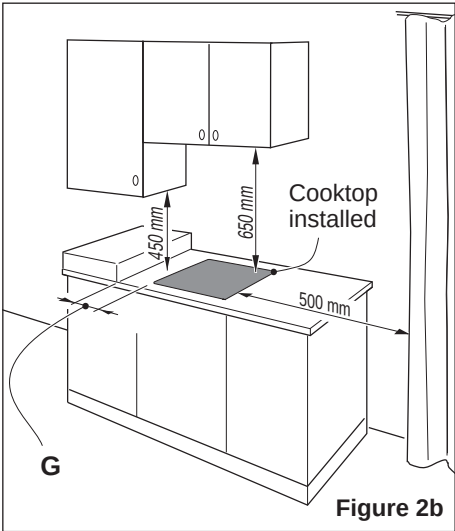


Figure 2b

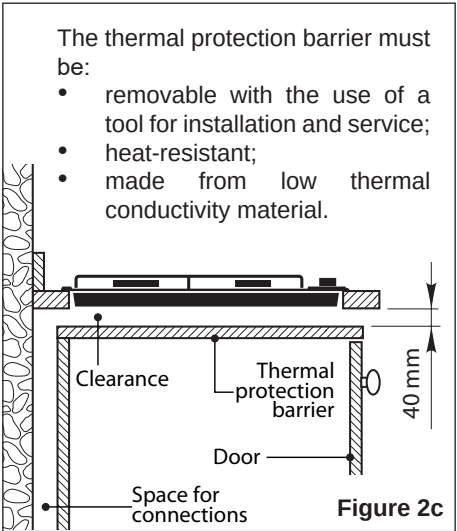


Figure 2c

Description	Measures (mm)						
	A	B	C	D	E	F (minimum)	G (minimum)
90cm wide models	900	510	54 (*)	840	480	60 (**)	200 (***)

- (*) From top of countertop
- (**) Between the back edge of the cut-out and the back of the countertop.
- (***) From the side edge of the cut-out to any vertical combustible surface. If this distance is less than 200 mm, the surface shall be protected (in accordance with AS/NZS5601.1) to a height of not less than 150 mm above the hob for the full dimension (width or depth) of the cooking surface area.

IMPORTANT NOTE:

THIS APPLIANCE SHALL NOT BE USED AS A SPACE HEATER, ESPECIALLY IF INSTALLED IN MARINE CRAFT OR CARAVANS.

The installation shall comply with the dimensions in fig. 2a bearing in mind that:

- A 40mm ventilation gap must be provided between the bottom of the appliance and any cabinetry, draw unit, thermal protection barrier or appliance.
- If the cooktop is installed directly above an oven (which does not have a cooling fan motor) or if its base is accessible through a cupboard or drawer space after installation, a thermal protection barrier must be installed below the base of the cooktop as indicated in fig. 2c.
- If the oven installed below the cooktop has a cooling fan motor, the thermal protection barrier is not required.
- If the cooktop is installed above an oven, the two appliances shall be connected to the gas and/or electrical supply with independent connections.
- **Overhead clearances** - In no case shall the clearance between the highest part of the hob and a range hood be less than 600 mm, or for an overhead exhaust fan 750 mm. Any other downward facing combustible surface less than 600 mm above the highest part of the hob shall be protected for the full width and depth of the cooking surface area in accordance with local regulations in force. However, in no case shall this clearance to any surface be less than 450 mm.

Standards requirement

Temperature of nearby surfaces. Australian and New Zealand Gas Installation Standards (AS/NZS5601.1) require a cooktop to be installed so that the surface temperature of any nearby combustible surface will not exceed 65°C above ambient.

This is typically achieved by:

- having the cooktop spaced away from the wall (see figures 2b, 2c);
- AND
- protecting the wall to a height of at least 150 mm along its length (minimum height of non-combustible material when used on adjacent walls) with non-combustible surface materials such as:
 - 5 mm-thick ceramic tiles (these alone are adequate);
 - tempered glass or sheetmetal, minimum thickness 0.4 mm (acceptable when used in front of a fire resistant material).

FASTENING THE COOKTOP

Each cooktop is provided with an installation kit including brackets and screws for fastening the cooktop to benches from 30 to 40mm thick.

The kit includes four “F” type brackets (for the front of the cooktop), three “R” type brackets (for the rear of the cooktop) and seven self-threading screws “S”.

- Cut the unit according to the dimensions in fig. 3a.
- Stretch gasket “G” over the edge of the hole made, being careful to overlay the junction edges (fig. 3b).
- Fasten the brackets “F” and “R” to the appropriate socket holes, without tightening the screws “S” for the moment. Make sure that the tabs are mounted correctly, as shown (figs. 3c, 3d). Rotate the tabs so that the cooktop can be put into the cutout.
- Put the cooktop into the cutout and position it correctly.
- Put the brackets “F” and “R” into place; tooth “A” of the brackets should go into the hole (figs. 3c, 3d).
- Tighten screws “S” until the cooktop is completely secured to the bench.
- Using a sharp cutter or trimmer knife, trim the excess sealing material around the edge of the cooktop. Take care not to damage the workbench.

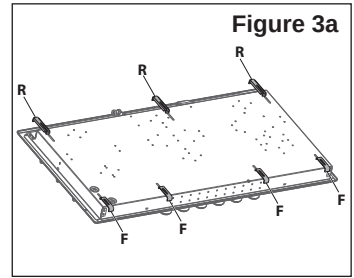


Figure 3a

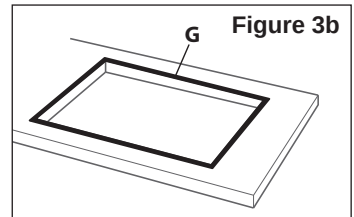


Figure 3b

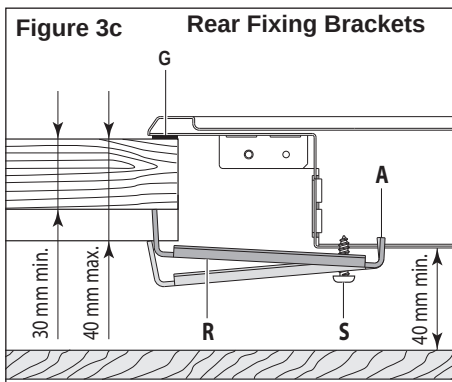


Figure 3c

Rear Fixing Brackets

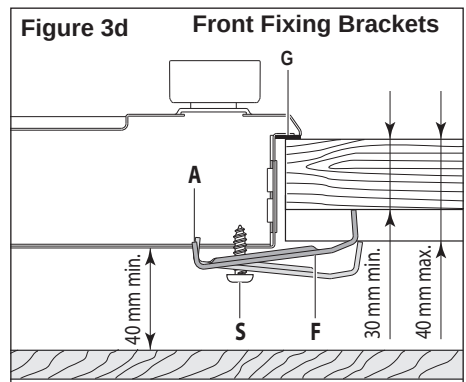


Figure 3d

Front Fixing Brackets

GAS SUPPLY

- This appliance is suitable for use with Natural Gas or ULPG (Check the “gas type” sticker attached to the appliance).
 - For Natural Gas the gas supply must be regulated to obtain a pressure of 1 kPa with the triple-ring (TR) burner operating at the maximum.
 - For ULPG models connect the gas supply directly to the appliance test point adaptor (supplied with the conversion kit) and ensure that the supply pressure is regulated to 2.75 kPa.
 - Do NOT force the “elbow” rotation prior to loosening nut.
 - Do NOT over tighten the nut at the “elbow”.
1. After connecting the gas supply, check the piping and connections for leaks using a soap and water solution. The presence of bubbles indicates a leak, tighten or replace connections as appropriate.
Warning: Do not use any naked flame to check for leaks.
 2. The operation of the appliance **MUST** be tested before leaving.
 3. Adjust the test point pressure or supply pressure to the value which is appropriate for the gas type.

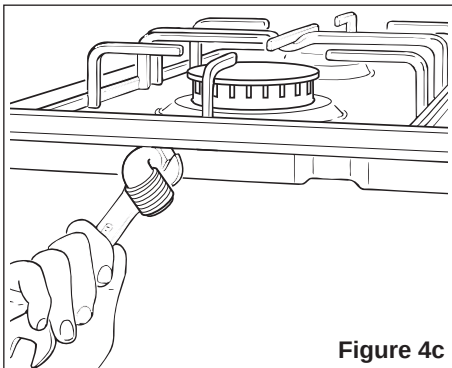


Figure 4c

Gas connection for NATURAL GAS

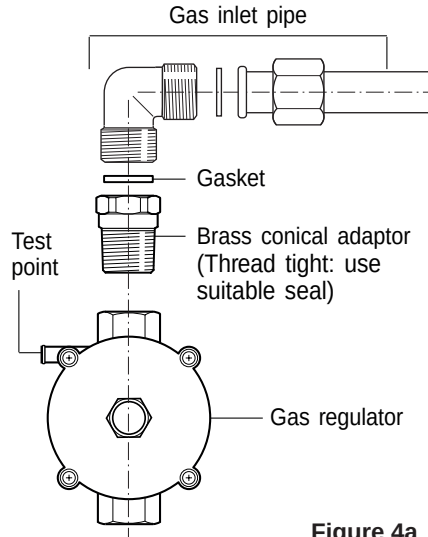


Figure 4a

Gas connection for ULPG

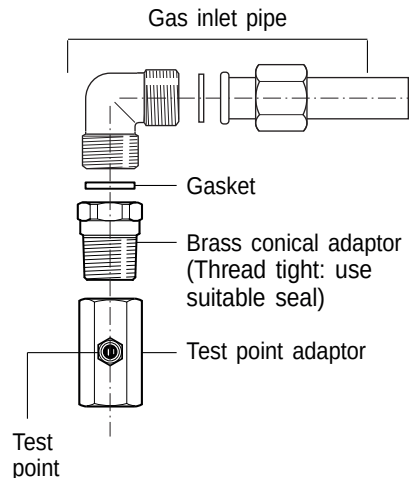


Figure 4b

4. Turn on the appliance gas controls and light each burner. Check for a well defined blue flame without any yellow tipping. If any abnormality is evident then check that the burner flame spreader and burner cap/s are both located properly.
5. Check the minimum burner setting by quickly rotating the gas control knob from the maximum to the minimum position, the flame must not go out. If adjustment is required carry out the "MINIMUM BURNER SETTING ADJUSTMENT" procedure described below.
6. If satisfactory performance cannot be obtained, the installer shall check the installation and notify the local gas supply authority for a gas supply problem, or if it is an appliance problem, our Customer Service Centre should be called to obtain the nearest authorized Delonghi Service Agent.
7. Where the appliance data plate cannot be easily read with the appliance in the installed position the duplicate data plate must be attached to adjacent surface and the duplicate Natural gas / ULPG conversion label should also be included where a Natural gas / ULPG conversion has been completed.

INSTALLATION WITH A FLEXIBLE HOSE ASSEMBLY

- If this appliance has to be installed with a hose assembly, the installer shall refer to the network operator or gas supplier for confirmation of the gas type, if in doubt.
- When used with a flexible hose, the connector on the wall should be between 800 mm to 850 mm above the floor and in the region outside the width of the appliance to a distance of 250 mm.
The supply connection point shall be accessible with the appliance installed.
- Flexible hose assemblies should be AS/NZS 1869 Class B or Class D certified.
The thread connection shall be Rp 1/2" (ISO 7-1) male.
- **IMPORTANT WARNING:** After connection the installer must check that the hose is not kinked, subjected to abrasion or permanently deformed. The installer must check also that the hose is not near (or in contact) with any hot surfaces e.g. base of metal hotplate, underbench oven etc.
- The hose assembly shall be as short as practicable and comply with relevant AS/NZS5601.1 requirements.
- **IMPORTANT WARNING:** The installer shall ensure the hose assembly is restrained from accidental contact with the flue outlet of an underbench oven.

TABLE FOR THE CHOICE OF THE INJECTORS

	Natural Gas		ULPG	
Test Point Pressure [kPa]	1.0		2.75	
BURNER	Injector Orifice Dia. [mm]	Gas Consumption [MJ/h]	Injector Orifice Dia. [mm]	Gas Consumption [MJ/h]
Auxiliary (AUX)	0.92	4.20	0.56	4.20
Semi-rapid (SR)	1.17	6.60	0.70	6.20
Rapid (R)	1.54	11.75	0.88	10.78
Triple-ring (TR)	1.68	13.70	1.04	14.10

(Note: Gas type sticker and data plate are attached to the underside of the base of the appliance.)

CONVERSION PROCEDURE (to convert to Natural gas or to ULPG) REPLACING THE INJECTORS

The conversion procedure must be carried out only by an authorised person.

This appliance is suitable for use with Natural gas or Universal LPG (check the “gas type” sticker attached to the appliance).

The nominal gas consumption and injector size details are provided in table above.

To replace the injectors proceed as follows:

- Remove pan supports and burners from the cooktop.
- Using a wrench, substitute the injectors “J” (figs. 5a, 5b) with those most suitable for the kind of gas for which it is to be used (see table above).
- Affix to the appliance the warning label stating that the cooktop has been converted for use with Natural gas/ULPG (supplied with the Natural gas/ULPG conversion kit). A second Natural gas/ULPG conversion label should also be affixed to an adjacent surface along with the duplicate data plate.

IMPORTANT

- If the cooktop is suitable for use with Natural gas and must be converted for use with Universal LPG, before connecting to gas main remove the appliance gas regulator

and replace with test point adaptor (see figs. 4a, 4b).

- If the cooktop is suitable for use with Universal LPG and must be converted for use with Natural gas, before connecting to the gas main remove the appliance test point adaptor and replace with gas regulator (see figs. 4a, 4b).

NOTE:

Gas regulator and test point adaptor are supplied with the appliance (packed with conversion kit).

The burners are designed so that regulation of primary air is not required.

Auxiliary, semi-rapid and rapid burner

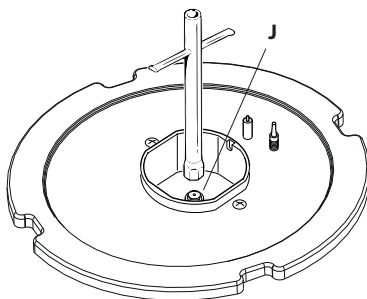


Figure 5a

Triple-ring burner

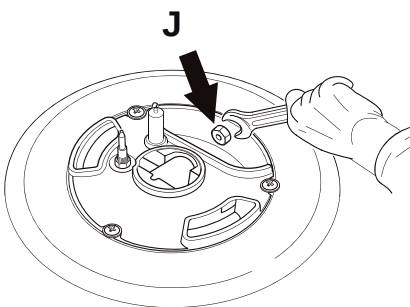


Figure 5b

MINIMUM BURNER SETTING ADJUSTMENT

Check whether the flame spreads to all burner ports when the burner is lit with the gas tap set to the minimum position. If some ports do not light, increase the minimum gas rate setting.

Check whether the burner remains lit even when the gas tap is turned quickly from the maximum to the minimum position. If the burner does not remain lit, increase the minimum gas rate setting.

The procedure for adjusting the minimum gas rate setting is described below.

- Using a screwdriver turn screw “A” until the flame setting is correct (fig. 6).

Normally for ULPG fully tighten the adjustment screw.

LUBRICATING THE GAS TAP

If a gas tap is difficult to turn, disassemble it, clean it carefully with petrol and spread a little high-temperature-resistant grease on it.

These operations must be performed by an Authorized person/Service agent.

Note: Servicing of this appliance is only to be carried out by Authorised Person.

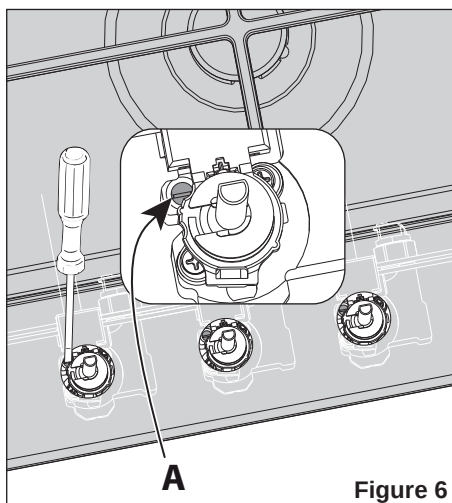



Figure 6

USE and CARE

CAUTION:

- This appliance must be used only for the task it has explicitly been designed for, that is for domestic cooking of foodstuffs. Any other form of usage is to be considered as inappropriate and therefore dangerous. Do not use this appliance as a space heater.
- Do NOT place combustible materials or products on this appliance at any time. Do NOT use or store flammable materials near this appliance.
- Do NOT spray aerosols in the vicinity of this appliance while it is in use.
- Before using for the first time, clean the cooktop with warm soapy water.
- **DO NOT MODIFY THIS APPLIANCE.**
- **IMPORTANT NOTE: THIS APPLIANCE SHALL NOT BE USED AS A SPACE HEATER, ESPECIALLY IF INSTALLED IN MARINE CRAFT OR CARAVANS.**

Figure 7

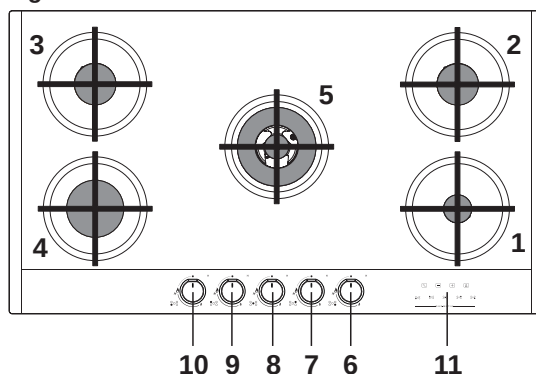

GAS BURNERS

1. Auxiliary (A)
2. Semi-rapid (SR)
3. Semi-rapid (SR)
4. Rapid (R)
5. Triple-ring (TR)

CONTROLS DESCRIPTION

6. Burner control knob (1) - Auxiliary
7. Burner control knob (2) - Semi-rapid
8. Burner control knob (5) - Triple-ring
9. Burner control knob (3) - Semi-rapid
10. Burner control knob (4) - Rapid
11. Touch controls

NOTES:


- The electric ignition is incorporated in the knobs.
- The appliance has a safety valve system fitted, the flow of gas will be stopped if and when the flame should accidentally go out.

DESCRIPTION OF TOUCH-CONTROLS

1. Child lock safety button (buttons lock)
2. Timer display decrease button
3. Timer display increase button
4. Cooking end programmer/cooking timer setting button
5. Front left cooking zone button
6. Rear left cooking zone button
7. Central cooking zone button
8. Rear right cooking zone button
9. Front right cooking zone button
10. Timer display (h.mm - hour.minutes)

NOTE: Each press of a touch-control button is confirmed by an audible beep.

Figure 8

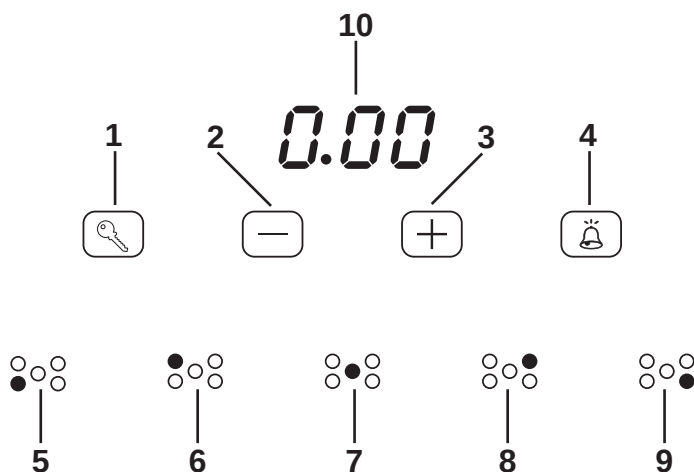

IMPORTANT NOTES:

Whenever the hob is reconnected to the electrical mains or following a mains power outage the electronic system will automatically run a functional test. This involves checking operation of the igniter by generating 2/3 sparks, and also the operation of all indicator lights, which will switch on in sequence. Thereafter the timer display will show "LLL" and the rear left cooking zone indicator light will switch on.

Wait for approximately two minutes until the timer "LLL" message and the rear left cooking zone button indicator light switch off.


Once the message has cleared and the indicator light has switched off you can start using the hob.

N.B.: you can skip the hob functional test by turning any knob before connecting the appliance to the mains supply. Once power is connected, return the knob to the "●" position (off).

USING GAS BURNERS

- Check that the electricity is switched on to allow spark ignition.
- Make sure that all controls are turned to “●” (burner off).
- The gas flow to the burner is controlled by a tap incorporating a safety cut-off valve.
- You control the flow by turning the knob indicator to line up with the following symbols:
 - Symbol ● : tap closed (burner off)
 - Symbol  : High (maximum)
 - Symbol  : Low (minimum)
- You can control the temperature by the knob to “High” (maximum) from “Low” “Minimum”.
- To switch off, turn the knob clockwise until you hear the safety click.
- Note that, if you are using a burner at the minimum setting, you turn the knob clockwise past the maximum setting before reaching the off position.
- Whenever lighting any of the burners produces an abnormal flame, switch that burner off and relight using the minimum setting.
- If after relighting the burner, the flame is still abnormal, turn the burner off and contact our Customer Service Centre to obtain the nearest authorized Delonghi Service Agent.
- In the case of a mains failure light the burner with a match or lighted taper.
- **Note:** When the cooker top is not being used, set the gas knobs to their closed positions and also close the cock valve on the gas bottle or the main gas supply line.

Figure 9

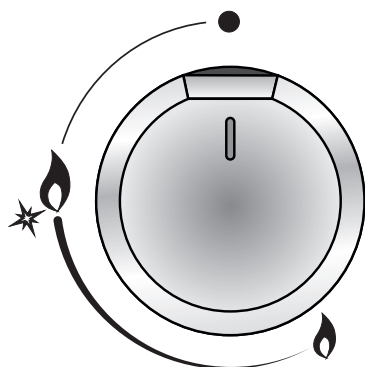

IMPORTANT NOTE:

The hob can function correctly and safely also without an electrical supply. In this case the indicator lights, audible signals (beeps), automatic re-lighting and all functions available via the touch-controls will be inactive.

Caution!

Do not cover the hob with aluminium foils.

LIGHTING THE BURNERS


To ignite the burner, the following instructions are to be followed:

1. Press in the corresponding knob and turn counter-clockwise (fig. 10) to the full flame position marked by the “” symbol (fig. 9); press and hold the knob to light the burner (the green indicator light on the knob will blink to show that burner ignition is in progress). In the case of a mains failure light the burner with a match or lighted taper. If your local gas supply makes it difficult to light the burner with the knob set to maximum, set the knob to minimum and repeat the operation.
2. Wait for a few seconds after the gas burner has been lit before letting go of the knob (valve activation delay) until the green indicator light switches from blinking to steady and a beep is emitted.
3. Adjust the gas valve to the desired position.

If the burner flame should be extinguished for any reason, the electronic system will automatically activate a procedure to re-light the extinguished burner with several sparks generated by the electronic ignition system. For safety reasons (e.g. to avoid possible gas accumulation do not attempt to re-light a burner that has been extinguished by a liquid spill) the automatic re-ignition procedure will be performed once only.

If the flame cannot be relit by means of the automatic procedure the safety valve will automatically shut off the gas flow, the red residual heat warning light “H” will blink and an audible alarm signal (beep) will sound; turn the knob to the “” position to mute the audible signal.

Before proceeding with manual ignition (starting from the above point 1) **wait for at least 1 minute** and check that the burner is correctly positioned (as illustrated in the

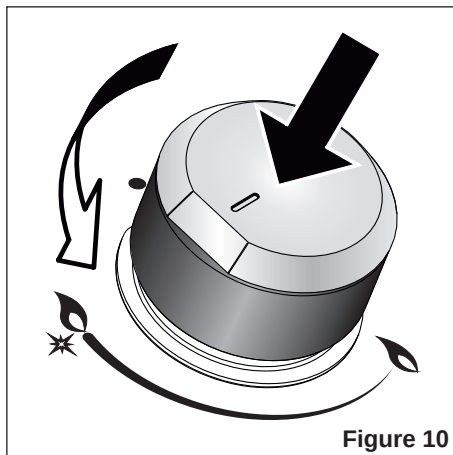

cleaning and maintenance chapter in the heading concerning correct positioning of the burners) and that it has not been fouled by liquid spills.

IMPORTANT NOTE: In the case of an electrical power failure, if the burner flame should go out for some reason, the safety valve will automatically stop the gas flow.

To restore operation of the appliance return the knob to the “” position, **wait at least 1 minute** and then repeat the ignition operations starting from the above point 1. In this case, since the electronic ignition system is not working due to the power failure, the burner must be lit with a match or taper.

IMPORTANT NOTE:

Supervise the hob when it is in use to ensure it is working correctly. Never leave the appliance unattended when it is in use.

Caution!

The cooking hob becomes very hot during operation. Keep children well out of reach.

IMPORTANT NOTE:

The following functions are only enabled when the hob is supplied by the electrical mains.

If electrical power is not present these functions are not available.

OPERATION TIME LIMIT OF THE COOKING ZONES

If no operations are carried out, all cooking zones are switched off automatically after a maximum operating time of 6 hours.

After a burner has been extinguished, to restore normal operation return the knob to the "●" position (off).

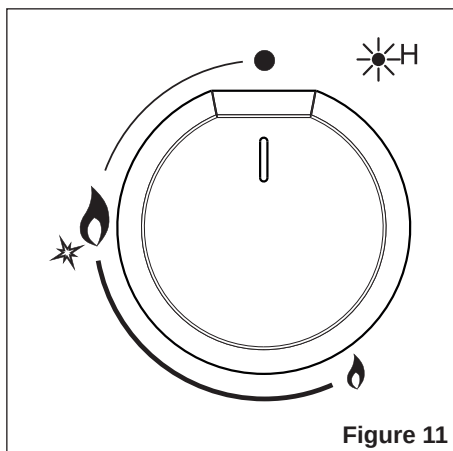


Figure 11

REMAINING HEAT INDICATORS

When the burner is extinguished, if the cooking zone is too hot to touch, the residual heat warning light "H" will switch on (fig. 11).

Do not touch the burner or the surrounding parts. Please pay special attention to children. You can always resume cooking simply by lighting the burner.

The warning light will switch off when the cooking zone temperature falls below a pre-programmed value.

CHILD LOCK SAFETY

This function locks the buttons on the touch-control panel to prevent inadvertent operation; if the burners are off when the function is selected, it also prevents burner ignition.

To activate the child lock, touch button  for a few seconds until you hear a beep:

- with the hob off -  button indicator light blinks, touch-control panel and electric ignition are disabled. If a burner is lit manually (with an external flame) it will be extinguished automatically after approximately 30 seconds.

To use the hob, disable the child lock by pressing the  button for a few seconds until you hear a beep.

- with burner(s) lit - the  button indicator light is steady on and the touch-control panel is disabled. The other burners can also be lit.

To reuse the touch-control panel, disable the child lock by pressing the  button for a few seconds until you hear a beep, otherwise the touch-control panel will be disabled automatically once all the burners are off.

PROGRAM FOR AUTOMATIC SWITCHING OFF OF A COOKING ZONE

This function makes it possible to program a cooking time from 1 minute to 3 hours 59 minutes, in order to switch off one or more cooking zones automatically.

With the burner lit:

- Select the cooking zone by pressing the related button (button 5, 6, 7, 8 or 9 in fig. 8); the associated indicator light will start blinking.
- Press timer button  or  within approximately 10 seconds.

The timer display will show "0.06" if you press the  button or "0.04" if you press the  button (each subsequent press increases or decreases the time by 1 minute).

- Set the cooking time using the  or  timer buttons to increase or decrease the time (if you select "0.00", the timer will switch off automatically after 5 seconds, while the cooking zone will remain active).
- The countdown starts a few moments after the last selection was made.
The time can be changed at any time by selecting the related cooking zone button (buttons 5, 6, 7, 8 or 9 in fig. 8) and then using the  or  timer buttons; in this case the countdown is interrupted and the timer changes the automatic switch-off time.
- Programming of the cooking zone switch-off time has now been completed.
- You can also program the other cooking zones if necessary by repeating the above steps. In this case, the timer shows the remaining time of the last cooking zone selected with the associated indicator light blinking (the indicator lights of the other programmed zones will remain steady on).
- When the countdown ends the cooking zone will switch off automatically, a beep signal will sound, the word "End" will appear on the timer display, and the indicator light of the button for the cooking zone that has just switched off will blink.

Turn the knob of the burner that has just been switched off to the "●" position to mute the audible signal (beep); if this step is omitted the touch-control panel will remain disabled.

If there are several zones programmed for automatic switch-off, after having set the knob of the zone that has just switched off to the "●" position, the timer will show the remaining time of the next programmed zone to be switched off and the related indicator light will blink. If the knob is not returned to the "●" position the indicator light for the first zone to be switched off will continue to blink while the other indicator lights all remain steady on.

Note: The automatic cooking end program can be cancelled at any time by returning the timer to "0.00" (after having selected the button of the cooking zone in question); alternatively, the burner can be turned off manually (by turning the control knob to the "●" position).

COOKING TIMER SET-UP

The cooking timer emits an audible notification signal after a maximum cooking time of 9 hours 59 minutes.

To activate this function:

- Press the  button (the timer shows “0.00” in blinking mode and also the related indicator light blinks).
- Press the  or  button within approximately 10 seconds to set the required cooking time.
The timer display will show “0.06” if you press button  or “0.04” if you press button  (each subsequent press increases or decreases the time by 1 minute).
- Set the time using the  or  buttons to increase or decrease the value (if the selected time is “0.00” the timer will switch off automatically after approximately 5 seconds).
- Timer programming is now complete.
- When the programmed time elapses an audible signal (beep) will sound, code “RL” will appear on the timer display and the  button indicator light will blink. Press the  button to mute the audible signal (beep) and switch off the blinking indicator light.

Note: The cooking timer can be cancelled at any time by resetting the timer to “0.00”.

CAUTION - VERY IMPORTANT:

The cooking timer simply emits an audible notification signal and **DOES NOT switch off the hob burners** when the set time has elapsed.

ALWAYS ENSURE YOU SWITCH OFF THE BURNERS MANUALLY.

COOKING HINTS FOR GAS HOBS

- The burner must be chosen according to the diameter of the pans and energy required.
- The largest can be used for boiling, to seal meat or foods that are cooked quickly, and the smallest for stews and sauces.
- Always ensure that you use the correct size of saucepan.
- For fast boiling, make sure the flame just reaches the edge of the pan. Flames going up the side of the pan means wasted heat and the contents of the pan will take longer to boil.
- For optimum efficiency use a wok or pan no smaller than 230mm diameter.
- Saucepans with handles which are excessively heavy, in relationship to the weight of the pan, are safer as they are less likely to tip.
- Pans which are positioned centrally on burners are more stable than those which are offset.
- It is far safer to position the pan handles in such a way that they cannot be accidentally knocked.
- When deep fat frying:
 - Fill the pan only one third full of oil.
 - **DO NOT** cover the pan with a lid and **DO NOT** leave the pan unattended.
 - In the unfortunate event of a fire, leave the pan where it is and turn off all controls.
 - Place a damp cloth or correct fitting lid over the pan to smother the flames.
 - **DO NOT** use water on the fire.
 - Leave the pan to cool for at least 30 minutes.

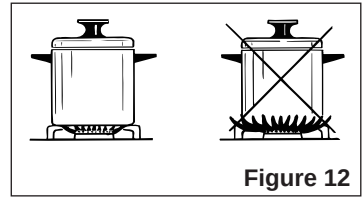


Figure 12



WARNING - VERY IMPORTANT NOTICE

During use cooking vessels become hot. Pay special attention not to touch the hot vessels positioned on the cooking hob especially when operating the control knobs.

DIAMETERS OF PANS WHICH MAY BE USED ON THE BURNERS		
BURNERS	MINIMUM	MAXIMUM
Auxiliary	6 cm	14 cm
Semi-rapid	16 cm	24 cm
Rapid	24 cm	26 cm
Triple-ring	26 cm	28 cm
Wok (*)	-	Max 36 cm
do not use pans with concave or convex bases		

(*) Triple-ring burner with wok adapter correctly fitted

Figure 13

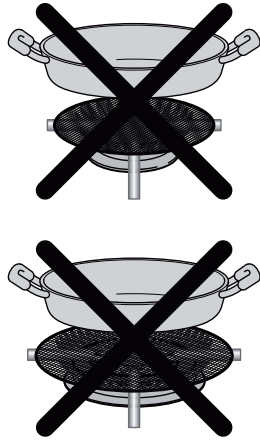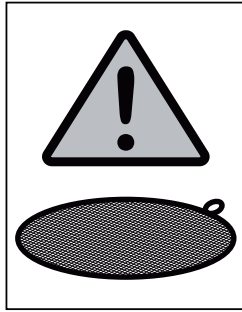

WOK STAND

(figs. 14 - 15)

This special grille for woks should be placed over the pan-rest for the triple-ring compact, triple ring or Dual burner (depending on models).

Warning:

- The flat-bottomed pans are to be placed directly onto the pan-support.
- To use the WOK, you must place the wok stand in the **CORRECT** position as shown.

IMPORTANT:

The special grille for wok pans **MUST BE PLACED ONLY** over the pan-rest for the triple-ring compact, triple ring or Dual burner (depending on models).

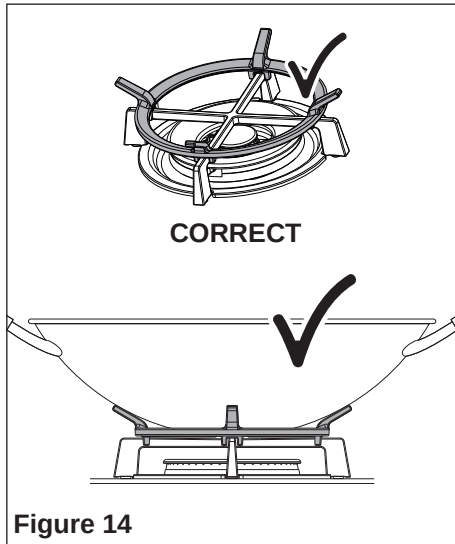


Figure 14



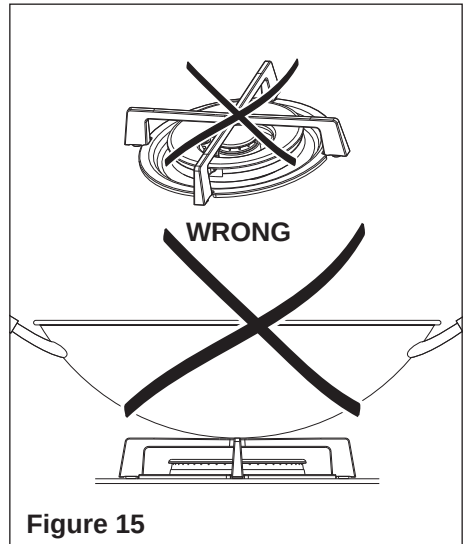



Figure 15

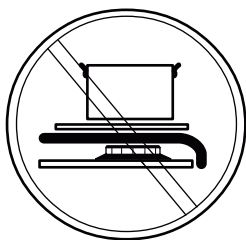


Do not place anything, e.g. flame tamer, asbestos mat, between pan and pan support as serious damage to the appliance may result.

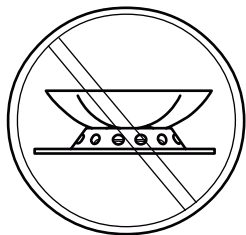


Do not remove the pan support and enclose the burner with a wok stand as this will concentrate and deflect heat onto the hotplate.

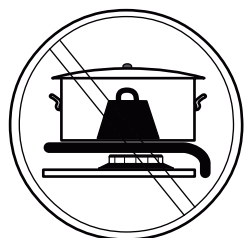

Do not use large pots or heavy weights which can bend the pan support or deflect flame onto the hotplate.

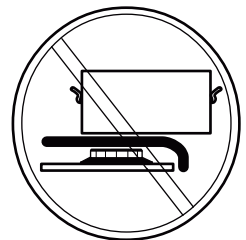

Locate pan centrally over the burner so that it is stable and does not overhang the appliance.

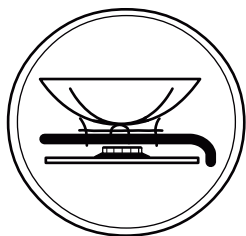

Use only a wok support supplied or recommended by the manufacturer of the appliance.

Figure 16

CLEANING and MAINTENANCE

GENERAL ADVICE

- Before you begin cleaning, you must ensure that the appliance is switched off and disconnected from the electrical power supply.
- Important: The use of suitable protective clothing/gloves is recommended when handling or cleaning of this appliance.
- Under no circumstances should any external covers be removed for servicing or maintenance except by suitable qualified personnel.
- It is advisable to clean when the appliance is cold and especially when cleaning the enamelled parts.
- Be very careful that no water penetrates inside the appliance.
- Avoid leaving alkaline or acidic substances (lemon juice, vinegar, etc.) on the surfaces.
- Avoid using cleaning products with a chlorine or acidic base.
- Do not use a steam cleaner because the moisture can get into the appliance thus make it unsafe.

WARNING: When correctly installed, your product meets all safety requirements laid down for this type of product category. However special care should be taken around the underneath of the appliance as this area is not designed or intended to be touched and may contain sharp or rough edges, that may cause injury.

GLASS SURFACE

- Remove spillages and other types of incrustations by using only specific products which do not contain abrasives or chlorine-based acids.
- If you use a detergent, please make sure that it is not abrasive or scouring. Abrasive or scouring powders can damage the glass surface of the hob.
- All traces of the cleaner must be removed with a damp cloth.
- Dust or food particles can be removed with a damp cloth.
- Dust, fat and liquids from food that has boiled over must be removed as soon as possible.
- If they are allowed to harden they become increasingly difficult to remove. This is especially true in the case of sugar/syrup mixtures which could permanently damage the surface of the hob if left to burn on it.
- Avoid using a knife or other sharp utensil as these may damage the glass surface.
- Do not use steel wool or an abrasive sponge which could scratch the surface permanently.
- Do not put articles on the hob which can melt: i.e plastic, aluminium foil, sugar, sugar syrup mixtures etc.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass since they can scratch the surface, which may result in shattering of the glass.

ENAMELLED PARTS

- All the enamelled parts must be cleaned with a sponge and soapy water only or other non-abrasive products.
- Dry preferably with a soft cloth.
- If acid substances such as lemon juice, tomato conserve, vinegar etc. are left on the enamel for a long time they will etch it, making it opaque.

GAS TAPS

- In the event of operating faults in the gas taps, call the Service Department.

IMPORTANT WARNING

NEVER unscrew the burner plate fixing screws (fig. 17).

The burner plates can be removed **ONLY** by an authorised service agent.

Damage to the appliance will occur if not observing this condition and this may result in serious injury to the user.

The manufacturer declines every responsibility for any inconvenience resulting from the inobservance of this condition.

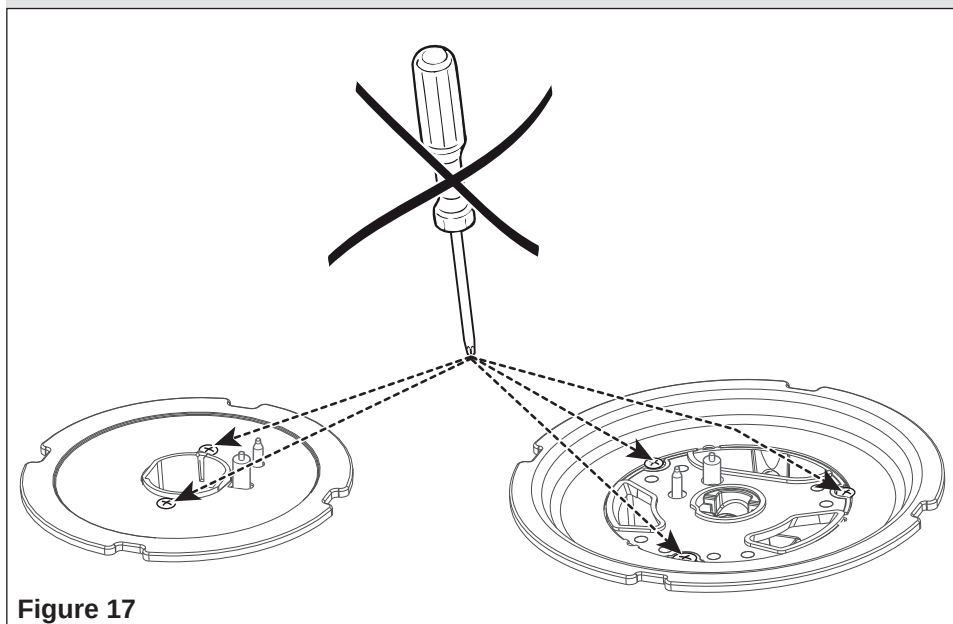


Figure 17

BURNERS

- These parts can be removed and cleaned with appropriate products.
- After cleaning, the burners and their flame spreaders must be well dried and correctly replaced.
- Check that the electrode/s “S” (figs. 18, 20) next to each burner is/are always clean to ensure trouble-free sparking.
- Check that the probe/s “T” (figs. 18, 20) next to each burner is/are always clean to ensure correct operation of the safety valves.
- **Both the probe and ignition plug must be very carefully cleaned.**
- **Note: To avoid damage to the electric ignition do not use it when the burners are not in place.**

CORRECT REPLACEMENT OF THE AUXILIARY, SEMI-RAPID AND RAPID BURNER






It is very important to check that the burner flame spreader “F” and the cap “C” have been correctly positioned (see figs. 18). Failure to do so can cause serious problems.

- They shall be level and the flame spreader must not rotate.

CORRECT REPLACEMENT OF THE TRIPLE-RING

It is very important to check that the burner flame spreader “F1” and the caps “A”, “B” have been correctly positioned (see figs. 20, 21). Failure to do so can cause serious problems.


- Fit the flame spreader to the housing: the burner ribs must be fitted in their housing as shown by the arrows (see figs. 20, 21).
- Then position the cap “A” and the ring “B” (see fig. 21).
- They shall be level and the flame spreader must not rotate (see fig. 22).

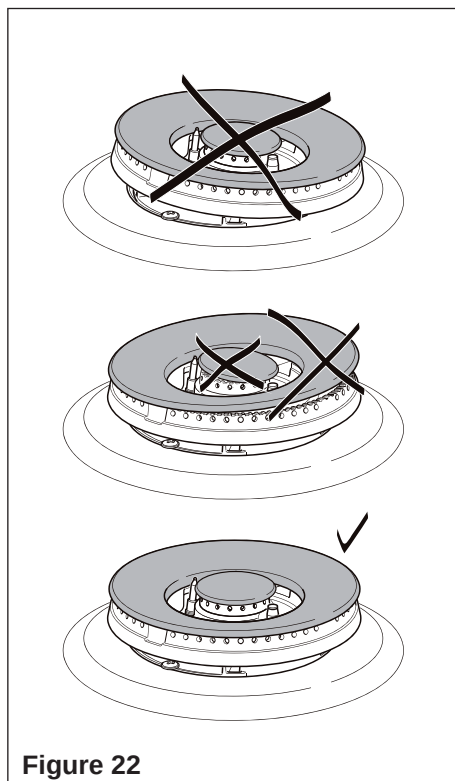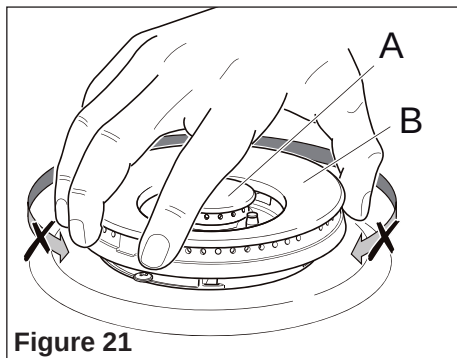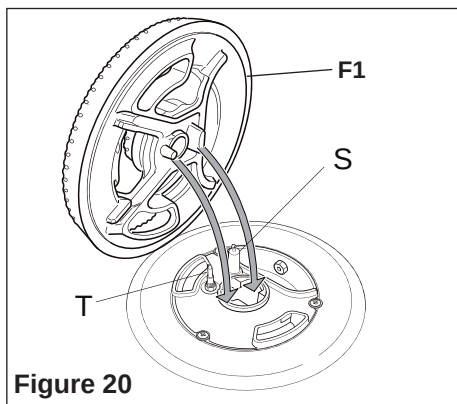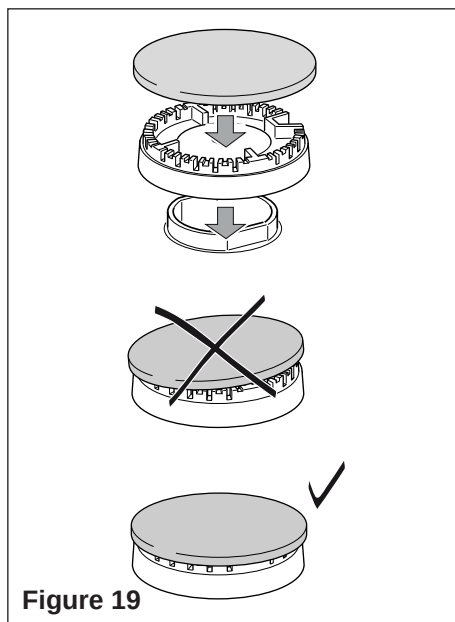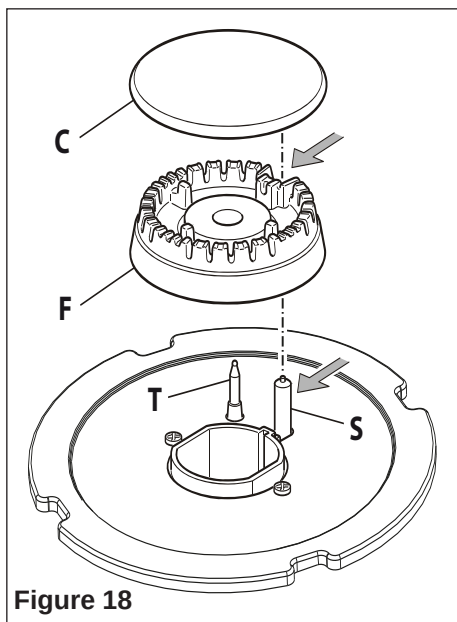

PAN SUPPORTS

- These parts can be removed and cleaned with appropriate products.
- After cleaning, they must be well dried and correctly replaced (fig. 23).
- It is very important to check that the pan supports have been correctly positioned. Failure to do so can cause serious problems.
- The pan supports shall be level and must not rotate.

AUXILIARY, SEMI-RAPID AND RAPID BURNER

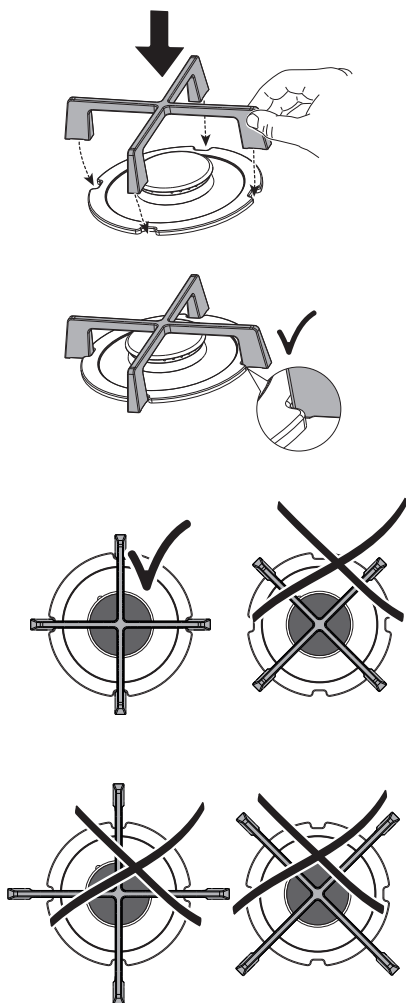

TRIPLE-RING BURNER

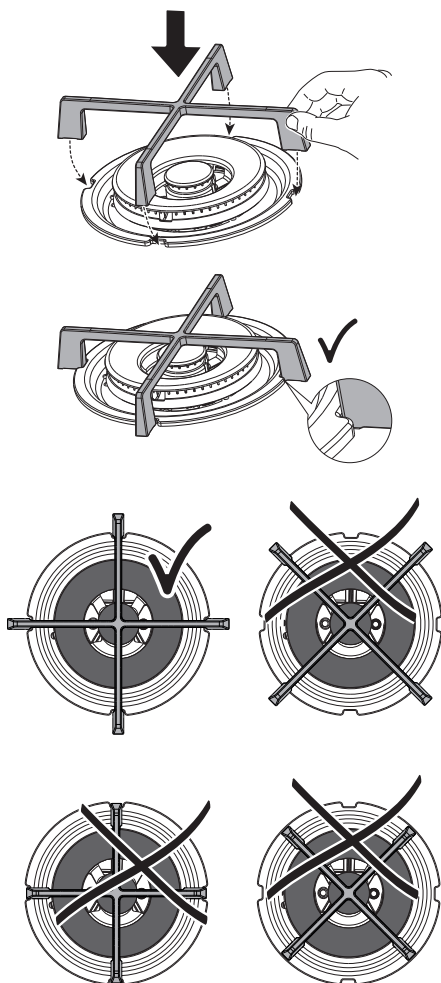


Figure 23

SERVICE AND MAINTENANCE

If the ignition spark fails to ignite or does not light the gas, check the following items before calling our Customer Service Centre to obtain the nearest Authorised Delonghi Service Agent:

- Burner is reassembled and located correctly.
- Spark electrode and white ceramic are clean and dry.
- 230 or 240 VAC power supply is connected.

Contact the local gas utility or our Customer Service Centre to obtain the nearest Authorized Delonghi Service Agent.

- You can smell gas when all burners are turned on.
- The burners do not remain alight at the minimum marked setting.
- The burner flame is yellow or emits an unusual odour.

Note that a bi-annual inspection of the appliance by an authorized service agent or your local gas utility will ensure many years of trouble free operation of your appliance.

Servicing the appliance:

Service may be obtained by contacting our Customer Service Centre to locate the nearest Authorised Delonghi Service Agent.

Servicing shall be carried out only by authorized personnel.


The appliance shall not be modified.

LUBRICATION OF THE GAS TAPS

If the gas tap becomes stiff, it is necessary to dismantle it carefully and clean it with petroleum spirit.

Specialist high temperature resistant grease should be used to lubricate the tap before replacing.

These operations must be carried out by an authorized person/service agent.

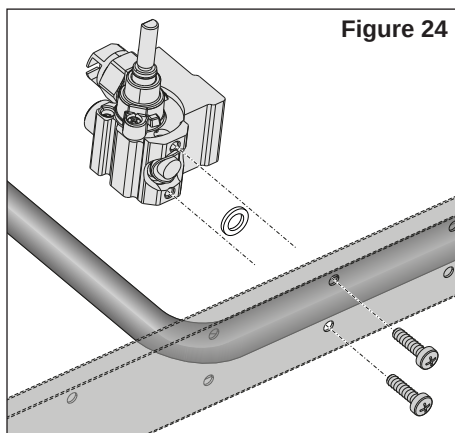

Descriptions and illustrations in this booklet are given as simply indicative. The manufacturer reserves the right, considering the characteristics of the models described here, at any time and without notice, to make eventual necessary modifications for their construction or for commercial needs.

www.delonghi.com.au
www.delonghi.co.nz

