

TYPE MWZ42

instructions

Cod. 6275105000 Rev. 1 - 08/05/2024



Kenwood Ltd

New Lane
Havant
Hampshire
PO9 2NH
kenwoodworld.com



English

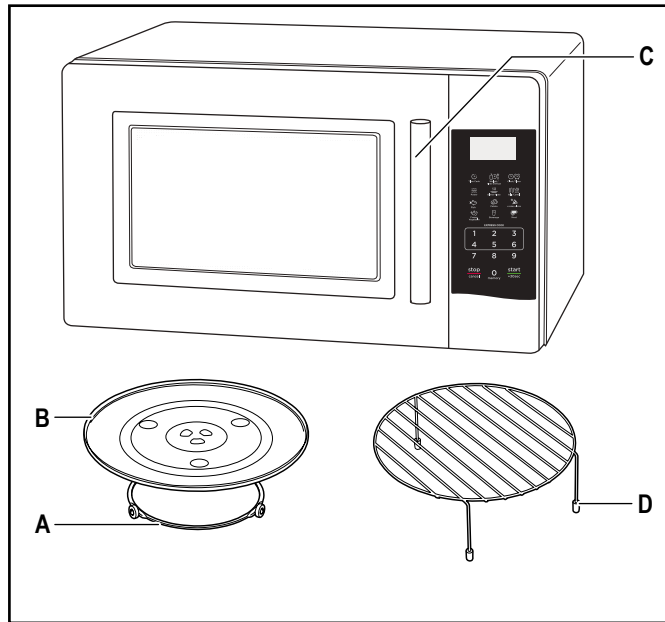


Fig. 1

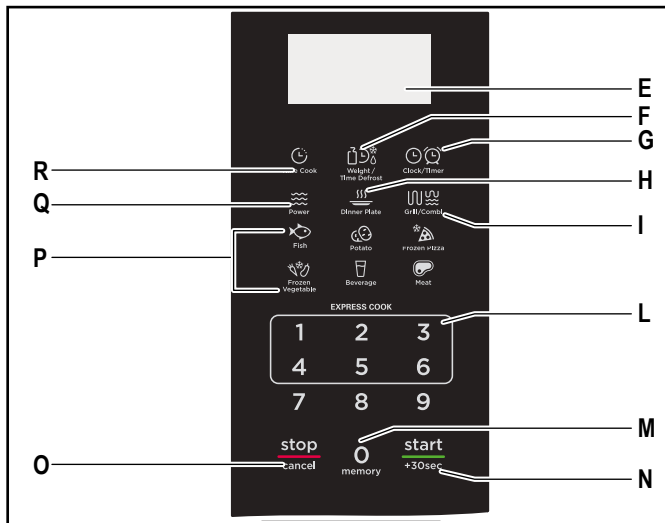


Fig. 2

safety

- Read these instructions carefully and retain for future reference.
- Remove all packaging and any labels.
- If the cord is damaged it must, for safety reasons, be replaced by KENWOOD or an authorised KENWOOD repairer.
- Make sure that the voltage on the appliance rating plate corresponds to that of the mains electricity.
- Never leave the appliance unattended when connected to the power supply; unplug it after every use.
- Never place the appliance on or close to sources of heat.
- Always place the appliance on a flat, level surface during use.
- Never leave the appliance exposed to the elements (rain, sun, etc....).
- Make sure that the power cord does not come into contact with hot surfaces.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Do not allow children to play with the appliance. Cleaning and user maintenance must not be carried out by children unless they are older than 8 and supervised.

- Children under age 8 should not be allowed to handle appliance and its power cord which must be kept out of their reach.
- Never place the appliance body, plug or power cord in water or other liquids; always wipe clean with a damp cloth.
- Always unplug the power cord from the electricity mains before fitting or removing single attachments or before cleaning the appliance.
- Always make sure that your hands are thoroughly dry before using or adjusting the switches on the appliance, or before touching the power plug or power connections.
- To unplug the appliance, grip the plug and remove it directly from the power socket. Never pull the power cord to unplug the appliance.
- Do not use the appliance if the power cord or plug are damaged or if the appliance itself is faulty; all repairs, including substitution of power cord, must be carried out exclusively by an assistance centre or by authorized technicians in order to avoid all risks.
- In case of using extension leads, these must be suitable for the appliance power to avoid danger to the operator and for the safety of the environment in which the appliance is being used. Extension leads, if not suitable, can cause operating anomalies.
- Never allow the cord to dangle in places where it may be grabbed by a child.
- Do not threaten the safety of the appliance by using parts that are not original or which have not been approved by the manufacturer.

- This appliance is designed for HOME USE ONLY and may not be used for commercial or industrial purposes.
- Any changes to this product that have not been expressly authorised by the manufacturer may lead to the user's guarantee being rendered null and void.
- In the event that you decide to dispose of the appliance, we advise you to make it inoperative by cutting off the power cord. We also recommend that any parts that could be dangerous be rendered harmless, especially for children, who may play with the appliance or its parts.
- Packaging must never be left within the reach of children since it is potentially dangerous.
- This appliance complies with Directives 2014/35/EU and EMC 2014/30/EU, as well as to regulation (EC) No. 1935/2004 of 27/10/2004 on materials in contact with food.
- For safety reasons, always connect the appliance to an earthed socket according to the current electric regulations. **AVOID ANY NON-COMPLIANT ELECTRIC INSTALLATION.**
- Wash all attachments thoroughly before use.
- According to the placement of the kitchen, place the oven on a work surface or a kitchen cabinet that can bear a temperature of at least 90°C.
- Do not move appliance while operating.
- Whilst operating, the metallic parts and the glass are hot: use the appliance touching the metallic handle only.

- Do not warm frying oil or grease up, as the temperature of oil cannot be controlled.
- After use, clean the appliance inside with a damp cloth first, and then with a dry cloth to remove any residues of food and fat. The fat residues may overheat and generate smoke or catch on fire.
- If the materials in the oven cavity generate smoke or catch on fire, keep the door closed, switch the oven off and unplug it.
- Always shell and peel eggs, boiled eggs, potatoes, sausages, chestnuts, etc. before cooking.
- Always use containers suitable for microwave cooking (e.g. heat-resistant ceramic, glass or plastic containers). Never use metallic containers for microwave cooking as sparks may occur.
- Whilst heating liquids up, always use a container with a wide opening and wait at least 20 seconds before removing them from the oven to prevent sudden, explosive boiling. Never use the oven for boiling liquids.
- **WARNING:** do not heat up liquids and food in sealed containers to prevent them from exploding.
- After cooking, the container may be very hot. Always use appropriate gloves or mittens to remove food from the oven and direct the steam away from face and hands to prevent the risk of burn.
- Allow the rotating base to cool down before cleaning it.
- Do not put frozen food or cold kitchenware on the hot rotating base.
- Make sure the kitchenware do not press

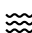

against the inner walls of the oven whilst cooking.

- Do not use the appliance when the container with the ingredients is not placed on the assembly seat.
- To prevent the oven from damaging, do not use it without liquids or food inside.
- Clean the oven on a regular basis and remove any food residue. The failure to comply with the appliance cleaning and maintenance precautions may damage the surface and jeopardize the status of the appliance itself, as well as causing danger situations.
- To ensure an adequate ventilation, leave a space of min. 10 cm between the wall and the rear side of the oven, 5 cm from the sides and 20 cm from the top.
- Do not place rags or dishes underneath the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- WARNING: if the door seals are damaged, the oven must not be operated until it has been repaired by a trained person.
- WARNING: it is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
- Only use utensils that are suitable for use in microwave ovens.
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

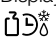
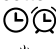

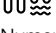


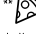



- When heating food in plastic or paper containers keep an eye on the oven due to the possibility of ignition.
- Microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- Contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- The appliance shall not be cleaned with a steam cleaner.

appliance description (fig 1)

- A Rotating ring
- B Glass base
- C Door handle
- C Grill rack

- Q  "Power" button (Microwave cooking power)
- R  "Time Cook" button (microwave cooking time setting)

control panel description (fig 2)

- E Display
- F  "Weight / Time Defrost" button
- G  "Clock / Timer" button
- H  "Dinner Plate" button
- I  "Grill / Combo" button
- L Numerical panel (from 0 to 9)
- M "0 / Memory" button (function storage)
- N "Start / +30 sec." button
- O "Stop/Cancel" button (function stop)
- P Pre-set cooking function button:
 -  Fish
 -  Potatoes
 -  Frozen pizza
 -  Frozen vegetables
 -  Beverages
 -  Meat

The microwaves are electromagnetic radiations that are also present in nature in the form of light waves (e.g. sunlight) and that, inside the oven, go through food from any directions and warm up the molecules of water, fat, and sugar. The heat is produced very quickly only in food, while the container warms up only indirectly for heat transfer from hot food. This prevents the food from adhering to the container, therefore it is possible to use very little fat or to avoid its use during the cooking process. The microwave cooking is deemed to be very healthy and dietetic since it is low fat. Furthermore, in comparison with the traditional systems, as cooking is at a lower temperature, the food dehydrates less, does not lose its nutrients and preserves its flavour more.

how to operate

CLOCK SETTING

- Switch on the supply and a beep will sound, the display (E) will show "00:00". Note: this is a 12-hour clock so both 10 am and 10 pm are set as 0:00
- Press the "Clock / Kitchen Timer" button (G) once, the display (E) will show "00:00".
- Set the current time by means of the numerical panel (L), (e.g., to set h. 12:10, press in sequence 1, 2, 1, 0).
- Press the "Clock / Kitchen Timer" button (G) to confirm setting, the sign ":" will blink and the display (E) will show the time set.

WARNING:

Note that if the "stop/cancel" button is pressed during the setting, or if there is a delay during setting of more than 1 minute then the display goes back to 0:00.

KITCHEN SETTING

- The clock function can be used as a timer for other activities in the kitchen, but note:
- This is only as a timer for other activities, it is not linked to any cooking function or menu of the microwave oven
- The maximum time which can be set is 99 minutes and 99 seconds
- While the timer function is being used, the oven cannot be used for other cooking functions
- Example setting: set to operate in 45 minutes:
- Press "clock/timer" twice, the clock will show "00:00" and the first figure will flash.
- Press the number buttons "4" "5" "0" "0".
- Press "start/+30sec." to confirm, it will count down the time remaining.
- After 45 minutes the buzzer will sound to advise that the 45 minute period is finished.

"MICROWAVE" COOKING

- There are 10 power levels. The oven automatically cooks on high power unless set otherwise.
- To set power level required press the "power" and the number button as below.

| Level | Power | Display | Application |
|-------|-------|---------|---|
| 0 | 0% | PL0 | 0% |
| 1 | 10% | PL1 | Defrost, keep warm, soften ice cream |
| 2 | 20% | PL2 | |
| 3 | 30% | PL3 | |
| 4 | 40% | PL4 | Heat milk, cake and cook stews |
| 5 | 50% | PL5 | |
| 6 | 60% | PL6 | |
| 7 | 70% | PL7 | Cook rice, fish, sea food, cookies and meats |
| 8 | 80% | PL8 | |
| 9 | 90% | PL9 | |
| 10 | 100% | PL10 | Reheat, heat water, cook vegetables and chicken |

Example: cook food at a microwave power of 50% for 15 minutes.

- 1) Press the "Time Cook" button (R) once. The display will show "00:00".
- 2) Use the numerical panel (L) to press "1", "5", "0", "0" in sequence.
- 3) Press the "Microwave power" button (Q) once, and then press "5" to select 50% of microwave power.
- 4) Press the "Start / +30 sec." button (N) to start cooking.

Note: During cooking the power level can be amended; press "power", the set power will flash 3 times, press the number button of the desired new power level, the cooking will continue at the new power level for remaining time.

Maximum cooking time which can be set is 99 minutes 99 seconds.

If the "stop/cancel" button is pushed once or the door is opened at any time during cooking; the cooking will pause. Once the door is closed, press "start/+30sec." and cooking will recommence. If the cooking is not commenced within 1 minute; or if the "stop/cancel" button is pushed twice, the cooking will not be continued.

If the zero power level is chosen - "PLO" - the oven will operate with fan but no power. This operation can be used to remove odour from the oven.

STARTING QUICK COOKING

- Without any setting, the quick cooking can be started at 100% of power by selecting a cooking time from 1 to 6 minutes by pressing the keys from 1 to 6 on the numerical panel (L). Press the "Start / +30 sec." button (N) to increase the cooking time; the max. cooking time is 99 minutes and 99 seconds.
- Without any setting, the quick cooking can be started at 100% of power with a 30-second cooking time by pressing the "Start / +30 sec." button (N). Every pressure on the same button increases the cooking time by 30 seconds; the max. cooking time is 99 minutes and 99 seconds.
- After having pressed the "Time Cook" button (R) and having selected the cooking time, press the "Start / +30 sec." button (N) to start 30-second cooking with the highest power of the microwave.

Note: During microwave, grill, combination cooking and time defrosting, the cooking/defrosting period can be increased by pressing the "start/+30sec." button again for increases of 30 seconds per press.

DEFROSTING BY WEIGHT

- Press the "Weight / Time Defrost" button (F) once; the display (E) will show "dEF1".
- Set the weight of food to be defrosted (from 100 to 2000 g) by means of the numerical panel (L). If the weight ranges between the above values, the appliance will not work.
- Press the "Start / +30 sec." button (N) to start defrosting.
- When defrosting food in plastic non microwaveable containers, only defrost until the food can be removed from the containers and placed in a microwave safe dish to complete the defrosting.

DEFROSTING BY TIME

- Press the "Weight / Time Defrost" button (F) twice; the display (E) will show "dEF2".
- Set the defrosting time (00:01 - 99:99) by means of the numerical panel (L).
- The default microwave power is level 3. To change the power level, before starting the program, press the "Power" button (Q) once, the display (E) will show "PL3", then use the numerical panel (L) to select the required power level.
- Press the "Start / +30 sec." button (N) to start defrosting. The remaining defrosting time will be shown.

MULTI-STAGE COOKING

Two stages can be set for cooking; if defrosting is required then that needs to be the first stage.

Example: Defrost for 5 minutes; then cook at 80% power for 4 minutes

- Press the "Weight / Time Defrost" button (F) twice; the display (E) will show "dEF2".
- Press "time cook" and then press "5" "0" "0"
- Press the "Power" button (Q) once, and then the button "8" on the numerical panel (L) to select 80% of microwave power.
- Press the "Start / +30 sec." button (N) to start cooking, and buzzer will sound once for the first section,

defrosting time counts down; buzzer will sound once again entering the second cooking. When cooking finish, buzzer sounds five times.

AUTO MENU COOKING

The quantities oven of has 8 an different auto menu types of which foodshelps . these you to menus quickly are obtained programme just to by cooki pressing weights the or number buttons as below:

| Menu | Weight | Press | Display |
|------------------|---|--------------|------------|
| Dinner plate | 250 g | once | 250 |
| | 350 g | twice | 350 |
| | 500 g | 3 times | 500 |
| Fish | 200 g | once | 200 |
| | 300 g | twice | 300 |
| | 400 g | 3 times | 400 |
| | 500 g | 4 times | 500 |
| | 600 g | 5 times | 600 |
| Potato | 1 (approx. 230 g) | once | 1 |
| | 2 (approx. 460 g) | twice | 2 |
| | 3 (approx. 690 g) | 3 times | 3 |
| Frozen pizza | 100 g | once | 100 |
| | 200 g | twice | 200 |
| | 400 g | 3 times | 400 |
| Frozen vegatbles | 150 g | once | 150 |
| | 350 g | twice | 350 |
| | 500 g | 3 times | 500 |
| Beverage | 1 (approx. 120 ml) | once | 1 |
| | 2 (approx. 240 ml) | twice | 2 |
| | 3 (approx. 360 ml) | 3 times | 3 |
| Meat | For chicken: Press 'meat' once to select chicken. Press 'start'+30sec' to confirm 400g chicken. Press 'meat' to select higher weight of chicken. | | CHIC > 400 |
| | 600 g | Once more | 600 |
| | 800 g | Twice more | 800 |
| | 1000 g | 3 times more | 1000 |
| | 1200 g | 4 times more | 1200 |

| Menu | Weight | Press | Display |
|------|--|--------------|------------|
| Meat | For beef: Press 'meat' twice to select beef. Press 'start/+30sec' to confirm 300g beef. Press 'meat' to select higher weight of beef. | | BEEF > 300 |
| | 500 g | Once more | 500 |
| | 700 g | Twice more | 700 |
| | 900 g | 3 times more | 900 |
| | 1100 g | 4 times more | 1100 |
| | For veal: Press 'meat' 3 times to select veal. Press 'start/+30sec' to confirm 150g veal. Press 'meat' to select higher weight of veal. | | UL > 150 |
| | 300 g | Once more | 300 |
| | 450 g | Twice more | 450 |
| | 600 g | 3 times more | 600 |
| | 750 g | 4 times more | 750 |

Example: to cook 700gm of beef:

- Press "meat" twice to confirm beef menu, display shows "BEEF".
- Press "start/+30sec." to confirm the menu.
- Press "meat" twice more to show weight selected.
- Press "start/+30sec.", beep sounds and cooking commences and display shows remaining cooking time.
- At end of cooking beep sounds 5 times.

IMPORTANT: microwaveable plastic dishes should not be used in the grill or combination modes.

| Press | Display | Microwave power | Grill power |
|---------|---------|-----------------|-------------|
| Once | G - 1 | - | 100% |
| Twice | C - 1 | 55% | 45% |
| 3 times | C - 2 | 36% | 64% |

GRILL AND COMBINATION COOKING

Example: The grill can be used on its own or in 2 combination levels with the microwave operating at the same time. these 3 options can be selected by pressing the "grill/combi" button. Use the Grill and Combination to cook steaks, chops, kebabs, sausages, burgers etc.

GRILLING

- To use the grill only first place the food on a suitable dish in the oven, using the grill rack as necessary.
- Position the grill (E) into the oven on the glass base (B).
- Press the "Grill / Combo" button (I) once and the display (E) will show "G-1".
- Using the numerical panel (L), enter the cooking time (the max. cooking

time is 99 minutes and 99 seconds.

Ex.: to set 12 minutes and 50 seconds, press in sequence 1, 2, 5, 0).

- Press the "Start / +30 sec." button (N) to confirm cooking time and start cooking.

Note: when using the grill it is suggested that the food should be turned over at least once during the cooking so that it is grilled on both sides.

Far grill setting, when the cooking time reaches half way, the oven will pause and beep twice to remind you to turn the food over. After you have done this, press "start/+30sec." to recommence.

If there is no action, the oven will beep once after a minute and restart for the second half of the cooking.

Note: The maximum cooking time which can be set is 99 minutes 99 seconds.

If you press "stop/cancel" or open the door at any point during cooking, this will pause the cooking programme. After closing the door press "start/+30sec." to resume the cooking.

To cancel the cooking at any time, press "stop/cancel" twice.

At the end of cooking the oven will beep 5 times and the display panel will show the current time.

WARNING:

microwaveable plastic dishes should not be used in the grill or combination modes.

COMBINED COOKING START (GRILL AND MICROWAVE)

- There are two combination grill and microwave setting which can be used to heat and cook and grill food ensure that the food is cooked through and browned. This is done by alternating short periods of microwave and grill throughout the total cooking time.

The two combination levels are 55% microwave: 45% grill and 36%

microwave: 64% grill.

- Position the grill (E) into the oven on the glass base (B).
- Press the "Grill / Combo" button (I) twice and the display (E) will show "C-1".
- Using the numerical panel (L), enter the cooking time (the max. cooking time is 99 minutes and 99 seconds. Ex.: to set 12 minutes and 50 seconds, press in sequence 1, 2, 5, 0).
- Press the "Start / +30 sec." button (N) to confirm cooking time and start cooking.

Note: The maximum cooking time which can be set is 99 minutes 99 seconds.

If you press "stop/cancel" or open the door at any point during cooking, this will pause the cooking programme. After closing the door press "start/+30sec." to resume the cooking.

To cancel the cooking at any time, press "stop/cancel" twice.

At the end of cooking the oven will beep 5 times and the display panel will show the current time.

WARNING:

microwaveable plastic dishes should not be used in the grill or combination modes.

- To restart cooking, close the door and press the "Start / +30 sec." button (N): the remaining time will be restarted on the display.

WARNING:

Do not use the grill for microwave cooking; for the combined cooking of the grill, the grill must be always positioned on the glass tray.

MEMORY FUNCTION

The oven can remember 3 cooking programmes for you.

- Press the "O-Memory" button (M) to select the storage procedure 1-3. The display (E) will show 1, 2, 3.

- If you have already stored your programme in selected memory, just press "start/+30sec." and the cooking will start.
- If you want to store a programme, set it as in the "multi-stage cooking" section, then press "start/+30sec." once to save the programme. If "start/+30sec." is pressed again, cooking will start; otherwise the oven will return to stand-by.

Example: set the following procedure as second memory, that is memory 2 and cook food with 80% of microwave power for 3 minutes and 20 seconds.

- 1) press the "O-Memory" button (M) twice until the display will show "2".
- 2) Press the "Time Cook" button (R) once, and then press the buttons "3", "2", "0" in sequence on the numerical panel (L).
- 3) Press the "Microwave power" button (Q) once and the display will show "PL10". Then press the button "8" on the numerical panel (L); the display will show "PL8".
- 4) Press the "Start / +30 sec." button (N) to save setting. The buzzer sounds and the oven returns to stand-by.

Note:

Then to cook with the saved programme, just press "0/memory" twice, the display shows "2", then press "start/+30sec." and cooking starts

If there is a power failure - stored programmes will need to be re-stored.

INQUIRY FUNCTION

- To check the current timer during cooking, press the "clock/timer" button and the current timer will be displayed for 3 seconds.
- During microwave and multi-stage cooking, press "power" and the microwave power level will be displayed for 3 seconds.

FAN OPERATES AFTER LENGTHY COOKING

After cooking of 5 minutes or more, when the cooking stops the fan will continue to run for 15 seconds to help cool the microwave.

SAFETY FUNCTION FOR CHILDREN

The oven has a safety lock which prevents the oven being operated.

- To stop the appliance, keep pressed the "Stop/Cancel" button (O) for 3 seconds; the appliance will emit a sound indicating the start of the safety state for children and the display will show the symbol "[: : : : :]".
- To unlock the appliance, keep pressed the "Stop/Cancel" button (I) for 3 seconds; the appliance will emit a long sound.

OVEN LIGHT AND OVEN DOOR

- If the oven door is kept open for 10 minutes without any operation, the oven light will switch off.

COOKING END

- At the end of cooking, there are 5 beeps as a reminder that cooking is complete.

cleaning and maintenance

ATTENTION:

NEVER IMMERSE THE APPLIANCE BODY, THE PLUG AND THE POWER CORD IN WATER OR OTHER LIQUIDS, USE A DAMP CLOTH FOR CLEANING.

EVEN WHEN NOT IN USE, UNPLUG THE APPLIANCE BEFORE MOUNTING OR REMOVING THE SINGLE PARTS OR BEFORE CLEANING.

- The oven cavity must always be clean. When there are food/liquid residues inside the oven, clean the sides with a damp cloth. If the oven is very dirty, a mild detergent may be used. Avoid sprayers or too aggressive detergents as they may leave stains or strips or opacify the door surface.
- The outside surface is to be cleaned with a damp cloth only. To prevent the operating parts inside the oven from damaging, there must be no water traces in the ventilation openings.

- Often clean the door and the window on both sides, the sealed locks and the parts nearby, using a damp cloth, to remove squirts or residues. Do not use an abrasive detergent in any case.
- The control panel must always be dry. Clean it with a soft, damp cloth. When carrying out this procedure, leave the door open to prevent the oven from starting accidentally.
- Wipe steam from the inner/outside part of the door by means of a soft cloth. This may occur when working in high-humidity conditions and, therefore, it is normal.
- Sometimes, it is necessary to remove the glass base to clean it. Clean the base with soapy, warm water or a dish detergent.
- The rotating ring and the bottom of the oven must be kept cleaned to avoid too much noise, therefore clean them with water and mild detergent or a dish detergent. After having removed the ring for cleaning, re-position it properly.
- Remove the smell from the oven cavity by mixing a cup of water and the lemon juice and peel in a deep microwave container, put it into the oven and let the latter work for 5 minutes. Clean thoroughly and wipe with a soft cloth.
- For replacing the oven light, contact the dealer.
- Clean the oven on a regular basis and remove any food residue. Otherwise, the surfaces may deteriorate, thus reducing the appliance life or causing a risk condition.

service and customer care

- If you experience any problems with the operation of your appliance, before requesting assistance visit www.kenwoodworld.com.
- Please note that your product is covered by a warranty, which complies with all legal provisions

concerning any existing warranty and consumer rights in the country where the product was purchased.

- If your Kenwood product malfunctions or you find any defects, please send it or bring it to an authorised KENWOOD Service Centre. To find up to date details of your nearest authorised KENWOOD Service centre visit www.kenwoodworld.com or the website specific to your Country.

- Made in China.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.