

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles and knobs.
- To protect against fire, electrical shock and personal injury, do not immerse cord, plug or appliance in water or other liquid.
- Never allow the appliance to be used by children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before fitting or taking off parts, and before cleaning the appliance.
- Do not operate with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments or spare parts not recommended by the appliance manufacturer may result in fire, electrical shock or personal injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electrical burner, or in a heated oven.
- Plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use the appliance for other than the intended use. This appliance is to be utilized for domestic use only. Any other use is to be considered improper and therefore, dangerous.

WARNING: To reduce the risk of fire or electric shock, do not remove the exterior of the unit or the cover. Don't attempt to repair or modify the machine, doing so will void the warranty. Repair should be done by authorized service personnel only!

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

SHORT CORD INSTRUCTIONS

- A short power cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- Longer, detachable power supply cords or extension cords are available and may be used if care is exercised in their use.
- If an extension cord is used, the marked electrical rating should be at least as great as the electrical rating of the appliance. If the appliance is provided with 3- wire, grounding type cord, the extension should be a GROUNDING TYPE 3 - WIRE CORD. The longer cord should be arranged so that it will not drape over the counter-top or table top where it can be pulled on by children or tripped over.
- Your product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

IMPORTANT SAFEGUARDS

Symbols used in these instructions

Important warnings are identified by these symbols.

It is vital to respect these warnings.



Danger!

Failure to observe the warning could result in life threatening injury by electric shock.



Important!

Failure to observe the warning could result in injury or damage to the appliance.



Danger of burns!

Failure to observe the warning could result in scalds or burns.



Please note:

This symbol identifies important advice or information for the user.

Instruction for use

Read this Instruction for Use carefully before using the appliance. Failure to follow this Instruction for Use may result in burns or damage to the appliance.

The manufacturer is not liable for damage deriving from failure to respect this Instruction for Use.



Please note: Keep this Instruction for Use.

If the appliance is passed to other persons, they must also be provided with this Instruction for Use.

Checking the appliance

After removing the packaging, make sure the product is complete and undamaged and that all accessories are present.

Do not use the appliance if it is visibly damaged.

Contact De'Longhi Customer Services.

TECHNICAL DATA

| | |
|---------------------------|---------------------|
| Mains voltage | 120V~60Hz |
| Absorbed power | 1300 W |
| Pressure | 15 bar |
| Water tank capacity | 1 l |
| Dimensions WxHxD | 149x305x330 (414)mm |
| Weight..... | 4,04 Kg |






None of the components or accessories is dishwasher safe.

DESCRIPTION

The terminology below will be used repeatedly on the following pages.

Description of the appliance

(see page 3)

- A. Water tank lid
- B. Tank extraction handle
- C. Water tank
- D. Cup warmer
- E. Boiler outlet
- F. ON/OFF switch
- G. Cup tray
- H. Drip tray full indicator
- I. Drip tray
- J. Hot water/steam spout
- K. Hot water/steam connection nozzle
- L. Hot water/steam connection tube
- M. Steam dial
- N. Filter holder
- O. Measure/presser
- P. 1 cup filter ( symbol under filter)
- Q. 2 cup filter ( symbol under filter)
- R. Pod filter ( symbol under filter)
- S. Water softener filter (*not included, can be purchased from authorised Customer Services)

Control panel description

- T. One cup button
T1. ON light on button (white)
- U. Two cups button
U1. ON light on button (white)
- V. Steam button
V1. ON light on button (white)
V2. Descale light (orange)

INSTALLING THE APPLIANCE



Important!

When you install the appliance, you should respect the following safety warnings:

- Water penetrating the appliance could cause damage. Do not place the appliance near taps or sinks.
- The appliance could be damaged if the water it contains freezes. Do not install the appliance in a room where the temperature could drop below freezing point.
- Arrange the power cable in such a way that it cannot be damaged by sharp edges or contact with hot surfaces (e.g. electric hot plates).
- The appliance gives off heat. After positioning the appliance on the worktop, leave a space of at least 3 cm be-

tween the surfaces of the appliance and the side and rear walls and at least 15 cm above the coffee maker.

Connecting the appliance



Danger!

Check that the mains power supply voltage corresponds to that indicated on the rating plate on the bottom of the appliance. Connect the appliance to an efficiently earthed and correctly installed socket with a minimum current rating of 10A only. If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type by a qualified professional.

FILLING THE WATER TANK

1. Extract the tank by pulling it upwards (fig. 1).
2. Open the lid and fill the tank with fresh clean water, taking care not to exceed the MAX level (fig. 2).
Put the tank back in the appliance, pressing lightly to open the valves located on the bottom of the tank.
3. More simply, the tank can also be filled without extracting it by pouring the water directly from a jug.



Important:

Never operate the appliance without water in the tank or without the tank.



Please note:

It is normal for there to be water in the space under the tank. This should therefore be dried regularly with a clean sponge.

SETTING UP THE APPLIANCE

- Turn the appliance on by pressing the ON/OFF switch (fig. 3). The appliance performs a self-diagnosis cycle, indicated by sequential flashing of the three buttons.
- The and lights flash to indicate the appliance is heating up.
When the lights stop flashing and remain on steadily, the appliance is ready for use.
- Place a container with a minimum capacity of 100 ml under the hot water/steam spout (fig. 4).
- Turn the hot water/steam dial to the position (fig. 5) and deliver about 100 ml of water, then close the dial again (symbol).
- Attach the filter holder to the appliance. To attach correctly, align the filter holder handle with the INSERT symbol (fig. 9), attach the filter holder and rotate the handle towards the right until aligned with the CLOSE symbol.

- To rinse the machine's internal circuits, place a container under the coffee spout and press the key. Repeat this procedure 5 times.
- Then proceed with rinsing the "steam" circuit: place a container under the hot water spout and turn the dial to the position. Hot water is delivered. When the appliance automatically stops the hot water delivery, close the dial (symbol). Repeat this procedure 1 more time (If necessary, refill the tank).



Please note:

The first time you use the coffee maker, you need to make 4/5 cups of coffee or 4/5 cappuccinos before it starts to give satisfactory results.

PROGRAMMING THE SETTINGS MENU

To access the menu, make sure the appliance is ready for use, then press and hold the button for 10 seconds until the three buttons flash in sequence:

The appliance is now in programming mode.

Set the coffee maker as you wish, then exit the settings menu by waiting for 15 seconds.



Please note:

If no selections are made for 15 seconds, the appliance automatically exits programming and is ready for use again.

Setting coffee temperature

To modify the temperature of the water used to make the coffee, proceed as follows:

1. Access the settings menu;
2. Press the button to enter the coffee temperature selection mode.

The lights corresponding to the current selection come on:



low



medium



high

3. The lights start flashing in sequence;
4. Press the button corresponding to the required temperature:



low



medium



high

5. The button flashes to indicate that the selection has been saved.


The appliance exits the menu and is ready for use.

Setting water hardness

The light (V2) indicating that the appliance needs descaling comes on after a period of operation established according to water hardness.




The appliance can also be programmed according to the hardness of the mains water in the various regions so that descaling needs to be performed more or less frequently.

Proceed as follows:

1. Access the settings menu;
2. Press the  button to enter the water hardness selection mode. The lights corresponding to the current selection come on:



3. The lights start flashing in sequence;
4. Press the button corresponding to the water hardness in your area:

|  soft water |  medium water |  hard water |
|---|--|--|
| <10°dH | 10°dH - 20°dH | >20°dH |
| <18°fH | 18°fH - 36°fH | >36°fH |
| <180mg/l CaCO ₃ | 180-300mg/l CaCO ₃ | 360mg/l CaCO ₃ |


- The  button flashes to indicate that the selection has been saved.


The appliance exits the menu and is ready for use.

Adjusting auto-off (stand-by)

To save energy, an auto-off function turns the appliance off when not used for a long period.

To turn it back on again, press any button on the control panel.

1. Access the settings menu;
2. Press the  button to enter the auto-off time selection mode. The lights corresponding to the current selection come on:

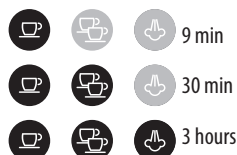

3. The lights start flashing in sequence;
4. Press the button corresponding to the required time:







5. The  button flashes to indicate that the selection has been saved.

The appliance exits the menu and is ready for use.

Default values (reset)

This resets all menu settings and programmed quantities back to the default values.

To reset the default values, proceed as follows:

1. Access the settings menu;
2. Turn the steam dial to the  position;
3. Press the  button. The three lights flash simultaneously to confirm that the original settings have been restored.
4. The  and  lights flash to indicate that the steam dial must be closed again (O symbol).

When the steam dial has been closed, the appliance is ready for use.



HOW TO MAKE ESPRESSO COFFEE

Tips for a hotter coffee

For hotter espresso coffee, you should:

- Attach the filter holder to the appliance with the filter in place but **without adding coffee**. Using the same cup as will later be used to make the coffee, press the 1 cup button and deliver hot water into the cup to heat it.
- Raise the coffee temperature in the settings menu.
- Rest the cups you will be using on the cup warmer (D) which becomes hot during operation.



How to make espresso coffee using pre-ground coffee

1. Place the ground coffee filter (P or Q) in the filter holder (fig. 6). To make one coffee, use the filter with the  symbol on the bottom, to make two coffees, use the filter with the  symbol on the bottom.
2. To make just one coffee, place one level measure of pre-ground coffee (about 7 g) in the filter (fig. 7). To make two coffees, place two loosely filled measures (about 7+7 g) of pre-ground coffee in the filter. Fill the filter a little at a time to prevent the pre-ground coffee from overflowing.



Important:

For correct operation, before filling with pre-ground coffee, make sure there are no coffee residues left in the filter from the last time you made coffee.

3. Distribute the pre-ground coffee evenly and press lightly with the presser (fig. 8). Correct pressing of the pre-ground coffee is essential to obtain a good espresso. If you press too firmly, the coffee will be delivered slowly and will be strong. If you press too lightly, the coffee will be delivered quickly and will be weak.
4. Remove any excess coffee from the rim of the filter holder and attach the filter holder to the appliance. To attach correctly, align the filter holder handle with the INSERT symbol (fig. 9), attach the filter holder and rotate the handle towards the right until aligned with the CLOSE symbol.
5. Place the cup or cups under the filter holder spouts (fig. 10). You are recommended to warm the cups before making coffee by rinsing them with a little hot water.
6. Make sure the lights corresponding to the coffee buttons are on, then press the  or  coffee button. The appliance proceeds to make the coffee and delivery is interrupted automatically.


How to make espresso coffee using pods

Please note:

use pods conforming to the ESE standard, indicated on the pack by the following symbol.



The ESE standard is a system accepted by leading pod producers and enables espresso coffee to be prepared simply and cleanly.

1. Place the filter for coffee pods (with the  symbol on the bottom) in the filter holder.
2. Insert the pod, centring it as far as possible on the filter (fig. 11). Always follow the instructions on the pod pack to position the pod on the filter correctly.

Proceed as described in points 4 to 6 in the previous section.

Please note:

- While the appliance is making coffee, delivery can be interrupted at any moment by pressing the coffee button pressed previously.
- At the end of delivery (within 3 seconds), to increase the amount of coffee in the cup, press and hold the coffee button pressed previously. Delivery is automatically interrupted after a few seconds.
- To remove the filter holder, turn the handle from right to left.



Danger of burns!

To avoid splashes, never remove the filter holder while the appliance is delivering coffee. Always wait for a few seconds after delivery.


Programming the quantities of coffee in the cup

The appliance is set by default to automatically deliver standard quantities.

To change these quantities, proceed as follows:



1. Place one or two cups under the filter holder spouts.
2. Press and hold the button you want to programme ( or ). The appliance starts delivering coffee and the other coffee button flashes to indicate that programming is underway.
3. Once the required quantity of coffee has been delivered into the cup, release the button. Delivery stops and the light flashes to indicate that the quantity has been saved correctly.
4. When the two coffee lights come on steadily, the appliance is ready for use.

HOW TO MAKE CAPPUCCINO

1. Prepare the espresso coffees as described in the previous paragraphs, using sufficiently large cups.
2. Press the  button (fig. 12). The light flashes;
3. In the meantime, fill a recipient with about 100 g of milk for each cappuccino to be prepared.
The milk must be at refrigerator temperature (not hot!). In choosing the size of the recipient, bear in mind that the milk doubles or triples in volume (fig. 13).

Please note:



You are recommended to use semi-skimmed milk at refrigerator temperature.

4. Wait for the light corresponding to the  button to come on steadily, indicating that the boiler has reached the ideal temperature to produce steam.
5. Position an empty container under the cappuccino maker and open the dial for a few seconds to eliminate any air left in the circuit. Close the dial again.
6. Place the recipient containing the milk under the cappuccino maker.
7. Dip the cappuccino maker in the milk for a few millimetres (fig. 14).
Turn the dial to the  position. Steam is delivered from the cappuccino maker, giving the milk a creamy frothy appearance. To obtain a creamier froth, immerse the

- cappuccino maker in the milk and rotate the container with slow upward movements.
- When the milk has doubled in volume, immerse the cappuccino maker deeply and continue heating the milk (fig. 15). When the required temperature (the ideal is 60°C) and froth density is reached, interrupt steam delivery by turning the steam dial clockwise.
 - Pour the frothed milk into the cups containing the espresso coffee prepared previously.
- The cappuccino is ready. Sweeten to taste and if desired, sprinkle the froth with a little cocoa powder.



Please note:

- to prepare more than one cappuccino, first make all the coffees then at the end prepare the frothed milk for all the cappuccinos.
- to exit the steam function, press any button. The lights  and  flash to indicate that the temperature is too high to make coffee (see section "Cooling the boiler").

You should not deliver steam for more than 60 seconds.



Important:

For hygiene reasons, the cappuccino maker should always be cleaned after use.

Proceed as follows:

- Turn the steam dial to deliver a little steam for a few seconds (points 2, 4 and 5 of the previous section). This causes the cappuccino maker to deliver any milk left in its circuits. Press the ON/OFF button to turn the appliance off.
- With one hand, hold the cappuccino maker tube firmly, with the other, release the cappuccino maker by turning it clockwise, then pull off downwards (fig. 16).
- Remove the rubber steam connection nozzle from the spout by pulling it downwards (fig. 17).
- Wash the cappuccino maker and steam connection nozzle thoroughly with warm water (fig. 18).
- Check the hole shown by the arrow in fig. 18 is not blocked.
- Put the steam connection nozzle back, pressing upwards to insert it onto the steam tube.
- Replace the cappuccino maker by pushing upwards and turning anticlockwise.

Cooling the boiler

To make coffee again immediately after frothing milk, the boiler must first be cooled or the coffee will be burnt.


Proceed as follows:

- place a container under the cappuccino maker;
- open the steam dial to deliver hot water and cool the boiler;

- hot water delivery is interrupted automatically when the boiler is cool. When the pump stops operating and no more water is delivered, close the steam dial.

The coffee maker is now ready for use.

HOT WATER

- Turn the appliance on by pressing the ON/OFF button (fig. 4). Wait for the coffee lights to come on steadily.
- Place a recipient under the cappuccino maker.
- Turn the dial to the  position. Hot water is delivered from the cappuccino maker.
- To stop hot water delivery, close the dial and press any button.

You should not deliver hot water for more than 60 seconds.

CLEANING



Danger!

Before cleaning the outside of the appliance, turn it off, unplug from the mains socket and allow to cool.

Cleaning the drip tray



Important!

The drip tray is fitted with a level indicator (red) showing the level of water it contains (fig. 19).

Before the indicator protrudes from the cup tray, the drip tray must be emptied and cleaned, otherwise the water may overflow the edge and damage the appliance, the surface it rests on or the surrounding area.

- Remove the drip tray (fig. 20).
- Remove the cup tray, empty the water and clean the drip tray with a cloth, then reassemble the drip tray.
- Put the drip tray back in place.

Cleaning the coffee filters

Clean the coffee filters weekly:

1 and 2 cup filters

- Extract the perforated filter by pulling the tab (fig. 21);
- Rinse the filters under running water (fig. 22);
- Make sure the holes are not blocked. If necessary, clean with a pin (figs. 22 and 23);
- Place the perforated filter in the filter housing and press as far as it will go.

Pod filter

Rinse under running water. Make sure the holes are not blocked. If necessary, clean with a pin (figs. 22 and 23).

Cleaning the boiler outlet

After every 200 coffees, rinse the boiler outlet by delivering about 0.5 l of water from the boiler outlet (press the coffee button without using ground coffee).

Other cleaning operations

1. Do not use solvents or abrasive detergents to clean the coffee maker. Use a soft damp cloth only.
2. Clean the filter holder cup regularly.

Cleaning the water tank


Clean the water tank regularly (about once a month) with a damp cloth and a little mild washing up liquid.



Danger!

During cleaning, never immerse the coffee maker in water. It is an electrical appliance.

Descaling






Descalc the appliance when the orange light on the  button comes on.



Important!

- Before use, read the instructions and the labelling on the descaler pack.
- You should use De'Longhi descaler only. Using unsuitable descaler and/or performing descaling incorrectly may result in faults not covered by the manufacturer's guarantee.




Proceed as follows:

1. (IF PRESENT, REMOVE THE WATER SOFTENER FILTER). Fill the tank with the descaler solution, obtained by diluting the descaler provided with water (fill the water tank up to the MAX level).
2. Press the ON/OFF button.
3. Make sure the filter holder is not attached and position a recipient under the hot water spout and boiler outlet (A5) (fig. 24).
4. Wait for the  and  lights to come on steadily, indicating that the appliance is ready for use.
5. Press and hold the  button for 10 seconds until the three buttons flash in sequence.
6. Turn the steam dial to the  position.
7. Press the  button to start descaling.
8. The descale programme starts and the descaler liquid comes out of the water spout. The descale programme removes limescale deposits from inside the appliance by automatically performing a series of rinses and pauses until the tank is completely empty.



Please note:


During descaling, to clean the boiler outlet, close the steam dial from time to time to deliver small quantities of descaler from the boiler outlet.

9. The appliance stops operation and the orange  light continues to flash, indicating that descaling is still underway.
10. The appliance is now ready for rinsing through with clean water. Extract the water tank, empty, rinse under running water, fill with fresh water up to the MAX level and put back in the appliance (If used, insert the water softener filter).
11. Empty the container used to collect the descaler solution and replace it empty under the hot water spout.
12. Make sure the steam dial is in the  position, then press the  button to start rinsing.



Please note:

During rinsing, to clean the boiler outlet, close the steam dial from time to time to deliver small quantities of water from the boiler outlet.

13. When the water tank is empty, the orange light goes out and descaling is complete.
14. Make sure the steam dial is in the closed position ( symbol).

The appliance is ready for use.







Please note!

- If the descaling cycle is not completed correctly (e.g. no electricity) we recommend repeating the cycle;
- If the water tank has not been filled to the MAX level, at the end of descaling, the appliance requests a further rinse to guarantee that the descaler solution has been completely eliminated from the machine's internal circuits.




Repair of damage to the coffee maker caused by limescale is not covered by the guarantee unless descaling is performed regularly as described above.

EXPLANATION OF LIGHTS

| Lights | Operation | Explanation of lights |
|---|--------------------------------|---|
|  | The ON/OFF button is turned on | The appliance performs a self-diagnosis cycle, indicated by sequential flashing off the lights |
|  | The appliance is on | Flashing lights: the appliance is heating up to make coffee Lights on steadily: the appliance is ready to make coffee The lights flash rapidly: the tank is empty or the appliance will not make coffee See section: "Troubleshooting" |
|  | The steam function is required | Flashing light: the appliance is heating up to deliver steam Light on steadily: the appliance is ready to deliver steam |
|  | Steam dial open | Flashing lights: close the steam dial |
| | High boiler temperature | Flashing lights: Cool the boiler as described in the corresponding section |

TROUBLESHOOTING

| Problem | Cause | Solution |
|---|--|---|
| No espresso coffee is delivered | No water in the tank | Fill the tank |
| | The holes in the filter holder are blocked | Clean the filter holder spout holes |
| | The tank has been inserted incorrectly and the valves on the bottom are not open | Press the tank down lightly to open the valves on the bottom |
| | Limescale in the water circuit | Descale as described in the section "Descaling" |
| The espresso coffee drips from the edges of the filter holder rather than the holes | The filter holder has been inserted incorrectly or is dirty | Attach the filter holder correctly and rotate firmly as far as it will go |
| | Attach the filter holder correctly and rotate firmly as far as it will go | Have the espresso boiler gasket replaced by Customer Services |
| | The holes in the filter holder spouts are blocked | Clean the spout holes |
| The filter holder cannot be attached to the appliance | Too much coffee has been placed in the filter | Use the measure supplied and make sure you are using the correct filter for the type of preparation |

| | | |
|--|--|--|
| The coffee froth is too light (delivered from the spout too fast) | The pre-ground coffee is not pressed down firmly enough | Press the pre-ground coffee more firmly |
| | There is not enough pre-ground coffee | Increase the quantity of pre-ground coffee |
| | The pre-ground coffee is too coarse | Use only pre-ground coffee for espresso coffee makers |
| | The wrong type of pre-ground coffee is being used | Change the type of pre-ground coffee |
| The coffee froth is too dark (delivered from the spout too slowly) | The pre-ground coffee is pressed down too firmly | Press the coffee down less firmly |
| | There is too much pre-ground coffee | Reduce the quantity of pre-ground coffee |
| | The espresso boiler outlet is blocked | Clean as described in the section "Cleaning the boiler outlet" |
| | The filter is blocked | Clean as described in the section "Cleaning the filter" |
| | The pre-ground coffee is too fine | Use only pre-ground coffee for espresso coffee makers |
| | The pre-ground coffee is too fine or damp | Use pre-ground coffee for espresso coffee makers only and make sure it is not too damp |
| | Limescale in the water circuit | Descale as described in the section "Descaling" |
| After delivering coffee, the filter remains attached to the boiler outlet | | Insert the filter holder again, deliver coffee, then remove the filter holder |
| The appliance will not make any drink and the  ,  and  lights flash for a few seconds | No water in the tank | Fill the tank with water |
| | The tank has been inserted incorrectly and the valves on the bottom are not open | Press the tank down lightly to open the valves on the bottom |
| | The espresso boiler outlet is blocked | Clean as described in the section "Cleaning the boiler outlet" |
| | The filter is blocked | Clean as described in the section "Cleaning the filter" |
| | Limescale in the water circuit | Descale as described in the section "Descaling" |
| The appliance does not function and all the lights flash | | With an extreme use, the appliance reaches a high temperature. Simply wait: the appliance will cool down automatically |
| The appliance does not function and all the lights flash for a long time | Abnormal machine conditions | Disconnect the appliance and contact authorised Customer Services. |

LIMITED WARRANTY

This warranty applies to all products with De'Longhi or Kenwood brand names.

What does the warranty cover?

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit. In the event of a products replacement or return, the unit must be returned transportation prepaid. The repaired or new model will be returned at the company expense.

This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current (AC) circuit.

How long does the coverage last?

This warranty runs for two years (2) from the purchase date found on your receipt and applies only to the original purchaser for use.

What is not covered by the warranty?

The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

How do you get service?

If repairs become necessary, see contact information below:

U.S. Residents: Please contact our toll free hotline at 1-866-528-8323 (1-866-Latte-Best) or log onto our website at www.delonghi.com

Residents of Canada: Please contact our toll free hotline at 1-888-335-6644 or log onto our website at www.delonghi.com

Residents of Mexico: Please contact our toll free number 01-800-711-8805 for assistance or log onto our website at www.delonghi.com

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with De'Longhi. Some states/countries do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

How does country law apply?

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state/country to country.