


KENWOOD

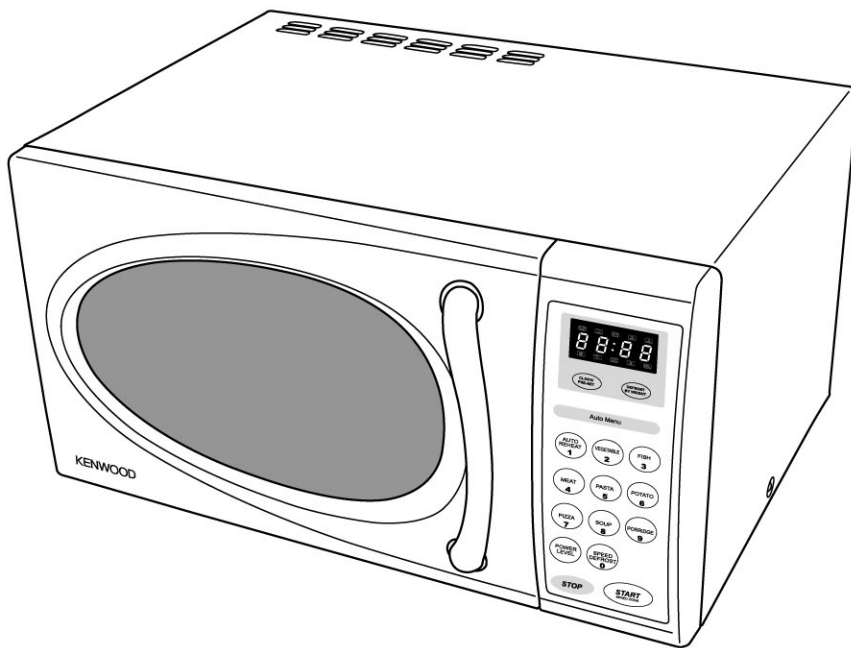

MW570 MW577 series

Please read through these instructions carefully before operating your microwave oven.

ABOUT YOUR KENWOOD MICROWAVE OVEN

Your new Kenwood microwave oven is an 900 watt model with 25 litre capacity, 5 power levels and 9 auto menu programmes. It can be used for defrosting, cooking and reheating.

For your safety and that of those around you, please take care to read the Important Safeguards listed here:

IMPORTANT SAFEGUARDS

- ❶ **IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.**
- ❷ **DO NOT** under any circumstances use this appliance for anything other than its intended domestic purpose.
- ❸ **DO NOT** use this appliance if there is any visible sign of damage to the oven, supply cord or door seal or if it has been accidentally dropped.
- ❹ **DO NOT** immerse this appliance, the supply cord or the plug in water or any other liquid.
- ❺ **DO NOT** let the electrical supply cord hang over the edge of a work surface or allow it to touch hot surfaces such as a gas or electric hob.
- ❻ **WARNING:** The appliance is not intended for use by young children or infirm persons without supervision. Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- ❼ **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode. Eggs in their shells and whole hard-boiled eggs should not be heated in a microwave oven since they may explode even after microwave heating has ended.
- ❽ To reduce the risk of fire in the oven space you should supervise the oven when in use especially when food is heated or cooked in disposable containers of plastic, paper or other combustible materials.
- ❾ If smoke is observed, keep the oven door closed and switch off and disconnect the power supply. Leave well alone until the smoke has ceased.
- ❿ **DO NOT** operate the oven when it is empty as this could seriously damage the oven.
- ⓫ **DO NOT** use the oven space for any type of storage.
- ⓬ **DO NOT** cook foods such as egg yolks, potatoes, chicken livers etc, without first piercing several times with a fork.
- ⓭ **DO NOT** cook foods directly on the glass tray. Place food in a suitable dish before placing in the oven.
- ⓮ **DO NOT** use metal pans or dishes with metal handles. **DO NOT** use anything with a metal trim, or covered metal twist ties in the oven.
Before use, check that the utensils are suitable for use in microwave ovens.1

IMPORTANT SAFEGUARDS

- 15 Always test the temperature of cooked food especially if you are heating or cooking foods or liquids for babies. Foods and liquids should be allowed to stand for a few minutes and stirred to distribute heat evenly. Remember to stir with a non-metal utensil to prevent the food or liquid suddenly bubbling over the container.
- 16 There are certain foods such as jam, mincemeat and Christmas pudding, which heat up very quickly, and care should be taken to check the temperature before consuming. When heating or cooking certain foods with a high fat or sugar content do not use plastic containers.
- 17 If using a thermometer ensure it is a model specifically for use in microwave ovens.
- 18 **DO NOT** attempt to deep fry food in the microwave.
- 19 Please remember when microwaving liquids that although the container is not hot the liquid inside is, and will release steam or spit as in conventional cooking. Microwave heating of beverages can result in delayed eruptive boiling, therefore care shall be taken when handling the container.
- 20 **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
- 21 **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to microwave energy.

before Plugging in

- Before switching on make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.
- This appliance must be earthed.

Note: This appliance complies with European Economic Community Radio Interference Directive 89/336/EEC.

radio interference


Operation of the microwave oven can cause interference to your radio, TV or similar equipment. If interference occurs, it can be reduced by taking the following measures:

- a) Clean the oven door and seals.
- b) Move the radio or television antenna.
- c) Relocate the oven away from the receiver.

before using for the first time

1. Remove all labels and any packaging from inside the oven. **Do not attempt to remove the Mica cover that is screwed to the oven cavity, as it is there to protect the magnetron.**
2. Check the oven for signs of damage, such as misaligned or damaged door, dents in the interior cavity or damaged seals. Do not use the oven if damaged.
3. Do not place anything on top of the oven.
4. To ensure adequate ventilation keep at least 7.5cm clear on each side and back of the oven and 30cm above the oven.
5. Fit the roller support and glass tray.

HOW TO USE YOUR MIRCOWAVE OVEN

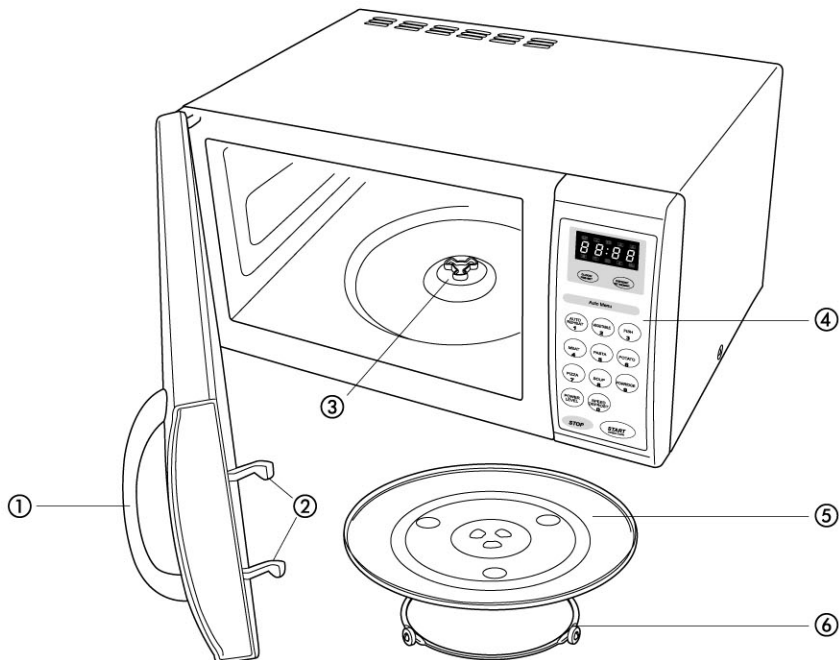


key

- | | |
|---------------------------|-----------------|
| ① door handle | ④ control panel |
| ② door safety lock system | ⑤ glass tray |
| ③ shaft | ⑥ roller ring |

WARNING: Avoiding exposure to excessive microwave energy

- **DO NOT** attempt to operate the oven with the door open as this can result in harmful exposure to microwave energy.
- **DO NOT** tamper with the safety interlocks that keep the door closed.
- **DO NOT** operate the oven if it is damaged in any way. It is particularly important that the oven door is closed properly and that there is no damage to the:
 - i. Door (bent)
 - ii. Hinges and Latches (broken or loose)
 - iii. Door seals.
- The oven should not be adjusted or repaired by anyone other than properly qualified service personnel.

THE CONTROL PANEL

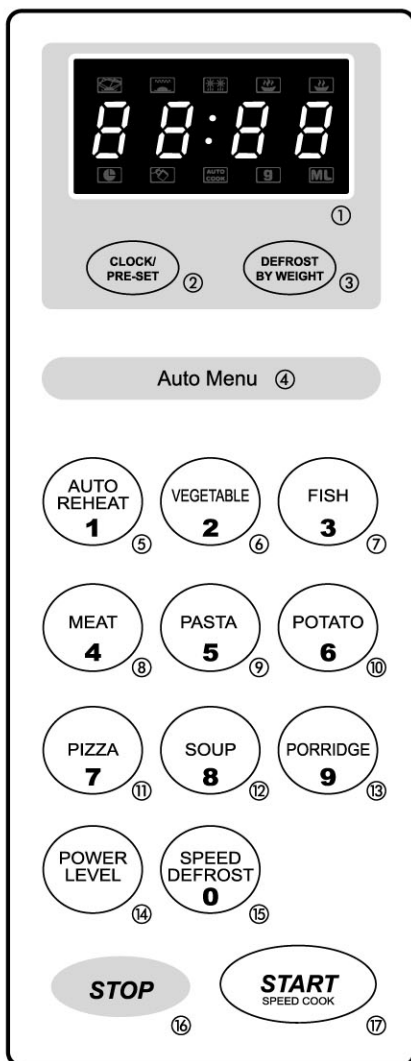

key

- ① display panel
- ② clock/pre-set pad
- ③ defrost by weight pad
- ④ auto menu pad
- ⑤ auto reheat/1 pad
- ⑥ vegetable/2 pad
- ⑦ fish/3 pad
- ⑧ meat/4 pad
- ⑨ pasta/5 pad
- ⑩ potato/6 pad
- ⑪ pizza/7 pad
- ⑫ soup/8 pad
- ⑬ porridge/9 pad
- ⑭ power level pad
- ⑮ speed defrost pad
- ⑯ stop pad
- ⑰ start/speed cook pad

(Please also see the following pages for more details).

SETTING THE CLOCK

- Switch on the supply and a beep will sound.

You will see:



Note: this clock is a 24-hour clock so, for example, for 10 am you need to set to 10:00 and 10 pm you need to 22:00.

Example setting: to set 10:15 am

- Press "Clock/Pre-set". The first '0' flashes and the clock symbol lights up in red under it '0'0:00
- Press the number buttons "1" "0" "1" "5"








- Press "Clock/Pre-set" and the clock is set.

Note that if the "Stop" button is pressed during the setting, or if there is a delay during setting of more than 1 minute then the display goes back to 0:00.

MICROWAVE COOKING

There are 5 power levels. The oven automatically cooks on high power unless set otherwise.


- To set the power level required press the “Power level” button the number of times as below.

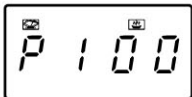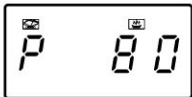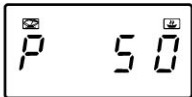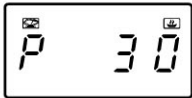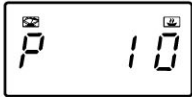Press	Power level	Display	Application
Once	High 100%		Reheat, heat water, cook vegetable and chicken
Twice	Medium high 80%		Cook rice, fish and seafood, cookies, meats
3 times	Medium 50%		Heat milk, cake, cook stews
4 times	Medium low 30%		Defrost
5 times	Low 10%		Keep warm, soften ice cream

- Select the cooking time required by keying in the minutes and seconds into the display

Example setting : to set 12 minutes 30 seconds cooking:

- Press the number buttons “1” “2” “3” “0”
- The display will show 12:30

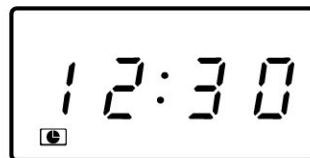

- You can now press “START” and the cooking will start and a beep will sound.
- The maximum cooking time which can be set is 99 minutes.
- If you wish to stop cooking at any point:
- Press “STOP” and/or open the door to pause the cooking programme. After closing the door, press “START” to resume the cooking.
- To cancel the cooking, press “STOP” twice.


SPEEDY COOKING

The oven can be started cooking without having to programme a cooking time. Simply press the "START" button and the oven will start cooking at full power for 30 seconds.


Press the "START" button again for further increases of 30 seconds up to 2 minutes. After that each additional press of "START" will increase the cooking time by 1 minute

Examples :

- Press once, the oven starts to cook counting down from 0:30

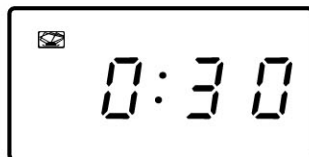


- Press another 4 times, the oven is counting down from total 4 minutes, several seconds have already passed so the display shows:

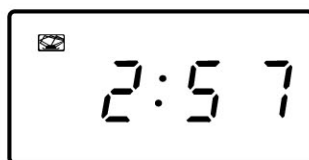


DEFROST BY WEIGHT

Example : defrost 1.25 kg (1250 gm) of frozen food.

- Press "Defrost by weight" .
The display shows dEFI

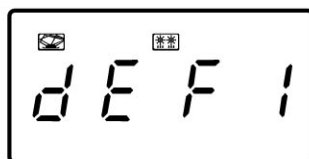

- Key in the weight to be defrosted in grams - press the number buttons "1" "2" "5" "0"
- Press "START" The oven starts defrosting, counting down from the time it has determined is needed - in this case 22 minutes

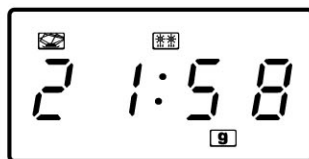

- When defrosting food in plastic non-microwaveable containers, only defrost until the food can be removed from the containers and placed in a microwave safe dish to complete the defrosting.


SPEED DEFROST

The "Speed Defrost" function is quicker than the "Defrost by weight" for quantities up to 1 kg only.

Simply start by pressing "Speed Defrost" then key in the weight to be defrosted.

Examples : defrost 0.75 kg (750 gm) of frozen food as above.

- Press "Speed Defrost". The display shows dEF2

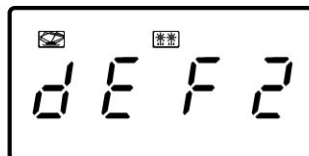



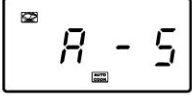






- Key in the weight to be defrosted in grams - press the number buttons "7" "5" "0"
- Press "START" The oven starts defrosting, counting down from the time it has determined is needed - in this case 10 minutes

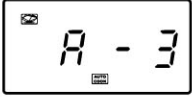

AUTO MENU COOKING

The oven has an auto menu which helps you to quickly programme to cook weights or quantities of 9 different types of foods. These menus are obtained just by pressing the number buttons as below :

Pad	Display	Cook
1		Auto Reheat
2		Vegetable
3		Fish
4		Meat
5		Pasta
6		Potato
7		Pizza
8		Soup
9		Porridge

The auto menu procedure is :


Menu	Weight(g)	Press Times	Display
A-1 Auto Reheat	150	Once	
	250	Twice	
	350	3 times	
	400	4 times	
A-2 Vegetable	150	Once	
	350	Twice	
	500	3 times	
A-3 Fish	150	Once	
	250	Twice	
	350	3 times	
	400	4 times	
	450	5 times	
A-4 Meat	150	Once	
	300	Twice	
	450	3 times	
	600	4 times	

The auto menu procedure is :


Menu	Weight(g)	Press Times	Display
A-5 Pasta	50	Once	
	100	Twice	
	150	3 times	
A-6 Potato	1	Once	
	2	Twice	
	3	3 times	
A-7 Pizza	1	Once	
	2	Twice	
	3	3 times	
A-8 Soup	500	Once	
	750	Twice	
	1000	3 times	
A-9 Porridge	550	Once	
	1100	Twice	

Examples : to cook 350 gm of vegetables :

- Press "2". The display shows A-2

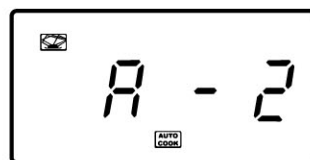

- Then press "2" twice more, the display shows 350

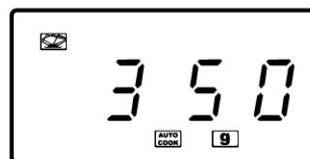


- Then press "Start"

DELAY START

The oven can be programmed to start at a future time

Example : set the oven to start cooking at 6:30pm (18:30)

- Set the cooking programme wanted
- Press “Clock/Pre-set”, the first hour digit will flash.
- Press “1” “8” “3” “0” the display will show 18:30

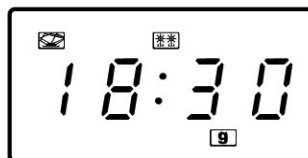

- Press “START” the display will return to the present clock time.
- At 6:30pm (18:30) the oven will start cooking

Note : The future time must be within 00:00 to 23:59

If in the process of setting the “STOP” button is accidentally pressed, then the setting will be cancelled.

The clock must be operating to be able to programme a future time.

If the pre-set cooking has not been programmed, then setting the future time acts only as an alarm clock. When the time is reached 5 beeps will sound.

INQUIRY FUNCTION

- To check the microwave power level during cooking, press the “POWER LEVEL” button and the level will be displayed for 3 seconds.
- To check the future time which has been programmed for delay start cooking, press the “CLOCK/PRE-SET” button. The pre-set time will flash on the display for 3 seconds.


FAN OPERATES AFTER LENGTHY COOKING

After cooking of 5 minutes or more, when the cooking stops the fan will continue to run for 15 seconds to help cool the microwave.

SAFETY LOCK / CHILD LOCK

The oven has a safety lock which prevents the oven being operated

- To lock the oven, press “STOP” for 3 seconds. There will be a beep to signal it is locked and the display will show

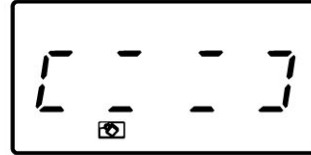

- To unlock the oven, press “STOP” for 3 seconds. There will be a beep to signal it is unlocked.

OVEN LIGHT AND OVEN DOOR

If the oven door is kept open for 10 minutes without any operation, the oven light will switch off.

COOKING END

At the end of cooking, there are 5 beeps as a reminder that cooking is complete.

CARE AND CLEANING

- ❶ Turn the oven off and remove the plug from the socket before cleaning.
- ❷ Keep the inside of the oven clean by wiping with a damp cloth. If the oven is heavily soiled a mild detergent solution may be used. Do not use harsh or aggressive detergents as this damages the oven. Do not use a knife or any other form of scraper to remove food residues from this oven.
- ❸ The outside of the oven can be cleaned with a warm damp cloth.
- ❹ Keep the control panel free from too much moisture. Clean it with a soft damp cloth only and do not use detergents or abrasives.
- ❺ If condensation accumulates inside or around the outside of the oven door, wipe it clean with a damp cloth. Condensation is quite normal and forms when moisture is present during cooking.
- ❻ Ensure the door seals and adjacent parts are kept clean by wiping with a damp cloth. If the door seal is damaged in any way the oven must not be used until it has been repaired by a Kenwood Authorised Repairer.
- ❼ It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm soapy water, then rinse and dry thoroughly.
- ❽ The roller ring and bottom surface of the oven should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven using a mild detergent and dry thoroughly with a soft cloth. The roller ring may be washed in mild soapy water, rinsed and dried thoroughly. Be sure to replace the roller ring in the correct position.
- ❾ Remove odours from your oven by combining a cup of water with the juice and rind of a lemon in a deep microwaveable bowl. Microwave for 1½ minutes and then wipe the inside of the oven with a dry cloth.
- ❿ Inspect the oven regularly for signs of corrosion – particularly around the door. If you find any signs of corrosion, arrange for the appliance to be serviced.
- ⓫ For safety reasons the oven light should only be replaced by a Kenwood Authorised Repairer.

SERVICE

If the oven or supply cord are damaged in any way, or it is necessary to replace the oven light, or repair the oven, the work must, for safety reasons, be carried out by Kenwood or a Kenwood Authorised Repairer.

Before you call for assistance please check the following:

- ❶ If the oven will not work at all and the display does not appear, or disappears - check that the oven is plugged in and switched on. If it is, switch it off and check that the fuse in the plug or fuseboard is OK. If necessary try the appliance in a different socket.
- ❷ If the microwave will not function, check to see that the timer is set. Also check that the door is properly shut so that the safety interlocks are fully engaged. If they are not, the oven will not work.
- ❸ Check to see that the child-proof lock is not on the display. If it is, switch it off.

If none of the above actions rectify the situation, contact:

The shop where you bought the microwave - they will advise you.

SPECIFICATION

Power Consumption:	230v – 50Hz, 1450W
Output:	900W
Oven Dimensions:	511mm (L) x 440mm (W) x 283mm (H)
Oven Capacity:	25 Litres
Cooking Uniformity:	Turntable (316mm)
Net Weight:	Approx.15kg