

# Quick Guide MW767FP

**THANK YOU FOR CHOOSING OUR MICROWAVE OVEN**  
**FOR BEST RESULTS, PLEASE READ THE INSTRUCTION MANUAL BEFORE USING THE APPLIANCE.**

## PASTA FUNCTION


- 1** After removing the turntable and turntable support with wheels from the oven, place the pasta cooker support in the oven, inserting the four pins into the four holes in the bottom of the cavity.
- 2** Place the pasta in the pasta cooker and cover completely with water until it reaches one of the two levels indicated on the mixer. Add salt and cover with the lid.
- 3** Place the container in the oven and select the key corresponding to the water temperature (blue if the water added is cold, red if the water is hot), pressing it a number of times until the level of water
- 4** reached in the container (L1 or L2) is displayed.

reached in the container (L1 or L2) is displayed.

Select the cooking time for the pasta used (see pasta pack) by rotating the TIME ADJUST knob ("Microwave Function", Fig. 2).


To start the function, press the  key ("Microwave Function", Fig. 4). At the end of cooking, drain the pasta.

**IMPORTANT: you should read the instruction manual carefully for more detailed explanations on how to proceed.**

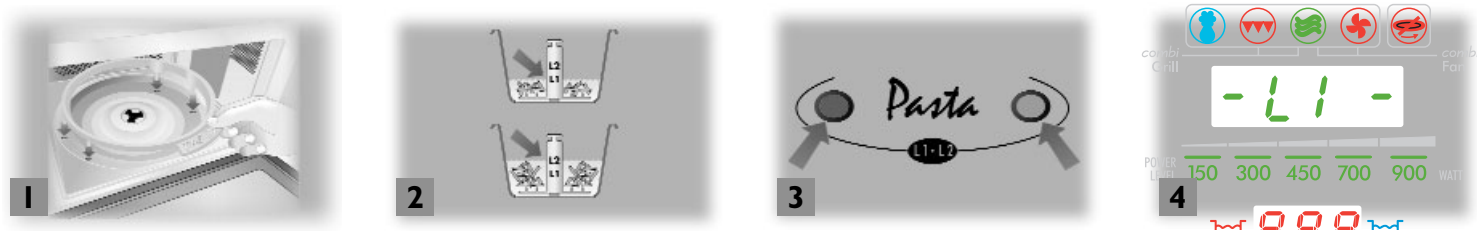


## MICROWAVE FUNCTION


Prepare the food in a container suitable for microwave use and place it on the turntable. Close the oven door.

- 1** Press the FUNCTION key until the  symbol flashes.
- 2** Select the cooking time by rotating the TIME ADJUST knob.


- 3** If necessary, modify the microwave power by repeatedly pressing the POWER LEVEL key.

- 4** Press the  key to start the function.

At the end of cooking, you will hear a beep and the word **END** will appear on the display.

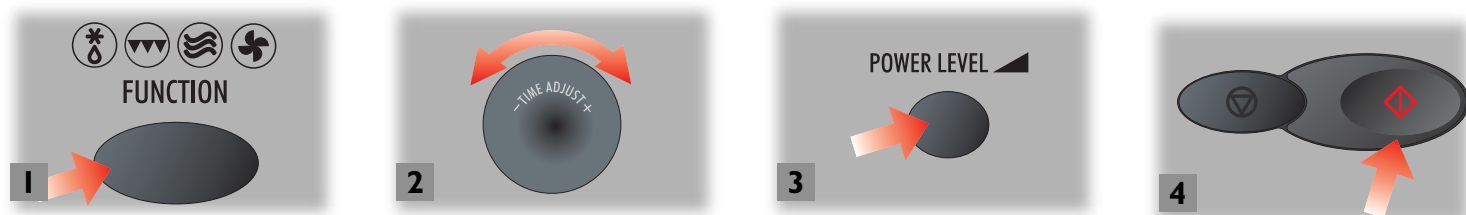

## QUICK REHEAT


Place the food to be reheated inside the oven on the turntable, close the door and press the  key. The oven will start automatically for 30" at maximum power.

Pressing this key again in rapid sequence will increase the time in steps of 30" up to a maximum of 3 minutes.

Once the cooking procedure has begun, the programmed time can be modified with the TIME ADJUST knob to a maximum time limit of 60 minutes.

## TIMER FUNCTION


Press the FUNCTION key until three dashes appear at the bottom of the display.

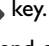Select the time required by pressing the TIME ADJUST knob and press the  key.

At the end of the time set, you will hear a beep and the word **END** will appear on the display.



*Living innovation*

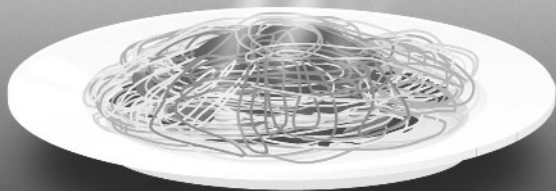

# Quick Guide MW767FP

## MICROWAVE + FAN FUNCTION

Prepare the food to be cooked in a container suitable for microwave use and place on the low wire rack. Close the oven door.

Press the **FUNCTION** key ("Microwave Function", Fig. 1) until the symbols   flash.

Select the cooking time by rotating the **TIME ADJUST** knob ("Microwave Function", Fig. 2).


Select the cooking time by rotating the **TIME ADJUST** knob ("Microwave Function", Fig. 2).


If necessary, modify the microwave power by repeatedly pressing the **POWER LEVEL** key. "Microwave Function", Fig. 3).

**5** If necessary, modify the temperature by repeatedly pressing the **TEMPERATURE** key.

Press the  key ("Microwave Function", Fig. 4).

At the end of cooking, you will hear a beep and the word *END* will appear on the display.

At the end of cooking, you can keep the food warm by simply pressing the  key.

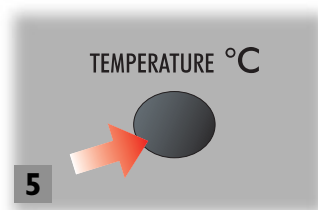

## FAN FUNCTION

Place the low wire rack inside the oven and close the oven door.


Press the **FUNCTION** key ("Microwave Function", Fig. 1) until the symbol  flashes.

Select the cooking time by rotating the **TIME ADJUST** knob ("Microwave Function", Fig. 2).


If necessary, modify the temperature by repeatedly pressing the **TEMPERATURE** key ("Microwave + Fan Function", Fig. 5).

Press the **START** key ("Microwave Function", Fig. 4).

When the oven has reached the temperature set (indicated by three short beeps), the temperature set will remain visible on the bottom display.

Place the food in the oven on the wire rack and press the  key.

At the end of cooking, you will hear a beep and the word *END* will appear on the display.

At the end of cooking, you can keep the food warm by simply pressing the  key.


## GRILL FUNCTION

Place the high wire rack inside the oven and close the oven door.

Press the **FUNCTION** key ("Microwave Function", Fig. 1) until the symbol  flashes.

Select the cooking time by rotating the **TIME ADJUST** knob ("Microwave Function", Fig. 2).

Press the **START** key ("Microwave Function", Fig. 4).

After three minutes pre-heating, place the food to be grilled on the wire rack, close the door and press the  key again.

At the end of cooking (remember to turn the food over halfway through cooking), you will hear a beep and the word *END* will appear on the display.

## MICROWAVE + GRILL FUNCTION

Prepare the food to be cooked in a container suitable for microwave use and place it on the low wire rack. Close the oven door.

Press the **FUNCTION** key ("Microwave Function", Fig. 1) until the symbols   flash.

Select the cooking time by rotating the **TIME ADJUST** knob ("Microwave Function", Fig. 2).

If necessary, modify the microwave power by repeatedly pressing the **POWER LEVEL** key ("Microwave Function", Fig. 3).

Press the  key ("Microwave Function", Fig. 4).


At the end of cooking, you will hear a beep and the word *END* will appear on the display.

## AUTOMATIC DEFROSTING FUNCTION

Place the food to be defrosted directly on the turntable or in a container suitable for microwave use. Close the oven door.

Press the **FUNCTION** key ("Microwave Function", Fig. 1) until the symbol  flashes.

Select the defrosting time by rotating the **TIME ADJUST** knob ("Microwave Function", Fig. 2).

Press the  key ("Microwave Function", Fig. 4).

At the end of defrosting, you will hear a beep and the word *END* will appear on the display.



*Living innovation*