


## Coffee Maker EC730



*Living innovation*

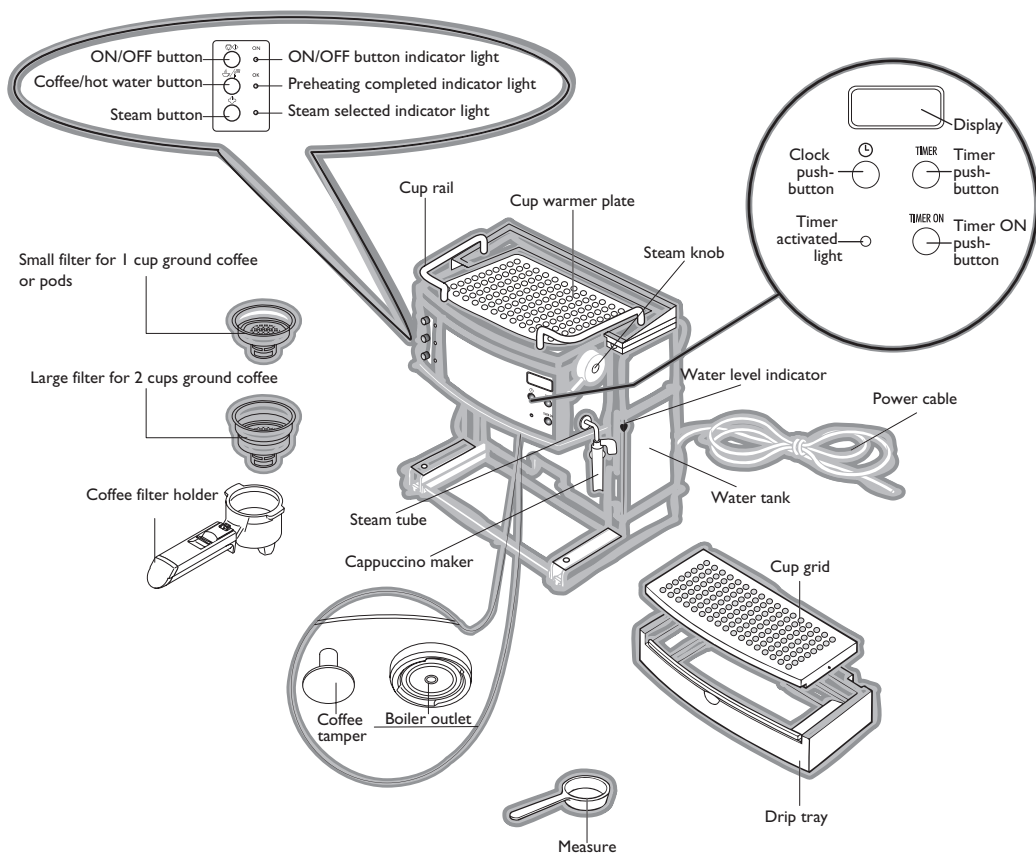


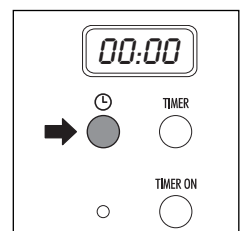
***Thank you for choosing this coffee machine. To get the very best out of your new coffee machine it is advisable to read these instructions before using the appliance. This is the only way to ensure optimum results and maximum safety.***

### **Using for the first time**

Before using the machine for the first time, wash all the accessories in warm soapy water and rinse. For the best tasting coffee the internal circuits must be flushed through at least five times. To flush through the espresso function follow the instructions in the paragraph “How to prepare espresso coffee” using just water.

### **Installation**

- Place the coffee maker on a flat work surface at a safe distance from taps and sinks.
- Check that the voltage corresponds to that indicated on the appliance rating plate. The appliance must always be connected to a well-earthed socket rated at 10A minimum. The manufacturer is not liable for damage caused by inadequate earthing of the appliance.
- In the event of incompatibility between the plug on the appliance and the socket, have the plug replaced by a qualified professional.  
If the cable is damaged or requires replacing, contact a service centre authorised by the manufacturer only.
- Never install the machine in an environment that can reach a temperature less than or equal to 0°C (if the water in it freezes, the coffee maker may be damaged).
- Set the time of day by pressing the button  (fig. 1) until the correct hours and minutes are displayed. When the button is released, the time flashes for a few seconds and is automatically memorised.



*fig. 1*

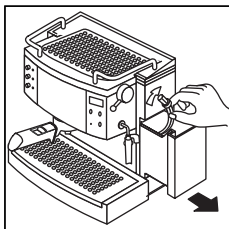


fig. 2

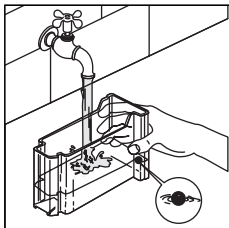


fig. 3

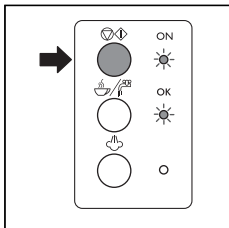


fig. 4

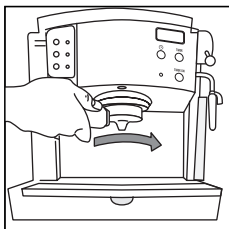


fig. 5

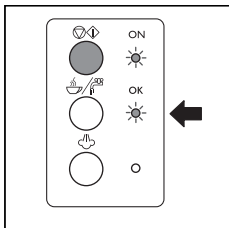


fig. 6

## How to prepare espresso coffee

### Filling the water tank

Remove the tank by pulling sideways and lifting the intake tubes out of the water (fig. 2).

Rinse and fill with clean cold water (fig. 3). The water level is shown by a floating ball. Replace the tank in the housing, making sure the tubes are in the water.

More simply, fill the tank by extracting it just enough to pour in the water directly from a jug.

### Preheating the coffee machine

To ensure your espresso coffee is dispensed at the right temperature it is recommended that the coffee unit is preheated.

1. Press the ON/OFF button (fig. 4).
2. Attach the empty filter holder (without coffee) to the machine by positioning it under the boiler outlet with the handle towards the left (fig. 5). Push upwards and at the same time turn the handle as far right as possible. It does not matter if the handle is not centrally aligned with the machine, as long as the filter holder is firmly attached to the appliance.
3. Position a cup under the filter holder. Use the same cup that the coffee will be served in, so that it may be preheated. Wait until the "OK" light comes on (fig. 6), then immediately press the coffee knob (fig. 7). Allow the water to run until the OK indicator light goes out, then stop the water by pressing the coffee button again (fig. 7).
4. Empty the cup, wait until the "OK" pilot light comes on again and repeat the whole operation one more time.

(It is normal for a small and harmless puff of steam to be given off when removing the filter holder).

**Important:** by using the timer it is possible to have the coffee machine ready for use at the desired time.

- 1 Set the time of day when you want the coffee maker to be ready and preheated. Press the TIMER button and hold it down until the time required is displayed as shown in fig. 8 (example 8:00).

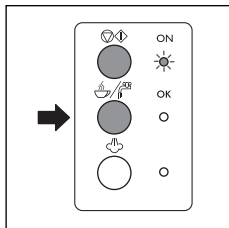


fig. 7

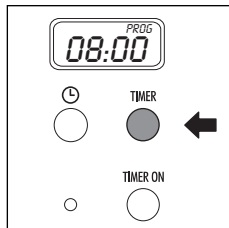


fig. 8

- 2 Press the **TIMER ON** button. The corresponding light comes on (see fig. 9).
- 3 Thirty minutes before the programmed time (in our example 7.30), the appliance comes on automatically so it will be perfectly preheated when you want to use it (after two hours it goes off automatically). Important: for correct preheating, the filter holder must be attached to the appliance.
- 4 **NOTE:** if you make coffee while the appliance is programmed to come on automatically (**TIMER ON** light on fig. 9), it is normal for the programmer to be deactivated (the **TIMER ON** light goes off).
- 5 When you have finished making the coffee, remember to reactivate the timer (press the **TIMER ON** button, the light comes on (fig. 9)).
- 6 To change the programmed time, make sure the **TIMER ON** light is off then proceed as described in points 2 and 3.

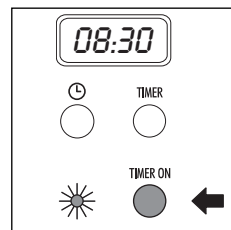


fig. 9

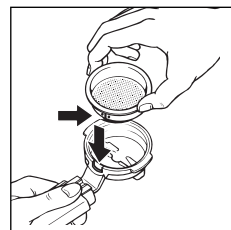


fig. 10

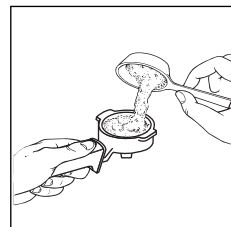


fig. 11

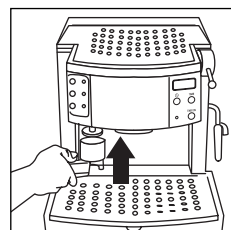


fig. 12

### How to prepare espresso coffee using the filter holder for ground coffee

1. After preheating the appliance, the machine is ready to be used. Insert the ground coffee filter with crema enhancer into the filter holder, making sure the tab is correctly inserted into the housing as shown in fig. 10. For appliances with two filters, use the smallest for one coffee and the largest for two coffees.
2. To prepare a single coffee, fill the filter with a level measure of ground coffee, about 7 g (fig. 11). To prepare two coffees, use the filter and fill with two loosely filled measures of ground coffee (about 6+6 g). Fill the filter in small doses to prevent the ground coffee from overflowing.

*Note: Use good quality, finely-ground coffee for espresso coffee machines.*

**IMPORTANT: for correct operation, before adding ground coffee to the filter holder, make sure the filter is free from ground coffee from the previous infusion.**

3. Distribute the ground coffee evenly and press it lightly with the coffee tamper (fig. 12).

**NOTE:** Pressing the ground coffee is very important in order to prepare a good coffee. However if you press too hard, coffee will come out slowly and crema will be of a dark colour. If you press too light, coffee will come out too fast and crema will be a very light colour.

4. Remove any excess coffee from the rim of the filter holder. Attach the filter holder to the machine by positioning the handle to the left of the boiler outlet, then pushing upwards and turning the handle to the right (as in preheating the machine fig. 5).

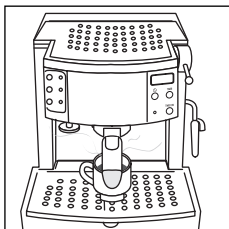


fig. 13

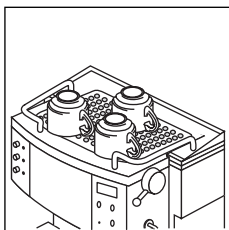


fig. 14

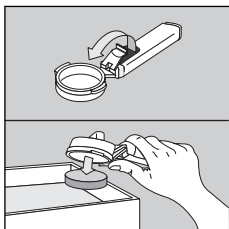


fig. 15



fig. 16

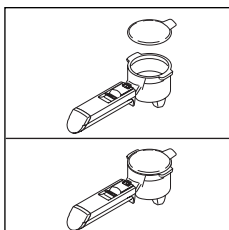


fig. 17

5. Place the cup or cups under the filter holder spouts (fig. 13). You are recommended to heat the cups before making the coffee by rinsing them with a little hot water or placing them to warm on the top plate for at least 15-20 minutes (fig. 14).
6. Make sure the OK indicator light (fig. 6) is on (if it is off, wait until it comes on), then press the coffee button (fig. 6). Once the required quantity of coffee has been obtained, interrupt delivery by pressing the same button again (fig. 7).
7. To detach the filter holder, turn the handle from right to left. **To avoid splashing, do not detach the filter holder whilst the machine is dispensing coffee.**
8. To remove the used coffee lock the filter with the built-in lever and let the coffee fall out by knocking the over turned filter holder (fig. 15).
9. To turn the coffee machine off, press the ON/OFF button (fig. 4).

## How to prepare coffee using pods

1. Preheat the appliance as described in the section "PREHEATING THE COFFEE UNIT", making sure the filter holder is attached. This obtains a hotter coffee.

**Note:** Use pods which conform to the ESE standard: this will be indicated on the packaging by the symbol as in fig. 16.

The ESE standard is a system accepted by the leading coffee pod manufacturers, and allows espresso coffee to be prepared simply and without any mess.

3. Place the small 1 coffee or pod filter in the filter holder, making sure the projection is correctly inserted in the slot as shown in fig. 10.
4. Insert a pod, centring it as far as possible on the filter (fig. 17). Always follow the instructions on the pod pack to position the pod on the filter correctly..
5. Attach the filter holder to the appliance. Always rotate as far as it will go (fig. 5).
6. Proceed as in points 5, 6 and 7 in the previous paragraph.

**IMPORTANT:** Should the coffee holder for pods be used after one for ground coffee, it's necessary to clear the ground coffee remained in the espresso boiler outlet (fig. 18). This cleaning operation is necessary in order to avoid water leakages.

**Note:** If you use the "Illycaffè" coffee pods supplied in your machine, insert the coffee pod ensuring the name "Illy" is facing down and the long side of the pod goes from left to right between the two tabs.

## How to make cappuccino

1. Prepare espresso coffee, using cups that are large enough for cappuccinos
2. Press the steam button (fig. 19) and wait for the steam indicator light to come on (fig. 20). The OK indicator light indicates that the boiler has reached the ideal temperature for steam production.
3. In the meantime, fill a container with about 100 grams of milk for each cappuccino to be prepared. Ideally use a small stainless steel jug. The milk must be at refrigerator temperature (not hot!). In choosing the size of the container, bear in mind that the milk increases in volume by 2 or 3 times.

**NB: YOU ARE RECOMMENDED TO USE SEMI-SKIMMED MILK AT REFRIGERATOR TEMPERATURE.**

4. Place the container with the milk under the cappuccino maker.
5. Dip the cappuccino maker into the milk (fig. 21), taking care not to immerse the raised line on the cappuccino maker (indicated by the arrow in fig. 22). Turn the steam knob at least a half turn anti-clockwise (fig. 23). Steam is given off by the cappuccino maker, giving the milk a creamy frothy appearance. To obtain a creamier froth, dip the cappuccino maker into the milk and rotate the container with slow movements from the bottom upwards.
6. When the required temperature is reached, interrupt steam delivery by rotating the steam knob clockwise. Then press the steam button (fig. 24).
8. Pour the frothed milk into the cups containing the espresso coffee. Your cappuccino is now ready. If desired, add sugar and sprinkle a little powdered chocolate or cinnamon on top of the froth.

**Note:** to prepare more than one cappuccino, first make all the coffees then at the end prepare the frothed milk for all the cappuccinos.

**IMPORTANT:** to ensure hygiene, you are recommended to follow this procedure each time you make cappuccino to avoid milk stagnating in the milk circuit.

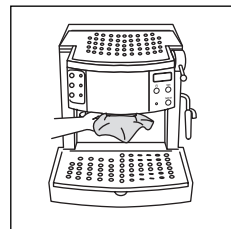


fig. 18

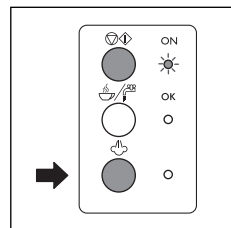


fig. 19

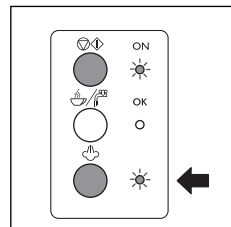


fig. 20

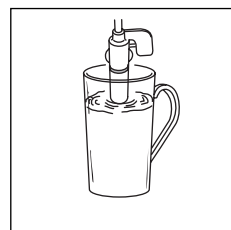


fig. 21

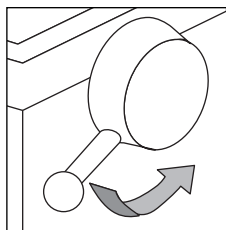


fig. 23

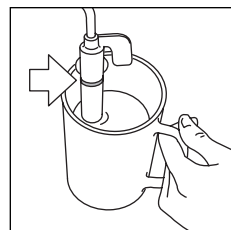


fig. 22

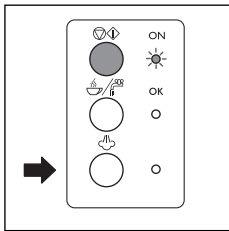


fig. 24

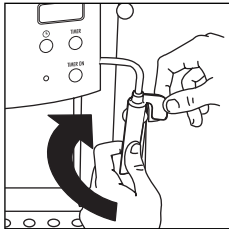


fig. 25

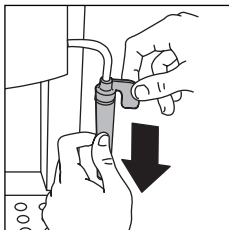


fig. 26

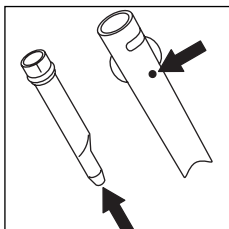


fig. 27

1. Discharge a little steam for a few seconds by rotating the steam knob (fig. 24). This empties any milk left inside the steam tube.
2. With one hand, hold the cappuccino tube firmly and with the other unscrew the cappuccino maker itself by rotating clockwise and extracting downwards (fig. 25).
3. Remove the nozzle from the steam tube by pulling it downwards (fig. 26). **Note: Metal of steam pipe may be hot!!!**
4. Wash the cappuccino maker and steam nozzle thoroughly with warm water.
5. Make sure the two holes indicated by the arrows in fig. 27 are not blocked. If necessary, clean with a pin.
6. Replace the steam nozzle by inserting it onto the steam tube and rotating firmly towards the top of the tube.
7. Replace the cappuccino maker by inserting it and rotating anti-clockwise.

### HOT WATER PRODUCTION

1. Turn the appliance on by pressing the ON/OFF button (fig. 4). Wait until the OK indicator light comes on (fig. 6).
2. Place a container under the cappuccino maker.
3. Press the coffee button (fig. 7) and at the same time open the steam knob. Hot water is delivered from the cappuccino maker.
4. To interrupt the flow of hot water, close the steam knob by rotating clockwise and press the coffee button again.



## Cleaning and maintenance

Before performing any cleaning or maintenance operations, turn the machine off, unplug it from the power socket and allow it to cool down.

1. Do not use solvents or detergents when cleaning the coffee maker. A soft, damp cloth is sufficient.
2. Remove the filter-trays, empty them and wash them periodically.

**ATTENTION: during cleaning, never immerse the unit in water – it is an electrical appliance.**

### Cleaning the filter holder for ground coffee

About every 200 coffees, clean the filter holder of ground coffee as follows:

- Remove the filter with crema enhancer
- Clean the inside of the filter holder. Never wash in a dishwasher.
- Remove the crema enhancer cup (fig. 28) by unscrewing in the direction indicated by the arrow on the cap.
- Remove the crema enhancer from the container by pushing it from the cap end (fig. 29).
- Remove the gasket (fig. 30).
- Rinse all components and clean the metal filter thoroughly in hot water using a brush (fig. 31). Make sure the holes in the metal filter are not blocked. If necessary, clean with a pin (see fig. 32) or, preferably, by burning the particles obstructing the holes over a flame (TAKE CARE TO AVOID BURNS).
- Replace the filter and gasket on the plastic disk as shown in fig. 33. Make sure to insert the pin on the plastic disk into the hole in the gasket indicated by the arrow in fig. 33.
- Replace the assembly in the steel filter container (fig. 34), making sure the pin is inserted in the hole in the support (see arrow in fig. 34).
- Finally, screw on the cap.

**Failure to clean as described above invalidates the guarantee.**

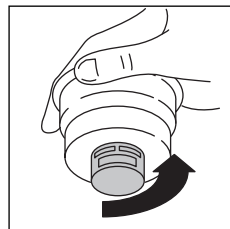


fig. 28

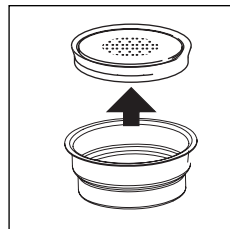


fig. 29

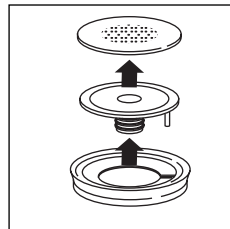


fig. 30



fig. 31

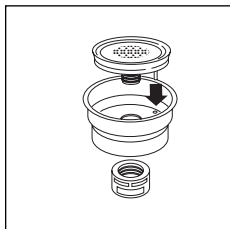


fig. 34

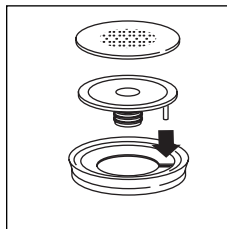


fig. 33

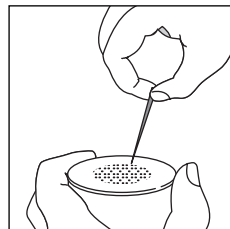


fig. 32

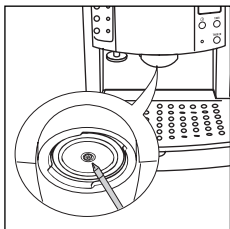


fig. 35

### **Cleaning the boiler outlet**

About every 200 coffees, the espresso boiler outlet must be cleaned as follows:

- Make sure the appliance is not hot and that it is unplugged from the mains;
- Using a screwdriver, unscrew the screw fixing the espresso boiler outlet (fig. 35);
- Clean the boiler with a damp cloth (fig. 18);
- Clean the outlet thoroughly in hot water using a brush. Make sure the holes are not blocked. If necessary, clean with a pin (fig. 32).
- Rinse under running water, rubbing all the time.
- Replace the espresso boiler outlet, making sure the gasket is correctly positioned.

***Failure to clean as described above invalidates the guarantee.***

### **Descaling the espresso coffee section**

It is advisable to clean the calcium from the machine every 200 cups of coffee. It is recommended to use specific products for descaling of espresso coffee machines.

1. Fill the tank with one litre of water;
2. Pour the contents of the descaler bottle provided (250 ml) into the tank. For subsequent descaling operations, descaling solution can be purchased from authorised technical service centres.
3. Press the ON/OFF button (fig. 4) and wait for the OK indicator light to come on.
4. Make sure the filter holder is not attached and position a container under the outlet.
5. Press the coffee button, half empty the tank and every now and then rotate the steam knob to allow a little of the solution to run off. Then switch off by pressing the button again.
6. Leave the solution to work for about 15 minutes, then run off the rest of the water in the tank.
7. To eliminate residues of the solution and scale, rinse the tank well, fill with clean water and replace in its housing. Press the coffee button and operate the appliance until the tank is completely empty;
8. Press the button again and repeat the last operation.

**Repair of damage to the coffee machine caused by scale is not covered by the guarantee unless descaling is performed regularly as described above.**

## Problem solving

PROBLEM	POSSIBLE CAUSES	SOLUTION
<i>The espresso coffee is cold.</i>	<ul style="list-style-type: none"> <li>The 'OK' pilot light was not on when the coffee delivery switch was pressed.</li> <li>The preheating was not carried out.</li> <li>The cups were not preheated.</li> </ul>	<ul style="list-style-type: none"> <li>Wait until the OK pilot light comes on.</li> <li>Carry out the preheating as indicated in the "Preheating the coffee unit" section.</li> <li>Preheat the cups by rinsing them in hot water or placing them to preheat on the top plate for at least 15-20 minutes.</li> </ul>
<i>Espresso coffee no longer comes out</i>	<ul style="list-style-type: none"> <li>No water in the tank</li> <li>The holes in the filter holder are blocked</li> <li>The outlet of the espresso boiler is blocked.</li> <li>The tank is badly inserted and the valve at the bottom is not open</li> </ul>	<ul style="list-style-type: none"> <li>Fill the water tank</li> <li>Clean the holes in the filter holder described in the chapter "Cleaning the boiler outlet"</li> <li>Clean as indicated in the "Cleaning the espresso boiler outlet" section</li> <li>Press the tank lightly so as to open the valve at the bottom</li> </ul>
<i>The espresso coffee drips from the edges of the filter holder instead of from its holes</i>	<ul style="list-style-type: none"> <li>The filter holder is not inserted correctly.</li> <li>The espresso boiler gasket has lost elasticity</li> <li>The holes in the filter holder are blocked</li> </ul>	<ul style="list-style-type: none"> <li>Attach the filter holder correctly by rotating firmly as far as it will go.</li> <li>Have the boiler espresso gasket replaced at a Service Centre</li> <li>Clean the holes in the filter holder</li> </ul>
<i>The pump is too noisy.</i>	<ul style="list-style-type: none"> <li>The water tank is empty.</li> </ul>	<ul style="list-style-type: none"> <li>Fill the water tank</li> </ul>
<i>The coffee crema is light-coloured (the coffee comes out quickly from the spout).</i>	<ul style="list-style-type: none"> <li>The ground coffee has not been pressed enough.</li> <li>Not enough ground coffee used</li> <li>The coffee is not ground finely enough.</li> </ul>	<ul style="list-style-type: none"> <li>Tamper the ground coffee down more.</li> <li>Increase the quantity of coffee.</li> <li>Only use coffee specifically ground for espresso coffee machines.</li> </ul>

PROBLEM	POSSIBLE CAUSES	SOLUTION
<p><i>The coffee crema is dark (the coffee comes out slowly from the spout).</i></p>	<ul style="list-style-type: none"> <li>• The ground coffee is too tightly pressed.</li> <li>• The quantity of ground coffee is too much.</li> <li>• The espresso boiler outlet is blocked.</li> <li>• The coffee is too finely ground.</li> </ul>	<ul style="list-style-type: none"> <li>• Press the coffee less.</li> <li>• Decrease the quantity of ground coffee.</li> <li>• Clean the outlet as described in "Cleaning the espresso boiler outlet" section.</li> <li>• Only use coffee specifically ground for espresso coffee machines.</li> </ul>
<p><i>The milk does not froth when making a cappuccino.</i></p> <p><b>N.B.: frothing is improved by using a metal milk container.</b></p>	<ul style="list-style-type: none"> <li>• The milk is not cold enough.</li> <li>• The cappuccino maker is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>• Always use milk at refrigerator temperature.</li> <li>• Carefully clean the pinholes in the milk frother (as described in "How to make cappuccino")</li> </ul>

## Safety Warnings


- This appliance is designed to make coffee. Please be careful to avoid burns from the sprays of hot water or steam and avoid any improper use.
- When the appliance is in use, do not touch any of the machine's hot surfaces.
- After unpacking, make sure that the machine is complete and undamaged. In case of doubt, do not use the appliance and seek the advice of a qualified service professional.
- Packaging materials (plastic bags, foam polystyrene, etc.) should not be left within the reach of children as this could be a potential source of danger.
- This appliance is to be utilised for domestic use only. Any other use is to be considered improper and therefore, dangerous.
- The manufacturer takes no responsibility for damage derived from improper use.
- Never touch the appliance with wet or damp hands.
- Never allow the appliance to be used by children or unfit persons.
- In case of breakdown or malfunctioning, turn the appliance off immediately and do not touch. For repairs, please contact a Service Centre authorized by the manufacturer and request the use of original replacement parts only. The lack of respect for this point may compromise the safe use of the appliance.
- The power cable must never be replaced by the user. If the cable should become damaged, or needs to be replaced, please contact a Service Centre authorized by the manufacturer.
- When the appliance is not in use, turn off and disconnect the plug from the socket.
- As with any electrical appliance, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of young children.


### **Important information for correct disposal of the product in accordance with EC Directive 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

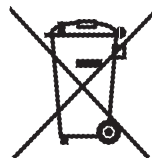

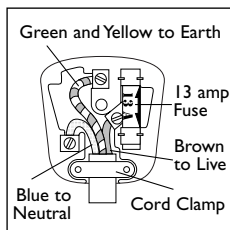

## Electrical requirements

**Before using this appliance ensure that the voltage indicated on the product corresponds with the main voltage in your home, if you are in any doubt about your supply contact your local electricity company.**


The flexible mains lead is supplied connected to a B.S. 1363 fused plug having a fuse of 13 amp capacity. Should this plug not fit the socket outlets in your home, it should be cut off and replaced with a suitable plug, following the procedure outlined below.

**Note:** Such a plug cannot be used for any other appliance and should therefore be properly disposed of and not left where children might find it and plug it into a supply socket - with the obvious consequent danger.

**N.B.** We recommend the use of good quality plugs and wall sockets that can be switched off when the machine is not in use. important: the wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

GREEN AND YELLOW	EARTH
BLUE	NEUTRAL
BROWN	LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol  or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

When wiring the plug, ensure that all strands of wire are securely retained in each terminal. Do not forget to tighten the mains lead clamp on the plug. If your electricity supply point has only two pin socket outlets, or if you are in doubt, consult a qualified electrician.

Should the mains lead ever require replacement, it is essential that this operation be carried out by a qualified electrician and should only be replaced with a flexible cord of the same size.

After replacement of a fuse in the plug, the fuse cover must be refitted. If the plug is a moulded-on type, the fuse cover must be re-fitted when changing the fuse using a 13 Amp Asta fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.

Only 13amp replacement fuses which are asta approved to B.S. 1362 should be fitted.

This appliance conforms to the Norms EN 55014 regarding the suppression of radio interference.

**Warning - this appliance must be earthed**

