

KENWOOD


 **triblade**TM

TYPE HDP10

instructions

English 2 - 7

عربي ١٤ - ٨

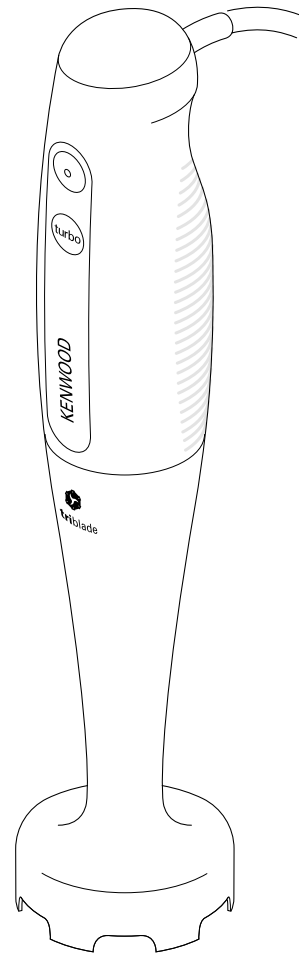

Kenwood Ltd




New Lane
Havant
Hampshire
PO9 2NH

kenwoodworld.com



© Copyright 2020 Kenwood Limited. All rights reserved 136145/3



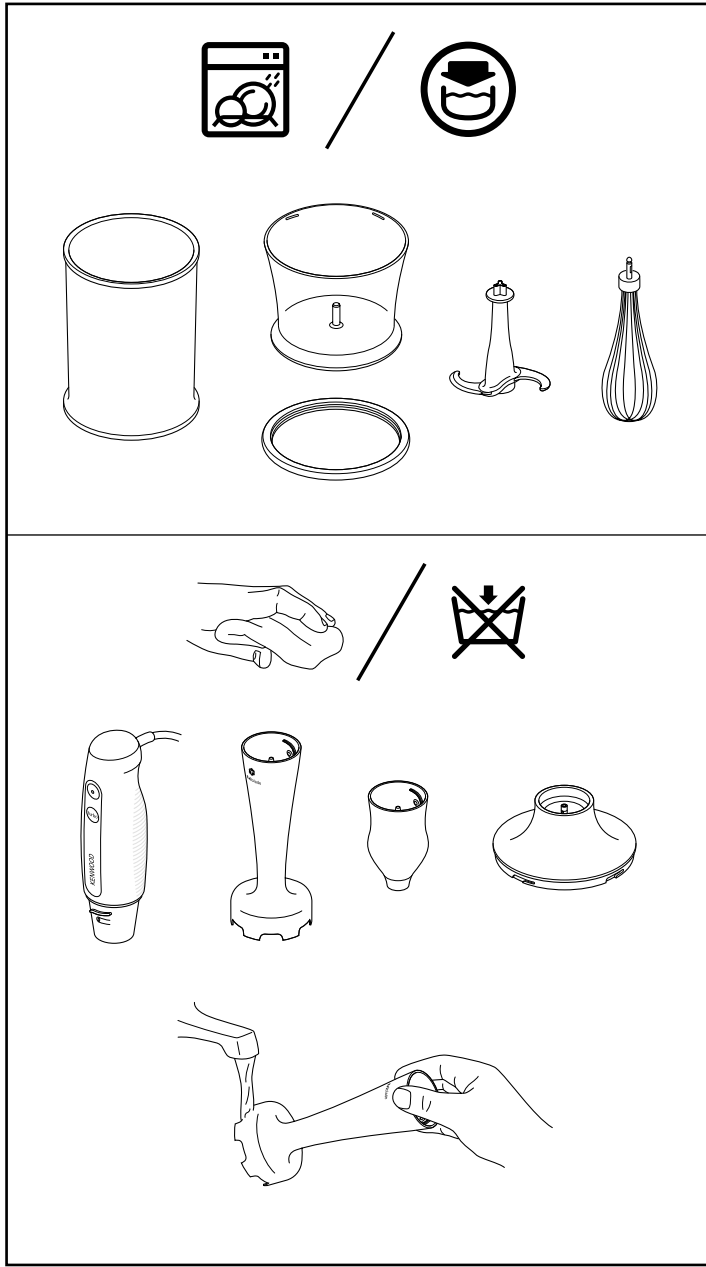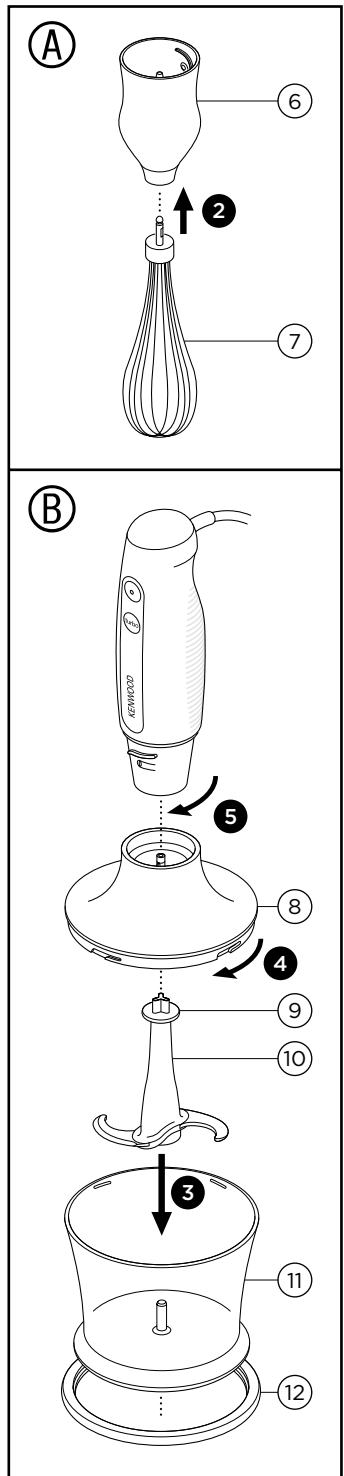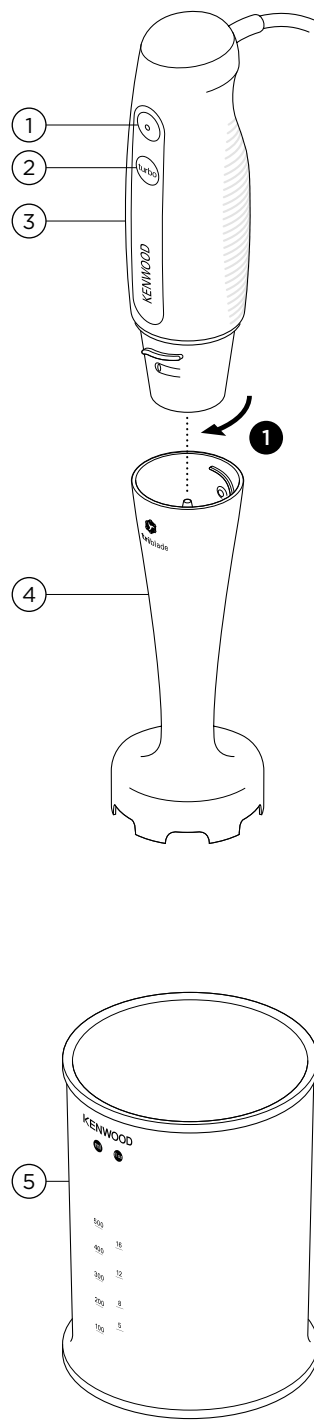

English

safety

- Read these instructions carefully and retain for future reference.
- Remove all packaging and any labels.
- If the plug or cord is damaged it must, for safety reasons, be replaced by Kenwood or an authorised Kenwood repairer in order to avoid a hazard.
- Never touch the blades while the appliance is plugged in.
- Keep fingers, hair, clothing and utensils away from moving parts.
- Unplug after use and before changing attachments.
- Never blend hot oil or fat.
- Be careful if hot liquid is poured into the blending vessel/container as it can be ejected out due to sudden steaming.
- For safest use it is recommended to let hot liquids cool to room temperature before blending.
- Never use a damaged hand blender. Get it checked or repaired: see 'service and customer care'.
- Never put the power handle in water or let the cord or plug get wet - you could get an electric shock.
- Never let the cord touch hot surfaces or hang down where a child could grab it.
- Never use an unauthorised attachment.
- Always switch off the appliance and disconnect from the power supply, if it is left unattended, before assembling, disassembling or cleaning.

- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Misuse of your appliance can result in injury.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use the appliance for its intended domestic use. Kenwood will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.
- The rated power is based on the chopper attachment. Other attachments may draw less power.

important

- With heavy mixtures to ensure long life of your appliance, do not use your hand blender for longer than 50 seconds in any 4 minute period.
- Do not use the whisk attachment for longer than 3 minutes in any 10 minute period.

chopper attachment

- Do not touch the sharp blades.
- Remove the chopper blade before emptying the bowl.
- Never remove the cover until the chopper blade has completely stopped.
- Always hold the chopper blade by the finger grip away from the cutting blades, both when handling and cleaning.

before plugging in

- Make sure your electricity supply is the same as the one shown on the hand blender.

Important – Plug and Fuse Information

- The wires in the cord are coloured as follows:
Blue = Neutral
Brown = Live.
- If the plug supplied with your appliance has a fuse fitted it is rated either 10A or 13A. If the fuse fails it must be replaced with one of the same rating.
- If the plug or cord requires replacing a new cord set should be fitted by an Authorised Kenwood Repairer.

Note:

- For non-rewireable plugs the fuse cover **MUST** be refitted when replacing the fuse. If the fuse cover is lost then the plug must not be used until a replacement can be obtained. The correct fuse cover is identified by colour and a replacement may be obtained from your Kenwood Authorised Repairer (see Service).
- If a non-rewireable plug is cut off it must be DESTROYED IMMEDIATELY. An electric shock hazard may arise if an unwanted non-rewireable plug is inadvertently inserted into a 13A socket outlet.

- This appliance conforms to EC Regulation 1935/2004 on materials and articles intended to come into contact with food.

before using for the first time

- Throw away the blade covers from the Triblade™ and the chopper blade as they are to protect the blade during manufacture and transit only. **Take care as the blades are very sharp.**
- Wash all parts - see “care and cleaning”.

key

hand blender

- ① ON button
- ② Turbo button
- ③ power handle
- ④ blender shaft with fixed triblade.

beaker (if supplied)

- ⑤ beaker

Ⓐ whisk (if supplied)

- ⑥ whisk collar
- ⑦ wire whisk

Ⓑ chopper (if supplied)

- ⑧ chopper cover
- ⑨ finger grip
- ⑩ chopper blade
- ⑪ bowl
- ⑫ rubber ring base

recommended usage chart

Ingredient/ recipe	Container	Speed	Processing Time *	Max Capacity
Hand blender				
Soups	2 litre saucepan	Turbo	25 secs	1 litre
Mayonnaise	0.5 litre beaker	Turbo	45-60 secs	2 Eggs 300ml Oil
Baby Food	0.5 litre beaker	Turbo	30-40 secs	300g
Smoothies/ Milkshakes	0.5 litre beaker	Turbo	30 secs	400ml
Whisk				
Egg Whites	Large glass bowl	Turbo	2-3 mins	4 (150g)
Cream	Large glass bowl	Turbo	2-2 ½ mins	400ml

Chopper attachment				
Meat	Chopper bowl	Turbo	10-15 secs	250g
Herbs	Chopper bowl	Turbo	5-10 secs	30g
Nuts	Chopper bowl	Turbo	10-15 secs	200g
Bread	Chopper bowl	Turbo	5-10 secs	1 slice
Onions	Chopper bowl	Pulse	–	200g
Biscuits	Chopper bowl	Turbo	15 secs	140g
Prune Marinade 50g small soft prunes 250g runny honey refrigerated 25ml water (at room temperature)	Chopper bowl	Turbo	5 secs	325g
Pate	Chopper bowl	Turbo	5-10 secs	150g

* This is for guidance only and will vary depending on the exact recipe and ingredients being processed.

to use the hand blender

- You can blend soups, sauces, milk shakes, mayonnaise and baby food etc.

for beaker blending (if beaker supplied)

- Do not fill the beaker more than $\frac{3}{4}$ full.

Note

If no beaker is supplied in your pack, select a suitably sized container. We would recommend a tall, straight sided vessel with a diameter slightly larger than the foot of the hand blender to allow movement of the ingredients but tall enough to prevent splashing.

for saucepan blending

- For safest use it is recommended to take the pan off the heat and let hot liquids cool to room temperature before blending.

- 1 Fit the power handle inside the blender shaft ❶ and turn clockwise to lock.
- 2 Plug in.
- 3 Place the food into the beaker or a similar container, then holding the beaker steady select the required speed (select "O" ON for slower blending and to minimise splashing and **Turbo** for faster blending).

- **To avoid splashing, place the blade in the food before switching on.**

- Do not let liquid get above the join

between the power handle and blender shaft.

- Move the blade through the food and use a mashing or stirring action to incorporate the mixture.
- **Your hand blender is not suitable for ice crushing.**
- If your blender gets blocked, unplug before clearing.

- 4 After use release the "O" ON or **Turbo** button. Unplug and turn the power handle anticlockwise to remove the blender shaft from the power handle.

Ⓐ to use the whisk (if supplied)

- You can whip light ingredients such as egg whites; cream and instant desserts.
 - Do not whisk heavier mixtures such as fat and sugar - you will damage the whisk.
- 1 Push the wire whisk into the whisk collar ❷.
 - 2 Fit the power handle to the whisk collar, turn clockwise to lock.
 - 3 Place your food in a bowl.
 - 4 Plug in and press the "O" ON button. To whisk on a faster speed press the **Turbo** button. Move the whisk clockwise. To reduce splashing press the "O" ON button.
 - Do not let liquid get above the whisk wires.
 - 5 After use release the "O" ON or **Turbo** button, unplug and dismantle.

Ⓑ to use the chopper (if supplied)

- You can chop meat, vegetables, herbs, bread, biscuits and nuts.
 - Do not chop hard foods such as coffee beans, ice cubes, spices or chocolate - you will damage the blade.
- 1 Remove any bones and cut food into 1-2cm (½-1") cubes.
 - 2 Fit the rubber ring base ⑫ on the bottom of the chopper bowl. (This stops the bowl sliding on the worktop.)
 - 3 Fit the chopper blade over the pin in the bowl ③.
 - 4 Add your food.
 - 5 Fit the chopper cover, turn and lock ④.
 - 6 Fit the power handle to the chopper cover ⑤ - turn clockwise to lock.
 - 7 Plug in. Hold the bowl steady. Then press the **Turbo** button. Alternatively press the **Turbo** button in short bursts to achieve a pulsing action.
 - 8 After use, unplug and dismantle.

optional attachment (not supplied in pack)

Mini chopper - refer to "service and customer care" section to order.

care and cleaning

- Always switch off and unplug before cleaning.
- Do not touch the sharp blades.
- Some foods, e.g. carrot, may discolour the plastic. Rubbing with a cloth dipped in vegetable oil may help to remove discolouration.
- Do not use abrasives.

hand blender shaft

either

- Part fill the beaker or a similar container with warm soapy water. Plug into the power supply, then insert the hand blender shaft and switch on.
- Unplug, then dry or
- Wash the blades under running water, then dry thoroughly.

- **Never immerse in water or allow liquid inside the shaft. If water does get inside, drain and allow to dry before use.**
- **Do not dishwasher.**

service and customer care

- **If you experience any problems with the operation of the hand blender or attachments, before calling for assistance refer to the troubleshooting guide or visit www.kenwoodworld.com.**

UK

If you need help with:

- using your appliance
- servicing or repairs
- ☎ call Kenwood Customer Care on **023 9239 2333. Have your model number (e.g. HDP10) and date code (5 digit code e.g. 13L35) ready.** They are on the underside of the power handle.
- **spares and attachments**
- ☎ call 0844 557 3653.

other countries

- If you experience any problems with the operation of your appliance, before requesting assistance refer to the "troubleshooting guide" section in the manual or visit www.kenwoodworld.com.
- Please note that your product is covered by a warranty, which complies with all legal provisions concerning any existing warranty and consumer rights in the country where the product was purchased.
- If your Kenwood product malfunctions or you find any defects, please send it or bring it to an authorised KENWOOD Service Centre. To find up to date details of your nearest authorised KENWOOD Service centre visit www.kenwoodworld.com or the website specific to your Country.
- Designed and engineered by Kenwood in the UK.
- Made in China.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent

materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

guarantee - UK only

If your hand blender goes wrong within one year from the date you bought it, we will repair it (or replace it if necessary) free of charge provided:

- you have not misused, neglected or damaged it;
- it has not been modified (unless by Kenwood);
- it is not second-hand;
- it has not been used commercially;
- you have not fitted a plug incorrectly; and
- **you supply your receipt to show when you bought it.**

This guarantee does not affect your statutory rights.

troubleshooting guide		
Problem	Cause	Solution
The hand blender will not operate	No Power Hand Blender not assembled correctly	Check hand blender plugged in. Check attachments securely locked to power handle.
Hand blender starts to slow or labour during processing.	Speed selected too low Recommended operating time exceeded.	Increase speed Do not operate the hand blender for longer than 50 seconds in any 4 minute period for heavy mixture or the whisk for 3 minutes in any 10 minute period.
Excessive splashing during processing	Speed selected too high. Container, bowl or pan too shallow or too small for ingredients being processed.	Select a lower speed initially and increase as the mixture thickens. Select an appropriate sized container. Place the blades into the food before switching on.
Power handle gets hot during operation.	The unit may have been used for an extended period of time.	Allow the unit to cool fully before using again.
The mixture is not blending.	The speed of the unit may not be appropriate for the ingredients being blended.	Gradually increase the speed and blend until desired result achieved.

دليل استكشاف المشكلات وحلها

المشكلة	السبب المحتمل	الحل
لن يعمل المازج اليدوي	لا يوجد إمداد بالتيار الكهربائي	تأكد من توصيل المازج اليدوي بمصدر التيار الكهربائي.
المازج اليدوي غير مركب بشكل صحيح	المازج اليدوي غير مركب بشكل صحيح في مقبض الطاقة (الموتور).	تأكد من تعشيق الملحقات بشكل صحيح في مقبض الطاقة (الموتور).
يبدأ المازج اليدوي في التشغيل ببطء أو يعاني أثناء التشغيل.	السرعة المحددة منخفضة جداً تم تجاوز زمن التشغيل الموصى به.	زيدي سرعة التشغيل لا تشغلي المازج اليدوي لأكثر من ٥٠ ثانية كل فترة ٤ دقائق بالنسبة للخلطات الثخينة، ولا أكثر من ٣ دقائق كل فترة ١٠ دقائق عند استخدام خفاقة البيض.
تتأثر شديد أثناء المعالجة	سرعة التشغيل المحددة عالية جداً. الحاوية أو السلطانية أو المقلاة المستخدمة ليست عميقة بالقدر الكافي أو صغيرة الحجم بالنسبة للمكونات التي تتم معالجتها.	اختراري سرعة منخفضة في البداية ثم زيدي السرعة كلما ازداد الخليط في الكثافة. اختراري حاوية بحجم مناسب. ضعي نصل السكين في المكونات قبل تشغيل الجهاز.
يسخن مقبض الطاقة (الموتور) أثناء التشغيل.	ربما تجاوزتي فترة التشغيل بمدة أطول.	اتركي الوحدة لتبرد تماماً قبل الاستخدام مرة أخرى.
لا يتم مزج الخليط.	قد تكون سرعة الوحدة غير مناسبة للخليط المراد مزجه.	زيدي السرعة تدريجياً وامزجي لحين الحصول على القوام المطلوب.

الصيانة والعناية بالعملاء

- في حالة مواجهة أية مشكلة متعلقة بتشغيل الجهاز، قبل الاتصال لطلب المساعدة، يرجى مراجعة قسم «دليل اكتشاف المشكلات وحلها» في الدليل أو زيارة موقع الويب www.kenwoodworld.com.
- يرجى الملاحظة بأن جهازك مشمول بضمان، هذا الضمان يتوافق مع كافة الأحكام القانونية المعمول بها والمتعلقة بحقوق الضمان والمستهلك في البلد التي تم شراء المنتج منها.
- في حالة تعطل منتج Kenwood عن العمل أو في حالة وجود أي عيوب، فيرجى إرساله أو إحضاره إلى مركز خدمة معتمد من KENWOOD. للحصول على معلومات محدثة حول أقرب مركز خدمة معتمد من KENWOOD، يرجى زيارة موقع الويب www.kenwoodworld.com، أو موقع الويب المخصص لبلدك.
- تمت الأعمال الهندسية والتصميم من قبل شركة Kenwood في المملكة المتحدة.
- صنع في الصين.



معلومات هامة هو الكيفية الصحيحة للتخلص من المنتج وفقاً لتوجيهات الاتحاد الأوروبي المتعلقة بنفايات المعدات الكهربائية والإلكترونية (WEEE)

في نهاية العمر التشغيلي للجهاز، يجب عدم التخلص من الجهاز في نفايات المناطق الحضرية. بل يجب أخذه إلى مركز تجميع خاص بجهة محلية متخصصة في التخلص من هذه النفايات أو إلى تاجر يقدم هذه الخدمة. التخلص من الأجهزة المنزلية على نحو منفصل، يجنب الآثار السلبية المحتملة على البيئة والصحة والتي تنتج عن التخلص من هذه النفايات بطريقة غير مناسبة، كما أن هذه العملية تسمح باسترداد المواد المكونة الأمر الذي يتيح الحصول على وفورات كبيرة في مجال الطاقة والموارد. للتذكير بضرورة التخلص من الأجهزة المنزلية على نحو منفصل، يوجد على الجهاز صورة مشطوبة لسلة قمامة ذات عجلات.

- ٦ ركبى مقبض الطاقة (الموتور) في غطاء المفزمة ⑤ - لفيه في اتجاه عقارب الساعة حتى يستقر في موضع التعشيق.
- ٧ وصلي الجهاز بمصدر التيار الكهربى. امسكى الوعاء بثبات. ثم اضغطي على زر السرعة الفائقة "Turbo". أو بطريقتة أخرى يمكنك الضغط على زر السرعة الفائقة "Turbo" ضغطات قصيرة للحصول على وضع تشغيل نبضى.
- ٨ بعد الانتهاء من الاستخدام افصلي الجهاز عن مصدر التيار الكهربى وفكى الجهاز.

ملحق اختياري (لا يتم تزويده مع صندوق البيع)

الهراسة الصغيرة - راجعي قسم الصيانة ورعاية العملاء لطلبها.

العناية والتنظيف

- أوقفى دائماً تشغيل الجهاز وافصليه عن مصدر التيار الكهربى قبل التنظيف.
- لا تلمسى الشفرات الحادة.
- قد تتسبب بعض الأطعمة (المكونات) مثل الجزر في تغير لون البلاستيك. امسحى البلاستيك بقماش مغموس في زيت نباتى لإزالة تغير اللون.
- لا تستخدمى مواد كاشطة.

محور دوران المازج اليدوى

- سواء عبئى الدورق جزئياً أو ما يشابهه من الحاويات بمحلول ماء وصابون دافئ. وصلي الجهاز بمصدر التيار الكهربى ثم ركبى محور دوران المازج وشغلي الجهاز.
- افصلي الجهاز عن مصدر التيار الكهربى ثم التجفيف.
- أو غسل الشفرات تحت الماء الجارى ثم التجفيف الجيد.
- يحذر الغمر في الماء أو السماح بتواجد سوائل داخل المحور. فى حالة دخول الماء، اصرفيه واتركى المحور ليجف قبل الاستخدام مرة أخرى.
- يحذر الغسل في غسالة الأطباق.

Ⓐ استخدام الخفاقة (فى حالة تزويده)

- يمكنك خفق المكونات الخفيفة مثل بياض البيض والكريمات والحلويات السريعة.
- لا تخفقى خلطات ثخينة مثل السمن أو السكر - فسوف يتسبب ذلك فى تلف الخفاقة.
- ١ ركبى الخفاقة السلكية فى عنق الخفاقة ②.
- ٢ ركبى مقبض الطاقة (الموتور) داخل عنق خفاقة البيض ولفيه فى اتجاه عقارب الساعة ليستقر فى موضع التعشيق.
- ٣ ضعى المكونات فى وعاء التقطيع.
- ٤ وصلي الجهاز بمصدر التيار الكهربى واضغطي على زر التشغيل "O" ON. للخفق على سرعات عالية اضغطي على زر السرعة الفائقة "Turbo". حركى خفاقة البيض فى اتجاه عقارب الساعة.
- لتقليل المكونات المتطايرة، اضغطي على زر التشغيل "O" ON.
- لا تسمحي بارتفاع السائل فوق مستوى أسلاك الخفاقة.
- ٥ بعد الانتهاء من الاستخدام حررى زر التشغيل "O" ON أو زر السرعة الفائقة "Turbo" ثم افصلي الجهاز عن مصدر التيار الكهربى وفكبه.

Ⓑ استخدام المفزمة/القطاعة (فى

حالة تزويدها مع عبوة البيع)

- يمكنك تقطيع اللحم وفرم والخضراوات والأعشاب والخبز والبسكويت والمكسرات.
- لا تفرمى/تقطعي المكونات الصلبة مثل حبوب القهوة ومكعبات الثلج والتوابل أو الشكولاته - فقد يتسبب ذلك فى تلف سكين الفرم/التقطيع.
- ١ أزيلي العظم وقطعي المكونات إلى مكعبات بطول ١ إلى ٢ سم.
- ٢ ركبى القاعدة الدائرية المطاطية ⑫ فى قاع وعاء الفرم/التقطيع.
- (سيحول ذلك دون ترحلق الوعاء على سطح العمل).
- ٣ ركبى سكين الفرم/التقطيع على السن ③ الموجود فى الوعاء.
- ٤ أضيفى المكونات.
- ٥ ركبى غطاء المفزمة/القطاعة ولفيه حتى يستقر فى موضع القفل الصحيح ④.

جدول توصيات الاستخدام				
السعة القصوى	زمن المعالجة *	السرعة	الحاوية	المكونات/وصفة التحضير
المزج اليدوي				
١ لتر	٢٥ ثانية	Turbo	مقلاة ٢ لتر	الحساء
٢ بيضات ٣٠٠ مللي زيت	٤٥ إلى ٦٠ ثانية	Turbo	دورق ٥ لتر	المايونيز
٣٠٠ غرام	٣٠ إلى ٤٠ ثانية	Turbo	دورق ٥ لتر	طعام الرضع
٤٠٠ مللي	٣٠ ثانية	Turbo	دورق ٥ لتر	الرغويات/الحليب المخفوق
خفافة البيض				
٤ (١٥٠ غرام)	٢ إلى ٣ دقائق	Turbo	السلطانية الزجاجية الكبيرة	بياض البيض
٤٠٠ مللي	٢ إلى ٢,٥ دقيقة	Turbo	السلطانية الزجاجية الكبيرة	القسدة
ملحق المفرمة				
٢٥٠ غرام	١٠ إلى ١٥ ثانية	Turbo	سلطانية المفرمة	اللحوم
٣٠ غرام	٥ إلى ١٠ ثوان	Turbo	سلطانية المفرمة	الأعشاب
٢٠٠ غرام	١٠ إلى ١٥ ثانية	Turbo	سلطانية المفرمة	المكسرات
١ شريحة	٥ إلى ١٠ ثوان	Turbo	سلطانية المفرمة	الخبز
٢٠٠ غرام	-	Pulse	سلطانية المفرمة	البصل
١٤٠ غرام	١٥ ثانية	Turbo	سلطانية المفرمة	البسكويت
٣٢٥ غرام	٥ ثانية	Turbo	سلطانية المفرمة	ماريناد ألو بخارا ٥٠ گرم ألو بخارا نرم و كوچك ٢٥٠ جرام عسل نحل صافي ميرد ٢٥ ميلي ليتر آب (در دماي اتاق)
١٥٠ غرام	١٠ إلى ١٥ ثانية	Turbo	سلطانية المفرمة	العجائن الهشة

* الأزمنة المعروضة هي أزمنة إرشادية فقط وتختلف حسب الوصفة والمكونات المستخدمة.

استخدام الخلاط اليدوي

- يمكنك خلط الحساء والصلصات والحليب المخفوق والمايونيز وطعام الرضع غيرها من المكونات ذات نفس القوام.
- **للخلط داخل الدورق (في حالة تزويد الدورق)**
- لا تملئي الدورق بأكثر من ثلثي (٣/٢) السعة القصوى.
- **ملاحظة**
- في حالة عدم تزويد الدورق داخل عبوة البيع، اختاري حاوية ذات حجم مناسب.
- نوصي باستخدام حاوية طويلة ذات جوانب مستقيمة ذات قطر أكبر من قطر ذراع الخلط العريض الخاص بالخلط اليدوي وذلك لإتاحة الفرصة أمام حركة المكونات وأيضاً يجب أن تكون الحاوية طويلة بالقدر الكافي لمنع حدوث تطاير للمكونات.
- **للخلط في مقلاة الصلصات**
- للاستخدام السريع، نوصي برفع المقلاة عن المصدر الحراري وترك السوائل الساخنة لكي تبرد وتصبح في درجة حرارة الغرفة قبل الخلط.
- ركبي مقبض الطاقة (الموتور) داخل محور دوران المازج ❶ ثم لفه في اتجاه عقارب

الساعة ليستقر في موضع التعشيق.

٢ وصلي الجهاز بمصدر التيار الكهربائي.

٣ ضعي المكونات في الدورق أو حاوية مشابهة، ثم امسكي الدورق بثبات وحددي السرعة المطلوبة (خددي التشغيل "O" ON للمزج البطيئ وتقليل المكونات المتطايرة والسرعة الفائقة "Turbo" للمزج السريع).

● **لتجنب تناثر مكونات الخلط، ضعي**

شفرات الخلط داخل الطعام قبل

تشغيل الخلاط.

● لا تسمح للوسائل بالوصول إلى مستوى أعلى من وصلة اتصال مقبض الطاقة بمحور الخلط.

● حركي الشفرات خلال الطعام مع القيام

بالهرس أو التقليب لدمج الخليط.

● **الخلط اليدوي لا يناسب جرش الثلج.**

● في حالة توقف الخلاط اليدوي عن الحركة

نتيجة حدوث انحشار، افصليه عند مصدر التيار الكهربائي قبل القيام بتنظيفه.

٤ بعد الانتهاء من عملية المزج، حرري زر

التشغيل "O" ON أو زر السرعة الفائقة

"Turbo". افصلي الجهاز عن التيار

الكهربائي ولفي مقبض الطاقة (الموتور) في

اتجاه عكس عقارب الساعة لإزالة محور دوران المازج عن مقبض الطاقة.

قبل توصيل الجهاز بمصدر التيار

الكهربي

- يجب التأكد من تماثل مواصفات المصدر الكهربي مع المواصفات الموضحة على الخلاط اليدوي.

هام - المقبس والمنصهر الكهربي

- ألوان الأسلاك الموجودة في السلك الكهربي هي كالتالي:

أزرق = متعادل

بني = كهرباء حية

- في حالة تزويد المقبس الخاص بالجهاز بواسطة منصهر كهربي، فإن قدرة المنصهر الكهربي تكون ١٠ أمبير أو ١٣ أمبير. في حالة تلف المنصهر الكهربي، يجب استبداله بأخر مماثل له بنفس المواصفات.

- في حالة الحاجة إلى استبدال المقبس أو السلك الكهربي، فيجب استبدالهما وتركيبهما من قبل مركز صيانة متخصص معتمد لدى Kenwood.

ملاحظة:

- بالنسبة إلى المقابس غير القابلة لإعادة تركيب الأسلاك الجديدة بها، يجب إعادة تثبيت غطاء المنصهر الكهربي عند استبداله. في حالة فقد غطاء المنصهر الكهربي، يجب عدم استخدام المقبس إلا أن يتم الحصول على بديل. يتم تحديد غطاء المنصهر الكهربي الصحيح حسب اللون ويمكن الحصول على بديل من مركز صيانة متخصص معتمد لدى Kenwood (يرجى مراجعة قسم الخدمة).

- إذا تم قطع مقبس غير قابل لإعادة تركيب الأسلاك الجديدة به، فيجب تدميره على الفور. قد ينشأ خطر حدوث صدمة كهربائية إذا تم إدخال مقبس غير قابل لإعادة تركيب الأسلاك الجديدة به غير مرغوب فيه عن غير قصد في قابس مأخذ كهربي ١٣ أمبير.

- يتوافق هذا الجهاز مع تنظيمات الاتحاد الأوروبي 2004/1935 المتعلقة بالمواد والأجسام المتلامسة مع الأطعمة.

قبل استخدام الجهاز للمرة الأولى

- تخلصي من أغطية وحدة الشفرات الثلاثية Triblade س ونصل المفرمة/القطاعة حيث تستخدم هذه الأغطية فقط لحماية الشفرات أثناء التصنيع والنقل. **توخي الحذر فالشفرات حاد جداً.**
- اغسلي الأجزاء المسموح بغسلها: راجعي قسم العناية والتنظيف.

الدليل

المزاج اليدوي

- ① زر التشغيل
- ② زر السرعة الفائقة "Turbo"
- ③ مقبض الطاقة الموتور
- ④ محور الخلاط المزود بمجموعة شفرات ثلاثية مثبتة

الدورق (في حالة تزويدها مع عبوة

البيع)

- ⑤ الدورق

A خفاقة البيض (في حالة تزويدها

مع عبوة البيع)

- ⑥ عنق الخفاقة
- ⑦ الخفاقة السلكية

B المفرمة/القطاعة (في حالة تزويدها

مع عبوة البيع)

- ⑧ غطاء المفرمة/القطاعة
- ⑨ مقبض الأصابع
- ⑩ سكين المفرمة/القطاعة
- ⑪ وعاء الفرم/التقطيع
- ⑫ قاعدة دائرية مطاطية

- يمكن استخدام الأجهزة من قبل أشخاص ذوي قدرات جسدية أو حسية أو عقلية منخفضة وممن هم دون خبرة أو معرفة باستخدام الأجهزة في حالة منحهم التعليمات الخاصة بالاستخدام أو الإشراف عليهم بحيث يمكنهم استخدامه بطريقة آمنة مع إدراك المخاطر التي تنطوي على استخدام الجهاز.
- قد يؤدي سوء استخدام الجهاز إلى حدوث إصابات
- لا يجوز استخدام هذا الجهاز من قبل الأطفال.
- احتفظي بالجهاز والسلك الكهربائي بعيداً عن متناول الأطفال.
- يجب الإشراف على الأطفال للتأكد من عدم عبثهم بالجهاز.
- استخدمي الجهاز فقط في الاستخدامات المنزلية المخصص لها. لن تتحمل شركة Kenwood أية مسؤولية في حالة استخدام الجهاز بطريقة غير صحيحة أو عدم الامتثال للتعليمات المذكورة.
- تستند القوة المقدررة إلى ملحق القطاعة. قد تستهلك الملحقات الأخرى طاقة أقل.

هام

- عند التعامل مع الخلطات الثخينة ولضمان عمر تشغيلي طويل للجهاز، لا تستخدم المازج اليدوي لمدة تزيد عن ٥٠ ثانية كل ٤ دقائق.
- لا تستخدم ملحق خفاقة البيض لمدة مستمرة أطول من ٣ دقائق كل فترة ١٠ دقائق.

ملحق المفرمة/القطاعة

- لا تلمسي الشفرات الحادة.
- أزيل سكين الفرمة/التقطيع قبل تفريغ وعاء الفرمة/التقطيع.
- يحذر إزالة غطاء المفرمة/القطاعة قبل توقف سكين الفرمة/التقطيع عن الحركة تماماً.
- امسكي دائماً نصل سكين الفرمة/التقطيع بقبضة الإصبع من خلال مقبض الأصابع بعيداً عن نصل السكين سواء عند الاستخدام أو التنظيف.

السلامة

- اقرئي التعليمات التالية واحتفظي بها في المتناول للاستخدامات المستقبلية المرجعية.
- أزيلتي مكونات التغليف وأية ملصقات
- لأسباب متعلقة بالسلامة ولتجنب حدوث أية مخاطر، في حالة تلف السلك الكهربائي أو القابس، يجب استبداله بواسطة Kenwood أو مركز خدمة معتمد من قبل Kenwood.
- يحذر لمس الشفرات أثناء توصيل الجهاز بمصدر التيار الكهربائي.
- ابعدي الأصابع، الشعر، الملابس وأدوات المائدة بعيداً عن الأجزاء المتحركة.
- افصلي الجهاز عند مصدر التيار الكهربائي بعد الانتهاء من الاستخدام وقبل تغيير الملحقات.
- لا تخلطي الزيوت الساخنة أو الدهون.
- توخي الحذر عند ضخ سائل ساخن في وعاء/حاوية المزج لأنه قد يخرج من الجهاز بسبب التبخير المفاجئ.
- للاستخدام السريع، نوصي بترك السوائل الساخنة لكي تبرد وتصبح في درجة حرارة الغرفة قبل الخلط.
- يحذر استخدام الخلاط اليدوي في حالة تلفه. يجب فحص الجهاز أو إصلاحه: راجعي قسم الخدمة ورعاية العملاء.
- يحذر غمر مقبض الطاقة في الماء أو السماح بببل للسلك أو القابس - قد تصابين بصدمة كهربائية.
- احذري ملامسة السلك لسطح ساخن أو تركه متدلياً في حالة وجود طفل فقد ينتزعه.
- لا تستخدم أي ملحقات غير معتمدة.
- قومي دائماً بإيقاف تشغيل الجهاز وفصله عن مصدر التيار الكهربائي، إذا ترك بدون مراقبة، قبل التجميع أو التفكيك أو التنظيف.