

# KENWOOD

TCX752


사용설명서

한국어

2 - 8

English

9 - 14

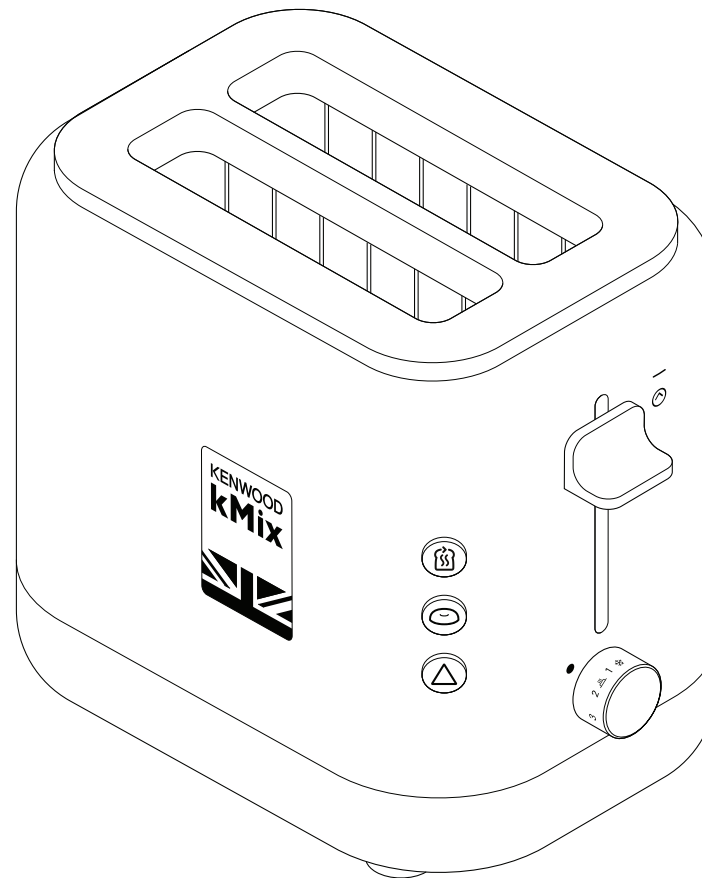

HEAD OFFICE: Kenwood Limited, 1-3 Kenwood Business Park, New Lane, Havant, Hampshire PO9 2NH

[kenwoodworld.com](http://kenwoodworld.com)

**KENWOOD**  
CREATE MORE


136569/1



## 한국어

### 안전

- 설명서를 잘 읽고 보관하여 필요할 때 참고하십시오.
- 모든 포장과 라벨을 제거해 주십시오.
- 빵이 타면 불이 붙을 수 있으므로
  - 토스터를 지켜보는 사람 없이 방치해서는 안 되며, 불이 붙을만한 물건(예: 커튼)을 토스터에서 멀리 치우십시오.
  - 얇거나 건조한 빵을 구울 때는 굽기 조절 온도를 낮게 설정하십시오.
  - 토핑이나 필링이 추가된 음식(예: 피자)을 데우지 마십시오. 토스터 안으로 토핑이나 필링이 떨어지면 불이 붙을 수 있습니다.
  - 부스러기가 남아 있으면 기기 작동 시 연기가 나거나 탈 수 있으므로 부스러기 받침대는 정기적으로 청소해 주십시오.
- 감전을 방지하려면 다음과 같은 행동을 **절대로 하지 마십시오.**
  - 토스터나 코드, 플러그가 물이나 액체에 젖지 않도록 하고,
  - **손**이나 금속 물질(예: 나이프나 포일)을 토스터 안에 넣지 마십시오.
- 토스터를 사용하지 않을 때나 청소하기 전 또는 잦을 바른 빵을 꺼내기 전에는 반드시 플러그를 뽑으십시오.
- 사용 중인 토스터 위에 접시나 그 밖의 물건을 얹어 놓지 마십시오. 그렇지 않으면 과열 및 화재가 발생할 수 있습니다.
- 어린이의 손이 닿는 곳에 코드를 두지 마십시오.
- 찬장 바로 아래에서는 토스터를 사용하지 않는 것이 좋습니다.
- 작동 중인 토스터를 옮기지 마십시오.

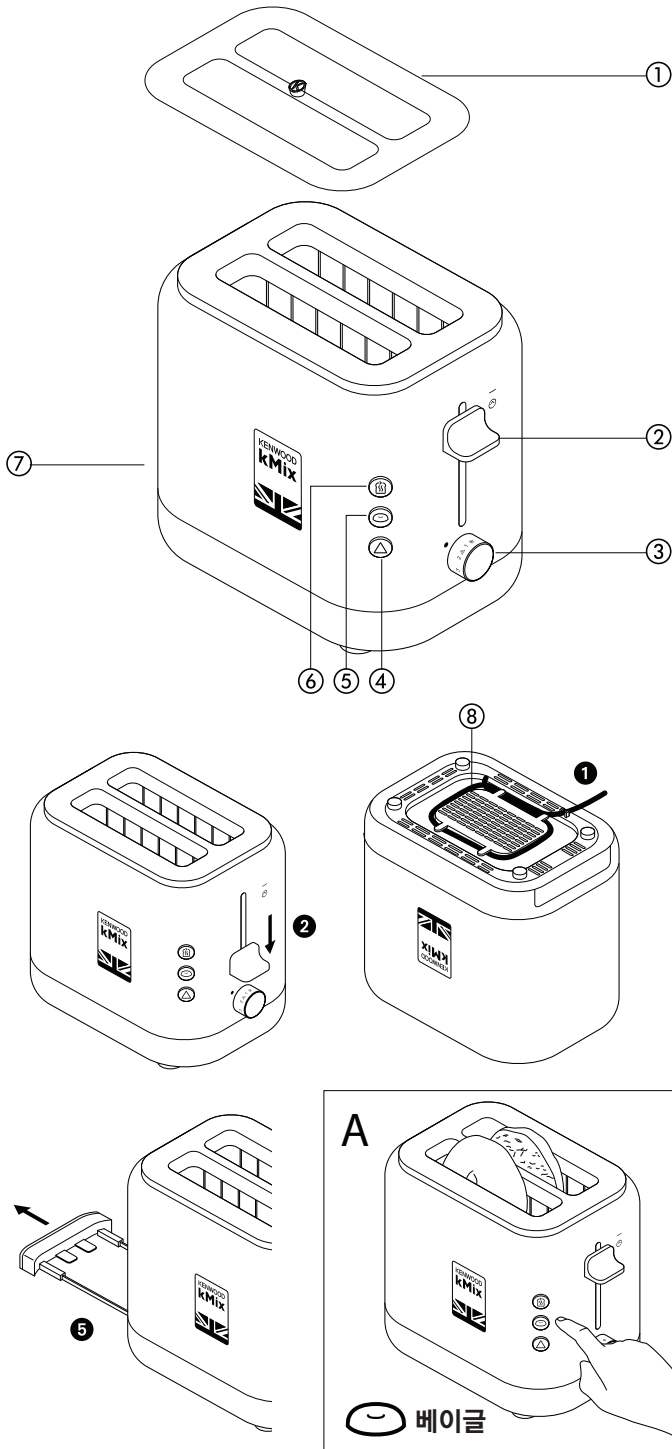

- 바깥쪽 금속 표면 특히 상단면은 쉽게 뜨거워지므로 주의해야 합니다.
- 승인되지 않은 부착물 또는 부속품은 사용하지 마십시오.
- 토스터를 이용해 빵 이외의 음식을 데우지 마시기 바랍니다. 빵 이외에 토스터에서 특별히 데워도 되는 음식에 대해서는 제조업체의 안내 지침 및 조리 지침을 준수하십시오. 토스터를 사용하기 전/후에 떨어진 부스러기를 제거하고 부스러기 받침대를 깨끗이 청소하십시오.
- 파손된 토스터는 절대 사용하지 마십시오. 이러한 토스터는 점검 또는 수리해야 합니다 ("고객 서비스" 참조).
- 이 기기는 외부 타이머나 별개의 리모컨으로 작동되어선 안됩니다.
- 기기를 잘못 사용할 경우 다칠 수 있습니다.
- 8세 이상의 어린이는 본인의 안전을 책임질 보호자의 감독 하에 이 기기의 사용에 관한 지침을 받고 제반 위험을 인지한 상태에서 본 사용 설명서의 지침에 따라 이 기기를 사용 및 청소하고 보수 관리를 수행할 수 있습니다.
- 신체, 감각 또는 지적 능력에 장애가 있거나 이 기기의 사용에 관한 지식이 부족한 사람들은 안전한 사용법에 관한 감독 및 지침을 사전에 받아야 하며 제반 위험을 인지해야 합니다.
- 어린이가 기기로 장난을 치지 않도록 해야 하며, 기기와 코드는 8세 미만인 어린이의 손이 닿지 않는 곳에 두어야 합니다.
- 젖은 천으로 토스터 바깥쪽을 닦은 후 말려 주십시오. 연마제 등을 사용하여 닦지 마십시오.

- 기기는 가정용으로만 사용하십시오. 이 기기가 잘못 사용되거나 이러한 사용 지침들을 준수하지 않을 경우, 켄우드는 어떠한 책임도 지지 않습니다.

#### 플러그를 꽂기 전 주의사항

- 토스터 바닥에 표시된 전압을 사용하도록 하십시오.
- 음식과 접촉하는 재질 및 부속품은 EC 규정 1935/2004를 준수합니다.

#### 처음 사용하기 전 주의사항

- 여분의 코드 부분을 받침대 ①의 코드 보관 클립 안으로 집어넣습니다.
- 빵을 넣지 않은 상태에서 중간 설정으로 토스터를 한 번 작동합니다. (토스터의 플러그를 콘센트에 끼우지 않으면 레버는 아래로 내린 상태로 고정되지 않습니다).
- 새로 구입해 사용하는 모든 전열기와 마찬가지로, 토스터도 처음 켤 때 약간의 탄내가 날 수 있습니다. 이는 정상적인 현상으로 아무런 문제가 없습니다.



### 미리 보기

이송 레버를 이용하면 토스트 사이클의 실행을 취소하지 않고도 토스터를 '미리 보기' 지점까지 들어올릴 수 있습니다.

### 부속품

- ① 토스터 뚜껑 (보관시 사용)
- ② '미리 보기' 레버(토스트를 더 들어올릴 수 있도록 'Hi-Rise™' 포함)
- ③ 굽기 조절 다이얼
- ④ 표시등이 있는 취소 버튼
- ⑤ 표시등이 있는 베이글 버튼
- ⑥ 표시등이 있는 재가열 버튼
- ⑦ 부스러기 받침대
- ⑧ 코드선 보관함

### 토스터 사용 방법

- 1 토스터의 플러그를 전원 콘센트에 꽂습니다.
- 2 원하는 설정이 토스터 본체의 정렬 마크와 일치할 때까지 굽기 조절 다이얼을 돌립니다. 가벼운 굽기를 비롯해 얇거나

마른 빵을 토스트할 경우에는 보다 낮은 설정을 사용하십시오.

- 3 빵, 머핀, 베이글 등을 토스터에 꽂거나 올려 놓습니다.
- 4 레버 ②를 잠길 때까지 내립니다. (토스터의 플러그를 콘센트에 끼우지 않으면 레버는 아래로 내린 상태로 고정되지 않습니다). '취소' (△) 버튼이 점등합니다.
- 이송 레버를 이용하면 토스트 사이클의 실행을 취소하지 않고도 토스터를 '미리 보기' 지점까지 들어올릴 수 있습니다.
- 토스트 사이클 실행 중 토스트를 중단하기 위해 '취소' 버튼을 누르면 토스트가 튀어나오면서 '취소' 버튼 표시등이 꺼지게 됩니다.
- 5 토스트는 자동으로 튀어나오게 되며 토스트된 빵을 더 높이 들어올리려면 레버를 들어올리십시오.

#### ❄ 해동 위치

- 냉동된 빵을 해동하려면 굽기 조절 다이얼로 해동 위치를 선택합니다.

#### ☉ 베이글(A)

- 베이글 토스트를 만들려면 절단면이 중앙 전열선을 향해야 합니다. 원하는 굽기 설정을 선택한 후, 이송 레버를 내립니다. '베이글' 버튼을 누르면 표시등이 점등합니다.
- 참고: 베이글 버튼을 이용해 토스트를 만들 때 중앙 전열선은 토스터 앞쪽 및 뒤쪽에 위치한 전열선보다 더 뜨거운 열로 빵을 굽습니다. 이렇게 하면 빵의 한쪽 면만 구워지게 됩니다.

#### 🔥 재가열

- 위로 튀어 올라왔지만 식어버린 빵을 데우려면 토스터의 레버를 내린 후 '재가열' 버튼을 누르십시오. '재가열' 버튼의 표시등이 점등합니다.

## 토스터 사용에 관한 도움말

- 빵을 가볍게 굽거나 마른 빵을 토스트할 경우에는 보다 낮은 설정을 선택합니다.
- 빵 한 조각을 구울 때 토스트의 한쪽 색이 다른 쪽과 차이가 날 수도 있는데, 이는 정상입니다.
- 마르거나 딱딱해진 빵이 신선한 빵보다 빠르게 구워지고, 얇게 썬 빵이 두껍게 썬 빵보다 빠르게 구워집니다. 따라서 굽기 조절을 평소보다 낮게 설정해야 합니다.
- 최상의 상태로 구우려면 빵 조각의 두께, 신선도 및 크기가 균일해야 합니다.
- 빵을 고르게 구우려면 굽기 조절 기능이 자동으로 재설정될 수 있도록 한 번 구운 후 30초 이상 기다렸다가 다음 빵 조각을 굽는 것이 좋습니다. 또는 한 번 구운 후 다음 굽기를 할 때 온도를 낮게 설정하십시오.

## 토스터 뚜껑 사용법

**토스터 뚜껑은 작동중 사용할 수 없습니다.**

- 화재 및 화상의 위험이 있습니다.

- 1 토스터 뚜껑은 토스터를 사용하지 않는 동안 오직 내부의 먼지의 유입을 막기 위한 용도로 사용할 수 있습니다. 반드시 토스터 전원을 켜기 전에 토스터 뚜껑을 제거해 주십시오.
- 2 사용하는 동안 토스터 뚜껑으로 빵 투입구를 막지 마십시오. 화재의 위험이 있습니다.
- 3 화상의 위험을 피하기 위해서 토스터 뚜껑을 열고 닫을때 손잡이를 이용하여 주십시오.

## 관리 및 청소

- 1 기기를 청소하기 전에 토스터 플러그를 뽑고 기기를 식히십시오.
- 2 부스거리 받침대 ⑤를 밖으로 살며시 빼냅니다. 받침대를 청소한 후, 새 것으로 교체합니다. 이러한 교체 작업을 정기적으로 수행하십시오. 그렇지 않으면 부스러기가 타면서 연기가 나거나 불이 붙을 수 있습니다.  
**부스러기 받침대를 식기 세척기로 세척하지 마십시오.**
- 3 젖은 천으로 토스터 바깥쪽과 워밍 랙을 닦은 후 말리십시오. 연마제를 사용하지 마십시오.

## 고객 서비스

- 코드가 손상된 경우, 안전을 위해  
켄우드 또는 켄우드 공식 서비스  
센터에서 교체 받으십시오.

**기기 작동과 관련된 문제가  
발생할 경우, 먼저 문제  
해결 가이드를 확인하거나**

**www.kenwoodworld.com을  
방문하여 도움을 받으십시오.**

다음과 관련하여 도움이 필요한  
경우:

- 토스터 사용 시 또는
- 점검 또는 수리(보증 수리 또는 유상  
수리)

☎ 켄우드 고객 서비스(080 848  
8800번)로 문의하십시오. **모델  
번호(예: TYPE TCX75)와 5자리  
날짜 코드(예: 13L35)가 필요합니다.**  
해당 정보는 토스터 밑면에 기재되어  
있습니다.

### • 부속품 및 부착물

☎ 080 848 8800으로 문의하십시오.

- 기기 작동과 관련된 문제가  
발생할 경우, 먼저 매뉴얼의  
문제 해결 가이드를 참조하거나  
www.kenwoodworld.com을  
방문하여 도움을 받으십시오.
- 제품을 구매하신 국가의 품질 보증  
및 소비자 권리와 관련된 모든 법률  
조항에 따라 품질을 보증받을 수  
있습니다.
- 제품에 이상이 발생하거나 결함을  
발견하신 경우, 켄우드 공식 서비스  
센터로 방문하시거나 제품을  
보내주십시오. 가까운 켄우드 공식  
서비스 센터에 대한 최신 정보는  
www.kenwoodworld.com 또는  
거주하시는 국가의 웹 사이트를  
방문하여 확인하십시오.
- 본 제품은 켄우드(영국)에서 설계 및  
엔지니어링된 제품입니다.
- 제조국: 중국



## 폐전기·전자제품 처리 지침(WEEE)에 따른 올바른 제품 폐기 정보

수명이 다한 제품은 도시 폐기물로 버릴 수  
없습니다.

지방자치단체에서 지정한 폐기물 처리  
시설이나 수거 서비스를 제공하는  
대리점에서 수거해야 합니다.

가전제품을 분리수거함으로써 환경  
오염을 방지하고 부품을 재활용하여 많은  
에너지와 자원을 절약할 수 있습니다.

제품에는 가전제품 분리수거를 나타내는  
분리배출 마크가 표시되어 있습니다.

## 문제 해결 가이드

문제	원인	해결 방법
토스터가 작동하지 않습니다.	전원이 공급되지 않습니다.	토스터의 전원 플러그를 콘센트에 꽂았는지 확인합니다. 퓨즈/회로 차단기가 집에 있는지 확인합니다.
이송 레버가 아래로 내린 상태에서 고정되지 않습니다.	토스터의 플러그가 콘센트에 꽂혀 있지 않습니다.	토스터의 플러그를 콘센트에 끼우지 않으면 레버는 아래로 내린 상태로 고정되지 않습니다.
빵이 고르게 구워지지 않습니다.	빵 한 조각을 토스트하고 있습니다. 크기, 신선도 또는 두께가 다른 빵 조각들을 동시에 토스트하고 있습니다.	최상의 상태로 구우려면 빵 조각의 두께, 신선도 및 크기가 균일해야 합니다. 빵을 고르게 구우려면 굽기 조절 기능이 자동으로 재설정될 수 있도록 한 번 구운 후 30초 이상 기다렸다가 다음 빵 조각을 굽는 것이 좋습니다. 또는 한 번 구운 후 다음 굽기를 할 때 온도를 낮게 설정하십시오.
빵이 거의 구워지지 않았거나 너무 구워졌습니다.	굽기 설정이 잘못 적용되었습니다.	필요한 수준보다 높거나 혹은 낮은 굽기 설정을 선택했습니다. “도움말” 항목 참조하십시오.
토스터의 슬롯에서 탄내 또는 연기가 납니다.	부스러기 받침대가 꼭 찻습니다. 전열선에 음식 입자가 끼어 있거나 토스터 슬롯에 부스러기가 묻어 있습니다.	플러그를 뽑은 후에 슬롯을 점검합니다. 음식 부스러기 입자들을 제거합니다. 부스러기 받침대를 제거한 후 청소합니다.
위 방법으로도 문제를 해결하지 못할 경우 “고객 서비스”를 참조하십시오.		

# KENWOOD

## 제 품 보 증 서

저희 드롱기코리아(주)에서는 품목별 소비자 분쟁해결 기준 공정거래위원회 고시에 따라 아래와 같이 제품에 대한 보증을 실시합니다.

서비스 요청 시 080-848-8800으로 연락하여 주십시오.

상담서비스 및 수리를 제공하여 드립니다.

제 품 명	토스터기	모 델 명	TCX75
구 입 일		제조번호	
구 입 처		고객성명	
주 소		연 락 처	

토스터기의 제품 보증기간은 구매 후 1년입니다.

### ■ 무상 서비스

일반제품을 영업용으로 전환하여 사용할 경우의 보증기간은 반으로 단축 적용됩니다.  
드롱기코리아(주)는 품목별 소비자분쟁해결기준(공정거래위원회 고시)에 따라 아래와 같이 제품에 대한 보증을 실시합니다.

1. 본 제품은 엄격한 품질관리 및 검사과정을 거쳐서 생산된 제품입니다.  
제품에 따라서 출고전 기능점검 등의 최종 검사 작업을 위하여 제품 내 물 등이 남아 있을 수 있습니다.
2. 제품의 보증기간은 소비자의 구매일로부터 시작됩니다. 따라서 구매증빙 자료와 본 보증서를 사용설명서와 함께 잘 보관하여 주십시오.  
- 구입일자 확인이 어려운 경우 제조년월로 부터 6개월이 경과된 날로 부터 보증기간을 가산 합니다.
3. 품질 보증기간 내에 정상적인 사용상태에서 발생한 성능 및 기능상의 하자에 대해서는 무상으로 수리를 보증합니다. 단 수리가 불가능한 경우 제품을 교환해 드립니다.

### ■ 유상 서비스

서비스 신청 시 다음과 같은 경우 무상서비스 기간내라도 요금이 부과될 수 있습니다.  
반드시 사용설명서를 읽고 사용해 주십시오.

1. 기구세척 또는 조정 사용설명 설치 등의 제품의 고장이 아닌 경우
  - 사용설명 및 분해가 필요하지 않은 간단한 조정
  - 전원 또는 사용되는 식수 등의 기온 등 외부환경 문제 시
  - 제품의 이동 또는 이사 등으로 발생된 제품의 설치 부실 또는 파손
  - 소모자재 등의 교환 또는 관련부품의 세척
2. 소비자 과실로 인한 고장의 경우
  - 전기 용량을 틀리게 사용하여 고장이 발생된 경우
  - 당사에서 지정하지 않은 소모품 / 옵션 부품의 사용으로 인한 고장 발생 시
  - 외부 충격이나 떨어뜨림 등에 의한 고장, 손상 발생 시
  - 당사에서 지정하지 않은 수리서비스 업체 또는 기사 등이 수리하여 고장 또는 사고 발생 시
3. 그 밖의 경우
  - 천재지변 (낙뢰, 화재, 염해, 침수 등)에 의한 고장 발생 시
  - 소모성 부품이 수명이 다한 경우

고객상담 및 서비스  
080-848-8800

드롱기코리아 (주)  
www.kenwoodworld.com/ko-kr



## safety

- Read these instructions carefully and retain for future reference.
- Remove all packaging and any labels.
- Burnt food can catch fire, so:
  - never leave your toaster on unattended;
  - keep your toaster away from anything (eg curtains) that could catch fire;
  - set the browning control lower for thin or dry bread;
  - never warm food with a topping or filling (e.g. pizza): if it drips into the toaster, it could catch fire.
  - Clean the crumb tray regularly: crumbs can smoke or burn.
- To avoid electric shocks, **never**:
  - let the toaster, cord or plug get wet; or
  - put **your hand** or anything metal, e.g. a knife or foil, into the toaster.
- Always unplug the toaster when not in use, before cleaning or attempting to clear jammed bread.
- Never cover your toaster with a plate or anything else - it could overheat and catch fire.
- Never let the cord hang down where a child could grab it.
- We recommend that you do not use your toaster directly under wall cupboards.
- Do not move the toaster whilst it is in operation.
- External metal surfaces are liable to get hot especially the top area.

- Never use an unauthorised attachment or accessory.
- We do not recommend using the toaster for non bread items. For non bread items that are specifically recommended for use in a toaster follow the manufacturer's guidelines and cooking instructions. Remove loose crumbs and clean the crumb tray before and after use.
- Never use a damaged toaster. Get it checked or repaired: see 'Service & Customer Care'.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Misuse of your appliance can result in injury.
- Children from 8 years and above can use, clean and perform user maintenance on this appliance in accordance with the User Instructions provided they are supervised by a person responsible for their safety and have been given instruction concerning the use of the appliance and are aware of the hazards.
- Persons with reduced physical, sensory or mental capabilities or lack of knowledge using this appliance must have been given supervision or instruction on its safe use and are aware of the hazards.
- Children must not play with the appliance and both appliance and cord must be out of reach of children less than 8 years.
- Wipe the outside of the toaster with a damp cloth, then dry. Do not use abrasives.

- Only use the appliance for its intended domestic use. Kenwood will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.

### **before plugging in**

- Make sure your electricity supply is the same as the one shown on the underside of your toaster.

### **Important – UK only**

- The wires in the cord are coloured as follows:

Green and Yellow = Earth,

Blue = Neutral,

Brown = Live.

- The appliance must be protected by a 13A approved (BS1362) fuse.

- **WARNING: THIS APPLIANCE MUST BE EARTHED.**

### **Note:**

- For non-rewireable plugs the fuse cover **MUST** be refitted when replacing the fuse. If the fuse cover is lost then the plug must not be used until a replacement can be obtained. The correct fuse cover is identified by colour and a replacement may be obtained from your Kenwood Authorised Repairer (see Service).
- If a non-rewireable plug is cut off it must be DESTROYED IMMEDIATELY. An electric shock hazard may arise if an unwanted non-rewireable plug is inadvertently inserted into a 13A socket outlet.
- This appliance conforms to EC Regulation 1935/2004 on materials and articles intended to come into contact with food.

### **before using for the first time**

- Clip excess cord into the cord storage clips in the base ①.
- Operate the toaster once on a medium setting without bread. (The lever will not stay down unless the toaster is plugged in).

- As with all new heating elements, your toaster may emit a slight burning smell when it is first switched on. This is normal and not a cause for concern.




## **PREVIEW**

Use the carriage lever to lift the toast to **'Preview'** at any time without cancelling the toasting cycle.

## **key**

- ① Dust cover (if supplied)
- ② **'Preview'** carriage lever (with 'Hi-Rise™' for extra lift)
- ③ browning control
- ④ cancel button with indicator light
- ⑤ bagel button with indicator light
- ⑥ reheat button with indicator light
- ⑦ crumb tray
- ⑧ cord storage

## **to use your toaster**

- 1 Plug the toaster into the power supply.
- 2 Turn the browning control until the desired setting aligns with the line up mark on the body of the toaster. Use a lower setting for light toasting and for thin or dry bread.
- 3 Insert the bread, muffins, bagels etc.
- 4 Lower the lever ② until it locks. (The lever will not stay down unless the toaster is plugged in). The 'cancel'  button will illuminate.
- Use the carriage lever to lift the toast to **'Preview'** at any time without cancelling the toasting cycle.
- To **stop** toasting during the cycle, press the 'cancel' button, the toast

will pop up and the 'cancel' button light will go off.

#### 5 **Your toast will pop up**

**automatically**, to raise it higher, lift the lever.



#### **Defrost position**

- To defrost frozen bread, select the defrost position on the browning control.



#### **Bagel (A)**

- To toast bagels the cut face should be facing the centre elements. Select the desired browning setting and lower the carriage lever. Press the 'Bagel' button and it will illuminate.
- Note: when toasting using the bagel button, the centre elements will toast with a higher heat than the element at the front and back of the toaster. **This will result in only one side of the item being toasted.**



#### **Reheat**

- To warm toast that has popped up but gone cold, lower the toast then press the 'reheat' button. The 'reheat' button will illuminate.

## hints on using your toaster

- Select a lower setting for light browning or for dry bread.
- When toasting a single slice of bread, you may notice a variation in toast colour from one side to the other - this is normal.
- Dry/stale bread toasts more quickly than fresh bread and thinly sliced bread toasts more quickly than thickly sliced bread. Therefore the browning control should be set at a lower setting than usual.
- For best results ensure that the bread slices are of an even thickness, freshness and size.
- In order to achieve uniform browning we recommend you wait a minimum of 30 seconds between each toasting so that the control can automatically reset. Alternatively select a lower setting when additional toasting is carried out.

## How to use the dust cover

### **Dust cover can't be use during operation.**

- Risk of fire and burns.

- 1 The toaster lid can only be used to prevent the dust while the toaster is not in use.  
Before you turn on the toaster  
Remove the toaster lid.
- 2 Do not block the slot with the dust cover during use.  
There is a risk of fire.
- 3 To avoid the risk of burns, use the handle to open and close the dust cover

## care and cleaning

- 1 Before cleaning, unplug your toaster and let it cool down.
- 2 Slide out the crumb tray **5**. Clean, then replace. Do this regularly: crumbs can smoke or even burn.  
**Do not dishwash the crumb tray.**
- 3 Wipe the outside of the toaster and the warming rack with a damp cloth, then dry. Do not use abrasives.

## service & customer care

- If the cord is damaged it must, for safety reasons, be replaced by KENWOOD or an authorised KENWOOD repairer.



**If you experience any problems with the operation of your appliance, before calling for assistance refer to the troubleshooting guide or visit [www.kenwoodworld.com](http://www.kenwoodworld.com).**

If you need help with:

- using your toaster or
- servicing or repairs (in or out of guarantee)
- ☎ call Kenwood customer care on **023 9239 2333. Have your model number ready (e.g. TYPE TCX75) and date code (5 digit code e.g. 13L35) ready.** They are on the underside of your toaster.
- **spares and attachments**
- ☎ call 0844 557 3653.

### **other countries**

- If you experience any problems with the operation of your appliance, before requesting assistance refer to the “troubleshooting guide” section in the manual or visit [www.kenwoodworld.com](http://www.kenwoodworld.com).
- Please note that your product is covered by a warranty, which complies with all legal provisions concerning any existing warranty and consumer rights in the country where the product was purchased.
- If your Kenwood product malfunctions or you find any defects, please send it or bring it to an authorised KENWOOD Service Centre. To find up to date details of your nearest authorised KENWOOD Service centre visit [www.kenwoodworld.com](http://www.kenwoodworld.com) or the website specific to your Country.

- Designed and engineered by Kenwood in the UK.
- Made in China.

## **IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)**

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

### **guarantee (UK only)**

If your toaster goes wrong within one year from the date you bought it, we will repair or replace it free of charge provided:

- you have not misused, neglected or damaged it;
- it has not been modified (unless by Kenwood);
- it is not second-hand;
- it has not been used commercially;
- you have not fitted a plug incorrectly; and
- **you supply your receipt to show when you bought it.**

This guarantee does not affect your statutory rights.

## troubleshooting guide

<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
Toaster does not operate.	No power.	Check toaster is plugged in. Check the fuse/circuit breaker in your home.
Carriage lever not staying down	Toaster not plugged in.	The lever will not stay down unless the toaster is plugged in.
Uneven Browning.	1 Slice of bread being toasted.  Bread slices of different size, freshness or thickness being toasted at same time.	For best results ensure that the bread slices are of an even thickness, freshness and size. In order to achieve uniform browning we recommend you wait a minimum of 30 seconds between each toasting so that the control can automatically reset. Alternatively select a lower setting when additional toasting is carried out.
Toast colour too light or too dark.	Wrong browning setting used.	Select a higher or lower browning setting. Refer to "hint" section.
Burning smell or smoke from slots.	Crumb tray full. Food particles stuck to element or loose in toasting slots.	Unplug before checking the slots. Remove any loose food particles. Remove and clean the crumb tray.
If none of the above see "Service & Customer Care".		