


# KENWOOD

TYPE KQC51 (Chef)  
TYPE KQL61 (Chef XL)

---

instructions



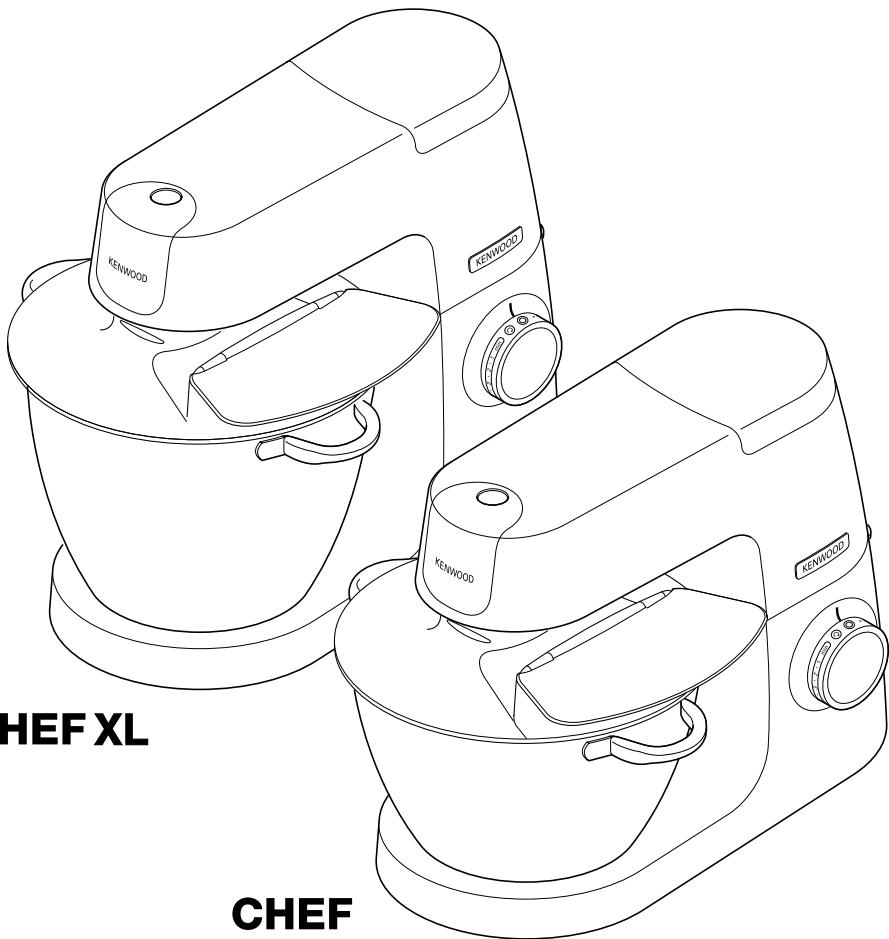


**English**

**2 - 11**

**عربي**

**٢٠ - ١٢**

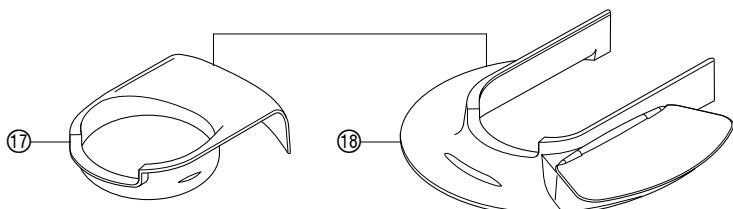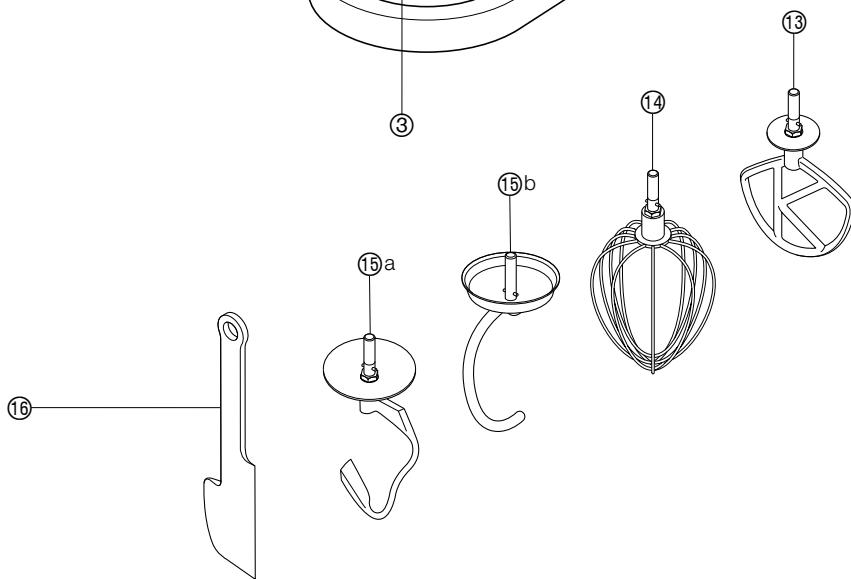
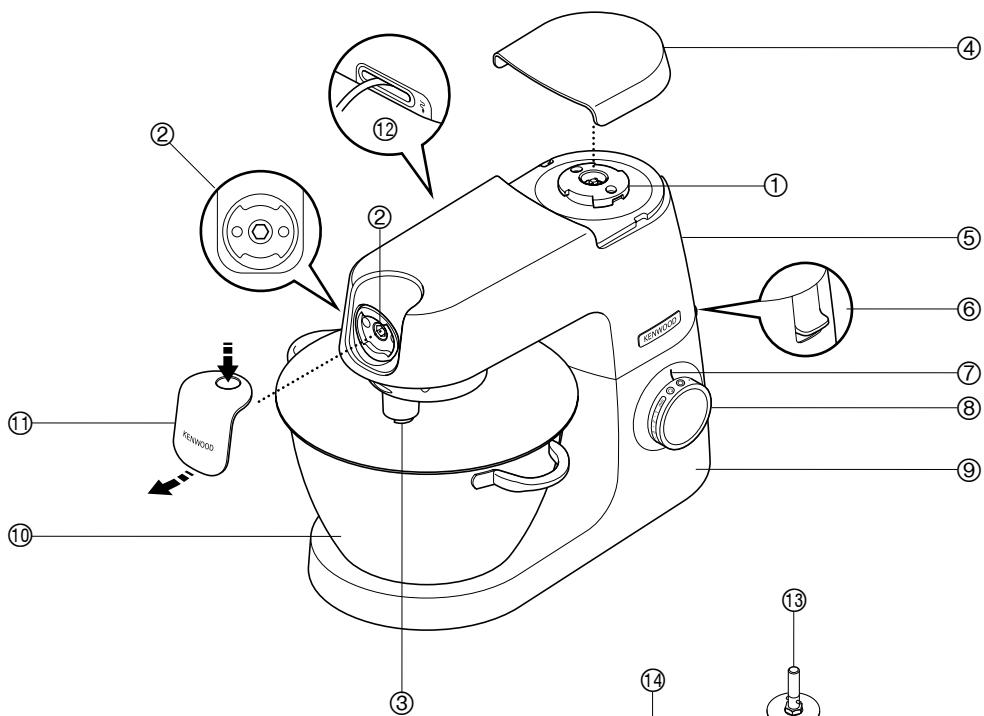






K beater








Dough hook

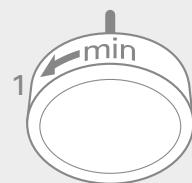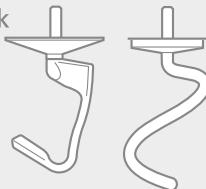

Whisk

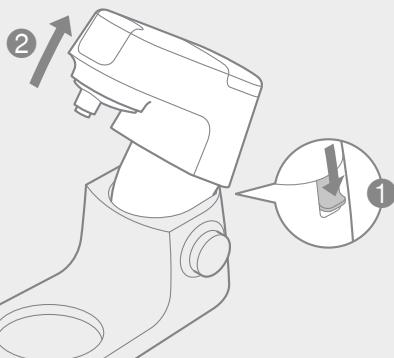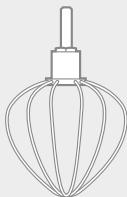

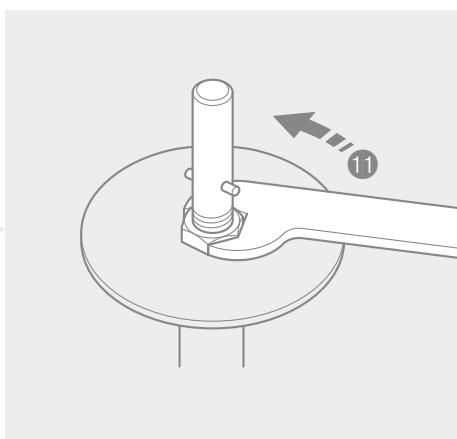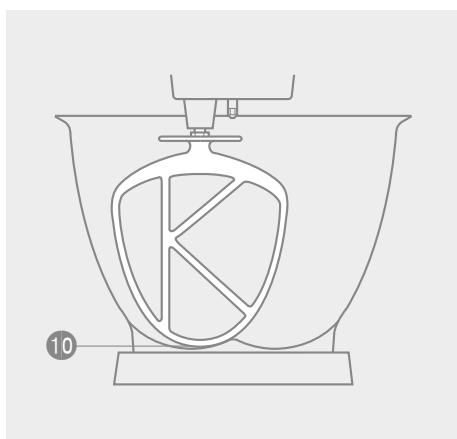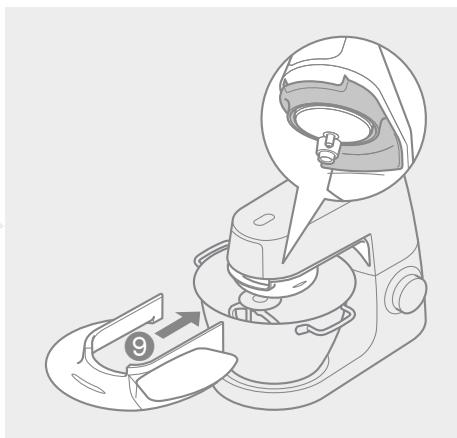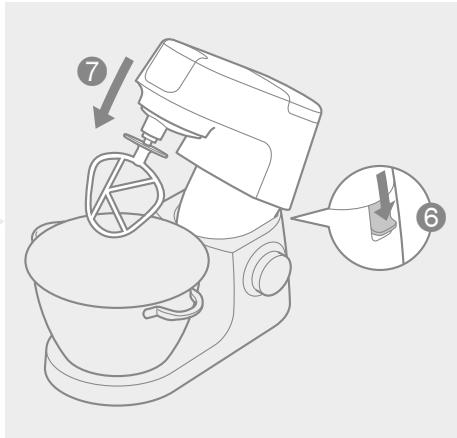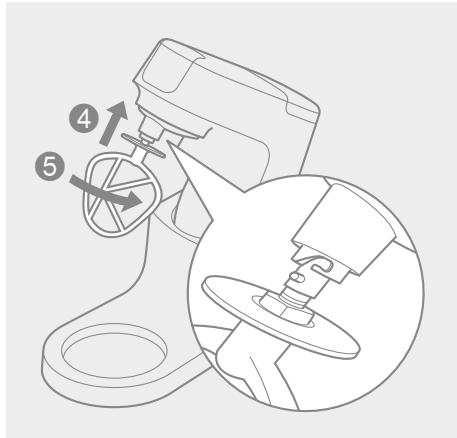

# Know your Kenwood Kitchen Machine

Congratulations on buying a Kenwood. With such a wide range of attachments available, it's more than just a mixer. It's a state-of-the-art Kitchen Machine. We hope you'll enjoy it.

Robust. Reliable. Versatile. Kenwood.

## Safety

- Read these instructions carefully and retain for future reference.
- Remove all packaging and any labels.
- If the cord is damaged it must, for safety reasons, be replaced by KENWOOD or an authorised KENWOOD repairer.
- Turn the speed control to 'O' OFF position and unplug before fitting or removing tools/attachments, after use and before cleaning.
- Keep your fingers away from moving parts and fitted attachments.
- Never leave the Kitchen Machine unattended when it is operating.
- Never use a damaged appliance. Get it checked or repaired: see 'service and customer care' section.
- Never operate the Kitchen Machine with the head in the raised position.
- Never let the cord hang down where a child could grab it.
- Never let the power unit, cord or plug get wet.
- Never use an unauthorised attachment or more than one attachment at once.
- Never exceed the quantities stated in the maximum capacity chart.
- When using an attachment, read and follow the safety instructions that are supplied with it.
- Take care when lifting this appliance as it is heavy. Ensure the head is correctly latched in the down position and that the bowl, tools, outlet covers and cord are secure before lifting.

- Take care when removing bowl tools after extended use as they may get hot.
- Ensure the cord is fully unfolded from the cord storage compartment ⑫ before using the Kitchen Machine.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not move or raise the mixer head with an attachment fitted as the Kitchen Machine could become unstable.
- Do not operate your appliance near the edge of a work surface.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Misuse of your appliance can result in injury.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- The maximum rating is based on the attachment that draws the greatest load. Other attachments may draw less power.
- Only use the appliance for its intended domestic use.  
Kenwood will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.

## **before plugging in**

### **important - UK only**

- Make sure your electricity supply is the same as the one shown on the underside of your machine.
- The wires in the cord are coloured as follows:  
Blue = Neutral, Brown = Live.
- The appliance must be protected by a 13A approved (BS1362) fuse.
- For non-rewireable plugs the fuse cover MUST be refitted when replacing the fuse. If the fuse cover is lost then the plug must not be used until a

replacement can be obtained. The correct fuse cover is identified by colour and a replacement may be obtained from your Kenwood Authorised Repairer (see Service).

- If a non-rewireable plug is cut off it must be DESTROYED IMMEDIATELY. An electric shock hazard may arise if an unwanted non-rewireable plug is inadvertently inserted into a 13A socket outlet.
- This appliance conforms to EC Regulation 1935/2004 on materials and articles intended to come into contact with food.

# Know your Kitchen Machine

## before using for the first time

- Wash the parts: see 'care and cleaning' section.

## Key

### Attachment outlets

- ① high-speed outlet
- ② slow-speed outlet
- ③ bowl tool socket

### Mixer

- ④ high speed outlet cover
- ⑤ mixer head
- ⑥ head release lever
- ⑦ mixer ready indicator light
- ⑧ on/off and speed control
- ⑨ power unit
- ⑩ bowl
- ⑪ slow speed outlet cover
- ⑫ cord storage compartment
- ⑬ K-beater
- ⑭ whisk
- ⑮ a dough hook (if supplied)
- ⑮ b spiral dough hook (if supplied)
- ⑯ spatula
- ⑰ head shield
- ⑱ splashguard

Note: Spanner ⑪ shown is for illustration purposes only and is not supplied in pack.

### Optional attachments

There are a range of optional attachments available to use with your Kitchen Machine. See the attachment leaflet included in your pack or visit [www.kenwoodworld.com](http://www.kenwoodworld.com) to see the full range and how to buy an attachment not included in your pack.

### Note: Slow Speed outlet attachments

The slow speed outlet on your Kitchen Machine model features the Twist Connection System. It is designed to accept Twist Connection System attachments.

When purchasing new attachments for the slow speed outlet you should check compatibility with your Kitchen Machine. All Twist Connection System attachments can be identified by the product code which starts with KAX and also by the Twist logo  which is visible on packaging. For more information visit [www.kenwoodworld.com/twist](http://www.kenwoodworld.com/twist).

If you own attachments featuring the Bar Connection System  you will need to use the KAT002ME adaptor to connect these to the Twist Connection System  on your Kitchen Machine.

For more information visit  
[www.kenwoodworld.com/twist](http://www.kenwoodworld.com/twist).

# The bowl tools and some of their uses

## K-beater

For making cakes, biscuits, pastry, icing, fillings, éclairs and mashed potato.

- 8 Release the tool by turning clockwise to unlock from the tool socket and then remove.

## Whisk

For eggs, cream, batters, fatless sponges, meringues, cheesecakes, mousses, soufflés. Do not use the whisk for heavy mixtures (e.g. creaming fat and sugar) - you could damage it.

## Hints

- The fold function  can be used for folding light ingredients into heavier mixtures for example meringues, mousses, fruit fools, Genoese sponges and soufflés, and to slowly incorporate flour and fruit into cake mixtures. The mixer will operate at a constant slow speed.

## Dough Hook

For yeast mixtures only

## To use your bowl tools

Ensure the cord is fully unfolded from the cord storage compartment  before using the Kitchen Machine.

- 1 Push the head-lift lever  down and raise the mixer head until it locks .
- 2 Fit the bowl on the base and turn clockwise  to secure in position .
- 3 Place the required tool into the socket. Then push up  and turn  the tool to lock into position.  
Note: If the K-beater or Whisk are not picking up ingredients from the bottom of the bowl refer to the "Tool Adjustment" section.
- 4 Lower the mixer head by pushing the head release lever down  and lower the mixer head until it locks .
- 5 Plug into the power supply and the 'mixer ready indicator light' will illuminate.
- 6 Start the machine by turning the speed control to the desired speed setting. Use the pulse (P) position for short bursts of maximum speed.
- 7 After use, return the speed control to 'O' OFF position and unplug your Kitchen Machine.

## Important

Ensure that no bowl tools are fitted or stored in the bowl when using other outlets.

Recommended Usage Chart						
Tool	Recipe/ Process	Maximum Capacities		R <small>1</small>	① * (Minutes)	Hints and Tips
		Chef	Chef XL			
K-beater	Creaming butter/margarine and sugar	2.72kg (9 Egg mix)	4.55kg (15 Egg mix)	Min → Max	4	<ul style="list-style-type: none"> <li>To avoid splashing of ingredients gradually increase the speed.</li> <li>When creaming fat and sugar for cake mixes, always use the fat at room temperature or soften it first.</li> <li>To fully incorporate the ingredients stop mixing and scrape down the bowl with the spatula frequently.</li> <li>Use cold ingredients for pastry unless your recipe says otherwise.</li> </ul>
	Beating eggs into cake mixes			Min → Max	1 - 4	
	Folding in flour, fruit etc			Fold → 1	30 - 60 secs	
	Pastry & Biscuits   Flour Weight – rubbing fat into flour	680g	910g	Min → 1	2	
	All in one cake mixes	Total Weight	2kg	5kg	Min → Max	45 – 60 secs
	Egg whites	12 (455g)	16 (605g)	Min → Max	1½ – 2	
Whisk	Fatless sponges	620g (6 Egg Mix)	930g (9 Egg Mix)		4 – 6	<p><b>Important</b></p> <ul style="list-style-type: none"> <li>To avoid splashing of ingredients gradually increase the speed.</li> </ul>
	Cream	1L	2L	Min → 4-6	1½ – 3	<ul style="list-style-type: none"> <li><b>The whisk is not suitable for making all in one cake mixes as these mixes are too heavy and will damage it.</b></li> <li>Best results achieved when eggs are at room temperature.</li> <li>Before whisking egg whites, make sure there is no grease or egg yolk on the whisk or the bowl.</li> </ul>
	(Fresh whipping cream used, 38% fat content. Processing times may vary, depending on fat content of cream)					
Mayonnaise	Egg yolk	2		Max	1 – 1½	
	Mustard	10g				
	Vegetable Oil	200ml				
Pancake Batter	Flour	250g		'Min' speed for 10 secs. Then increase to max speed for 45 – 60 secs	1	<ul style="list-style-type: none"> <li>Add flour to the bowl first, followed by the wet ingredients.</li> <li>Mix on minimum speed to incorporate ingredients.</li> </ul>
	Milk	500g				
	Eggs	200g				

Eggs sizes used = medium sized (Weight 53 – 63g)  
\* This is for guidance only and will vary depending on the exact recipe and ingredients being processed

Tool	Recipe/ Process	Maximum Capacities		① * (Minutes)	Hints and Tips
		Chef	Chef XL		
Dough Hook (For Yeasted Dough Mixes)	Bread Dough (stiff yeasted)	Flour Weight 350g – 1.36kg	350g – 1.6kg	Min 1	60 SECS 3 – 4
	Total Weight	564g – 2.18kg	564g – 2.58kg	Re-knead Speed 1	60 SECS
	Soft yeasted dough (enriched with butter and eggs)	Flour Weight 250g – 1.3kg	250g – 2.6kg	Min	60 SECS
	Total Weight	478g – 2.5kg	478g – 5kg	Re-knead Speed 1	3 – 4
					60 SECS



- Important**
- Never exceed the maximum capacities stated – you may overload the machine.
  - If you hear the machine labouring, switch off, remove half the dough and do each half separately.
  - The ingredients mix best if you put the liquid in first.
- Yeast**
- Dried yeast** (the type that needs reconstituting): pour the warm water into the bowl. Then add the yeast and the sugar and leave to stand for about 10 minutes until frothy.
  - Fresh yeast:** crumble into the flour.
  - Other types of yeast:** follow the manufacturer's instructions.
  - Put the dough into a greased polythene bag or a bowl covered with a tea towel. Then leave somewhere warm until doubled in size.

Eggs sizes used = medium sized (Weight 53 – 63g)

\* This is for guidance only and will vary depending on the exact recipe and ingredients being processed

# To fit and use your Splashguard ⑯+⑰

## To assemble

The splashguard assembly consists of 2 pieces: the head shield ⑯ and the splashguard ⑰.

The splashguard cannot be fitted to the bowl unless the shield is fitted.

- 1 Raise the mixer head until it locks.
- 2 Clip the head shield upwards onto the underside of the mixer head ⑮ until fully located.
- 3 Fit the bowl onto the base.
- 4 Lower the mixer head.
- 5 Rest the splashguard on the bowl rim and then slide forward until fully located ⑯.
- During mixing, ingredients can be added directly to the bowl via the feed chute.
- 6 To remove the splashguard simply slide it away from the mixer bowl.
- 7 To remove the head shield, raise the mixer head until it locks. Remove the tool if fitted, then pull the head shield downwards from the underside of the mixer head.

Note: Only fit or remove the splashguard when the mixer head is in the locked position.

**We recommend that the head shield is removed regularly from the mixer head for cleaning.**

## Tool Adjustment

### K-beater & Whisk

The tools are set to the correct height for the bowl supplied in the factory and should not require adjustment.

However, if you wish to adjust the tool use a suitable sized spanner:

TYPE KQC51 = 15mm

TYPE KQL61 = 19mm

Then follow the instructions below:

- 1 Unplug the appliance.
- 2 Raise the mixer head and insert the whisk or beater.
- 3 Lower the mixer head. If the clearance needs to be adjusted, raise the mixer head and remove the tool. Ideally the whisk and K-beater should be **almost** touching the bottom of the bowl ⑩.
- 4 Using a suitable spanner loosen the nut sufficiently to allow adjustment of the shaft ⑪. To lower the tool closer to the bottom of the bowl, turn the shaft anti-clockwise. To raise the tool away from the bottom of the bowl turn the shaft clockwise.
- 5 Re-tighten the nut.
- 6 Fit the tool to the mixer and lower the mixer head. (Check its position see points above).
- 7 Repeat the above steps as necessary until the tool is set correctly. Once this is achieved tighten the nut securely.
- Note: Spanner ⑪ shown is for illustration purpose only.

### Dough Hook

This tool is set at the factory and should require no adjustment.

# Care & Cleaning

- Always switch off and unplug before cleaning.
- A little grease may appear at the slow speed outlet ② when you first use it. This is normal – just wipe it off.

## **Power Unit And Outlet Covers**

- Wipe with a damp cloth, then dry.
- Never use abrasives or immerse in water.
- Store excess cord into the cord storage compartment ⑫ at the back of the machine.

## **Bowl**

- Wash by hand, then dry thoroughly or wash in the dishwasher.
- Never use a wire brush, steel wool or bleach to clean your stainless steel bowl. Use vinegar to remove limescale.
- Keep away from heat (cooker tops, ovens, microwaves).

## **Tools & Splashguard**

- Wash by hand, then dry thoroughly or wash in the dishwasher.

# Recipe

## **chilli marinade**

200g cold clear runny honey (refrigerated overnight)  
1 chilli (whole)  
20g (1tsp) crunchy peanut butter  
Seasoning

- 1 Place all the ingredients into the mini chopper/mill.
- 2 Fit the attachment to the Kitchen Machine and allow the ingredients to settle around the blade.
- 3 Switch to pulse for 4 seconds.
- 4 Use as required.

# Service and Customer Care

**If you experience any problems with the operation of the appliance, before calling for assistance refer to the troubleshooting guide or visit [www.kenwoodworld.com](http://www.kenwoodworld.com).**

If you need help with:

- using your appliance
  - servicing or repairs (in or out of guarantee)
    - ☞ call Kenwood customer care on 023 9239 2333. **Have your model number (e.g. KQC51, or KQL61) and date code (5 digit code e.g. 13L35) ready.** They are on the underside of the power unit.
  - **spares and attachments**
    - ☞ call 0844 557 3653.
- other countries**
- If you experience any problems with the operation of your appliance, before requesting assistance refer to the "troubleshooting guide" section in the manual or visit [www.kenwoodworld.com](http://www.kenwoodworld.com).
  - Please note that your product is covered by a warranty, which complies with all legal provisions concerning any existing warranty and consumer rights in the country where the product was purchased.
  - If your Kenwood product malfunctions or you find any defects, please send it or bring it to an authorised KENWOOD Service Centre. To find up to date details of your nearest authorised KENWOOD Service centre visit [www.kenwoodworld.com](http://www.kenwoodworld.com) or the website specific to your Country.

- Designed and engineered by Kenwood in the UK.
- Made in China.



## **IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

# Troubleshooting guide

<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
The whisk or K-beater knocks against the bottom of the bowl or not reaching the ingredients in the bottom of the bowl.	Tool at the wrong height and needs adjusting.	Adjust the height using a suitable spanner – see “Tool Adjustment” section.
Slow speed attachment cannot be fitted.	Check your attachment is compatible for use with your model. Twist connection system required (Model KAX) 	Attachment must have the KAX twist connection system  to fit the outlet. If you own attachments featuring the Bar Connection System  you will need to use the KAT002ME adaptor to connect these to the Twist Connection System on your Kitchen Machine. <i>For more information visit <a href="http://www.kenwoodworld.com/twist">www.kenwoodworld.com/twist</a></i>
‘Mixer ready indicator light’ flashing when Kitchen Machine first plugged in.	Speed control not in the ‘O’ position.  Mixer head in the raised position or not locked down correctly.	Check and turn speed control to the ‘O’ position.  Check Kitchen Machine head is locked down correctly.
The Kitchen Machine stops during operation. ‘Mixer ready indicator light’ flashing rapidly.	Overload protection or overheat system activated. Maximum capacity exceeded.	Unplug and check for obstruction or overloading. Turn the speed control to “O” and then restart. If the machine will not operate, remove some of the ingredients to reduce the load and restart. If this still does not resolve the problem, unplug and allow to stand for 15 minutes. Plug in and reselect the speed. If the machine does not restart following the above procedure contact “customer care” for further advice.
‘Mixer ready indicator light’ off whilst machine plugged in.	Kitchen machine has been left plugged in for more than 30 minutes without being operated and has gone into Standby mode.	Turn the speed control to ‘min’ then return to ‘O’ to reset the machine.

# دليل استكشاف المشكلات وحلها

المشكلة	السبب المحتمل	الحل
خفافة البيض أو مضرب العجين بغير قاع الوعاء أو لا يصل إلى المكونات الموجودة في قاع الوعاء.	ارتفاع الأداة غير صحيح وتحتاج لضبط ارتفاعها.	اصططي طول الأداة باستخدام مفتاح ربط لتعديل الارتفاع - راجعي قسم "ضبط الأداة".
ملحق السرعة المنخفضة لا يمكن تركيبه.	تأكد من توافق الملحق مع الاستخدام مع موديل الجهاز لديك. يتطلب نظام Twist connection system (الموديل (KAX (TWIST connection system (TWIST	يجب أن شعار KAX الخاص بنظام twist connection system موجوداً على الملحق حتى تتمكن من تركيبه في المخرج. إذا كان لديك ملحقات تعمماً على نظام Bar Connection System (BAR). ففي هذه الحالة ستحتجين إلى استخدام منظم KAT002ME حتى يمكنك توصيل هذه الملحقات مع نظام twist connection system الموجود في موديل جهاز المطبخ المتكامل لديك. لمزيد من المعلومات زوري الموقع: <a href="http://www.kenwoodworld.com/twist">www.kenwoodworld.com/twist</a>
يومض "ضوء مؤشر استعداد الخلاط" عند توصيل جهاز المطبخ المتكامل بمصدر التيار الكهربائي للمرة الأولى.	مفتاح التحكم في السرعات غير موجه على موضع إيقاف التشغيل "O".	تأكد من مفتاح التحكم في السرعات وتوجيهه على موضع إيقاف التشغيل "O".
يتوقف جهاز المطبخ المتكامل خلال التشغيل. يومض "ضوء مؤشر استعداد الخلاط" بشكل سريع.	تم تنشيط وظيفة الحماية ضد التحميل الزائد أو الارتفاع المفرط لدرجة حرارة الجهاز. تم تجاوز السعة القصوى المحددة. افصلي الجهاز عن مصدر التيار الكهربائي وتأكد من عدم وجود أي انحصار أو عائق أو تحميل زائد.	تأكد من إنزال رأس جهاز المطبخ المتكامل بشكل صحيح لأسفل وتعسيقه في موضعها.
يتوقف جهاز المطبخ المتكامل خلال التشغيل. يومض "ضوء مؤشر استعداد الخلاط" بشكل سريع.	تم توصيل جهاز المطبخ المتكامل بمصدر التيار الكهربائي لمدة أطول من ٣٠ دقيقة دون استخدامه وبذلك دخل الجهاز في وضع الاستعداد.	لغي مفتاح التحكم في السرعات إلى وضع إيقاف التشغيل "O" ثم أعيدي تشغيل الجهاز مرة أخرى. في حالة عدم عمل الجهاز، ففي هذه الحالة أزيلي كمية من المكونات لتقليل الحمل وأعيدي تشغيل الجهاز. إذا لم يساعد ذلك في حل المشكلة، افصلي الجهاز عن مصدر التيار الكهربائي واتركه ١٥ دقيقة ليبرد. وصللي الجهاز بمصدر التيار الكهربائي وأعيدي تحديد السرعة المطلوبة. في حالة عدم عمل الجهاز بعد الإجراءات السابقة، ففي هذه الحالة اتصل بمركز "خدمة العملاء" لطلب المساعدة.
يتوقف وميض "ضوء مؤشر استعداد الخلاط" عند توصيل الجهاز بمصدر التيار الكهربائي.	تم توصيل جهاز المطبخ المتكامل بمصدر التيار الكهربائي لإعادة تعين الجهاز.	أديري مفتاح تحكم السرعة إلى موضع السرعة المنخفضة «min» ثم أعيديه إلى موضع إيقاف التشغيل «O» لإعادة تعين الجهاز.

# العناية والتنظيف

## الخدمة ورعاية العملاء

### الخدمة ورعاية العملاء

- في حالة مواجهة أية مشكلة متعلقة بتشغيل الجهاز، قبل الاتصال لطلب المساعدة، يرجى مراجعة قسم «دليل اكتشاف المشكلات وحلها» في الدليل أو زيارة موقع الويب [www.kenwoodworld.com](http://www.kenwoodworld.com).
- يرجى الملاحظة بأن جهازك مشمول بضمان، هذا الضمان يتواافق مع كافة الأحكام القانونية المعمول بها والمتعلقة بحقوق الضمان والاستهلاك في البلد التي تم شراء المنتج منها.
- في حالة تعطل منتج Kenwood عن العمل أو في حالة وجود أي عيوب، فيرجى إرساله أو إحضاره إلى مركز خدمة معتمد من KENWOOD. للحصول على معلومات محدثة حول أقرب مركز خدمة معتمد من KENWOOD، يرجى زيارة موقع الويب [www.kenwoodworld.com](http://www.kenwoodworld.com)، أو موقع الويب الشخصي للبلد.
- تصميم وتطوير Kenwood في المملكة المتحدة.
- صنع في الصين.



معلومات هامة هو الكيفية الصحيحة للتخلص من المنتج وفقاً للتوجيهات الأوروبية المتعلقة بتنفييات المعدات الكهربائية والإلكترونية (WEEE)

في نهاية العمر التشغيلي للجهاز، يجب عدم التخلص من الجهاز في نفايات المناطق الحضرية. بل يجب أخذه إلى مركز تجميع خاص بجهة محلية متخصصة في التخلص من هذه النفايات أو إلى تاجر يقدم هذه الخدمة. التخلص من الأجهزة المنزلية على نحو منفصل، يحسن الآثار السلبية المحتللة على البيئة والصحة والتي تنتع عن التخلص من هذه النفايات بطريقة غير مناسبة، كما أن هذه العملية تسمح باسترداد المواد المكونة للأمر الذي يتيح الحصول على وفورات كبيرة في مجال الطاقة والموارد. للتدذكرة بضرورة التخلص من الأجهزة المنزلية على نحو منفصل، يوجد على الجهاز صورة مشطوبة سلسلة قمامنة ذات عجلات.

- أوفقي دائمًا تشغيل الجهاز وافصله عن مصدر التيار الكهربائي قبل التنظيف.
- قد تظهر طبقة طفيفة من الشحم على مخرج السرعة المنخفضة ② في المرة الأولى لاستخدامه. هذا أمر طبيعي - فقط امسحيها.

### وحدة الطاقة (المotor) وأغطية المخارج

- مسح بقطعة قماش رطبة ثم التجفيف.
- يحذر استخدام المواد الكاشطة أو الغمر في الماء.
- ادفعي ما يزيد عن حاجتك من السلك الكهربائي إلى داخل مكان تخزين السلك ⑫ الموجود في الجهاز من الخارج.

### السلطانية

- غسيل يدوى ثم التجفيف جيداً أو غسيل في غسالة الأطباق.
- يحذر استخدام فرشاة من السلك أو الصوف المعدني أو مواد التبييض عند تنظيف الوعاء المصنوع من الصلب عديم الصدا. استخدمي الخل لإزالة الطبقة الجيرية.
- أبعديه عن مصادر الحرارة (سطح الموقف، الأفران، المايكروويف).

### الأدوات ومانع الرذاذ

- غسيل يدوى ثم التجفيف جيداً أو غسيل في غسالة الأطباق.

## وصفة التحضير

### تبيلة الفلفل

- ٠٠٠ غرام نحل صافي وبارد (موضوع داخل الثلاجة أثناء الليل)  
١ ثمرة فلفل (كاملة)  
٢٠ غرام (١ ملعقة صغيرة) زبدة فول سوداني  
خشنة  
توايل
- ١ ضعي كل المكونات في القطاعه/المطحنة الصغيرة.  
٢ ركبي الملحق في جهاز المطبخ المتكامل وأسمحي للمكونات بملء الفراغات حول سكين التقاطع.  
٣ شغل الجهاز على وضع التشغيل النبضي لمدة ٤ ثوان.  
٤ استخدمي التبيلة حسب الحاجة.

# تركيب واستخدام مانع

## الرذاذ ⑯ + ⑰

### التركيب

#### مضرب العجين K والخفاقة

يتم ضبط ارتفاع الأدوات على الارتفاع الصحيح لها داخل السلطانية في المصنوع لدى تزويد الجهاز بحيث لا تتطلب أي ضبط إضافي. وعلى الرغم من ذلك، إذا لزم ضبط ارتفاع الأدوات في هذه الحالة استخدمي مفتاح ربط بحجم مناسب.

١٥ = TYPE KQC51

١٩ = TYPE KQL61

ثم اتبعي التعليمات التالية:

- ١ افصلي الجهاز عن مصدر التيار الكهربائي.
- ٢ ارفعي رأس الخلط وركببي خفافة البيض أو المضرب.
- ٣ اخفضي رأس الخلط. إذا كانت المسافة تحتاج إلى الضبط. ارفعي رأس الخلط وأزيلاي الأداة. من المثالى أن يمس المضرب / الخفاقة K بالكاد قاعوعاء ⑩.
- ٤ باستخدامي مفتاح الرابط المرموز فكي الصامولة ⑪ بشكل كاف للسماح بتعديل محور الدوران لخفض الأداة في اتجاه قاع السلطانية. لفي محور دوران في اتجاه عكس عقارب الساعة. لرفع الأداة بعيداً عن قاع الوعاء. لفي محور الدوران في اتجاه عقارب الساعة.
- ٥ أعيدي إحكام ربط الصامولة.
- ٦ ركببي الأداة في الخلط وافحصي رأس الخلط (تأكدى من موضع الأداة بالنسبة لقاع السلطانية. راجعي النقاط السابقة).
- ٧ كرري الخطوات السابقة حسب الحاجة حتى يتم ضبط الأداة بشكل صحيح. بمجرد الوصول إلى المسافة الصحيحة أحكمى ربط الصامولة.

- ملاحظة: مفتاح الرابط ⑪ المبين في الشكل التوضيحي لأغراض الإيضاح فقط.

#### خطاف العجين

تم ضبط هذه الأداة في المصنوع ولا تحتاج لأي ضبط.

يتكون وaci الرذاذ من قطعتين: وaci رأس الخلط

ومانع الرذاذ ⑯.

لا يمكن تركيب مانع الرذاذ في السلطانية بدون تركيب وaci رأس الخلط.

- ١ ارفعي رأس الخلط حتى تستقر في موضع التثبيت.

- ٢ اشبكى وaci الرذاذ لأعلى الجانب السفلي من رأس الخلط ⑯ حتى يتم تركيبه بالكامل.

- ٣ ركببي السلطانية على القاعدة.

- ٤ اخفضي رأس الخلط.

- ٥ ضعي وaci الرذاذ على حافة السلطانية وحركيه للأمام حتى يستقر بالكامل في موضعه ⑨.

- أثناء عملية الخلط. يمكن إضافة المكونات مباشرة إلى السلطانية عن طريق أنبوب إدخال المكونات.

- ٦ إزالة وaci الرذاذ. اسحببه بعيداً عن سلطانية الخلط.

- ٧ إزالة الوaci رأس الخلط. ارفعي رأس الخلط حتى تستقر في موضع التثبيت. أزيلي الأداة المستخدمة في حالة تركيبها ثم اسحببي وaci رأس الخلط لأسفل من الجزء السفلي من رأس الخلط.










- ملاحظة: ركب أو أزيلي وaci الرذاذ فقط عندما تكون رأس الخلط في موضع التثبيت.

- نوصي بإزالة وaci رأس الخلط بانتظام عن رأس الخلط لتنظيفه.

\* الأوزنة المعروضة هي أوزمةً متوسطةً (يوزن بين ٣٥ إلى ٦٣ غراماً) حسب الوجهة والمكونات المستخدمة.

التجهيزات ونصائح	الوظيفة/الطريقة	الساعات الفصومي		الأداة
		Chef XL	Chef	
<p>• أضيفي الدقيق إلى السلطانية أو لا متبرعاً بالنكوت المبتلة.</p> <p>• اخطلي على السرعة «Min» «Mix» للدمج المكونات.</p>	<p>١ - دافئق*</p> <p>٢ - ثانية</p> <p>٣ - إعادة العجن على السرعة ١</p> <p>٤ - ثانية</p> <p>٥ - إعادة العجن على السرعة ١</p> <p>٦ - دافئق*</p>	<p>١ - ثانية</p> <p>٢ - إعادة العجن على السرعة ١</p> <p>٣ - دافئق*</p> <p>٤ - ثانية</p> <p>٥ - دافئق*</p> <p>٦ - دافئق*</p>	<p>٢٥ غرام</p> <p>٥٠ غرام</p> <p>٢٠٠ غرام</p> <p>٣٣٠ غرام</p> <p>٦٤٠ غرام</p> <p>٢٥٠ غرام</p> <p>٣٣٠ غرام</p> <p>٦٤٠ غرام</p> <p>٢٥٠ غرام</p> <p>٣٣٠ غرام</p> <p>٦٤٠ غرام</p>	<p>الخفافـة خلطة الباتوكـل</p> <p>الدقيق الحليب البيض</p> <p>زنـ الدقيق</p> <p>وزنـ الدقيق</p> <p>وزنـ الدقيق</p> <p>وزنـ الدقيق</p>
<p>٦ - ثانية</p> <p>٧ - ثانية</p> <p>٨ - ثانية</p> <p>٩ - ثانية</p> <p>١٠ - ثانية</p> <p>١١ - ثانية</p>	<p>١ - ثانية</p> <p>٢ - إعادة العجن على السرعة ١</p> <p>٣ - دافئق*</p> <p>٤ - ثانية</p> <p>٥ - دافئق*</p> <p>٦ - دافئق*</p>	<p>٢٥ غرام</p> <p>٦٤٠ غرام</p> <p>٢٥٠ غرام</p> <p>٦٤٠ غرام</p> <p>٢٥٠ غرام</p> <p>٦٤٠ غرام</p>	<p>٢٥ غرام</p> <p>٦٤٠ غرام</p> <p>٢٥٠ غرام</p> <p>٦٤٠ غرام</p> <p>٢٥٠ غرام</p> <p>٦٤٠ غرام</p>	<p>عجـنـ الخـمـيرـة عـجـنـ الخـمـيرـة عـجـنـ الخـمـيرـة عـجـنـ الخـمـيرـة عـجـنـ الخـمـيرـة عـجـنـ الخـمـيرـة</p> <p>عـجـنـ العـجـينـ العـجـينـ العـجـينـ العـجـينـ العـجـينـ العـجـينـ</p>

## جدول توصيات الاستخدام

الإداة الوصفة/الطريقة	الساعات القصوى	تمييزات ونصائح		تمييزات ونصائح	(افتلق) *	(افتلق)	Chef XL	Chef
		(افتلق)	(افتلق)					
	منز	• تجنب تطابير زلاد عن المكونات، ارفع السرعة تدريجياً.	"Max" ← "Min"	٤	٤	"Max" ← "Min"	٤٥ - ٧٣ كيلوغرام (خططة ٩ بيسنات)	٤٤ - ٧٣ كيلوغرام (خططة ٩ بيسنات)
	منز	• استخدمي اليد أو السمن في درجة حرارة الغرفة عند خلطها مع السكر لتحضير خلطات الكيك أو قومي بتنقية أدلاً.	"Max" ← "Min"	١ - ٤	٣ - ٦ - ٨ - ٢	"Max" ← "Min"	١ - ٤ طي إلى ← ٢	١ - ٤ طي إلى ← ٢
	منز	• الدمج المكونات بالكامل، وأقصي خلطها واكتشكي جوانب السلاسلية باستخدام ملعقة التقليب بالتناوب.	"Max" ← "Min"	٤٥ - ٦٠ - ٧٥ - ٩٠	٤٥ - ٦٠ - ٧٥ - ٩٠	"Max" ← "Min"	٥ كيلوغرام	٥ كيلوغرام
	منز	• استخدمي مكونات باردة لتحضير الحلويات مما لم تذكر الوصفة خلاف ذلك.	"Max" ← "Min"	٦ - ١٢	٦ - ١٢	"Max" ← "Min"	٦٠ (٥٥٠ غرام)	٦٠ (٥٥٠ غرام)
	منز	• هام: تجنب تطابير زلاد عن المكونات، ارفع السرعة تدريجياً.	"Max" ← "Min"	٦ - ٤	٦ - ٤	"Max" ← "Min"	٦٠ (٥٥٠ غرام)	٦٠ (٥٥٠ غرام)
	منز	• حفافة البيض غير مناسبة لاستخدام مع خلطات المعككات الراهنة حيث أن قوام هذه المعككات تغير وسوف تتسرب في تلفها.	"Max" ← "Min"	٢ - ٣	٢ - ٣	"Max" ← "Min"	٢ لتر	٢ لتر
	منز	• يمكن الحصول على أفضل النتائج عندما تكون درجة حرارة البيض هي نفس درجة حرارة الغرفة.	"Max" ← "Min"	٢ - ٦	٢ - ٦	"Max" ← "Min"	١	١
	منز	• قلل خفق البيض، تأكدي من عدم وجود ربت أو صفار بيض على مضرب البيض أو السلطانية.	"Max"	١ - ١٢	١ - ١٢	"Max"	٢	٢
	منز	• الحصول على أفضل النتائج، اكتشكي جوانب السلطانية بعد إضافة الزيت ثم شغلي الجهاز لمدة ١٠ ثواني إضافية على السرعة العالية.	"Max"	١ - ١٢	١ - ١٢	"Max"	٢ - ٢٠ مل	٢ - ٢٠ مل

\* الأوزان المعروضة هي أوزان متوسطة (بوزن تبين ٥٠ إلى ٦٣ غراماً) والمكونات المستخدمة

## استخدام الخلاط

تأكدى أن السلك الكهربائى مفروش بالكامل عن تجويف تخزين السلك الكهربائى (12) قبل استخدام جهاز المطبخ المتكامل.

١ ادفعى ذراع رفع رأس الخلاط (١) وارفعى رأس الخلاط حتى تستقر فى موضع التثبيت (٢).

٢ ركبى السلطانية على القاعدة وفىها في اتجاه عقارب الساعة (٣) لربطها في موضع التثبيت.

٣ أدخلى الأداة المطلوب استخدامها في المقبس. ثم ادفعها للأعلى (٤) ولم يفتحها (٥) لقفلاها في موضع التعشيق.

ملاحظة: إذا كان مضرب العجين K أو خفاقة البيض لا يمكنهما خلط المكونات الموجودة في قاعدة السلطانية، ففي هذه الحالة راجعى قسم "ضبط الأداة".

٤ اخفضى رأس الخلاط عن طريق دفع ذراع تحرير رأس الخلاط لأسفل (٦) ثم اخفضى رأس الخلاط حتى تستقر فى موضع التعشيق محدثة صوت طقطقة (٧).

٥ وصلى الجهاز بمصدر التيار الكهربائى عندئذ يضيء «ضوء مؤشر استعداد الخلاط».

٦ شغلي الجهاز من خلال لف مفتاح التحكم في السرعات وتوجيهه إلى موضع السرعة المطلوبة. ستحدّى مفتاح وضع التشغيل النبضي (P) للتشغيل لفترات قصيرة على السرعة القصوى.

٧ بعد الاستخدام، أعيدي مفتاح التحكم في السرعات إلى موضع إيقاف التشغيل (OFF) "O" وافصلى جهاز المطبخ الكامل عن مصدر التيار الكهربائى.

٨ أزيلى الأداة عن طريق لفها في اتجاه عقارب الساعة لتحريرها عن مقبس إلحاق الأداة ثم أزليها.

## تلخيص

- يمكن استخدام وظيفة الطي (١) لطي المكونات الخفيفة داخل خلطات ثخينة، مثل المرنخ والموس ومهروس الفواكه مع الكريمة والكعكات الأسفنجية والسوفليه ولطى الدقيق ببطء في خلطات الكعكات. سيعمل الخلط على سرعة منخفضة ثابتة.

## هام

تأكدى من عدم تركيب أو تخزين أي أدأة أخرى خاصة بالسلطانية عند استخدام مخرج آخر.

# استكشاف جهاز المطبخ المتكامل من Kenwood

## الدليل

### ملحقات اختيارية

هناك مجموعة كبيرة ومتنوعة من الملحقات المتوفرة والتي يمكن استخدامها مع جهاز المطبخ المتكامل.

راجع نشرة الملحق المزودة مع صندوق البيع أو زوري الموقع [www.kenwoodworld.com](http://www.kenwoodworld.com) لمشاهدة المجموعة الكاملة من الملحقات المتوفرة وكيفية شراء الملحقات غير المزودة مع جهازك الأساسي.

### ملاحظة: ملحقات مخرج السرعة المنخفضة

مخرج السرعة المنخفضة في موديل جهاز المطبخ المتكامل لديك يتميز بنظام Twist Connection System. وبالتالي فهو مصمم للعمل مع ملحقات نظام Twist Connection System.

عند شرائك ملحقات للعمل مع مخرج السرعة المنخفضة، عليك أولاً التأكد من توافق الملحق مع موديل جهاز المطبخ المتكامل لديك. يمكن تمييز كل ملحقات نظام Twist Connection System من خلال كود المنتج والذي يبدأ على النحو التالي (KAX) وأيضاً عن طريق شعار TWIST™ الموضوع على العبوة. لمزيد من المعلومات زوري الموقع: [www.kenwoodworld.com/twist](http://www.kenwoodworld.com/twist)

إذا كان لديك ملحقات تعمل على نظام Bar Connection System (BAR). ففي هذه الحالة ستحتاجين إلى

استخدام منظم KAT002ME حتى يمكنك توصيل هذه الملحقات مع نظام Twist Connection System الموجود في موديل جهاز المطبخ المتكامل لديك.

لمزيد من المعلومات زوري الموقع: [www.kenwoodworld.com/twist](http://www.kenwoodworld.com/twist)

### مخارج الملحقات

- ① مخرج السرعة العالية
- ② مخرج السرعة المنخفضة
- ③ مقبس إلحاق السلطانية

### الخلط

- ④ غطاء مخرج السرعة العالية
- ⑤ رأس الخلط
- ⑥ دراع تحرير رأس الخلط
- ⑦ ضوء مؤشر استعداد الخلط
- ⑧ مفتاح تحكم السرعة تشغيل/إيقاف
- ⑨ وحدة الطاقة (المونو)
- ⑩ السلطانية
- ⑪ غطاء مخرج السرعة المنخفضة
- ⑫ تجويف تخزين السلك الكهربائي
- ⑬ مضرب العجين K
- ⑭ خفافة البيض
- ⓐ خطاف العجين (في حالة التزويد داخل صندوق البيع)
- ⓑ خطاف العجين اللولبي (في حالة التزويد داخل صندوق البيع)
- ⑯ ملعقة التقليب
- ⑰ واقٍ رأس الخلط
- ⑱ مانع الرذاذ

ملاحظة: مفتاح الربط ⑪ المبين في الرسم التوضيحي لأغراض توضيحية فقط ولا يتم تزويده مع صندوق البيع

## أدوات السلطانية وبعض من استخداماتها

### مضرب العجين K

لعمل الكيك والبسكويت والمعجنات والغطاء السكري للحلوى والحسوات وجاته الإكلير والبطاطس المهرولة.

### خطاف العجين

يستخدم مع خلطات الخميرة فقط

### مضرب البيض

لخفق البيض والزبد والقشدة والعجائن السائلة

- توخي الحذر عند إزالة أدوات السلطانية بعد فترة استخدام مطولة حيث تكون درجة حرارتها مرتفعة.
- تأكدي أن السلك الكهربائي مفروض بالكامل عن تجويف تخزين السلك (12) قبل استخدام جهاز المطبخ المتكامل.
- يجب الإشراف على الأطفال للتأكد من عدم عبئهم بالجهاز.
- لا تحاولي تحريك أو رفع رأس الخلاط أثناء تركيب أي من الملحقات حيث يصبح جهاز المطبخ المتكامل غير مستقر.
- يحذر تشغيل الجهاز بالقرب من حافة سطح التشغيل.
- تعتمد السعة القصوى على الملحق المستخدم والذي يستمد حمل أكبر. بعض من الملحقات الأخرى قد تستمد حمل أقل.
- يمكن استخدام الأجهزة من قبل أشخاص ذوي قدرات جسدية أو حسية أو عقلية منخفضة وممن هم دون خبرة أو معرفة باستخدام الأجهزة في حالة منهم التعليمات الخاصة بالاستخدام أو الإشراف عليهم بحيث يمكنهم استخدامه بطريقة آمنة مع إدراك المخاطر التي تنطوي على استخدام الجهاز.
- قد يؤدي سوء استخدام الجهاز إلى حدوث إصابات.
- لا يجوز استخدام هذا الجهاز من قبل الأطفال. احتفظي بالجهاز والسلك الكهربائي بعيداً عن متناول الأطفال.
- استخدمي الجهاز فقط في الاستخدامات المنزلية المخصص لها. لن تتحمل شركة Kenwood أية مسؤولية في حالة استخدام الجهاز بطريقة غير صحيحة أو عدم الامتثال للتعليمات المذكورة.

## **قبل استخدام الجهاز للمرة الأولى**

- اغسلي الأجزاء المسموحة بغسلها: راجعي قسم "العناية والتنظيف".

## **قبل توصيل الجهاز بمصدر التيار الكهربائي**

- يجب التأكد من تمايز مواصفات المصدر الكهربائي مع المواصفات الموضحة على الجانب السفلي للجهاز.
- يتواافق هذا الجهاز مع ت Siriates الأوروبية 2004/1935 المتعلقة بالمواد والأجسام المتلامسة مع الأطعمة.

# استكشاف جهاز المطبخ المتكامل من Kenwood

تهانينا على اقتناء منتج Kenwood. من خلال العديد من الملحقات المتوفرة، فإن اقتنائك للجهاز لا يشكل فقط شراء الخلط. فهو جهاز مطبخ متكامل عبقري وفريد من نوعه. نتمنى أن ينال إعجابك وتستمتعين باستخدامه.

متين. يمكن الاعتماد عليه. متعدد. منتج Kenwood.

## السلامة

- اقرئي التعليمات التالية واحتفظي بها في المتناول للاستخدامات المستقبلية المرجعية.
- أزيلي مكونات التغليف وأية ملصقات.
- في حالة تلف السلك الكهربائي، يجب استبداله لأسباب متعلقة بالسلامة من قبل KENWOOD أو مركز صيانة معتمد من قبل KENWOOD.
- أديري مفتاح التحكم في السرعات إلى موضع إيقاف التشغيل (OFF) "O" وافصلي الجهاز عن مصدر التيار الكهربائي قبل تركيب أو إزالة أي من الأدوات أو الملحقات وأيضاً فور الانتهاء من الاستخدام وقبل التنظيف.
- أبعدي أصابعك عن الأجزاء المتحركة والملحقات التي تم تركيبها.
- يحذر ترك جهاز المطبخ المتكامل دون ملاحظة أثناء تشغيله.
- يحذر استخدام الجهاز في حالة تلفه. في مثل هذه الحالة يجب فحص الجهاز أو إصلاحه.
- راجعي قسم "الصيانة ورعاية العملاء".
- يحذر تشغيل جهاز المطبخ المتكامل عندما يكون الرأس مرفوعاً.
- يحذر ترك السلك الكهربائي متسلقاً في حالة وجود طفل فقد يتزعزعه.
- يحذر تعرض وحدة الطاقة "المotor" أو سلك الكهرباء أو قابس التوصيل للماء.
- يحذر استخدام ملحق غير معتمد أو أكثر من ملحق في المرة الواحدة.
- يحذر تجاوز الساعات القصوى الموضحة في جدول الساعات القصوى.
- عند استخدام ملحق ما، يجب قراءة واتباع تعليمات الأمان الواردة معه.
- توخي الحذر عند حمل هذا الجهاز فهو ثقيل. تأكدي من قفل رأس الخلط في الوضع الأسفل وتأمين السلطانية والأدوات وأغطية المخراج والسلك الكهربائي قبل حمل الجهاز.



**Kenwood Ltd**

New Lane  
Havant  
Hampshire  
PO9 2NH

[kenwoodworld.com](http://kenwoodworld.com)

© 2018 Kenwood Limited. All rights reserved



5720001493/2