

# BRAUN

## PowerBlend 3



Type JB301AI

Register your product  
[www.braunhousehold.com/register](http://www.braunhousehold.com/register)








Jug Blender

<u>한국어</u>	10
English	13

© Copyright 2019. All rights reserved  
De'Longhi Braun Household GmbH  
Carl-Ulrich-Straße 4  
63263 Neu-Isenburg/Germany




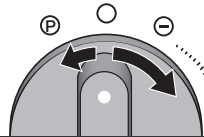


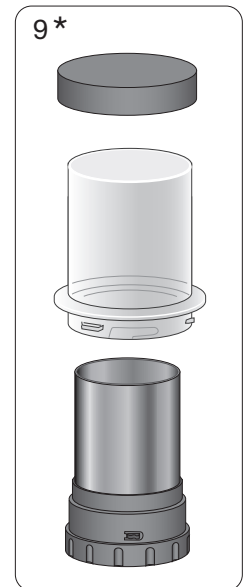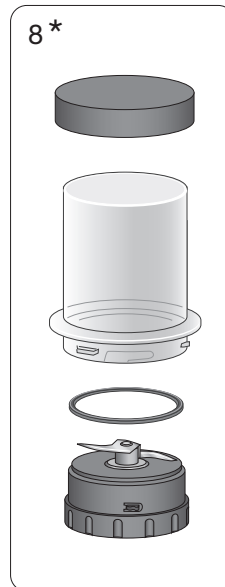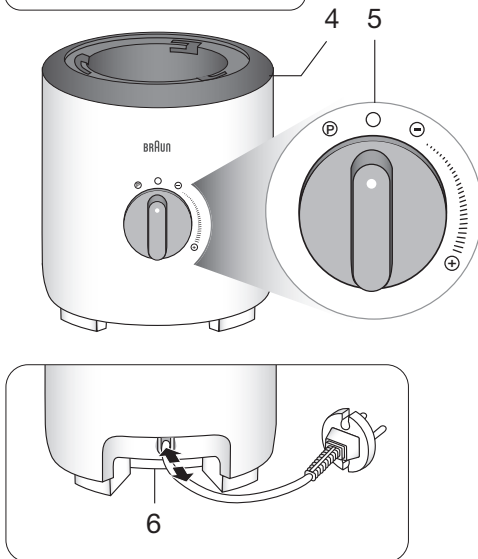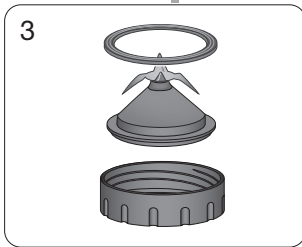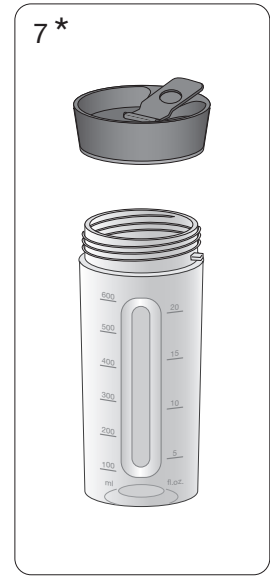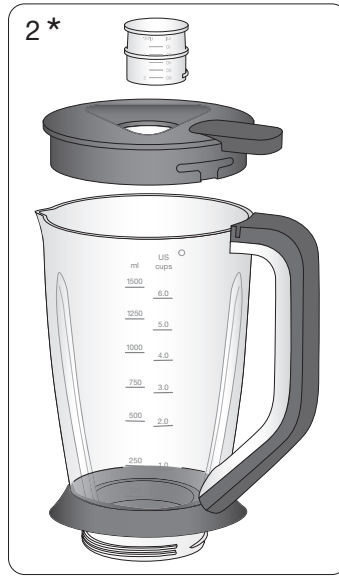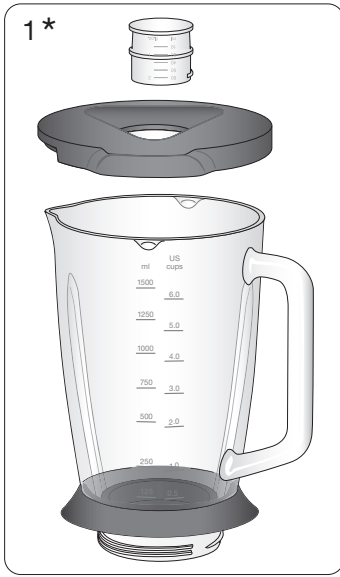
















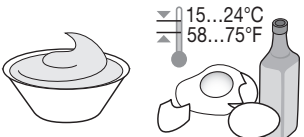




5722310494/12.19 – JB31xx\_JB32xx\_KR  
KR/EN













\* 모델에 따라 구성품 다름

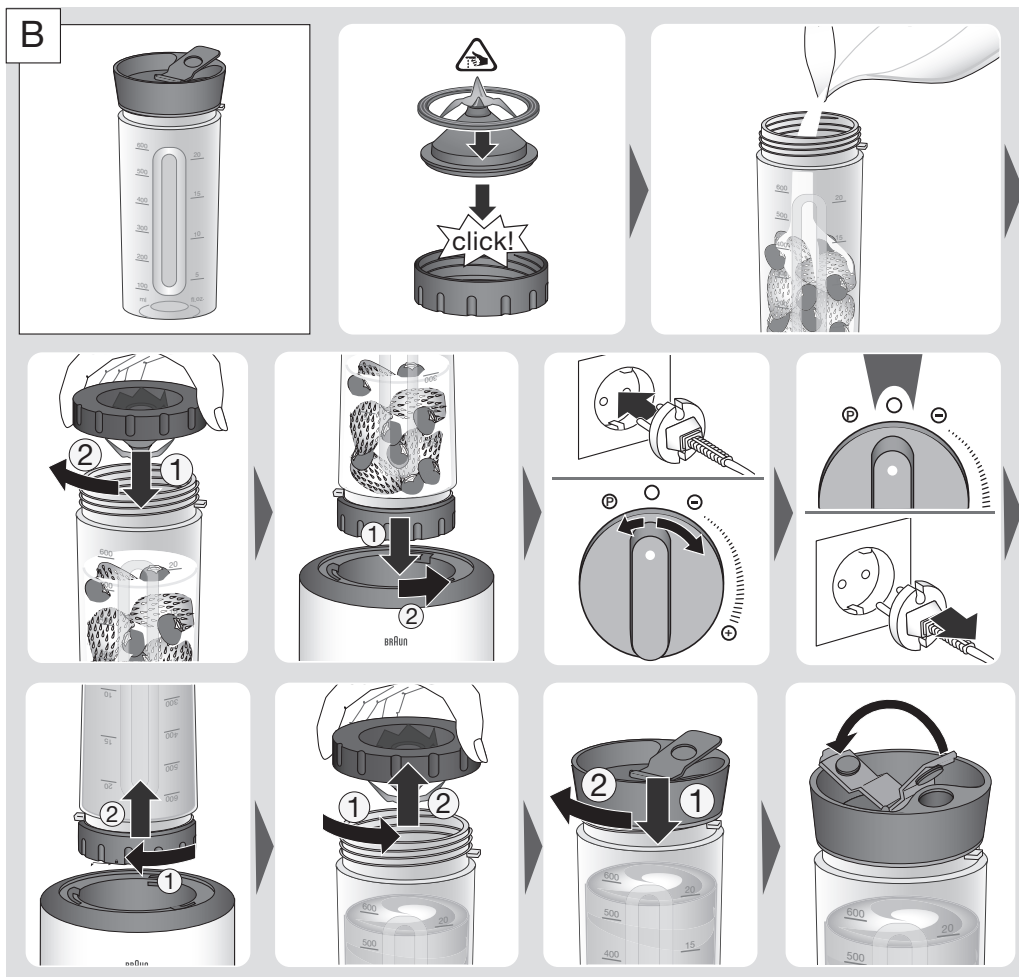


I	<div>Max </div> <div>   </div>	<div>  </div> <div> <div>speed</div> <div> sec.</div> </div>
 	1400	<div>  .....  </div> <div>60 - 90</div>
	900	<div>  .....  </div> <div>30 - 40</div>
	400	<div>  .....  </div> <div>60 - 90</div>
	500	<div>  .....  </div> <div>60</div>
	800	<div>  .....  </div> <div>60</div>
	<div>1000</div> <div> <div>1000</div> <div>  </div> </div>	<div>  .....  </div> <div>40 - 60</div>
	6x 	10-15x 

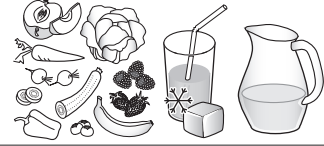


**II**

	Max  ml	speed	 sec.
	600		30-60
	500		20-40
 $>70^{\circ}\text{C}$			

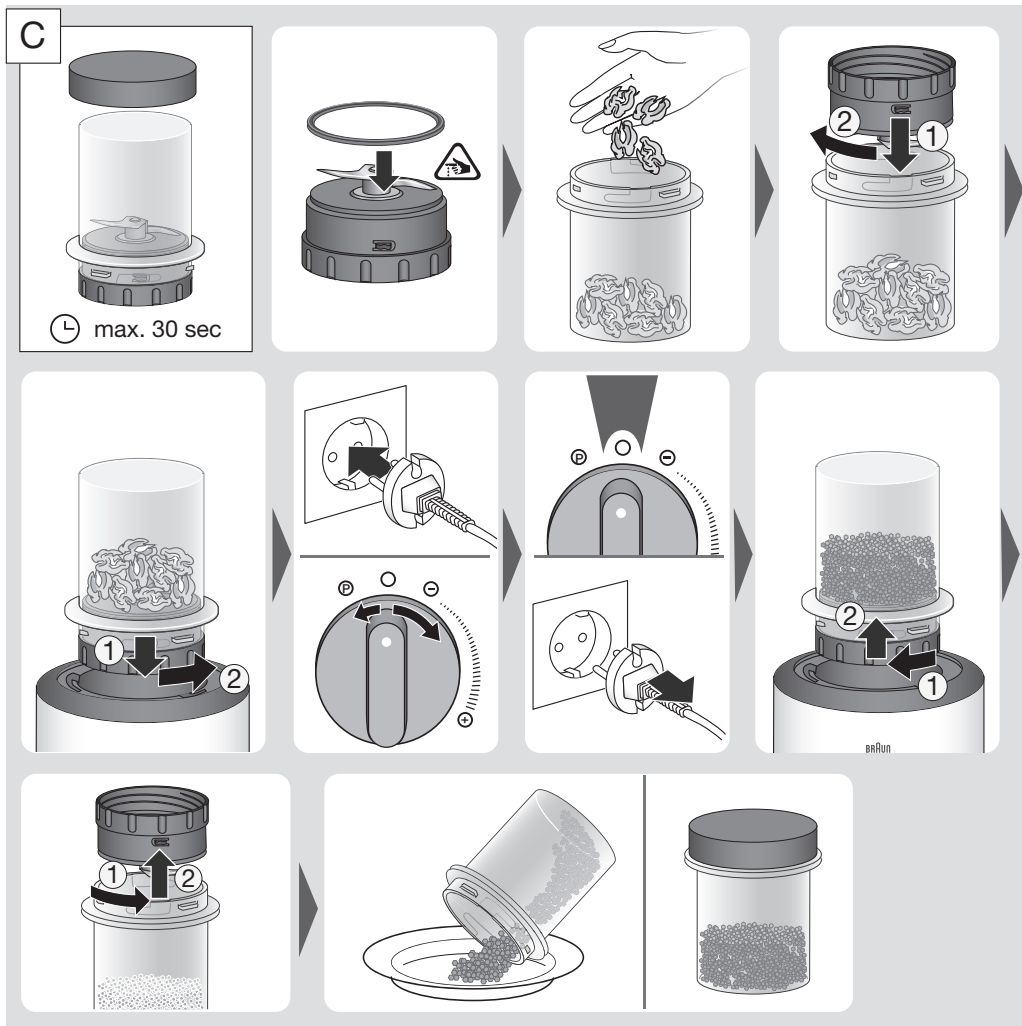







III			Parmesan					
Max g	100	80	100	60	100	15		
(P)	15x	10x	12x	5-6x	10x	3-5x		

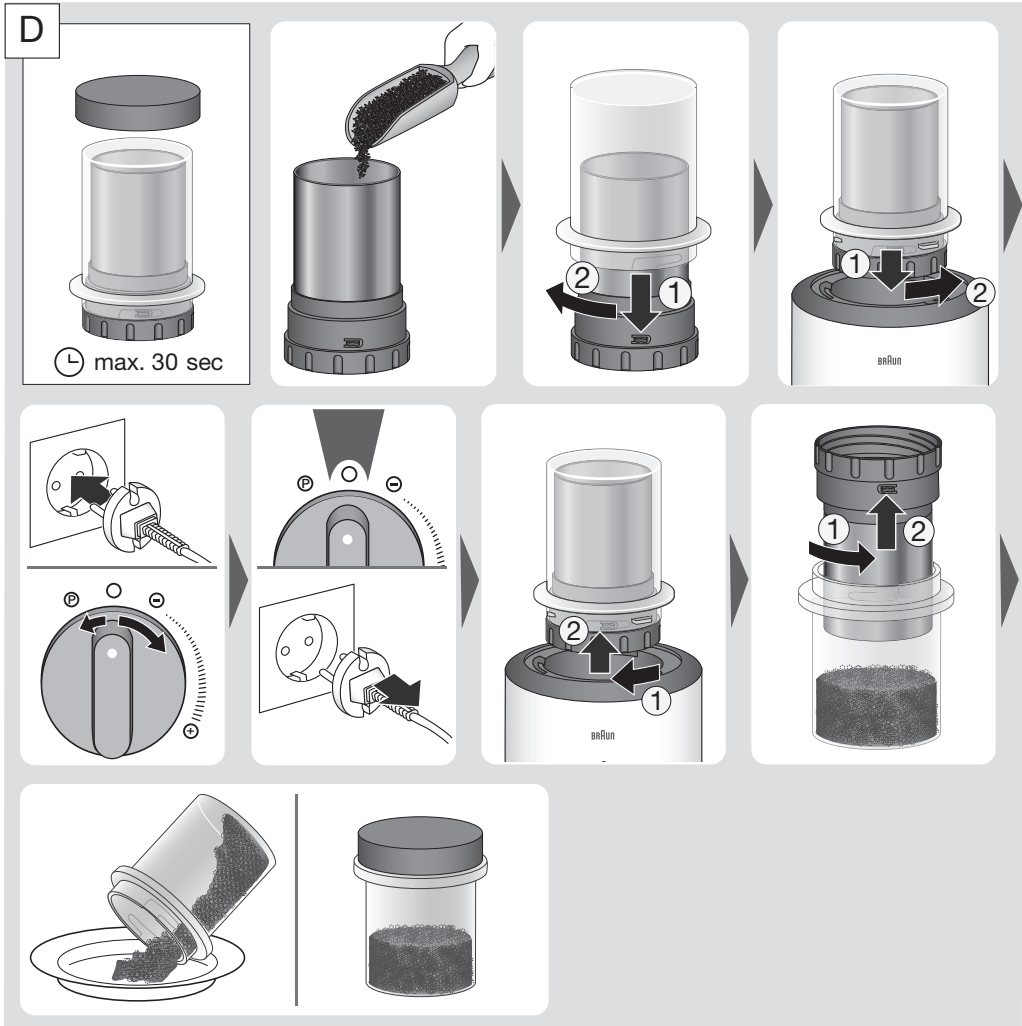

IV									
Max		70	100	2	90	40	50	70	40
speed									
sec.		max. 30 sec.							



E

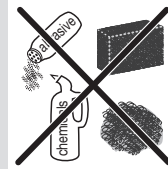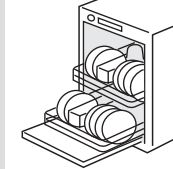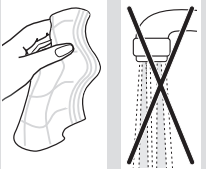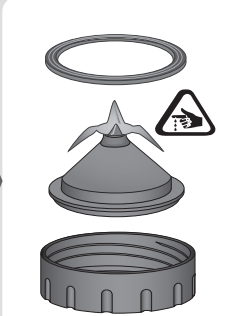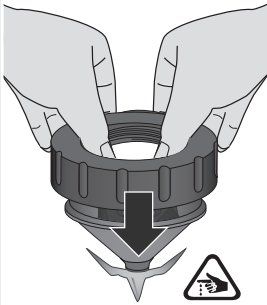

## 한국어

### 사용전



제품을 사용하기 전에 본 설명서의 내용을 주의하여 읽어 주시기 바랍니다. 포장지와 스티커는 완전히 제거하여 사용하여 주시기 바랍니다.

### 주의사항



칼날이 매우 날카롭습니다! 항상 안전을 위해서주의를 기울여 보관 및 사용해 주십시오.

- 날카로우니 칼날을 다루거나 용기를 비우거나 세척시에 특별히 주의하여 주세요.
- 본 제품은 어린이 또는 육체적, 감각적, 정신적 장애를 지닌 자, 미숙자, 조작에 대한 지식이 없는 자가 작동할 경우 매우 위험할 수 있습니다. 따라서 안전을 책임질 수 있는 자의 감독하에 사용하거나 사용자 본인이 안전하게 사용하는 방법에 대한 이해와 사용시 주의해야 할 점을 충분히 이해한 경우에만 사용할 수 있습니다.
- 어린 아이가 제품을 가지고 놀지 않도록 하십시오.
- 본 제품은 어린 아이가 사용해서는 안 됩니다. 어린 아이의 손이 닿지 않는 곳에 보관하십시오.
- 제품과 전원 코드 및 플러그를 어린아이의 손이 닿지 않는 곳에 보관해 주십시오.
- 전원코드가 손상된 경우 사용에 위험이 발생합니다. 반드시 지정된 서비스센터를 통해서 수리를 받고 사용해 주십시오.
- 세척 또는 액세서리의 교환 등을 위해서 용기를 제품에서 분리하는 경우 항상 분리전 전원 플러그를 뽑아 전원을 차단해 주십시오.
- 뜨거운 액체상태의 재료를 용기에 넣을 때는 매우 뜨거운 증기가 갑자기 분출될 수 있습니다. 이때 화상에 주의해 주십시오.

- 제품을 물이나 다른 액체류에 담그지 마세요.
- 주의: 작동전에 반드시 뚜껑을 닫고 작동 하여야 합니다.
- 전원 플러그를 결합 전에 반드시 제품의 바닥에 적혀 있는 전기환경과 사용하시려는 전기환경이 적합한지 확인해 주세요.
- 이 제품은 가정용으로 제작된 제품입니다. 일반적으로 가정에서 사용하도록 설계 되었습니다.
- 제품을 설명서에 설명된 내용으로 사용하여 주시고 잘못된 사용으로 인해 상해를 입을 수 있습니다.
- 제품의 어느 부품도 전자렌지 사용에 적합하지 않습니다.
- 음식물이 닿는 부분은 처음사용전에 모두 세척하여 주시고, 설명서의 세척 및 관리 부분을 참고해 주세요.
- 설명서에 나온대로 뚜껑 혹은 안전망을 작동전에 반드시 장착해 주세요.
- 본체에 장착된 경우 용기 안에 절대로 손을 넣지 마세요. 음식물을 밀어 넣어야 하는 경우에는 주걱과 같은 절적인 도구를 사용하여 밀어 넣어 주세요.
- 중요: 모든 포장재 (비닐, 스티로폼)는 어린아이 손에 닿지 않도록 해 주세요.
- 용기를 빈채로 사용하지 마세요.
- 용기에 음식이나 액체류를 보관하지 마세요.
- 떨어뜨리거나 충격이 가해지지 않게 해 주세요.
- 타이머, 연장선, 외부 스위치등을 사용하게 되면 차단기가 떨어질수도 있습니다. 사용하지 않도록 해주세요.

## 제품 설명

- 1 유리 믹서 용기 \*
- 2 플라스틱 믹서 용기 \*
- 3 칼날 조립부
- 4 본체
- 5 다이얼 (on/off/속도조절)
- 6 코드 보관
- 7 스무디 휴대 용기 \*
- 8 다지기 용기 \*
- 9 메탈 그라인더 용기 \*

\* 표기 구성품은 모델에 따라 다름

## 사용하시기 전에

세척 가능한 구성품을 모두 세척해 주세요.  
설명서의 세척 및 보관 부분을 참고하여 주세요.

## 사용 방법

주의 : 플라스틱 용기나 스무디 용기에 70°C 이상의 재료를 넣지 마세요.

### (A) 믹서 용기

믹서 용기는 아래의 경우에 사용합니다.

- 스무디, 음료류, 소스류, 과일 주스, 수프
- 단단하지 않은 재료 섞을때  
(마요네즈, 팬케익반죽)
- 퓨레와 같은 조리된 재료 (유아식)

재료에 따른 참고 사항은 표I을 참고하세요.

**뜨거운 재료를 사용**하게 되면 뜨거운 스팀과 액체류의 압력에 의해 뚜껑이나 캡이 열릴 수 있고, 이에 따라 상해를 입으실 수 있습니다. 뜨거운 음식이나 액체류의 믹서 사용은 뚜껑이 올바르게 닫혔는지 확인하고, 표I에 나와 있는 최대 사용량을 초과하지 않도록 해주세요. 많은 양을 사용할 때는 특별히 재료를 상온까지 식힌 뒤에 사용하셔야 합니다.

**최대연속 사용 가능 시간**은 믹서용기의 경우 한번에 90초 입니다. 모터에 무리가 되는 경우에는 식힌뒤에 재가동 해야 합니다. 본 믹서기에는 모터 과열방지 장치가 장착 되어 있습니다. 과열에 의해 자동으로 꺼질 수 있으며, 이 경우 전원을 뽑고 30분간 식힌 뒤에 사용하도록 합니다.

### (B) 스무디 휴대 용기

스무디 휴대 용기는 음료와 스무디 제조하기에 쉽게 되어 있습니다. 재료에 따른 참고사항은 표II를 참조하세요.

### (C) 초퍼

초퍼는 야채, 단단한 치즈, 양파, 허브, 고기류와 견과류를 사용하기에 적합합니다. 사용에 관한 자세한 내용은 표 III을 참고 하세요.

초퍼는 팬케익용 재료를 만들 수 있습니다.  
초퍼에 푸른 100g을 넣고 1초씩 펄스를 사용하여 만들 수 있습니다.

### (D) 그라인더

그라인더는 마른 재료를 가는데 적합합니다.  
재료에 따른 자세한 사용은 표IV를 참조하세요.

### 펄스 모드

펄스 모드®는 큰 재료를 조각낼때 사용하거나 재료의 식감을 조절할때 사용합니다.

### 올바른 사용

- 단단한 재료 사용시에 작은 조각으로 먼저 잘라주세요.
- 재료가 잘 안갈리는 경우에는 액체류를 추가 하여 믹서를 사용해 주시기 바랍니다.
- 재료의 양이 많지 않은 경우에는 저속으로 사용해주세요.
- 뚜껑의 캡을 사용하여 마요네즈, 오일을 추가 할 수 있습니다.

### (E) 관리와 세척

그림 E를 참고하세요.

### 보증과 서비스

브라운 홈페이지의 내용을 확인하시고,  
뒤쪽의 품질보증서의 내용을 참고하세요.

가정의 일반 쓰레기와 같이 버리지 마시고  
적절한 배출 방법에 의해 분리 배출 되어야  
합니다.



제품의 부품중 식품에 접촉하는 부분은 모두  
유럽연합 EC 1935/2004의 규정에 적합합니다.



## 문제 해결

문제	확인 할 부분	문제 해결
믹서기가 작동하지 않을 때	용기가 정확히 장착되어 있지 않습니다.	용기를 정확히 장착하여 안전스위치가 눌러질 수 있도록 해 주세요. 손잡이가 오른쪽이나 왼쪽으로 오게 장착하고 완전히 잠기게 돌려 주어야 합니다.
믹서 용기에서 내용물이 샅 때	칼날의 고무 패킹이 늘어 났거나, 찢어 졌습니다. 칼날 조립이 정확히 되지 않았습니다.	고무 패킹이 정확히 위치 하였는지 확인하고, 칼날 조립 순서에 맞추어 조립해 주세요. 용기에 알맞게 칼날을 조립해 주세요.
믹서 용기에서 내용물이 넘칠때	용기에 내용물이 너무 많이 담겼습니다. 선택 속도가 너무 빠릅니다.	최대 사용량을 확인해 주세요. 권장 속도를 확인해 주세요.

## 품질 보증

본 제품은 **구매일로 부터 1년간** 품질을 보증합니다.

\*일반제품을 영업용으로 전환하여 사용할 경우의 보증기간은 반으로 단축 적용됩니다.

드롱기코리아(주)는 품목별 소비자 분쟁 해결기준(공정거래위원회 고시)에 따라서 아래와 같이 제품에 대한 보증을 실시합니다.

### • 무상수리 기준

1. 제품의 보증기간은 소비자의 구매일로부터 시작됩니다. 따라서 **구매증빙자료**와 본 보증서를 사용설명서와 함께 잘 보관하여 주십시오.
2. 품질 보증기간 내에 정상적인 사용상태에서 발생한 성능 및 기능상 하자에 대해서는 무상으로 수리를 보증합니다. 단 수리가 불가능한 경우 제품을 교환해 드립니다.

\* 서비스 신청시 다음과 같은 경우 무상서비스 기간내라도 요금이 부과 될 수 있습니다. 반드시 사용설명서를 읽고 사용해 주십시오

### • 유상수리 기준

1. 세척 또는 조정 사용설명 설치 등의 제품의 고장이 아닌 경우
  - 사용설명 및 분해가 필요하지 않은 간단한 조정
  - 전원 또는 사용되는 식수 등의 기온 등 외부환경 문제시
  - 제품의 이동 또는 이사 등으로 발생한 제품의 설치 부실 또는 파손
  - 소모자재 등의 교환 또는 관련부품의 세척
2. 소비자 과실로 인한 고장의 경우
  - 전기 용량을 틀리게 사용하여 고장이 발생한 경우
  - 외부 충격이나 떨어뜨림 등에 의한 고장, 손상 발생 시
  - 당사에서 지정하지 않은 소모품/옵션 부품의 사용으로 인한 고장 발생 시
  - 당사에서 지정하지 않은 수리서비스 업체 또는 기사 등이 수리하여 고장 또는 사고 발생시
3. 그 밖의 경우
  - 천재지변 (낙뢰, 화재, 염해, 침수 등)에 의한 고장 발생시
  - 소모성 부품이 수명이 다한 경우

A/S 문의: 080-647-0000

가까운 유티아SLS서비스 (구 대우전자서비스) 에서 A/S를 받으실 수 있습니다

**브라운 제품의 구입:**

전국 유명 백화점, 할인점, 양판점 및 전자상가에서 구입하실 수 있습니다  
<http://www.braunhousehold.co.kr>

품질보증서			
본 제품은 철저한 품질관리와 검사를 거쳐서 제조·수입된 제품입니다. 아래 기재된 내용으로 품질을 보증합니다.			
제 품 명		모 델 명	
구 입 일		보증기간	구입일로부터 1년
고		판	
객		매	
		점	
<b>드롱기코리아 주식회사</b> 고객센터 :080-647-0000			


## English

### Before use



**Please read the user instructions carefully and completely before using the appliance and retain for future reference. Remove all packaging and labels and dispose them appropriately.**

### Caution

-  The blades are very sharp! To avoid injuries, please handle blades with utmost care.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- This appliance shall not be used by children.
- Children shall be kept away from the appliance and its main cord.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always switch off and unplug the appliance when it is left unattended and before assembling, disassembling, cleaning and storing.
- Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
- Never immerse the unit in water or other liquids.
- Caution: Ensure the complete lid is placed on the jug before starting into operation.
- Before plugging into a socket, check whether your voltage corresponds with the voltage printed on the bottom of the appliance.
- This appliance is designed for household use only and for processing normal household quantities.
- Do not use the appliance for any purpose other than the intended use described in the user manual. Any misuse may cause potential injury.
- Do not use any part in the microwave.
- Please clean all parts before first use or as required, following the instructions in the Care and Cleaning section.
- Always operate the blender with the lid or the guard in position as indicated in the instructions.
- Never put your hand in jar when it is placed on the base unit. If food needs to be pushed down use suitable tool e.g. spatula.
- Important: Keep all packaging (plastic bags, polystyrene foam) away from children.
- Do not use the device without any load in the jug.
- Do not store food or liquids in the jug.
- Avoid bumping or dropping the blender when in operation or at any time.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

## Parts and Accessories

- 1 Glass Jug
- 2 Plastic Jug
- 3 Blade assembly
- 4 Power base
- 5 Rotary switch (P/0/Variable Speed)
- 6 Cord storage compartment
- 7 Smoothie2Go Attachment
- 8 Chopper Attachment
- 9 Metal Grinder Attachment

## Before First Use

Clean all parts before using the blender for the first time – refer to «Care and Cleaning».

## Operating Instructions

**Caution:** Do not blend ingredients hotter than 70°C in the **plastic jug** and the **Smoothie2Go attachment**.

### (A) Jug

The jug is perfectly suited for

- **blending** smoothies, liquids, sauces, fruit juices and soups
- **mixing** soft ingredients (mayonnaise, pancake batter)
- **pureeing** cooked ingredients (baby food)

For detailed processing instructions refer to table I.

**Blending very hot ingredients** may result in hot liquid and steam being forced past the lid or measuring cap and cause severe personal injury. When preparing hot foods or liquids make sure that the jug including lid is assembled correctly and do not exceed the maximum quantity shown in table I. If preparing greater amounts, the ingredients must be cooled down to room temperature before processing.

**Maximum operation time** for the jug is 90 seconds at a time. When processing heavy loads let it cool down to room temperature for next operation. The blender is equipped with a **motor protection** which protects the motor from overheating. If the motor shuts down during the performance, unplug the blender and let it cool down for 30 minutes before continue blending.

### (B) Smoothie2Go Attachment

The Smoothie2Go attachment is perfectly suited for preparing drinks and smoothies. For detailed processing instructions refer to table II.

### (C) Chopper Attachment


The chopper attachment is perfectly suited for chopping vegetables, hard cheese, onions, herbs, meat and nuts. For detailed processing instructions refer to table III.

The chopper attachment can also be used to make a pancake stuffing or spread. Fill the chopper with 100 g pitted prunes and pulse for 1 second.

### (D) Grinder Attachment

The grinder attachment is perfectly suited for grinding dry ingredients. For detailed processing instructions refer to table IV.

## Pulse Mode

The pulse mode  can be used to break apart larger pieces of food or to control the texture of food when chopping.

## For Best Results

- When mixing solid ingredients, cut them up into small pieces.
- If blending action stops during blending there may be not enough liquid to blend efficiently.
- For preparing small amounts of foodstuff use a low speed level.
- When preparing mayonnaise, oil can be added through the openings between the measuring cap and the lid.

## (E) Care and Cleaning

For detailed information refer to section E.

## Warranty and Service

For detailed information see separate warranty and service leaflet or visit [www.braunhousehold.com](http://www.braunhousehold.com).

Please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or at appropriate collection points provided in your country.



Materials and accessories coming into contact with food conform to EEC regulation 1935/2004.



## Troubleshooting Guide

Problem	Potential Causes	Solution
Blender does not operate.	Plastic jug: Jug is not attached properly.	Check the position of the jug and the lid.
	Glass jug: Jug is not attached properly.	Place the jug with the handle on the right or left side on the power base. Then rotate it until it is fully locked.
Jug is leaking.	Glass jug: Gasket is loose, or even torn.	Check if gasket is mounted properly and in the right order.
	Blade assembly is not tightly screwed to the jug.	Screw the blade assembly correctly to the jug.
Liquid splashing out of the jug.	Jug is overfilled.	Check maximum quantity recommendation.
	Speed selected is too high.	Check speed recommendation.

