


Ariete

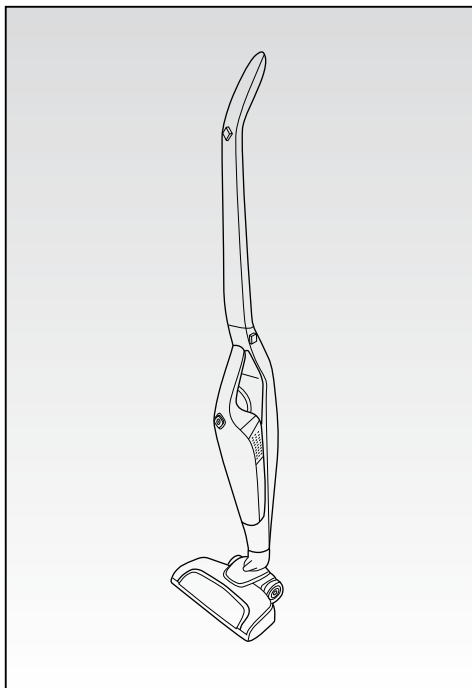

Cordless stick vacuum cleaner
Penghisap debu tanpa kabel

CE

2765

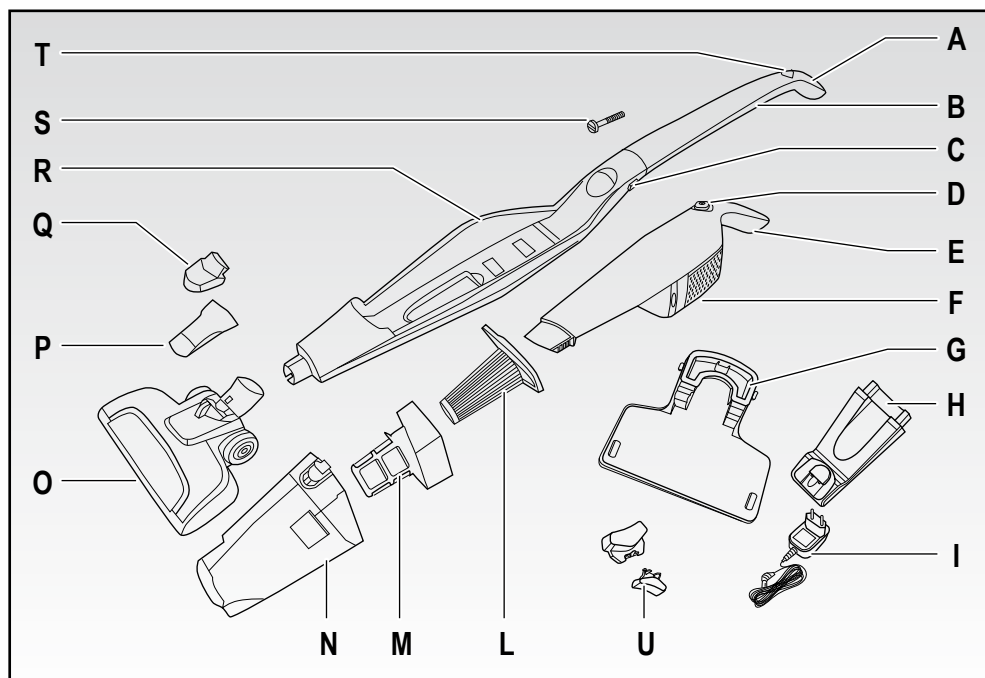


Fig. 1

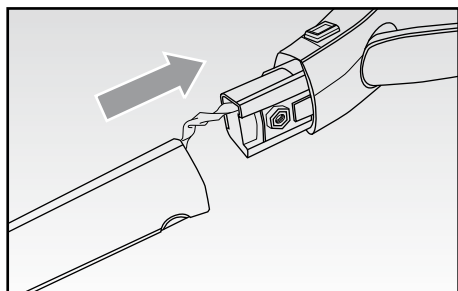


Fig. 2

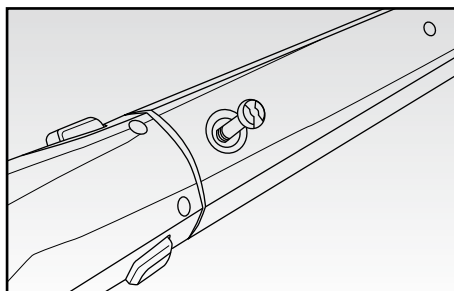


Fig. 3

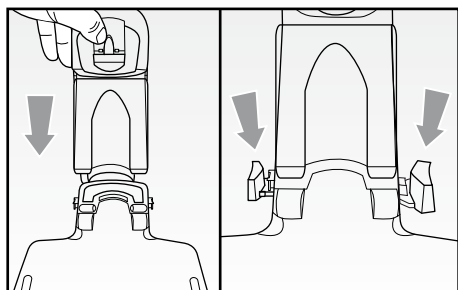


Fig. 4

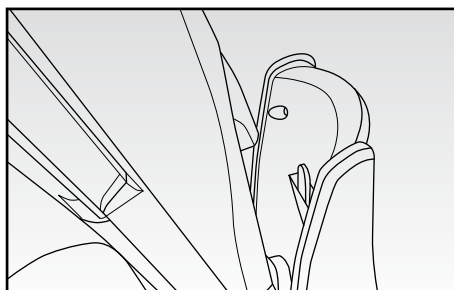


Fig. 5

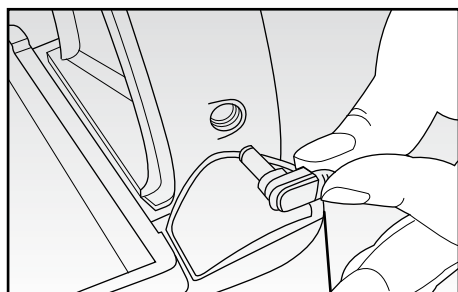


Fig. 6

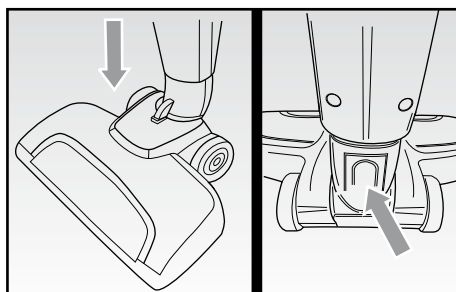


Fig. 7

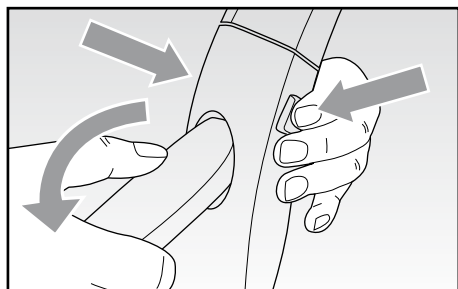


Fig. 8

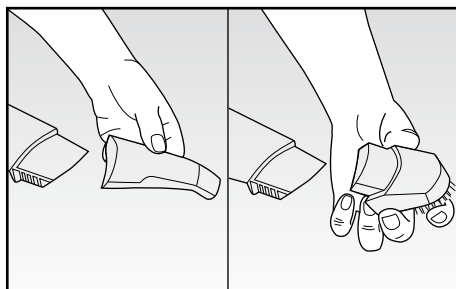


Fig. 9

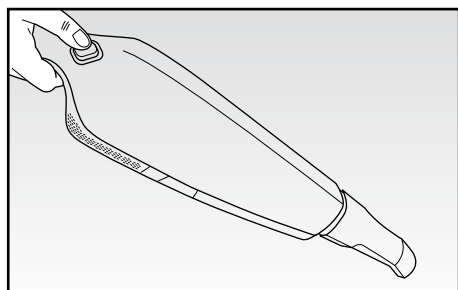


Fig. 10

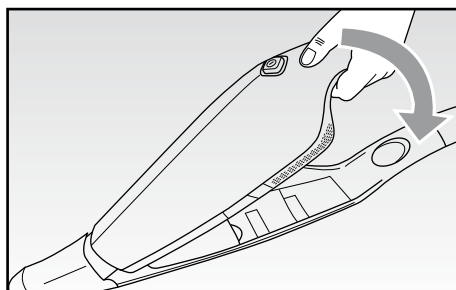


Fig. 11

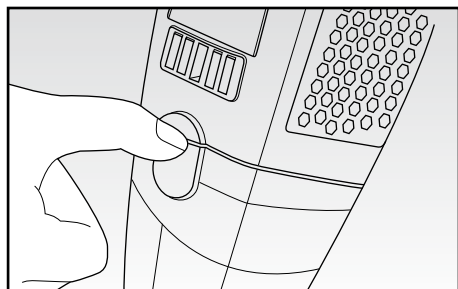


Fig. 12

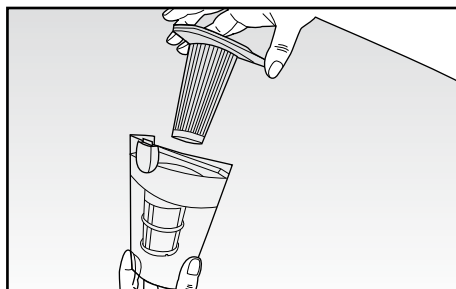


Fig. 13

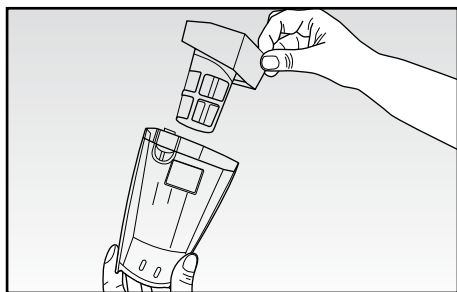


Fig. 14

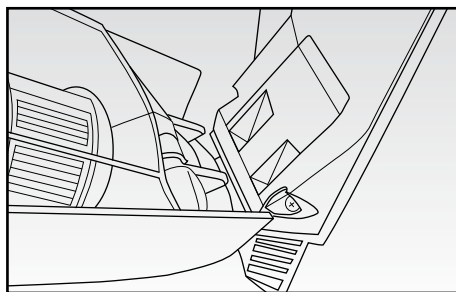


Fig. 15

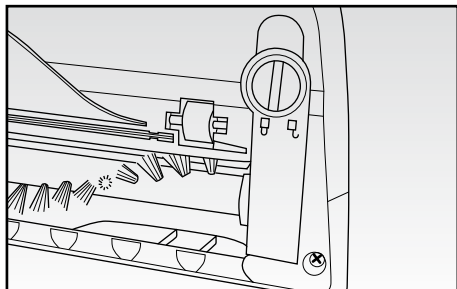


Fig. 16

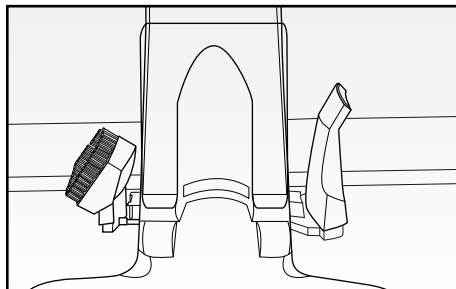


Fig. 17

IMPORTANT SAFEGUARDS

READ THESE INSTRUCTIONS BEFORE USE

The necessary precautions must be taken when using electrical appliances, and these include the following:

- 1 Never place the appliance on or close to sources of heat.
- 2 Never use the appliance in proximity to people or lift to eye level, ear level, etc... as there is a serious risk of accident.
- 3 Never leave the appliance exposed to the elements (rain, sun, etc....).
- 4 Make sure that the power cord does not come into contact with hot surfaces.
- 5 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and maintenance, that are intended to be carried out by the user, shall not be made by children without supervision.
- 6 Children should be supervised to ensure that they do not play with the appliance.
- 7 Never insert any items in the openings of the appliance and do not allow items to obstruct air flow.
- 8 Keep openings free from dust, fluff, hair, etc.
- 9 Never use the appliance without the filter.
- 10 Do not use to clean up hot items or any items that are giving off smoke or which are burning, such as cigarettes, matches or hot ash.
- 11 Never pick up flammable or combustible material (volatile fluids, petrol, kerosene, etc.) nor use in presence of water.
- 12 Never use the appliance in closed environments or where there might be fumes from oil-based paints and varnishes or solvents, waterproofing treatments, flammable powders or other toxic or explosive fumes.
- 13 Never pick up toxic materials (bleach, ammonia, drain cleaners, petrol, etc.).
- 14 NEVER IMMERSE THE APPLIANCE BODY, THE RECHARGING BASE, THE PLUG AND THE POWER CORD IN WATER OR OTHER LIQUIDS, USE A DAMP CLOTH FOR CLEANING.
- 15 SWITCH OFF THE APPLIANCE AFTER USE AND BEFORE FITTING OR REMOVING SINGLE PARTS AND BEFORE CLEANING.
- 16 Always make sure that your hands are thoroughly dry before using or adjusting the switches on the appliance, or before touching the power plug or power connections.
- 17 REMOVE THE APPLIANCE FROM THE RECHARGING BASE WHEN USED.
- 18 In case of replacement and/or maintenance of the charger or the power cord, contact an authorized Service Centre or skilled personnel to prevent any risk.
- 19 In case of battery leakage, do not use the appliance; take it to your nearest authorized Assistance Centre for battery replacement.
- 20 The appliance works with rechargeable NiMH batteries, therefore it shall not be disposed with normal waste at the end of its life. Take it to appropriate differentiated waste collection centres of the local administrations or to dealers providing this service. Disposing an appliance separately means avoiding possible negative consequences both to the environment and people's health

arising from unsuitable disposal and allows to reuse the material it is made of thus saving energy and resources. The obligation to dispose of appliances separately is indicated on the appliance with the symbol representing the crossed out wheeled bin. Never throw accumulators into fire.

- 21 To unplug the appliance, grip the plug and remove it directly from the power socket. Never pull the power cord to unplug the appliance.
 - 22 Never use the appliance if the power cord or plug are damaged or if the appliance itself is faulty; in this case, take it to your nearest Authorised Assistance Centre.
 - 23 To prevent any risks, if the power cord is damaged, it must be replaced by the manufacturer, its Technical Assistance Service or a similarly qualified person.
 - 24 This appliance is designed for HOME USE ONLY and may not be used for commercial or industrial purposes.
 - 25 Any changes to this product that have not been expressly authorised by the manufacturer may lead to the user's guarantee being rendered null and void.
 - 26 Pay attention to the moving parts: handle the motorized brush (O) with care.
 - 27 WARNING: Use the appliance only with the charging adapter supplied.
 - 28 Power the appliance only with a safety extra-low voltage according to the appliance marking.
 - 29 Unplug the appliance before cleaning or carrying out maintenance tasks.
 - 30 The adapter must be used only for recharging the appliance model 145331.01. Do not use for other purposes.
 - 31 It is advisable to charge the battery in well-ventilated areas, connecting the plug into an easily reachable power socket, which can be disconnected quickly whenever necessary.
 - 32 Before connecting the adapter to the power mains, make sure the voltage matches the appliance label and the system complies with the applicable regulations.
 - 33 The battery of the vacuum cleaner is non-replaceable.
 - 34 Remove the battery from the appliance before scrapping. Have the battery be replaced and removed by a skilled professional or the Service centre. Also the battery must be disposed of in a safe way.
 - 35 Disconnect the appliance from the adapter before removing the battery.
 - 36 In the event that you decide to dispose of the appliance, we advise you to make it inoperative by cutting off the power cord. We also recommend that any parts that could be dangerous be rendered harmless, especially for children, who may play with the appliance or its parts.
 - 37 Packaging must never be left within the reach of children since it is potentially dangerous.
-  To dispose of product correctly according to European Directive 2012/19/EU, please refer to and read the provided leaflet enclosed with the product.

DO NOT THROW AWAY THESE INSTRUCTIONS

APPLIANCE DESCRIPTION (Fig. 1)

A Grip	L Filter
B Upper handle	M Filter support
C Unlocking buttons of removable body	N Dust container
D ON/OFF button of removable body / Recharge light	O Brush for floors / carpets
E Removable body grip	P Crevice nozzle
F Removable body / handheld vacuum cleaner	Q Vacuum cleaner with brush
G Recharging base	R Appliance body
H Recharging base upper side	S Locking screw upper handle
I Charging adapter	T ON/OFF button
	U Attachments supports

The product works in two modes:

- 1 as a standard electric broom through the brush for floors (O) and, by tilting the appliance body (R) backwards, in the normal position for use
- 2 as handheld vacuum cleaner, by taking off the removable part (C), suitable for cleaning surfaces and working tables through the vacuum cleaner with the brush (Q) or the crevice nozzle (P) in case of narrow spaces.

APPLIANCE ASSEMBLY

Before use, assemble the upper handle (B) on the appliance body (R), proceeding as follows:

- assemble the upper handle (B) to the appliance body (R), by slightly pressing it until it stops, making sure the wire is properly inserted into the appliance body (Fig. 2)
- insert the supplied screw (S) into the apposite hole on the handle (B) and, by means of a screwdriver, tighten it (Fig. 3).

ATTENTION:

Be careful when using the screwdriver to avoid injury.

Make sure the appliance is properly installed before use.

BATTERY CHARGING

- Insert the apposite upper side (H) on the recharging base (G) by slightly pressing it until it locks in place. Then, mount the attachments supports (U) on the base (G), Fig. 4.
- Position the assembled appliance on the recharging base (G), making sure it properly locks on the hook on the upper side (H) of the recharging base (G) (Fig. 5).
- Insert the the charging adapter (I) into a mains power socket and the plug into the corresponding jack situated on the recharging base (G) (Fig. 6). The recharge light (D) situated on the removable body (F) will start flashing slowly, signalling the appliance is being charged.

When the light (D) is steady, the recharge is complete and the broom is ready for use. The light does not give any information about the battery recharging level.

- The appliance cannot work during the battery recharge and when it is connected to the domestic power mains with the adapter.

- If the battery works for 1-2 minutes only after a complete 8-hour recharge, it may be low. Replace it with a new one. Contact an authorized Service Centre.

ATTENTION:

Fully recharge the battery before any use.

Do not start the appliance during recharge.

The charging time is 12-14 hours. Recharge at least for 14 hours without touching or using the product, to prevent the light from blinking for more than 14 hours.

If the appliance cannot be recharged, check it is properly inserted in its recharging base (G), is powered and correctly plugged in.

Fully discharge the battery before a new recharge.

The recharge light (D) starting blinking quickly signals a failure on the recharge circuit. Contact an authorized Service Centre Ariete.

The adapter (I) and the base upper part (H) may warm up during recharge; this is normal.

Avoid to recharge at a temperature below 5°C (40°F) or above 40°C (105°F) to prevent damages of batteries.

If the appliance does not work, check it is properly inserted in its recharging base (G), is powered and correctly plugged in.

ATTACHMENTS

Brush for floors / carpets (O)

Suitable for cleaning any kind of surfaces, including carpets.

- Insert the brush into the appliance body (R), by slightly pressing is until it locks in place (Fig. 7).
- For removal, press the tab situated on the rear side of the brush and pull it outwards.

Vacuum cleaner with brush (Q) - for handheld vacuum cleaner only

Suitable for cleaning surfaces and working tables, as well as couches and fabrics.

Crevice nozzle (P) - for handheld vacuum cleaner only

Suitable for cleaning corners, crevices or areas hard to reach.

HOW TO OPERATE

- Before using the appliance, make sure the battery is fully charged.
- With the handheld part (F) properly assembled in the appliance body (R), press the switching on button (T) and tilt the handle backwards in the standard position of use, whilst keeping the brush for floors (O) with your foot.
- Clean the wide surfaces by pushing with the brush (O) forwards.
This allows the vacuum cleaner to collect the fragments and the dirt on the floor.
- For cleaning the corners and small surfaces, rotate the broom in the opposite direction. The fragments and dirt can be moved to be collected.

ATTENTION: switch the broom off immediately when something remains stuck inside the brush, as some fabric, carpet fringes, etc.

- After cleaning, switch the broom off by pressing the switching off button (T) once more.

Handheld vacuum cleaner

- By holding the handle of the appliance body (R), simultaneously press the unlocking buttons (C) and remove the handheld vacuum cleaner (F) - Fig. 8.
- At the end of the dust container (F), apply the required attachment (Fig. 9); press the switching on button (D) to start the appliance by means of the apposite handle (E) - Fig. 10.
- For positioning the handheld vacuum cleaner back into the appliance body (R), remove the installed attachment first, by removing it outward, position the end in the lower side of the apposite housing in the appliance body (R) and slightly push backward the handheld vacuum cleaner until it clicks into place (Fig. 11).

WARNING:

Make sure the handheld vacuum cleaner is properly installed before proceeding with a new use.

Some kinds of dirt may be drawn better in the handheld vacuum cleaner mode rather than electric broom one (e.g. flour). It is advisable to make some tests before use.

CLEANING

- Clean the appliance body (R) and the removable body (F) by using only a damp cloth with mild detergent, if necessary.
Proceed with care to prevent any kind of liquid from getting into the appliance.
Never use strong cleaning agents (stain removers, solvents) that may corrode the plastic.

How to empty the dust container (N)

WARNING: Clean the dust container (N) and the filter (L) in due time. The suction power is reduced when the container is full or the filter is obstructed.

- From the back of the appliance, check whether the dust container (N) is full.
- Remove the handheld vacuum cleaner as previously described.
- Press the unlocking button and remove the complete container (Fig. 12).
- Remove the filter (L) outwards (Fig. 13) and the relevant support (M) (Fig. 14) to clean them with fresh water.

WARNING: Wash the filter (L) only with fresh water without using soap or detergents.

- Empty the dust container (N) into an apposite plastic bag and wash it with water, if necessary.
- Let the components dry and reassemble.

WARNING: Properly assemble the support (M), the filter (L), and the dust container (N) before starting the appliance.

- Mount the complete container back on the removable body (F) by inserting the notches on the container on the apposite slots on the removable body and pushing it until it clicks into place (Fig. 15).

How to clean the floor brush (O)

WARNING: Clean the floor brush (O) only after having removed it from the appliance.

- Rotate the plastic screw towards the sign “” and remove the lid (Fig. 16).
- Remove the rotating brush and proceed with cleaning using fresh water and detergent. Allow to perfectly dry and reassemble.
- Reassemble the lid and rotate the plastic screw towards the sign “”.
- After cleaning and maintenance, store the appliance on the recharging base (G), unplugged from power mains, and insert the attachments into the appropriate side supports (U), mounted as previously described (Fig. 4) on the recharging base (Fig. 17).

PETUNJUK KESELAMATAN

BACALAH PETUNJUK KESELAMATAN INI SEBELUM MENGGUNAKAN ALAT

Usando apparecchi elettrici è necessario prendere le opportune precauzioni, tra le quali:

1. Jangan meletakkan alat di atas maupun mendekati sumber panas.
2. Jangan pernah menggunakan maupun mengangkat alat mendekati mata dan telinga manusia karena dapat menyebabkan risiko kecelakaan.
3. Jauhkan alat dari hujan dan paparan sinar matahari langsung.
4. Jauhkan kabel dari sumber panas.
5. Alat ini dapat digunakan oleh anak-anak berusia 8 tahun ke atas, orang-orang dengan keterbatasan fisik, mental, dan sensorik, maupun orang-orang dengan pengalaman dan pengetahuan yang minim, hanya jika mereka telah diberitahu cara penggunaan alat dengan benar dan aman. Pembersihan dan pemeliharaan alat tidak boleh dilakukan oleh anak-anak di bawah 8 tahun dan tanpa diawasi.
6. Jauhkan alat dari jangkauan anak-anak supaya tidak dimainkan.
7. Jangan pernah memasukkan benda apa pun pada bagian bukaan alat dan jangan biarkan alat menyumbat aliran udara.
8. Pastikan bagian bukaan terbebas dari debu, rambut, bulu, dan sejenisnya.
9. Jangan pernah menggunakan alat tanpa saringan.
10. Jangan menggunakan alat untuk membersihkan benda yang panas maupun berasap seperti rokok, korek, maupun debu panas.
11. Jangan menggunakan alat untuk membersihkan benda yang mudah terbakar maupun meledak (cairan yang mudah menguap, seperti: bensin, kerosin).
12. Jangan pernah menggunakan alat di ruangan tertutup dengan serbuk cat minyak, pernis, dan larutan, bubuk yang mudah terbakar maupun meledak.
13. Jangan pernah menggunakan alat untuk membersihkan bahan beracun, seperti amonia, pemutih, pembersih saluran air, gas, dan sebagainya.)
14. JANGAN PERNAH MERENDAM BADAN MAUPUN KABEL LISTRIK ALAT DALAM AIR MAUPUN CAIRAN LAINNYA; SELALU BERSIHKAN ALAT DENGAN KAIN YANG TELAH DIBASAHI.
15. SELALU MATIKAN ALAT SETIAP SELESAI DIGUNAKAN, MAUPUN SEBELUM MEMBERSIHKAN, MEMASANG MAUPUN MELEPASKAN KOMPONEN ALAT.
16. Pastikan tangan Anda dalam kondisi kering sebelum menyentuh kabel maupun tombol nyala.
17. JANGAN MENGISI DAYA BATERAI ALAT KETIKA DIGUNAKAN.

18. Segala perbaikan termasuk penggantian kabel dan baterai alat harus dilakukan oleh pusat bantuan Ariete atau teknisi yang telah terotorisasi oleh Ariete untuk mencegah risiko kecelakaan.
19. Jangan menggunakan alat jika terdapat kebocoran pada baterai; bawa pada pusat layanan konsumen terotorisasi terdekat untuk digantikan.
20. Alat ini menggunakan baterai NiMH yang dapat diisi ulang, oleh sebab itu, jangan membuang baterai bersamaan dengan benda lainnya jika sudah tidak digunakan. Bawa baterai kepada pusat pengolahan limbah yang berbeda. Membuang alat secara terpisah ditujukan untuk mencegah kemungkinan konsekuensi negatif bagi lingkungan dan kesehatan masyarakat yang disebabkan akibat cara pembuangan yang tidak benar. Kewajiban pembuangan alat secara terpisah tercantum melalui simbol tempat sampah dengan roda yang disilang. Jangan pernah membakar baterai.
21. Jangan menarik kabel untuk melepaskan sambungan listrik, melainkan pegang steker dan lepaskan.
22. Jangan menggunakan alat jika terdapat kerusakan pada kabel maupun soket; segala perbaikan termasuk penggantian kabel, harus dilakukan oleh pusat bantuan Ariete atau teknisi yang telah terotorisasi oleh Ariete untuk mencegah risiko kecelakaan.
23. Untuk mencegah terjadinya kecelakaan, jika terdapat kerusakan pada kabel alat, hubungi teknisi maupun pusat layanan konsumen yang telah terotorisasi.
24. Alat ini dirancang hanya untuk penggunaan pribadi, tidak dapat digunakan untuk penggunaan komersial maupun industri.
25. Perubahan pada produk yang tidak sesuai dengan ketentuan yang telah diautorisasi pihak produksi dapat menyebabkan tidak berlakunya garansi bagi pengguna.
26. Hati-hati terhadap komponen yang bergerak: gunakan sikat bermotor (O) dengan hati-hati.
27. PERINGATAN: HANYA GUNAKAN PENGISI DAYA/CHARGER YANG DISEDIAKAN.
28. Isilah daya alat hanya menggunakan tegangan ekstra rendah sesuai yang tertera pada alat.
29. Selalu lepaskan kabel dari sumber listrik setelah selesai digunakan, maupun sebelum membersihkan, memasang maupun melepaskan komponen alat.
30. Charger/pengisi daya hanya dapat digunakan untuk mengisi daya baterai alat tipe 145331.01, tidak untuk tipe lain.

31. Isilah daya baterai di ruangan dengan ventilasi baik, sambungkan kabel listrik di sumber listrik terdekat, sehingga kabel dapat dengan mudah dilepaskan.
32. Pastikan tegangan listrik yang digunakan sesuai dengan tegangan yang tertera pada alat sebelum mengisi daya baterai.
33. Baterai pada alat ini tidak dapat digantikan.
34. Lepaskan baterai dari alat ketika hendak dibuang. Hubungi pusat layanan konsumen maupun kaum profesional untuk melepaskan dan membuang baterai. Buanglah baterai dengan cara yang aman.
35. Lepaskan charger dari alat sebelum melepaskan baterai.
36. Jika Anda hendak membuang alat, kami menyarankan Anda memutuskan kabel supaya alat tidak dapat beroperasi kembali. Kami juga menyarankan Anda mengolah komponen apapun yang dapat membahayakan menjadi tidak berbahaya, khususnya bagi anak-anak yang mungkin dapat memainkan alat maupun komponen alat.
37. Jauhkan kemasan dari jangkauan anak-anak karena dapat menimbulkan bahaya.
38.  Ketentuan pembuangan alat mengacu pada regulasi 2012/29/EU. Bacalah ketentuan dan leaflet yang tertera dengan seksama.

JANGAN MEMBUANG PANDUAN INI. SIMPAN PANDUAN INI UNTUK PENGGUNAAN MASA DEPAN.

DAFTAR KOMPONEN (Fig 1)

- | | |
|---|---------------------------------|
| A Grip/peganggam | I Adaptor charger |
| B Pegangan bagian atas | L Saringan |
| C Tombol pembuka kunci pada badan alat yang dapat dilepas | M Penyangga saringan |
| D Tombol mati/nyala pada badan alat yang dapat dilepas / lampu pengisian daya ulang | N Kontainer debu |
| E Pegangan badan yang dapat dilepas | O Sikat untuk lantai/karpet |
| F Badan yang dapat dilepas/ penghisap debu dengan pegangan | P Nosel untuk celah |
| G Dasar pengisian daya | Q Penyedot debu dengan sikat |
| H Dasar pengisian daya sisi atas | R Badan alat |
| | S Sekrup pengunci pegangan atas |
| | T Tombol mati/nyala |
| | U Penyangga rakitan |

Alat ini dapat bekerja dalam dua mode:

1. Sebagai sapu elektrik biasa dengan sikat untuk menyapu lantai (O), dengan memiringkan badan alat (R).
2. Sebagai penghisap debu yang dapat dipegang, dengan melepaskan komponen yang dapat dilepas (C), cocok digunakan untuk membersihkan permukaan dan meja kerja menggunakan penghisap debu dengan sikat (Q) maupun nosel celah (P) untuk membersihkan area sempit.

MERAKIT ALAT

Sebelum digunakan, pasang pegangan bagian atas (B) pada badan alat (R), dengan langkah-langkah sebagai berikut:

- Pasang pegangan bagian atas (B) pada badan alat (R) dan tekan hingga terpasang dengan benar, pastikan kabel telah terpasang pada badan alat (Gambar 2).
- Pasang sekrup (S) pada lubang sesuai yang terletak pada pegangan (B), kemudian kencangkan dengan obeng (Gambar 3).

PERHATIAN:

Hati-hati ketika menggunakan obeng.

Pastikan alat terpasang dengan benar sebelum digunakan.

MENGISI DAYA BATERAI

- Pasangkan sisi atas (H) pada bagian pengisi daya (G) dan tekan hingga terpasang dengan benar. Pasangkan juga penyangga rakitan (U) pada bagian pengisi daya (G) (Gambar 4).
- Posisikan alat yang telah dirakit pada bagian pengisi daya (G), pastikan telah terpasang dengan benar sisi atas (H) dan dasar pengisian daya (G) (Gambar 5).
- Pasang adaptor charger (I) pada soket dan pada port di dasar pengisi daya (G) (Gambar 6). Lampu tanda pengisian daya (D) yang terpasang pada badan yang dapat dilepas (F) akan menyala, menandakan baterai alat sedang diisi.
- Alat tidak dapat digunakan ketika baterai sedang diisi dan tersambung dengan soket serta adaptor.
- Jika baterai hanya dapat bekerja selama 1-2 menit setelah diisi penuh selama 8 jam, gantilah dengan baterai baru. Hubungi pusat layanan konsumen terotorisasi.

PERHATIAN:

Isi penuh baterai sebelum digunakan.

Jangan menyalakan alat ketika baterai sedang diisi.

Waktu pengisian baterai adalah selama 12-14 jam. Isilah daya baterai setidaknya selama 14 jam tanpa sembari digunakan, untuk mencegah lampu berkedip.

Jika alat tidak dapat di-charge, periksa apakah kabel telah terpasang pada dasar pengisi daya (G) dengan benar.

Kosongkan daya baterai sebelum diisi kembali.

Jika lampu pengisian daya (D) mulai berkedip cepat, hal tersebut menandakan terjadi kegagalan pengisian daya. Hubungi pusat layanan konsumen Ariete terotorisasi.

Adaptor (I) dan dasar pengisian daya sisi atas (H) dapat menjadi hangat ketika diisi, hal tersebut normal.

Jangan mengisi daya baterai dengan suhu udara di bawah 5°C (40°F) atau di atas 40°C (105°F) untuk mencegah terjadi kerusakan pada baterai.

Jika alat tidak dapat menyala, periksa apakah alat telah menyala, terpasang dengan benar pada dasar pengisian daya (G), dan telah tersambung dengan soket.

KOMPONEN TAMBAHAN

Sikat untuk lantai/karpet (O)

Cocok digunakan untuk membersihkan berbagai macam permukaan, termasuk karpet.

- Pasang sikat pada badan alat (R) dan tekan hingga terpasang dengan benar.
- Untuk melepaskan alat, tekan lubang pada sisi belakang sikat dan tarik keluar.

Penghisap debu dengan sikat (Q) – hanya untuk penghisap debu dengan pegangan

Cocok digunakan untuk membersihkan permukaan dan meja kerja, sofa, dan kain.

Nosel untuk celah (P) (Penghisap debu dengan pegangan)

Cocok untuk membersihkan sudut, retakan atau area yang sulit dijangkau.

CARA PENGGUNAAN

- Sebelum menggunakan alat, pastikan daya baterai telah terisi penuh.
- Dengan bagian pegangan (F) terpasang pada badan alat (R), tekan tombol nyala (T) dan miringkan pegangan ke belakang sembari menahan sikat lantai (O) dengan kaki Anda.
- Bersihkan permukaan dengan mendorong sikat (O) ke depan.
Penghisap debu akan mengumpulkan debu dan kotoran di lantai.
- Untuk membersihkan permukaan dengan ujung yang kecil, putar sapu ke arah berlawanan. Debu dan kotoran pun dapat dibersihkan.

PERHATIAN: Matikan sapu dengan segera ketika sesuatu tertahan di dalam sikat, seperti kain, pinggiran tebal karpet, dll.

- Setelah dibersihkan, matikan kembali dengan menekan tombol mati (T).

Penghisap debu dengan pegangan

- Dengan memegang pegangan pada badan alat (R), dengan bersamaan, tekan tombol pembuka kunci (C) dan lepaskan penghisap debu (F) – Gambar 8.
- Pada bagian ujung kontainer debu (F), pasang komponen yang diinginkan (Gambar 9); tekan tombol nyala (D) untuk menyalakan alat menggunakan pegangan (E) – Gambar 10.
- Untuk memasang kembali pegangan penghisap debu pada badan alat (R), lepaskan komponen yang telah terpasang terlebih dahulu dengan melepaskannya keluar, kemudian pasang ujungnya

pada sisi bawah badan alat (R) dan dorong penghisap debu hingga terpasang dengan benar (Gambar 11).

PERHATIAN:

Pastikan penghisap debu telah terpasang dengan benar sebelum digunakan.

Beberapa jenis kotoran dapat lebih mudah dibersihkan menggunakan tipe penghisap debu dibandingkan tipe sapu elektrik (contoh: tepung). Ujilah terlebih dahulu sebelum menggunakan tipe yang sesuai.

PEMBERSIHAN

- Bersihkan badan alat (R) dan badan yang dapat dilepas (F) menggunakan kain yang telah dibasahi dengan deterjen lembut. Bersihkan alat dengan hati-hati dan jangan sampai ada cairan yang masuk ke dalam alat. Jangan menggunakan pembersih yang bersifat kuat (pembersih karat, pelarut) yang dapat merusak plastik.

Mengosongkan kontainer debu (N)

PERHATIAN: Bersihkan kontainer debu (N) dan saringan (L). ekuatan hisapan akan berkurang jika kontainer penuh maupun saringan tersumbat.

- Dari bagian belakang alat, periksa apakah kontainer debu (N) dalam kondisi penuh.
- Lepaskan penghisap debu seperti yang telah tertulis sebelumnya.
- Tekan tombol pemuka dan lepaskan kontainer (Gambar 12).
Lepaskan saringan (L) (Gambar 13) beserta penyangganya (M) (Gambar 14) dan bersihkan dengan air bersih.

PERHATIAN: Bersihkan saringan (L) hanya menggunakan air bersih tanpa sabun maupun deterjen.

- Kosongkan kontainer debu (N) dengan menuangkan isi kontainer ke dalam kantong plastik. Bersihkan kontainer dengan air jika diperlukan.
- Biarkan komponen mengering, kemudian pasang kembali pada alat.

PERHATIAN: Pasangkan bagian penyangga (M), saringan (L), dan kontainer debu (N) sebelum menyalakan alat.

- Pasang kontainer debu kembali pada badan yang dapat dilepas (F) dengan memasangkan takik pada celah badan dan tekan hingga terpasang dengan benar (Gambar 15).

Cara membersihkan sikat lantai (O)

PERINGATAN: Bersihkan sikat lantai (O) hanya jika telah dilepaskan dari alat.

- Putar sekrup plastik ke arah tanda "■" dan lepaskan tutupan (Gambar 16).
- Lepaskan sikat yang dapat berputar dan bersihkan dengan air bersih dan deterjen. Tunggu hingga mengering dan pasang komponen kembali.
- Pasang kembali bagian tutup dan putar sekrup plastik ke arah tanda "■".
- Setelah membersihkan alat, pasang alat pada dasar pengisi daya (G), lepaskan kabel dari sumber listrik, dan pasang komponen tambahan pada sisi
- pendukung (U) yang sesuai, seperti yang dijelaskan sebelumnya (Gambar 4) pada dasar pengisi daya (Gambar 17).

Registration number : I.31.AHI.T8.01481.0419
Distributed by : PT. ACE Hardware Indonesia, Tbk



Ariete

De' Longhi Appliances Srl
Divisione Commerciale Ariete
Via San Quirico, 300
50013 Campi Bisenzio FI - Italy
E-Mail: info@ariete.net
Internet: www.ariete.net