

토스터  
Toaster

***Ariete***

De' Longhi Appliances Srl  
Divisione Commerciale Ariete  
Via San Quirico, 300  
50013 Campi Bisenzio (FI)  
E-Mail: [info@ariete.net](mailto:info@ariete.net)  
Internet: [www.ariete.net](http://www.ariete.net)

**199 202 250**

NUMERO UNICO

***Ariete***

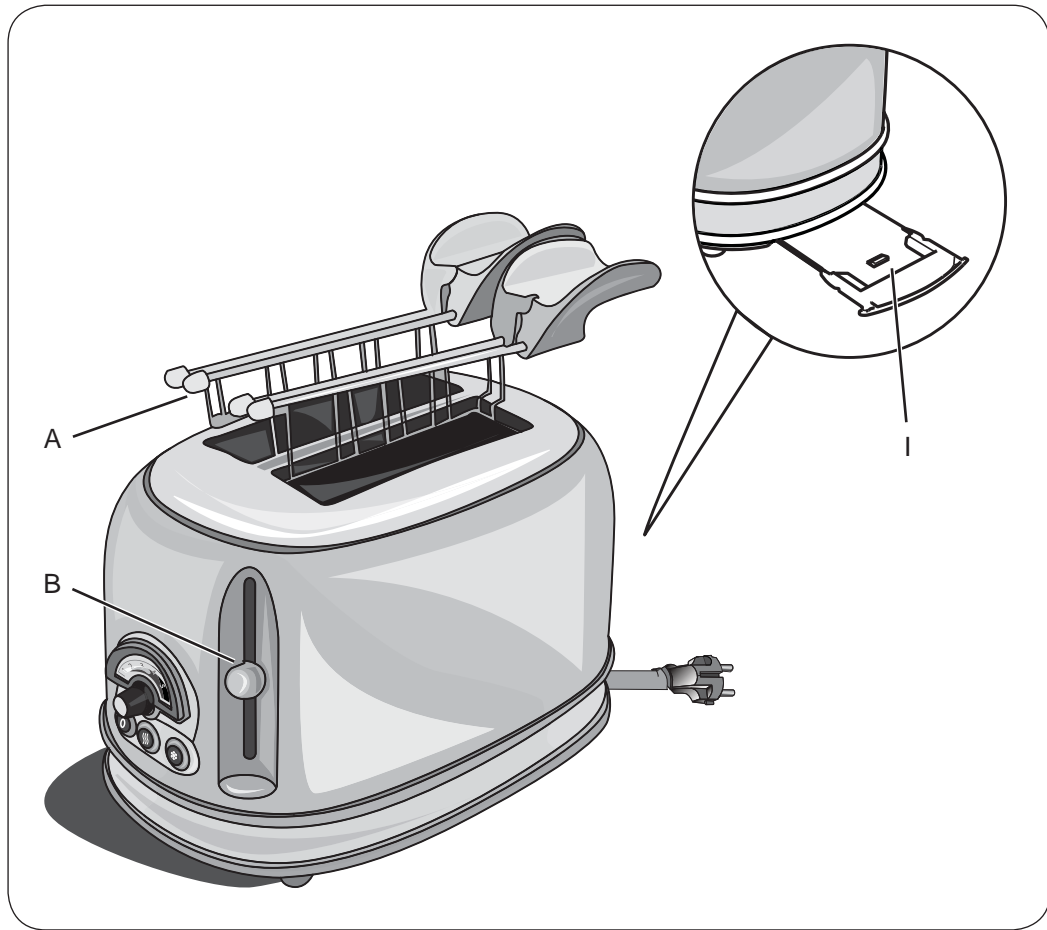


Fig. 1

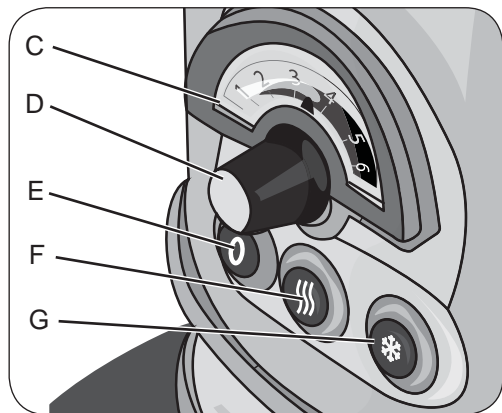


Fig. 2

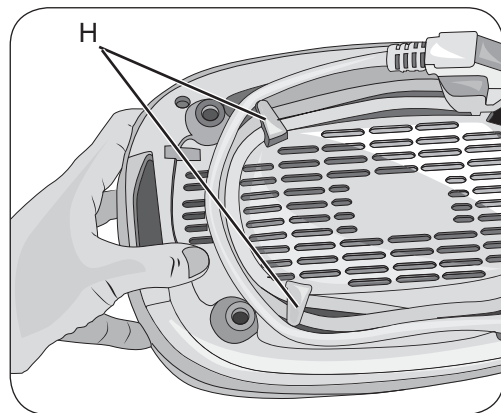


Fig. 3

## 본 설명서와 관련하여

본 제품은 항상 잠재적 위험들로부터 사용자를 보호하기 위해 현재 효력을 가진 적합한 유럽 규정들을 준수하여 만들어집니다. 이러한 형태의 제품에 익숙하다 하더라도, 사용 전 본 설명서를 주의 깊게 읽으십시오. 사고와 손상을 방지하기 위해 본 제품은 오직 설계된 목적을 위해서만 사용하십시오. 미래에 참고할 수 있도록 본 설명서를 가까이에 보관하십시오. 본 제품을 다른 사람들에게 주기로 결정했다면, 또한 본 설명서도 함께 포함하는 것을 잊지 마십시오.

## 사용 목적

이 제품은 빵과 유사한 밀도를 가진 기타 식품들을 해동하고, 가열하고, 굽는데 사용되어야 합니다. 제품의 다른 사용은 제조업체에 의해 허용되지 않으며, 제품의 부적절한 사용으로 초래되는 모든 형태의 손해들에 대해 제조업체는 책임이 면제됩니다. 또한 부적절한 사용은 특정 형태의 품질보증을 무료로 만들 것입니다.

## 중요한 예방조치

### 본 지침을 주의 깊게 읽으십시오.

- 본 제품은 오직, 전적으로 사적 사용을 위해 설계되었으며, 따라서 산업 및 전문적 목적을 위해 사용하는 것은 적합하지 않습니다.
- 전원 코드 및 플러그가 손상된 경우, 혹은 제품이 고장 난 경우 제품을 사용하지 마십시오. 특정 위험을 막기 위해, 전원 코드의 교체뿐만 아니라 모든 수리들은 공인 서비스 센터, 혹은 특정 경우에 자격을 갖춘 인력에 의해 수행되어야 합니다.

#### ⚠아이들에 대한 위험

- 안전한 방식으로 제품을 사용하는 것에 관한 감독이나 지시를 받았으며, 관련된 위험을 이해한 경우에, 제품은 8세 이상의 아동들과 신체, 감각 및 정신적 능력이 지체되었거나, 경험 및 지식이 부족한 사람들에게 의해 사용될 수 있습니다.
- 아이들이 제품 및 제품의 부품들을 가지고 놀지 않도록 해야 합니다.
- 항상 8세 미만의 아이들의 손이 닿지 않는 곳에 제품과 전원 코드를 보관하십시오.
- 포장에 잠재적으로 위험하기 때문에 아이들 가까이 두어서는 안 됩니다.


#### ⚠전기로 인한 위험

- 제조업체로부터 명확하게 허가를 받지 않은 본 제품에 대한 변경들은 사용자에게 의한 사용의 안전성 및 보장을 무효로 만들 수 있습니다.
- 메인 소켓에 플러그를 연결하기 전에, 정격 표시판에 보이는 전압과 지역의 주 전압이 일치하는지 확인하십시오.

- 항상 제품을 접지된 소켓에 연결하십시오.
- 제품이 사용 중이지 않을 때에도, 개별 부품들을 삽입하거나, 제거하기 전, 혹은 제품을 청소하기 전에 전기 콘센트에서 플러그를 뽑아야 합니다.
- 제품 스위치를 사용하거나, 조정하기 전에, 혹은 플러그와 전원 연결을 만지기 전에 손에 물기가 없는지 확인하십시오.
- 제품 플러그를 뽑을 때 전원 코드를 잡아당기지 마십시오.
- 날카로운 모서리 및 날카로운 부품들에 전원 코드를 두지 마십시오.

### ⚠물질적 손해의 위험

- 제품, 플러그, 혹은 전원 코드를 물이나 다른 액체에 담그지 마십시오. 이들을 축축한 천으로 청소하십시오.
- 제품을 열원에, 혹은 열원 근처에 두지 마십시오.
- 빵이 탈 수 있으므로, 토스터를 커튼과 같은 가연성 물질 아래, 혹은 그 근처에서 사용하지 마십시오.
- 각 구멍에 두 조각 이상을 삽입하지 마십시오.
- 토스터 내부에 손이나 특정 형태의 금속(칼이나 알루미늄 호일)을 집어넣지 마십시오.
- 이 제품이 폐기되는 경우, 전원 코드를 절단하는 것이 권장됩니다. 또한 전원 코드를 비롯하여 모든 잠재적으로 위험한 부품들은 인적 부상을 초래하지 않도록 위험하지 않은 상태로 만드는 것이 권장됩니다. 아이들이 제품 및 부품들을 가지고 놀게 두지 마십시오.

-  • 유럽 지침 2012/19/UE에 따른 적합한 제품 폐기를 위해, 제품과 함께 동봉된 관련 설명서를 읽으십시오.

**미래에 참고할 수 있도록 본 지침들을 보관하십시오.**

### 제품 설명

- A 토스트 집게(클램프)
- B ON 레버
- C 토스트 레벨 표시기
- D 토스트 레벨 조절 손잡이
- E 중지 버튼
- F 데우기 기능 버튼
- G 해동 기능 버튼
- H 코드 보관 장치
- I 부스러기 트레이

## 작동 설명

**너무 얇거나, 부서진 빵 조각들을 사용하지 마십시오.**

**너무 부피가 큰 음식을 집어 넣지 마십시오.**



### 경고

조리 중 흐를 수 있는 음식은 넣지 마십시오. 청소 작업을 힘들게 만들 뿐 아니라, 화재를 일으킬 수 있습니다. 매 사용 전에 음식 잔여물 및 부스러기를 부스러기 트레이에서 제거해주시고.



### 위험 - 감전 위험

포크, 혹은 기타 식기를 제품 내부에 넣지 마십시오. 이러한 행위는 제품의 가열 부품들을 손상시킬 수 있으며, 감전의 위험을 초래할 수 있습니다.

## 처음 사용할 때

아리에떼 빈티지 토스터는 빵 조각을 데우는데 매우 유용할 뿐만 아니라 샌드위치를 만드는데 필수적인 스테인리스 스틸의 집게 세트를 가지고 있다.

실제로 샌드위치들은 각각의 집게에 완벽하게 넣을 수 있고, 맛있는 간식이 보장됩니다!

처음 사용할 때, "새 제품"의 냄새를 제거하기 위해 몇 분 동안 제품을 그대로 두는 것이 권장됩니다. 제품을 처음으로 사용할 때 약간의 연기가 날 수 있습니다.

## 토스트 만드는 방법

- 1) 빵 조각들을 토스터의 긴 구멍 안에 넣습니다. 제공된 집게(A)로 사용할 수 있습니다.
  - 2) 원하는 토스트 레벨을 설정하기 위해 손잡이(D)를 돌립니다.
  - 3) ON/OFF 레버를 내리십시오(B).
  - 4) 몇 분 후 토스트가 완료되면, 빵 조각들이 위로 나옵니다.
  - 5) 사용 후, 제품 스위치를 끄기 위해 버튼(E)을 누릅니다.
  - 6) 콘센트에서 전원 연결 케이블을 분리합니다. 부스러기 트레이(I)에서 잔여물을 제거합니다.
  - 7) 사용 이후, 우리는 제품 바닥에 있는 코드 보관 장치에 코드를 감아놓을 것을 권장합니다.
- 언제든 토스트를 중단하고자 할 때 버튼(E)을 누르십시오.

## 해동 기능

얼어있는 빵 조각들을 해동하기 위해 제품을 이용할 수 있습니다.

- 1) 얼어있는 빵 조각들을 토스터의 긴 구멍에 넣습니다. 제공된 집게(A)로 사용할 수 있습니다.
  - 2) 손잡이(D)를 돌려서 토스트 레벨을 위치 "1"로 설정합니다.
  - 3) ON/OFF 레버를 내리십시오(B).
  - 4) 해동 기능을 작동시키기 위해 버튼(G)을 누르십시오. 버튼은 해동 시간 내내 불이 켜져 있을 것입니다.
- 해동과 빵 굽기를 동시에 하고 싶다면, 토스트를 더 높은 레벨로 조정하십시오.

## 데우기 기능

빵 조각들을 데우기 위해 제품을 이용할 수 있습니다.

- 1) 빵 조각들을 토스터의 긴 구멍에 넣습니다. 제공된 집게 (A)로 사용할 수 있습니다.
  - 2) ON/OFF 레버를 내리십시오(B).
  - 3) 가열 기능을 작동시키기 위해 버튼(F)을 누르십시오. 버튼은 데우는 시간 내에 불이 켜져 있을 것입니다.
- 데우는 시간은 고정되어 있으며, 변경할 수 없습니다.

## 청소와 유지보수

정기적인 유지보수와 청소는 제품을 더 오랜 시간 동안 효율적으로 보존하고, 유지할 것입니다.



### 위험 - 감전 위험

아래 설명되는 모든 청소 작업들은 전원을 끄고, 콘센트에서 전기 플러그를 분리한 채 이루어져야 합니다.



### 위험 - 화상 위험

각 청소와 유지보수 작업은 장치가 완전히 냉각되었을 때 수행되어야 합니다.



### 주의 - 물질적 손해의 위험

바닥을 물에 담그지 마십시오. 플라스틱에 손상을 끼칠 수 있는 독성 제품 및 용매를 사용하지 마십시오.

제품 내부를 청소하기 위해 날카로운 금속 도구들을 사용하지 마십시오.

제품의 각 사용 이후, 부스러기 트레이(I)를 비우고, 청소하십시오.

물과 몇 방울의 비독성 세정제를 사용하여 약간 적신 마손 방지 천을 사용하여 제품을 세척합니다.

수동으로 제품을 말려줍니다.

## ABOUT THIS MANUAL

---

This appliance is made in conformity with appropriate European Regulations in force, to protect the user wherever possible from potential hazards. Even if you are familiar with this type of appliance, carefully read this manual before use. Only use this appliance for the purpose it is designed for in order to prevent accidents and damage. Keep this manual close by for future consultation. If you should decide to give this appliance to other people, remember to also include these instructions.

## INTENDED USE

---

The appliance must be used to defrost, heat and toast slices of bread and other dry foods of similar consistency. Any other use of the appliance is not intended by the Manufacturer who does not accept any responsibility for damages of any kind caused by improper use of the appliance itself. Improper use also results in any form of warranty being forfeited.

## IMPORTANT SAFEGUARDS

---

### Read these instructions carefully.


- This appliance is designed only and solely for private use, and is therefore to be considered unsuitable for industrial or professional purposes.
- Do not use the appliance if the power cord or the plug are damaged, or if the appliance is faulty. All repairs, including the power cord replacement, must be carried out only by the Service Center or by authorized technicians, in order to avoid any risk.


### Danger for children

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance or its components.
- Always keep the appliance and the power cord out of the reach of children under the age of 8 years.
- Do not leave the packaging near children because it is potentially dangerous.

### Danger due to electricity

- Any modifications made on this product that are not explicitly authorised by the manufacturer may lead to the forfeiture of its safety and guarantee of its use by the user.
- Before plugging the appliance into the mains socket, ensure that the voltage shown on the rating plate matches the local voltage supply.
- Always connect the appliance to an earthed socket.
- Even when the appliance is not in use, unplug it from the electrical outlet before inserting or removing individual parts or before cleaning it.
- Make sure that your hands are dry before using or adjusting the switches on the appliance, or before touching the plug and power connections.
- Do not pull the power cord to unplug the appliance.

- Do not leave the power cord against sharp edges or sharp parts.  
 **Danger of material damage**
- Do not immerse the appliance, the plug or the power cord in water or other liquids. Clean them with a damp cloth.
- Do not place the appliance on or near heat sources.
- The bread can burn, so the toaster must not be used under or near combustible materials such as curtains.
- Do not insert more than two slices for each slit.
- Do not put your hands or any type of metal (such as knives or aluminium foil) inside the toaster.
- In the event that this appliance is to be disposed of, it is suggested that the power cord is cut off. It is also recommended that all potentially dangerous components including the power cord are rendered harmless to prevent personal injury. Do not let children play with the appliance or its components.

 For proper disposal of the product in accordance with the European Directive 2012/19/EU please read the dedicated leaflet attached to the product.

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE**

## DESCRIPTION OF THE APPLIANCE

---


- A Clamps
- B ON lever
- C Toasting level indicator
- D Knob for adjusting the toasting level
- E Stop button
- F Warming function button
- G Defrost function button
- H Cord storage device
- I Crumb tray


## OPERATING INSTRUCTIONS

---

**Do not use slices of bread too thin or broken.**

**Do not put too bulky foods.**

 **Warning**  
 Do not include foods that may drip during cooking. In addition to making difficult the cleaning operations, they can cause fires. Clean the crumb tray from any food residue or crumbs before each use.

 **Danger - Risk of electric shock**  
 Do not put forks or other utensils inside the appliance. This operation can damage the heating elements of the appliance and create a danger of electric shock.



## FIRST USE

---

Ariete Vintage toaster has a set of 2 pliers in stainless steel which are very usefull both to warm some slices of bread and essential to contain some sandwiches.

Indeed the sandwiches can be placed exactly in each plier and a tasty snack is guaranteed!

At the first use it is recommended to keep the appliance on for a few minutes to eliminate the smell of "new". The appliance may give out a little smoke when used for the first time.

## HOW TO MAKE TOAST

---

- 1) Insert the slices of bread to into the toaster slits. You can use the clamps (A) supplied.
- 2) Turn the knob (D) to set the desired toasting level
- 3) Lower the ON/OFF lever (B).
- 4) After a few minutes the toasting is completed and the slices of bread (or clamps) are ejected upwards.
- 5) After use, press the button (E) to switch the appliance off.
- 6) Disconnect the power supply cable from the power point. Remove any residues from the crumb tray (I).
- 7) After use, we recommend using the cord storage (H) to wrap the cord around the appliance base. Press the button (E) to stop the toasting at any time.

## DEFROST FUNCTION

---

You can use the appliance to defrost frozen bread slices.

- 1) Place the frozen slices of bread inside the slits. You can use the clamps (A) supplied.
- 2) Turn the knob (D) to set the toasting level to position "1".
- 3) Lower the ON/OFF lever (B).
- 4) Press the button (G) to activate the defrost function. The button remains lit throughout the defrosting time.

If you want to defrost and bake bread at the same time, adjust the toasting on higher levels.

## WARMING FUNCTION

---

You can use the appliance to warm the slices of bread.

- 1) Insert slices of bread inside the slits. you can use the clamps (A) supplied.
- 2) Lower the ON/OFF lever (B).
- 3) Press the button (F) to activate the heating function. The button remains lit throughout the warming time.

The warming time is fixed and can not be modified.

## CLEANING AND MAINTENANCE

---

Regular maintenance and cleaning preserve and maintain the appliance efficient for a longer period.



**Danger - Risk of electric shock**

All cleaning operations described below must be made with power off and the electrical plug disconnect from the power outlet.



**Caution - Risk of burns**

Each cleaning and maintenance operation should be performed when the unit is completely cooled.



### Caution - Risk of material damage

Don't immerse the base in water. Don't use aggressive products or solvents that may damage the plastic.

Never use sharp metal tools to clean inside the appliance.

After each use of the appliance, empty and clean the crumb tray (I).

Wash the appliance using a slightly wet, non-abrasive cloth, water and few drops of a non-aggressive product.

Dry the appliance by hand.