


Ariete

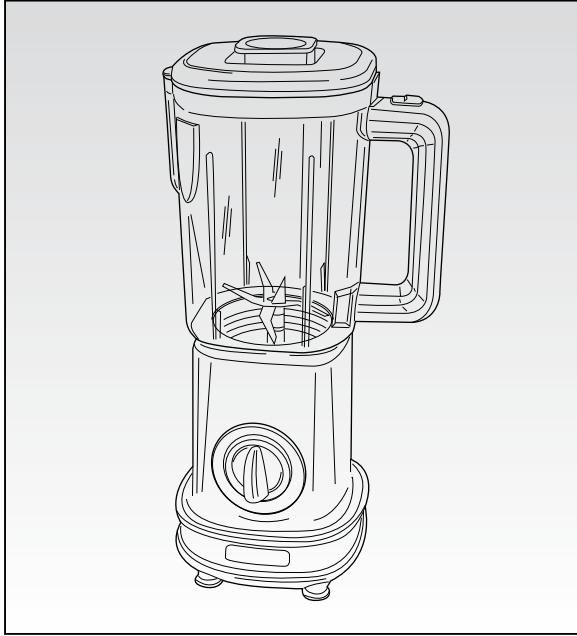

Blender
믹서기

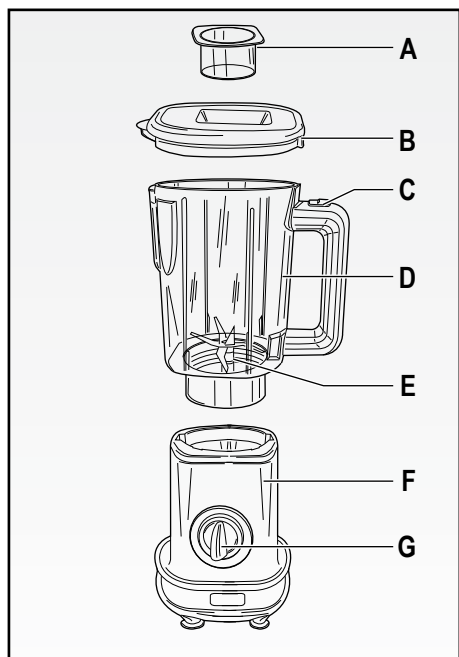


Fig./그림 1

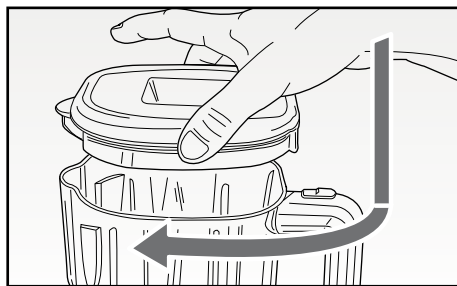


Fig./그림 2

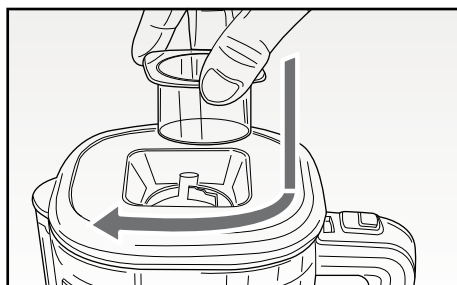


Fig./그림 3

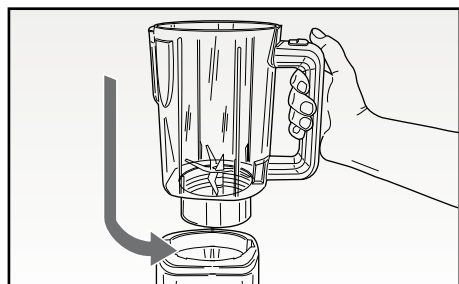


Fig./그림 4

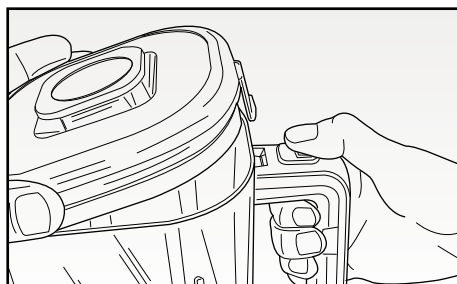


Fig./그림 5

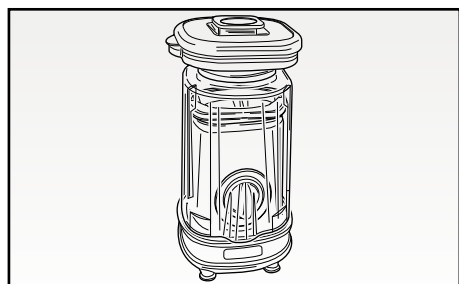


Fig./그림 6

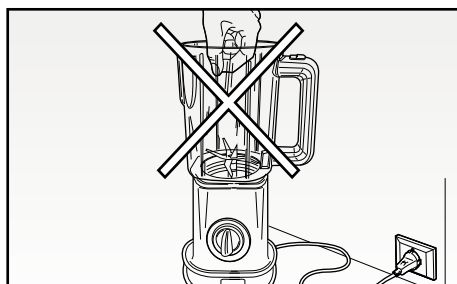


Fig./그림 7


IMPORTANT SAFEGUARDS

READ THESE INSTRUCTIONS BEFORE USE.

The necessary precautions must be taken when using electrical appliances, and these include the following:

1. Make sure that the voltage on the appliance rating plate corresponds to that of the mains electricity.
2. Never leave the appliance unattended when connected to the power supply; unplug it after every use.
3. Never place the appliance on or close to sources of heat.
4. Always place the appliance on a flat, level surface during use.
5. Never leave the appliance exposed to the elements (rain, sun, etc....).
6. Make sure that the power cord does not come into contact with hot surfaces.
7. This appliance must not be used by children. Keep the appliance and related cord out of reach of children.
8. This appliance cannot be used by people with reduced physical, sensorial or mental capabilities, with little or no experience unless supervised or trained beforehand about safe use of the appliance and being aware of arising risks.
9. Children are not allowed to play with the appliance.
10. Never place the appliance body, plug or power cord in water or other liquids; always wipe clean with a damp cloth.
11. Always unplug the appliance if left unattended and before assembling, disassembling or cleaning it.
12. Always make sure that your hands are thoroughly dry before using or adjusting the switches on the appliance, or before touching the power plug or power connections.
13. Never touch the moving parts.
14. Never place hands in the goblet when the appliance is plugged into the mains power (Fig. 7).
15. The blades are very sharp; take care when cleaning.
16. Do not operate the appliance when it is empty.
17. Never use the appliance if the blade is damaged.
18. Place the foods for blending inside the blender goblet and fit the goblet onto the power base before plugging the appliance into the mains power.
19. The product has been designed to operate only when the blender goblet is correctly fitted. If it still does not start, take the product to your nearest authorised assistance centre.
20. Do not use the handle on the goblet to carry the blender.
21. Wait for the blade to stop completely before removing the cover.
22. To prevent accidents or damage to the appliance, always keep hands and cooking utensils well away from blades and any moving parts.
23. To unplug the appliance, grip the plug and remove it directly from the power socket. Never pull the power cord to unplug the appliance.
24. Should the power cord be damaged, have it be repaired by the manufacturer or related service centre, otherwise by a similar skilled person, to prevent any risk. All repairs, including power cord replacement, are to be carried out only by the Service Centre or the technicians authorized by

Ariete, to prevent any risk.

25. In case of using extension leads, these must be suitable for the appliance power to avoid danger to the operator and for the safety of the environment in which the appliance is being used. Extension leads, if not suitable, can cause operating anomalies.
26. Do not threaten the safety of the appliance by using parts that are not original or which have not been approved by the manufacturer.
27. This appliance is designed for HOME USE ONLY and may not be used for commercial or industrial purposes.
28. This appliance complies with the EC regulation 1935/2004 concerning the materials and objects intended to come in contact with food.
29. Any changes to this product that have not been expressly authorised by the manufacturer may lead to the user's guarantee being rendered null and void.
30. In the event that you decide to dispose of the appliance, we advise you to make it inoperative by cutting off the power cord. We also recommend that any parts that could be dangerous be rendered harmless, especially for children, who may play with the appliance or its parts.
31. Packaging must never be left within the reach of children since it is potentially dangerous.
32.  For disposing the appliance in an adequate manner, according to the European Directive 2012/19/EC, please read the appropriate leaflet attached.

DO NOT THROW AWAY THESE INSTRUCTIONS

With its combination of professional and practical use, this blender is an irreplaceable kitchen aid:

- easy to use, thanks to the filler cap in the lid, which makes it possible to insert foods while the blender is operating.
- ideal for instant recipe preparation.
- indispensable for excellent instant slush drinks.

DESCRIPTION OF THE APPLIANCE (Fig. 1)

- A Filler cap
- B Lid
- C Lid releasing button
- D Graduated goblet
- E Blades
- F Motor unit
- G Operation dial (Pulse - 0 - I - II)

BLENDER USE INSTRUCTIONS

- Make sure the appliance is unplugged and the operation dial (G) is on position "0".
- Cut fruit and vegetable into small pieces and place them into the goblet (D) adding water or milk in an amount, which does not exceed the MAX level indicated on the container.
- Position the lid (B) on the goblet and rotate it clockwise so that the apposite safety tab locks in place into the apposite slot situated on the goblet (Fig. 2).
- Close the upper hole of the lid (B) by inserting the apposite cap (A) and rotating it clockwise (Fig. 3).
- Mount the goblet (D) on the motor unit (D) properly and rotate it counter-clockwise to align the guides and the tabs (Fig. 4).
- Plug power cord into a socket.
- Start the appliance by turning the on dial (G) clockwise as far as the first (low speed) or the second (high speed) notch to start the blades.

By rotating the dial (G) anti-clockwise, the PULSE function is enabled.

If the appliance should fail to start, make sure that the goblet is correctly fitted. The appliance is fitted with devices to prevent it from operating if the goblet is not fitted or if it has been fitted incorrectly.

- To stop the appliance, turn the on dial (G) back to «0».
- During use, it is possible to add foods into the goblet, by lifting out the filler cap (A) after having switched off the appliance.
- It may be necessary to switch the appliance off several times in order to remove food residues from container sides. In this case, switch off and unplug the appliance.
- Take the cap and the lid out and by means of the releasing button (C), Fig. 5, and the appropriate spatula, remove any remaining food inside the container.

WARNING:

The blender has a max capacity of 1,25 L for liquids and we recommend not to exceed this limit. If it is used for solid food the maximum capacity is 1,5 L.

Place the foods for blending in the container and fit it to the power base before plugging the appliance into the mains power.

Never remove the lid (B) during use.

Before blending warm liquids, always remove the filler cap (A) from the blender lid. Never place hot liquids in the blender.

Never leave the appliance on for more than 30 seconds. The ideal use is with brief pulse operations for a few seconds each.

Keep the spatula well away from the blade set so as to not cause any damage to the blades.

BLENDER DISASSEMBLY

- Unplug the appliance from the mains outlet and wait for the blades to come to a complete halt before removing the goblet (D) from the base.
- Rotate and lift the goblet (D), remove the lid (B) with the cap (A) by means of the releasing button (C), Fig. 5.
- Pour the smoothy into a glass.

CLEANING

It is strictly prohibited to disassemble the appliance or try to intervene inside it in any way. Keep the appliance clean and in order. This will guarantee excellently chopped foods and a longer useful life for the appliance itself.

- The goblet (C), lid (B), and plug (A) can be washed in the top rack of the dishwasher.
- Use a slightly damp cloth to clean the power base.
Never clean with potentially abrasive products.
- Clean the blade with care.
- Once having cleaned the appliance, overturn the goblet on the appliance body and screw the lid on it (Fig. 6).

WARNING:

Never place the appliance body, plug or power cord in water or other liquids; always wipe clean with a damp cloth.

Always unplug the power cord from the electricity mains before fitting or removing single attachments or before cleaning the appliance.

Particular care must be taken when cleaning the blade because it is extremely sharp.


중요한 예방조치

사용 전 본 지침을 읽으십시오.

가전 제품을 사용할 때 필요한 예방조치들이 취해져야 하며, 이는 다음을 포함합니다:

1. 제품 정격 표시판에 있는 전압이 주 전기의 전압과 일치하는지 확인하십시오.
2. 전원이 연결되어 있을 때 제품을 보는 사람 없이 놔두지 마십시오. 매 사용 후에는 플러그를 뽑아야 합니다.
3. 제품을 열원에, 혹은 열원 가까이 두지 마십시오.
4. 사용 중에는 항상 제품을 평평한 수평 표면에 두십시오.
5. 제품을 실외 요소들(비, 태양 등)에 노출시키지 마십시오.
6. 전원 코드가 뜨거운 표면에 닿지 않도록 하십시오.
7. 본 제품은 아이들이 사용할 수 없습니다. 제품과 관련된 코드는 아이들의 손이 닿지 않는 곳에 보관하십시오.
8. 본 제품은 제품의 안전한 사용에 대해 사전에 감독을 받거나, 훈련 받고, 발생하는 위험에 대해 인지하지 않는 이상, 감각 및 정신적 능력이 지체되었거나, 경험 및 지식이 부족한 사람들에게 의해 사용될 수 없습니다.
9. 아이들이 제품을 가지고 놀지 않도록 하십시오.
10. 제품 본체, 플러그, 혹은 전원 코드를 물이나 다른 액체에 담그지 마십시오. 항상 축축한 천으로 깨끗이 닦아야 합니다.
11. 지켜보는 사람이 없는 경우, 그리고 제품의 조립과 해체, 혹은 청소 전에 항상 제품의 플러그를 뽑아야 합니다.
12. 항상 제품 스위치들을 사용하거나 조작하기 전에, 혹은 전원 플러그 및 전원 연결들을 건드리기 전에 손이 완전히 마른 상태인지 확인하십시오.
13. 움직이는 부품들을 건드리지 마십시오.
14. 제품이 전원에 연결된 경우 믹서기 유리 용기에 손을 넣지 마십시오(그림 7).
15. 날이 매우 날카롭습니다. 청소할 때 주의하십시오.
16. 비어 있는 제품을 작동시키지 마십시오.
17. 날이 손상된 경우 제품을 사용하지 마십시오.
18. 제품을 전원 콘센트에 연결하기 전에 믹서기 유리 용기 안에 믹서로 갈

음식을 넣고, 유리 용기를 전원 베이스에 장착합니다.

19. 제품은 오직 믹서기 유리 용기가 정확하게 끼워진 경우에만 작동하도록 설계되었습니다. 정확히 끼웠는데도 여전히 시작되지 않는다면, 제품을 가장 가까운 공인 지원 센터로 가져가십시오.
20. 믹서기를 이동시키기 위해 유리잔에 있는 손잡이를 사용하지 마십시오.
21. 커버를 제거하기 전에 날이 완전히 멈추기를 기다리십시오.
22. 사고 및 제품에 대한 손상을 막기 위해 항상 손과 조리기구들은 날과 움직이는 부품들에서 멀리 떨어져 있어야 합니다.
23. 제품의 플러그를 뽑는 경우, 플러그를 잡고, 직접 소켓에서 제거하십시오. 제품의 플러그를 뽑기 위해 코드를 잡아당기지 마십시오.
24. 전원 코드가 손상된 경우, 위험을 막기 위해 제조업체, 혹은 관련 서비스 센터 및 기타 유사한 기술을 갖춘 사람에 의해 수리되어야 합니다. 위험을 방지하기 위해 전원 코드 교체를 비롯한 모든 수리는 오직 서비스 센터, 혹은 Ariete가 승인한 기술자들에 의해 수행되어야 합니다.
25. 연장선을 사용하는 경우, 작동자와 제품이 사용되는 환경의 안전에 대한 위험을 피하기 위해 제품 전원에 적합해야 합니다. 연장선이 적합하지 않은 경우, 작동 이상을 일으킬 수 있습니다.
26. 정품이 아니거나, 제조업체로부터 승인되지 않은 부품들을 사용하는 것으로 제품의 안전을 위협하지 마십시오.
27. 본 제품은 오직 가정용으로 설계되었으며, 상업 및 산업 목적을 위해 사용될 수 없습니다.
28. 본 제품은 식품 접촉 물질 및 물체와 관련된 EC 규정 1935/2004를 준수합니다.
29. 명확하게 제조업체에 의해 승인되지 않은 본 제품에 대한 특정 변경들은 사용자에게 대한 보증을 무효로 만들 수 있습니다.
30. 제품을 폐기하기로 결정한 경우, 전원 코드를 절단함으로써 작동하지 못하게 만들 것을 권장합니다. 우리는 또한 특히 제품이나 그 부품들을 가지고 놀 수 있는 아이들에게 위험을 초래할 수 있는 특정 부품들을 위험이 없는 상태로 만들 것을 권장합니다.
31. 포장은 잠재적으로 위험하기 때문에 아이들 근처에 두어서는 안 됩니다.
32.  적합한 방식으로, 유럽 지침 2012/19/EC에 따라 제품을 폐기하기 위해, 첨부된 설명서를 읽으십시오.

본 지침들을 버리지 마십시오.

전문적 사용과 실용적 사용의 결합시킨 본 믹서기는 필수 주방 기구입니다:

- 뚜껑에 있는 필터 캡은 믹서기가 작동하는 동안에도 음식을 넣을 수 있도록 만들어주기 때문에 사용하기 편리합니다.
- 즉석 조리법 준비에 이상적입니다.
- 최상의 즉석 슬러시를 만들기 위해 반드시 필요합니다.

제품에 대한 설명(그림 1)

- A 필터 캡
- B 뚜껑
- C 뚜껑 해제 버튼
- D 눈금이 매겨진 유리잔
- E 날
- F 모터 장치
- G 작동 다이얼(Pulse(진동) - 0 - I - II)

믹서기 사용 지침

- 제품의 플러그가 분리되어 있으며, 작동 다이얼(G)이 "0"의 위치에 있는지 확인하십시오.
- 과일과 채소를 작은 조각으로 썰고, 이들을 유리잔(D)에 넣은 후 물이나 우유를 소량 추가합니다. 용기에 표시된 MAX 레벨을 초과하지 않아야 합니다.
- 유리잔에 뚜껑(B)을 놓고, 유리잔에 위치한 반대 구멍에 적합하게 안전 탭이 걸리도록 시계 방향으로 뚜껑을 돌립니다(그림 2).
- 적합한 캡(A)을 넣고, 이를 시계방향으로 돌려 뚜껑의 상단 구멍을 닫습니다(그림 3).
- 모터 장치에 적합하게 유리잔(D)을 장착하고, 가이드와 탭에 맞도록 시계 반대 방향으로 돌립니다(그림 4).
- 전원 코드를 소켓에 꽂습니다.
- 날이 시작되도록 다이얼(G)을 시계 방향으로 첫 번째(저속) 표시, 혹은 두 번째(고속) 표시까지 돌려서 제품을 시작합니다.
- 다이얼(G)을 시계 반대 방향으로 돌릴 경우, PULSE 기능이 작동됩니다.

제품이 시작되지 않는 경우, 유리잔이 정확하게 끼워졌는지 확인하십시오. 제품은 유리잔이 끼워지지 않았거나, 혹은 부정확하게 끼워진 경우 작동되지 않도록 막는 장치가 들어 있습니다.

- 제품을 멈추기 위해서는 다이얼(G)을 다시 «0»으로 돌립니다.
- 사용 중, 제품 스위치를 끈 후 필러 캡(A)을 들어올림으로써 유리잔에 음식물을 추가할 수 있습니다.
- 용기 측면에서 음식 잔여물을 제거하기 위해 제품의 스위치를 여러 번 꺼야 할 수 있습니다. 이 경우, 스위치를 끄고, 제품의 플러그를 뽑으십시오.
- 캡을 꺼내고, 해제 버튼(C)을 사용하여 뚜껑을 꺼낸 후(그림 5), 주걱을 사용하여 용기 안에 남은 음식을 제거합니다.

경고:

믹서기의 최대 용량은 액체가 1.25 L이므로 이 한도를 넘지 않는 것이 좋습니다. 고형 식품에 사용된다면 최대 용량은 1.5L입니다.

제품의 플러그를 콘센트에 연결하기 전에, 용기에 음식을 넣고, 전원 베이스에 장착시켜야 합니다.

사용 중 뚜껑(B)을 제거하지 마십시오.

따뜻한 액체를 갈기 전, 항상 믹서기 뚜껑에서 필러 캡(A)을 제거하십시오. 믹서기에 뜨거운 액체는 넣지 마십시오.

제품을 30초 이상 사용하지 않은 채로 내버려 두지 마십시오. 이상적인 사용은 각각 몇 초 동안 짧은 펄스 작동을 하는 것입니다.

날에 손상이 가지 않도록 주걱을 날에서 떨어뜨려 유지하십시오.

믹서기 분리

- 콘센트에서 제품의 플러그를 뽑고, 베이스에서 유리잔(D)을 제거하기 전 날이 완전히 멈추기를 기다립니다.
- 유리잔(D)을 돌려서 들어 올린 후, 해제 버튼(C)을 사용하여 캡(A)과 함께 뚜껑(B)을 제거합니다(그림 5).
- 유리컵으로 내용물을 천천히 붓습니다.

청소

어떤 식으로든 제품을 해체하거나, 내부에 개입하는 것은 엄격히 금지됩니다. 제품을 청결하고, 정돈된 상태로 보관하십시오. 이는 최상으로 음식이 갈리고, 제품 자체의 수명이 길어지도록 보장할 것입니다.

- 유리잔(C), 뚜껑(B), 플러그(A)는 식기세척기의 최상단에서 세척될 수 있습니다.
- 전원 베이스를 청소하는 경우 약간 축축한 천을 사용하십시오. 마른 가능성이 있는 제품으로 청소하지 마십시오.
- 주의를 기울여 날을 청소하십시오.
- 일단 제품을 청소한 후, 제품 본체에 유리잔을 뒤집어 놓은 후, 여기에 뚜껑을 고정합니다(그림 6).

경고:

제품 본체, 플러그, 혹은 전원 코드를 물이나 다른 액체에 담그지 마십시오. 항상 축축한 천으로 깨끗하게 닦으십시오.

단일 부속품을 장착하거나, 제거하기 전, 혹은 제품을 청소하기 전에 항상 전원 코드를 콘센트에서 뽑아 놓아야 합니다.

날은 매우 날카롭기 때문에 청소할 때에는 특별히 주의를 기울여야 합니다.



Ariete

De' Longhi Appliances Srl
Divisione Commerciale Ariete
Via San Quirico, 300
50013 Campi Bisenzio FI - Italy
E-Mail: info@ariete.net
Internet: www.ariete.net