



ESPERTA

USER MANUAL



TABLE OF CONTENTS

1. SAFETY PRECAUTIONS.....	4
2. MACHINE OVERVIEW.....	6
3. KEY FEATURES.....	7
3.1 SWITCH THE MACHINE ON/OFF	7
3.2 LIFT & CLICK DRIP TRAY	7
4. PERSONALIZE YOUR BLACK COFFEES.....	8
4.1 DISCOVER 2 SPECIAL EXTRACTION MODES	8
4.2 ESPRESSO BOOST	8
4.3 DELICATE BREW	9
5. NESCAFÉ® DOLCE GUSTO® APP AND BLUETOOTH® CONNECTION.....	10
5.1 NEW EXCLUSIVE FEATURES	10
5.2 HOW TO PAIR YOUR MACHINE WITH THE APP	10
5.3 HOW TO DEACTIVATE OR REACTIVATE BLUETOOTH® ON YOUR MACHINE	10
6. BEVERAGE EXAMPLES.....	11
7. RECOMMENDATIONS FOR SAFE USE.....	12
8. FIRST USE.....	13
9. PREPARING A BEVERAGE.....	14
9.1 ONE CAPSULE (E. G. LUNGO)	14

9.2 TWO CAPSULES (E. G. CAPPUCCINO)	15
10. CLEANING.....	17
11. DESCALING AT LEAST EVERY 3-4 MONTHS.....	18
12. TROUBLESHOOTING.....	20
12.1 ORANGE DESCALING INDICATOR LIGHT TURNS ON	20
12.2 NO LIQUID COMES OUT - NO WATER?	20
12.3 NO LIQUID COMES OUT - CAPSULE BLOCKED?	21
12.4 NO LIQUID COMES OUT - INJECTOR BLOCKED?	21
12.5 VARIOUS	22

1. SAFETY PRECAUTIONS

Read all instructions and keep these safety instructions. Any type of misuse of the appliance may result in a potential injury.

In case of any inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee may not apply.

The guarantee does not cover appliances that do not work or do not work properly because they have not been maintained and/or descaled.

INTENDED USE

1. This appliance is intended to be used in household only. It is not intended to be used in following applications, and the guarantee will not apply for:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
2. Your appliance is intended for domestic use inside the home only at an altitude below 3400 m.

ELECTRICAL POWER SUPPLY

3. Connect the appliance to a mains power socket with an earth connection only. Mains voltage must be the same as the details on the rating plate. The use of incorrect connection will negate the guarantee and may be hazardous.
4. To protect against fire, electric shock and injury to persons do not immerse the power cord, plugs or the appliance in water or other liquid. Avoid spillage on the plug. Never touch the power cord with wet hands. Do not overfill the water tank.
5. In case of an emergency remove the plug from the mains power socket immediately.
6. Unplug from the mains power socket when not in use.
7. To disconnect, remove the plug from the mains power socket. Do not unplug by pulling the cord.
8. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces or sharp edges. Do not allow the cord to dangle (risk of tripping up). Never touch the cord with wet hands.
9. Do not operate any appliance with a damaged cord or plug. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Do not operate any appliance that malfunctions or has been damaged in any manner. Unplug cord immediately. Return the damaged appliance to the nearest authorised service facility designated by the NESCAFÉ® Dolce Gusto® hotline.
10. If the mains power socket does not match the plug on the appliance, have the plug replaced with a suitable type by aftersales service centres designated by the NESCAFÉ® Dolce Gusto® hotline.

CONDITIONS OF USE

11. Always use the appliance on a flat, stable, heat resistant surface away from sources of heat or water splashes.
12. Do not use the appliance without the drip tray and drip grid, except when a very tall mug is used. Do not use the appliance for hot water preparation.
13. Never turn the machine upside down.
14. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
15. Do not place on or near a hot gas or electric burner, or in a heated oven.
16. Do not put fingers under the outlet during beverage preparation.
17. Do not touch the injector of the machine head.
18. Never carry the appliance by the extraction head.
19. The capsule holder is equipped with a permanent magnet. Avoid placing the capsule holder near appliances and objects that can be damaged by magnetism, e.g. credit cards, USB drives and other data devices, video tapes, television and computer monitors with picture tubes, mechanical clocks, hearing aids and loud speakers.
20. Do not turn off the appliance during the descaling process. Rinse the water tank and clean the appliance to avoid any residual descaling agent.
21. If away for prolonged periods, on holiday, etc. the appliance must be emptied, cleaned and unplugged. Rinse before reuse. Operate the rinse cycle before re-using your appliance.
22. We recommend using the NESCAFÉ® Dolce Gusto® capsules designed and tested for the NESCAFÉ® Dolce Gusto® machine. They were designed to interact together – the interaction provides the in-cup quality that NESCAFÉ® Dolce Gusto® is known for. Each capsule is designed to prepare a perfect cup, and cannot be reused.
23. Do not remove hot capsules by hand. Always use capsule holder handle to dispose of used capsules.
24. Always insert the capsule holder in the machine to prepare a beverage. The appliance will not work if the capsule holder is not inserted. Do not pull out the capsule holder before the indicator stops blinking.
25. Machines equipped with a locking handle: Scalding may occur if the locking handle is opened during the brewing cycles. Do not pull up the locking handle before the lights on the machine stop flashing.
26. For health reasons, always fill the water tank with fresh drinking water.
27. After use of the appliance always remove the capsule and clean the capsule holder. Empty and clean the drip tray and capsule bin daily. Food allergy sufferers must rinse the appliance according to cleaning procedure.

28. The heating element surface is subject to residual heat after use and plastic housings may feel warm to touch several minutes upon use.
29. Patients with pacemakers or defibrillators: Do not hold the capsule holder directly over the pacemaker or defibrillator.
30. The appliance shall not be placed in a cabinet when in use.

CHILDREN

31. Keep the appliance and its cord out of reach of children aged less than 8 years. Children shall not play with the appliance.
32. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
33. This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Persons who have a limited or no understanding of the operation and use of this appliance must first read and fully understand the contents of the user manual, and where appropriate seek additional guidance on its operation and use from the person responsible for their safety.
34. Children should be supervised to ensure that they do not play with the appliance.
35. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised by an adult.
36. Children should not use the appliance as a toy.

MAINTENANCE

37. Unplug from the mains power socket before cleaning. Allow to cool before putting on or taking off parts, before cleaning the appliance. Never clean wet or immerse appliance in any fluid. Never clean the appliance with running water. Never use detergents to clean the appliance. Clean the appliance only using soft sponges/brushes. The water tank should be cleaned with a clean food-safe brush.
38. Any operation, cleaning and care other than normal use must be undertaken by after-sales service centres designated by the NESCAFÉ® Dolce Gusto® hotline. Do not dismantle appliance and do not put anything into openings.
39. To reduce the risk of fire or electric shock, do not remove the cover. No user serviceable parts inside. Repair should be done by authorized service personnel only!
40. For additional guidance on how to use the appliance, refer to the user manual on www.dolce-gusto.com or call the NESCAFÉ® Dolce Gusto® hotline number.

RECYCLING

41. Packaging is made of recyclable materials. Contact your local council / authority for further information on recycling programs. Your appliance contains valuable materials which can be recovered or recycled.

EUROPEAN MARKETS ONLY: Think of the environment!



Your appliance contains valuable materials which can be recovered or recycled.

Leave it at a local civic waste collection point or at an approved service centre, where it will be disposed of properly. European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), stipulates that used household appliances must not be disposed of in normal unsorted municipal waste. Old appliances must be collected separately to optimise the sorting and recycling of their parts and to reduce the impact on human health and the environment.

2. MACHINE OVERVIEW



1. Rinsing tool
2. Injector
3. Capsule holder
4. Volume display
5. XL volume function
6. ESPRESSO BOOST indicator light
7. DELICATE BREW indicator light
8. Descaling indicator light
9. "COLD" button
10. ON/OFF button + selection of special modes
11. Volume selection button up
12. "HOT" button
13. Volume selection button down
14. Locking handle
15. Water tank cap
16. Water tank
17. Drip grid
18. Drip tray
19. Cleaning needle
20. Drip tray support

ECONOMY MODE:


After 5 minutes of non-usage: volume display vanishes.
Please be aware that the appliance is still using electricity whilst in eco-mode (0.4 Wh).

TECHNICAL DATA

- GB / ZA
220–240 V, 50/60 Hz, 1340–1600 W
Frequency Band: 1480–2402 MHz
Maximum radio frequency power: 8.66 dBm
- max. 15 bar
- 1.4 L
- ~2.7 kg
- 5–45 °C
41–113 °F
- A = 26.6 cm
B = 36.4 cm
C = 21.4 cm

3. KEY FEATURES


3.1 SWITCH THE MACHINE ON/OFF

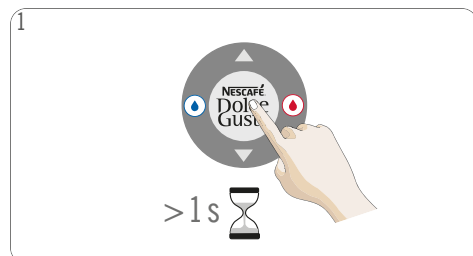

Press ON/OFF button and hold it for at least 1 second to switch machine on.



The machine can also be switched on by opening the locking handle.

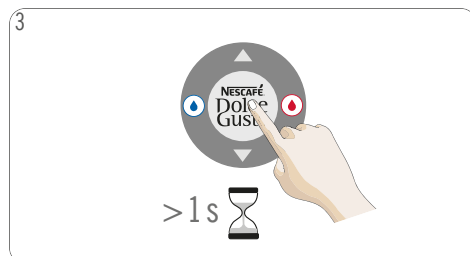

To switch the machine off, hold ON/OFF button for at least 1 second. Machine switches off automatically after 5 minutes of non-usage.

3.2 LIFT & CLICK DRIP TRAY



To adjust drip tray position: Turn drip tray counter clockwise to unlock it.



Lift drip tray up to middle position. Lock drip tray by turning it clockwise until it clicks. The drip tray is locked.



Lift drip tray up to highest position. Lock drip tray by turning it clockwise until it clicks. The drip tray is locked.



4. PERSONALIZE YOUR BLACK COFFEES

4.1 DISCOVER 2 SPECIAL EXTRACTION MODES



ESPRESSO BOOST

Boost the taste intensity of your Espressos.



DELICATE BREW

The full aroma and taste for your Americanos & Grandes.


4.2 ESPRESSO BOOST



1 Check number of bars shown on capsule. Prepare ESPRESSO BOOST with recommended level 1 to 3 capsules only.




2 Press ON/OFF button and hold it for at least 1 second to switch machine on.

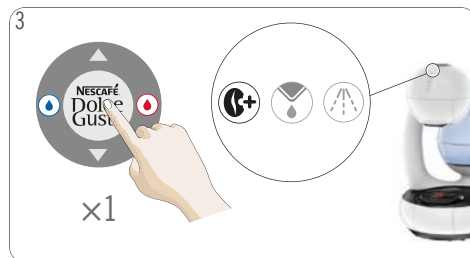

3 Press ON/OFF button once to switch to ESPRESSO BOOST mode. ESPRESSO BOOST indicator lights up.



4 Use volume selection buttons to set volume display in accordance with the number of bars shown on capsule, or select amount of bars to your own taste.

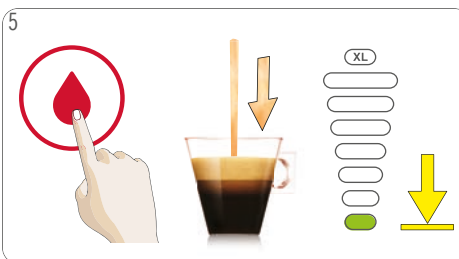

5 Press "HOT" button. Beverage preparation starts. Wait until extraction stops. Volume display lights vanish progressively. Machine stops preparation automatically. Extraction can be stopped at any time manually by pressing the "HOT" or "COLD" button again.




6 Enjoy your beverage!

4. PERSONALIZE YOUR BLACK COFFEES


4.3 DELICATE BREW



Check number of bars shown on capsule. Prepare DELICATE BREW with recommended level 4 to 7 capsules only.

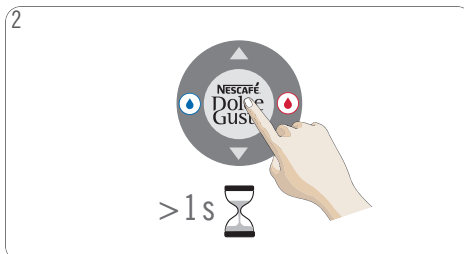


Press ON/OFF button and hold it for at least 1 second to switch machine on.

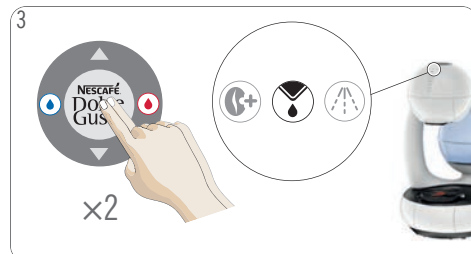


Press ON/OFF button 2 times to switch to DELICATE BREW mode. DELICATE BREW indicator lights up.



Use volume selection buttons to set volume display in accordance with the number of bars shown on capsule, or select amount of bars to your own taste.

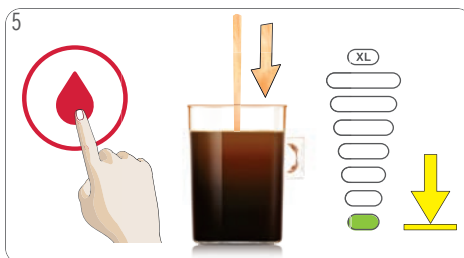

Press "HOT" button. Beverage preparation starts. Wait until extraction stops. Volume display lights vanish progressively. Machine stops preparation automatically. Extraction can be stopped at any time manually by pressing the "HOT" or "COLD" button again.

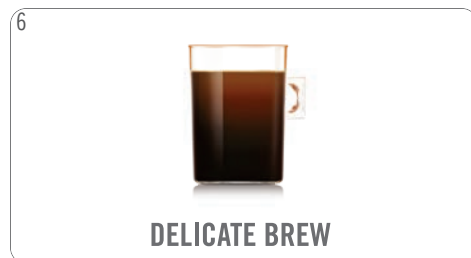


Enjoy your beverage!



5. NESCAFÉ® DOLCE GUSTO® APP AND BLUETOOTH® CONNECTION

5.1 NEW EXCLUSIVE FEATURES

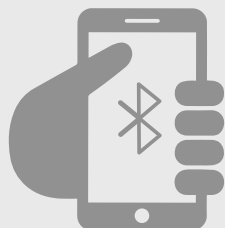

Personalize your black Coffees

- Discover 2 new extraction modes (see chapter 4 on page 8):
ESPRESSO BOOST: Boost the taste intensity of your Espressos.
DELICATE BREW: The full aroma and taste for your Americanos & Grandes.
- Schedule your preferred beverage for later.
- Save your favourite coffee settings.
- Ensure best coffee cup with online maintenance and troubleshooting guide.

Search NESCAFÉ® Dolce Gusto® in app stores




iPhone®
mobile digital device




Android™

5.2 HOW TO PAIR YOUR MACHINE WITH THE APP

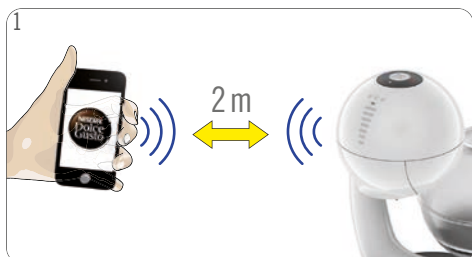

1 Switch off machine. User must be close to the machine (2 meters max.). Turn on Bluetooth® on your smartphone.

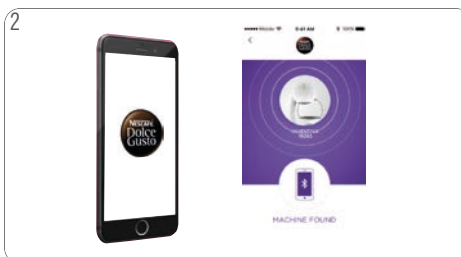


2 Open the NESCAFÉ® Dolce Gusto® app, and launch the pairing process. The app will start searching for your machine.




3 When instructions appear on the app, within 10 seconds confirm pairing by pressing the "COLD" button.


5.3 HOW TO DEACTIVATE OR REACTIVATE BLUETOOTH® ON YOUR MACHINE

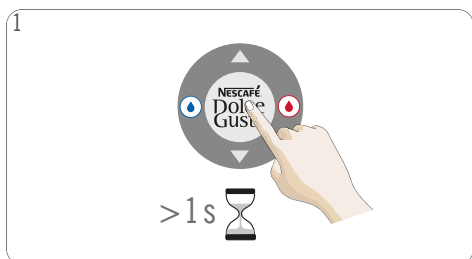

1 Switch off machine.

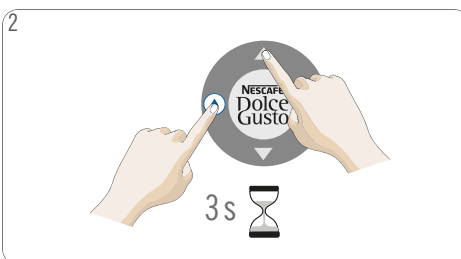

2 When instructions appear on the app, within 10 seconds confirm pairing by pressing the "COLD" button. Press and hold "COLD" and "UP" button for 3 seconds.

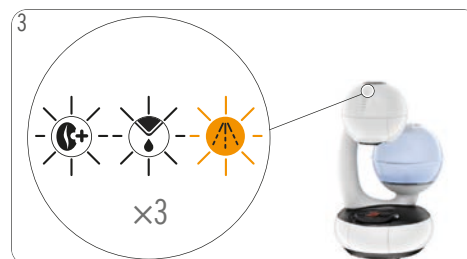


3 The indicator lights flash 3 times. Bluetooth® connection is deactivated/reactivated.

6. BEVERAGE EXAMPLES



Adjust drip tray

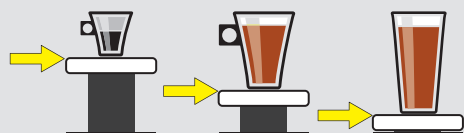



Select volume



Choose hot or cold



ESPRESSO

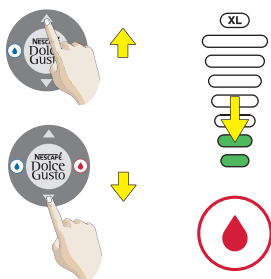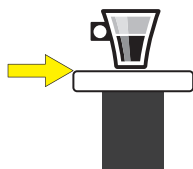

35 ml
Ristretto






50 ml
Espresso
Espresso Intenso

CAPPUCCINO



① + ②

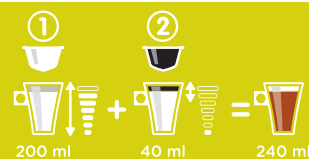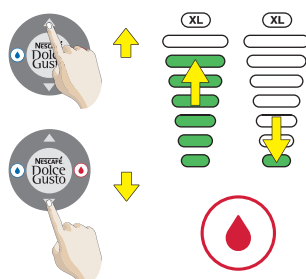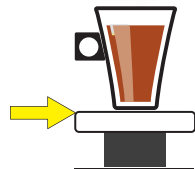

200 ml



40 ml

240 ml

CHOCOCINO



① + ②

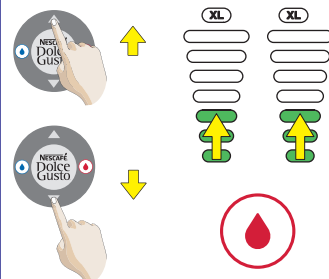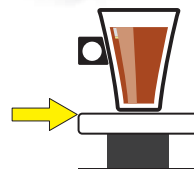

100 ml




110 ml

210 ml

CAPPUCCINO ICE



① + ②

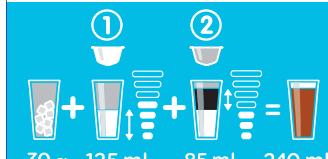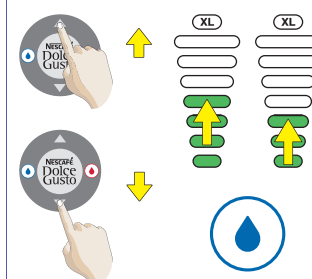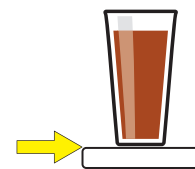


30 g

125 ml


85 ml

240 ml


7. RECOMMENDATIONS FOR SAFE USE

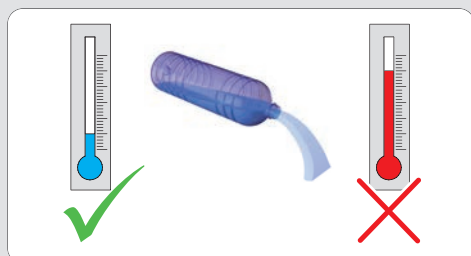

- ⚠ Never add hot water to the water tank!
- ⚠ For rinsing and beverage preparation only use fresh drinking water.

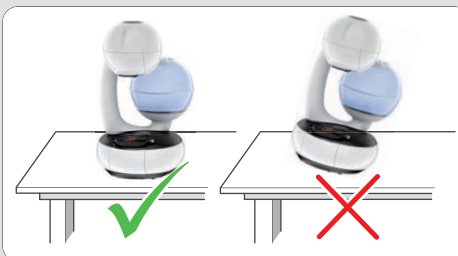

- ⚠ Always keep the machine upright!

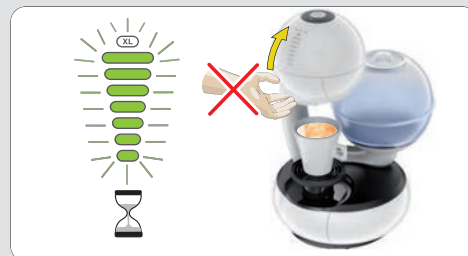


- ⚠ After finishing preparation volume display flashes for a few seconds. During that time do not open locking handle!



- ⚠ Do not touch plug with wet hands. Do not touch machine with wet hands!



- ⚠ Never use a wet sponge. Only use a soft damp cloth to clean the top of the machine.

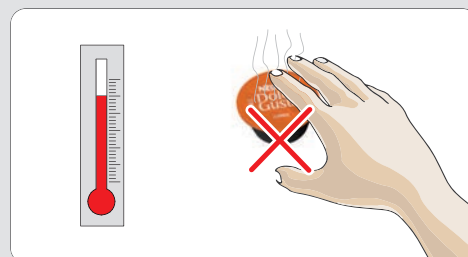

- ⚠ Do not touch used capsule after beverage preparation! Hot surface, risk of burns!



- ⚠ Do not use the rinsing tool for tea or hot water preparation.



- ⚠ IF LEFT UNUSED FOR MORE THAN 2 DAYS: Empty water tank, rinse it, refill it with fresh drinking water and insert it into machine. Rinse machine, therefore follow instructions in "Cleaning" on page 17, beginning with step 4.

8. FIRST USE




Rinse water tank manually with fresh drinking water. Fill water tank with fresh drinking water. Insert water tank into machine. Open locking handle.




Take capsule holder and press locking tab to open it. Make sure that rinsing tool is in capsule holder. Close capsule holder.




Insert capsule holder into machine. Close locking handle. Place a large empty container underneath the coffee outlet. Connect power plug to mains power socket.

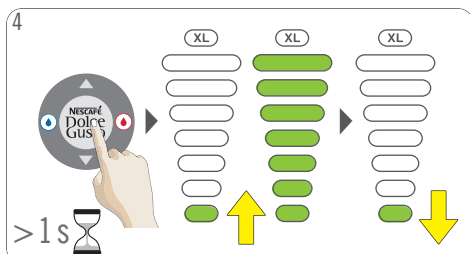


Switch on machine. Lights on volume display appear progressively while machine is heating up for approx. 40 seconds. Machine is ready to be used.

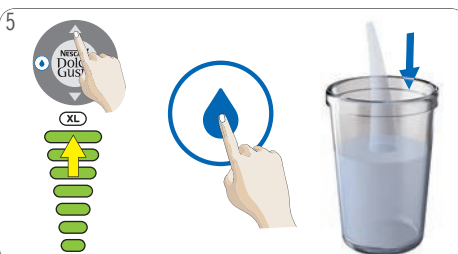

Set volume display to 7 with volume selection buttons. Press "COLD" button. Machine starts rinsing. Lights on volume display vanish progressively.

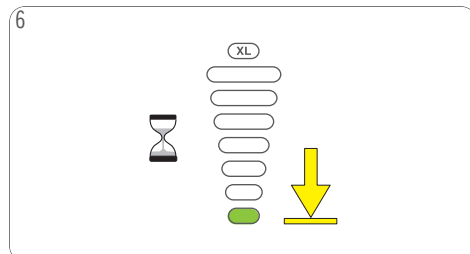

Wait until countdown is finished and machine stops.

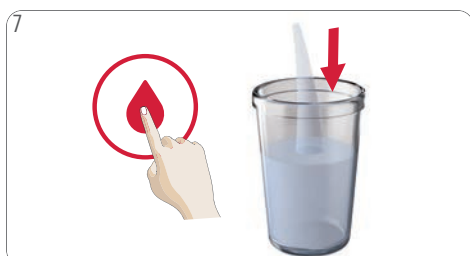

Continue rinsing with hot water. Press "HOT" button. Machine starts rinsing. Lights on volume display vanish progressively.



Wait until countdown is finished and machine stops. Open locking handle. Pull out capsule holder. Open capsule holder. Remove rinsing tool. Keep it in a safe place for later cleaning or descaling. Reinsert capsule holder.



Empty container. Fill water tank with fresh drinking water. Insert water tank into machine. Machine is ready to be used.




9. PREPARING A BEVERAGE

9.1 ONE CAPSULE (E. G. LUNGO)



Adjust drip tray position. Place cup with correct cup size on drip tray. See "BEVERAGE EXAMPLES" or package. Check if the water tank contains enough fresh drinking water.

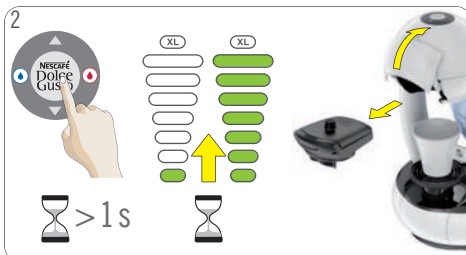


Switch on machine. Lights on volume display appear progressively while machine is heating up for approx. 40 seconds. Afterwards volume display shows last volume setting. Open locking handle. Pull out capsule holder.




Open capsule holder. Make sure rinsing tool is not inside. Insert capsule in capsule holder. Close capsule holder. Insert it back into machine. Close locking handle.



Use volume selection buttons to set volume display in accordance with the number of bars shown on capsule, or select amount of bars to your own taste. Choose XL beverage for an extra big cup. Wait around 1.5 min if you want to prepare a second extra big cup.

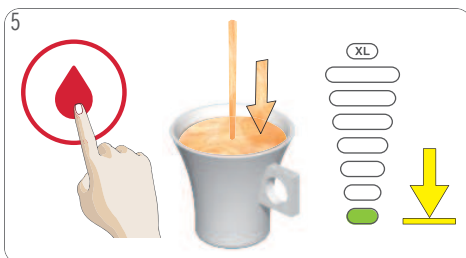

Press "HOT" or "COLD" button as recommended on capsule packs. Beverage preparation starts. Wait until extraction stops. Volume display lights vanish progressively. Machine stops preparation automatically. Extraction can be stopped at any time manually by pressing the "HOT" or "COLD" button again.

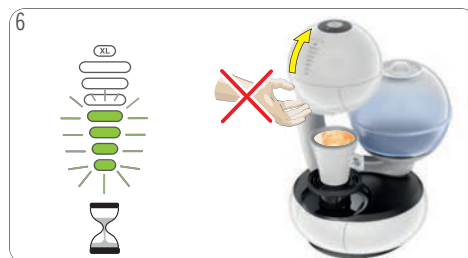

After finishing preparation volume display flashes for a few seconds. **During that time do not open locking handle!**



After extraction is finished open locking handle. Remove cup from drip tray.



Pull out capsule holder. Open capsule holder. Put used capsule in dustbin. Pay attention not to throw away capsule holder.




Rinse capsule holder with fresh drinking water from both sides. Dry capsule holder. Insert it back into machine. Enjoy your beverage!

9. PREPARING A BEVERAGE

9.2 TWO CAPSULES (E. G. CAPPUCCINO)



Adjust drip tray position. Place cup with correct cup size on drip tray. See "BEVERAGE EXAMPLES" or package. Check if the water tank contains enough fresh drinking water.

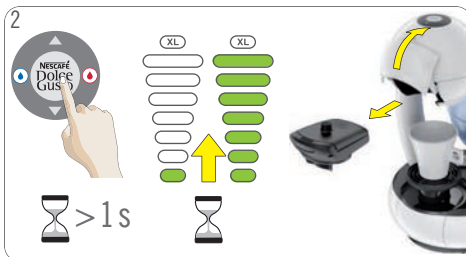


Switch on machine. Lights on volume display appear progressively while machine is heating up for approx. 40 seconds. Afterwards volume display shows last volume setting. Open locking handle. Pull out capsule holder.




Open capsule holder. Make sure rinsing tool is not inside. Insert first capsule in capsule holder. Close capsule holder. Insert it back into machine. Close locking handle.



Use volume selection buttons to set volume display in accordance with the number of bars shown on capsule, or select amount of bars to your own taste. Choose XL beverage for an extra big cup. Wait around 1.5 min if you want to prepare a second extra big cup.

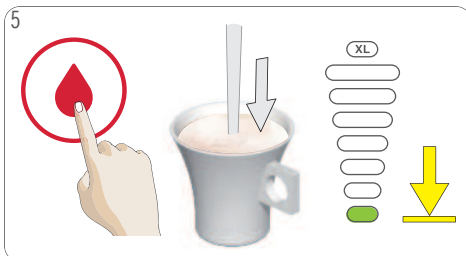

Press "HOT" or "COLD" button as recommended on capsule packs. Beverage preparation starts. Wait until extraction stops. Volume display lights vanish progressively. Machine stops preparation automatically. Extraction can be stopped at any time manually by pressing the "HOT" or "COLD" button again.

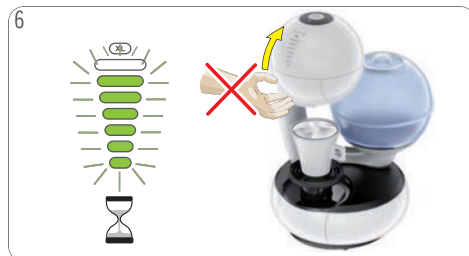

After finishing preparation volume display flashes for a few seconds. **During that time do not open locking handle!**



Open locking handle. Pull out capsule holder. Open capsule holder. Put used capsule in dustbin. Pay attention not to throw away capsule holder.



Insert second capsule in capsule holder. Close capsule holder. Insert it back into machine. Close locking handle.




Use volume selection buttons to set volume display in accordance with the number of bars shown on capsule, or select amount of bars to your own taste.




9. PREPARING A BEVERAGE

9.2 TWO CAPSULES (E. G. CAPPUCCINO)

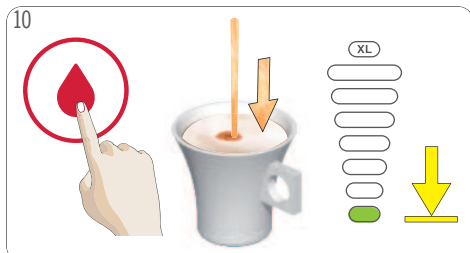

Press "HOT" or "COLD" button as recommended on capsule packs. Beverage preparation starts. Wait until extraction stops. Volume display lights vanish progressively. Machine stops preparation automatically. Extraction can be stopped at any time manually by pressing the "HOT" or "COLD" button again.

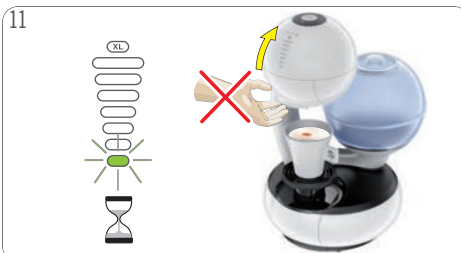

After finishing preparation volume display flashes for a few seconds. **During that time do not open locking handle!**



After extraction is finished open locking handle. Remove cup from drip tray.



Pull out capsule holder. Open capsule holder. Put used capsule in dustbin. Pay attention not to throw away capsule holder.



Rinse capsule holder with fresh drinking water from both sides. Dry capsule holder. Insert it back into machine. Enjoy your beverage!

10. CLEANING



Rinse and clean water tank. Use a clean food-safe brush and washing-up liquid as needed. Afterwards refill with fresh drinking water and insert it into machine. The water tank is not dishwasher proof!



Rinse drip tray and rinsing tool with fresh drinking water. Clean drip tray with clean food-safe brush. The drip tray is not dishwasher proof!




Clean with washing-up liquid and fresh drinking water both sides of capsule holder. Alternatively wash in dishwasher. Dry it afterwards.



Open locking handle. Put rinsing tool into capsule holder. Insert capsule holder into machine. Close locking handle.



Lights on volume display appear progressively while machine is heating up for approx. 40 seconds. Afterwards volume display shows last volume setting. Machine is ready to be used. Place a large empty container underneath the coffee outlet.

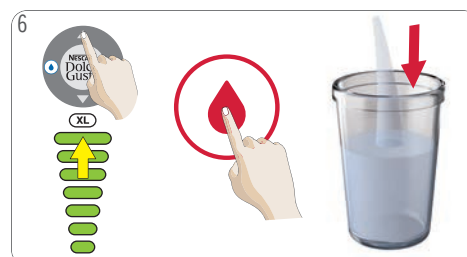

Set volume display to 7 with volume selection buttons. Press "HOT" button. Machine starts rinsing. Lights on volume display vanish progressively.



Empty and clean container. **Warning: Hot water! Handle with care!**



Open locking handle. Pull out capsule holder. Remove rinsing tool. Keep it in a safe place for later cleaning or descaling. If any, remove water from water tank.



Switch off machine. Unplug power plug! Clean machine with a soft damp cloth. Dry it afterwards with a soft dry cloth.



11. DESCALING AT LEAST EVERY 3–4 MONTHS



www.dolce-gusto.com

Use NESCAFÉ® Dolce Gusto® liquid descaler. To order, call the NESCAFÉ® Dolce Gusto® hotline or go on the NESCAFÉ® Dolce Gusto® website.



Do not use vinegar for descaling!



Avoid contact of descaling liquid with any part of the machine.



Do not push ON / OFF button during descaling cycle.



If the orange descaling indicator light turns on, or the beverage comes out slower than usual (even in droplets), or if it is cooler than usual, the machine has to be descaled.




If any, remove water from water tank.




Mix 0.5 liter fresh drinking water with descaler in a measuring cup. Pour descaling solution into water tank and insert water tank into machine.



Open locking handle. Put rinsing tool into capsule holder. Insert capsule holder into machine. Close locking handle. Place a large empty container underneath the coffee outlet.

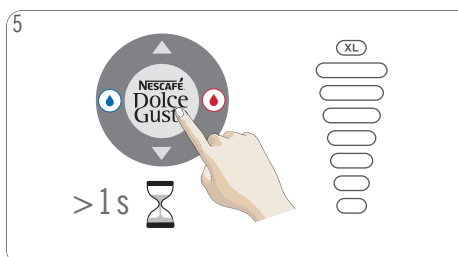


Switch off machine.

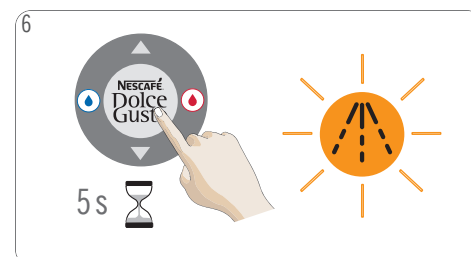


Press and hold ON / OFF button for at least 5 seconds. Orange descaling indicator light starts blinking and machine enters descaling mode.


11. DESCALING AT LEAST EVERY 3–4 MONTHS

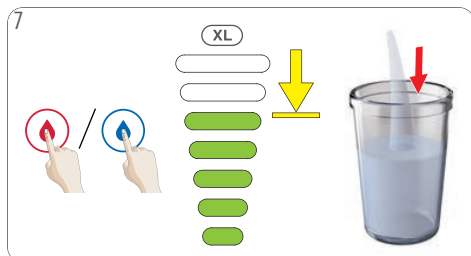

Press "HOT" or "COLD" button. Volume display lights vanish progressively. Machine descales with hot water in start-stop operation for approximately 2 minutes. Extraction can be paused at any time manually by pressing the "HOT"/"COLD" button.

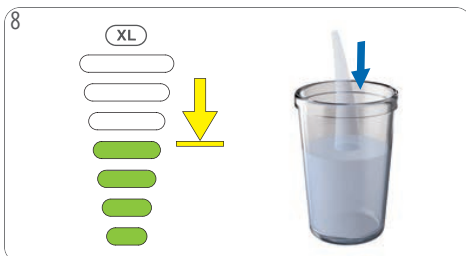


Machine descales continuously with cold water. Volume display lights vanish progressively. Machine stops preparation automatically.

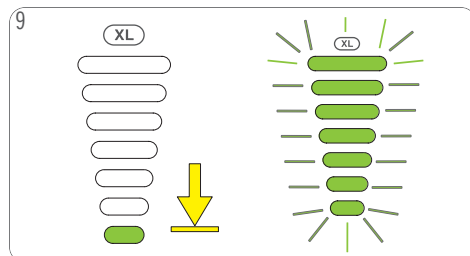


For a better effect of the descaler, the machine enters a waiting time of 2 minutes. Volume display lights vanish progressively. At the end of the waiting time volume display blinks fast.



Empty and clean container. Rinse and clean water tank. Use a clean food-safe brush and washing-up liquid as needed. Afterwards refill with fresh drinking water and insert it into machine.

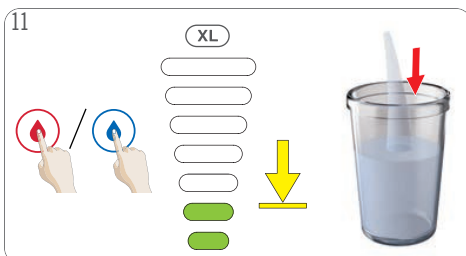

Press "HOT" or "COLD" button. Volume display lights vanish progressively. Machine rinses continuously with hot water. Extraction can be paused at any time manually by pressing the "HOT"/"COLD" button.

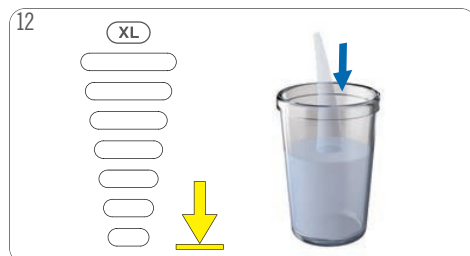

Machine rinses continuously with cold water. Volume display lights vanish progressively. Machine stops preparation automatically.



Remove container. Empty and clean container. Pull out capsule holder. Remove rinsing tool. Keep it in a safe place for later cleaning or descaling. Rinse capsule holder with fresh drinking water from both sides. Reinsert capsule holder.




Clean machine with a soft damp cloth. Dry it afterwards with a soft dry cloth.



12. TROUBLESHOOTING

12.1 ORANGE DESCALING INDICATOR LIGHT TURNS ON

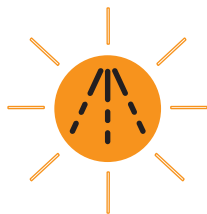


Orange descaling indicator light turns on.




This means that the machine needs to be descaled. To do so, please follow the descaling instructions. See "Descaling at least every 3–4 months" on page 18.

12.2 NO LIQUID COMES OUT – NO WATER?

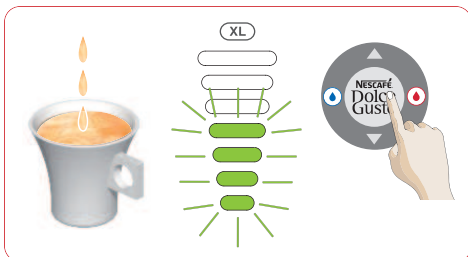


Beverage preparation stops part way during delivery or does not start at all. Volume display flashes at current level. No liquid comes out: The water tank may be empty.

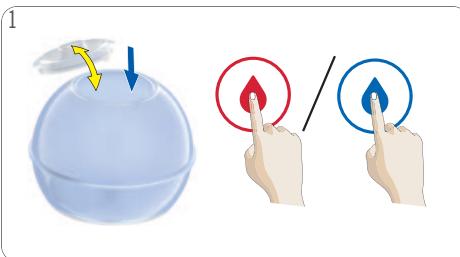


Check if the water tank contains enough fresh drinking water. If not, refill with fresh drinking water and press "HOT" or "COLD" button to continue preparation. In case there is still no liquid coming out check 12.3 "NO LIQUID COMES OUT – CAPSULE BLOCKED?".

12. TROUBLESHOOTING

12.3 NO LIQUID COMES OUT – CAPSULE BLOCKED?

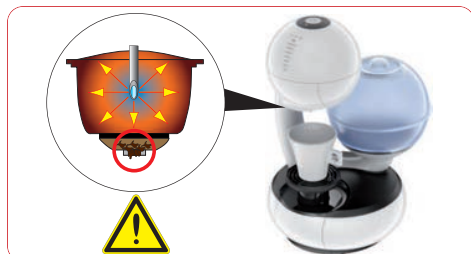

No liquid comes out: The capsule may be blocked and under pressure.

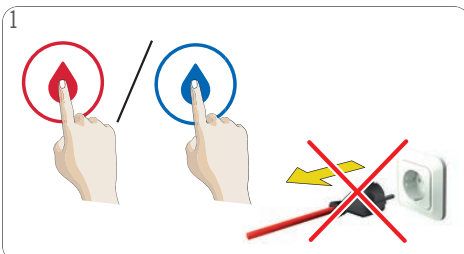

Always keep the machine upright! To stop preparation, touch "HOT" or "COLD" button again. Do not unplug the machine!




Do not drink the coffee! Open locking handle. Machine releases pressure. Remove capsule holder. Put used capsule in dustbin.



Try to operate machine without capsule. If water flows, it shows that the capsule was faulty. Just use a different capsule. If not, follow with 12.4 "NO LIQUID COMES OUT – INJECTOR BLOCKED?".


12.4 NO LIQUID COMES OUT – INJECTOR BLOCKED?

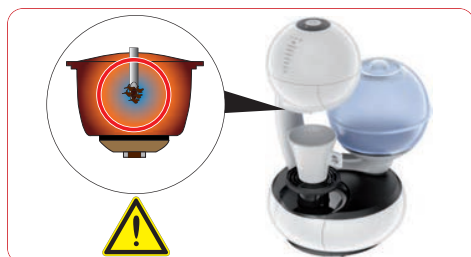

No liquid comes out: The injector may be blocked and under pressure.



Ensure the drip tray is empty. Remove and tilt drip tray. Take out cleaning needle. **Keep needle out of reach of children!**

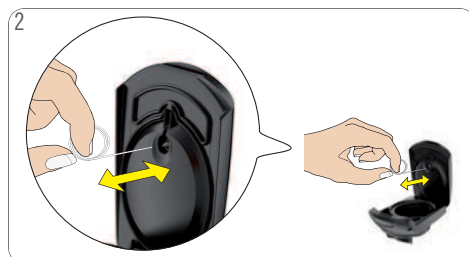

Open capsule holder and clean injector with cleaning needle. Follow instructions in "Descaling at least every 3–4 months" on page 18.



12. TROUBLESHOOTING


12.5 VARIOUS



Machine cannot be switched on.




1 Check if the power plug is correctly plugged into a mains power socket. If yes, check your electricity supply.

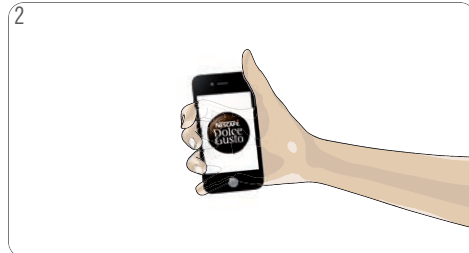

2 If machine still cannot be switched on, call the NESCAFÉ® Dolce Gusto® hotline. For hotline numbers see "Machine Hotlines".




Beverage is splashing out of coffee outlet.

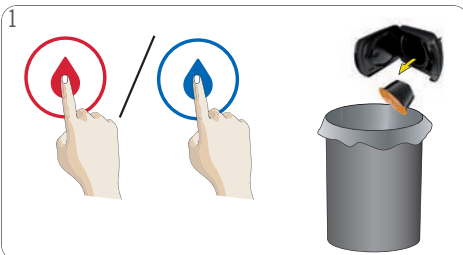

1 Press "HOT" or "COLD" button to stop preparation. Pull out capsule holder. Put used capsule in dustbin.



2 Clean capsule holder. Insert a new capsule in capsule holder and insert it back into machine.

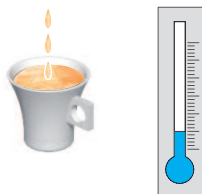

If the beverage comes out slower than usual (even in droplets), or if it is cooler than usual the machine has to be descaled.




1 To do so, please follow the descaling instructions. See "Descaling at least every 3–4 months" on page 18.

12. TROUBLESHOOTING


12.5 VARIOUS



Volume display and indicator lights flash fast.

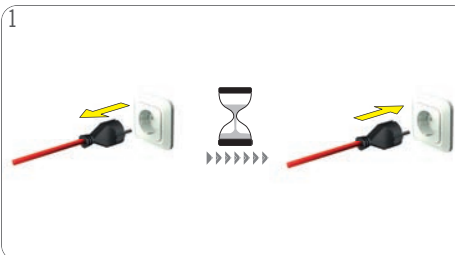


Check if capsule is blocked, see "No liquid comes out – capsule blocked?" on page 21. Unplug power plug and wait 20 minutes. Afterwards insert power plug into mains power socket and switch machine on.

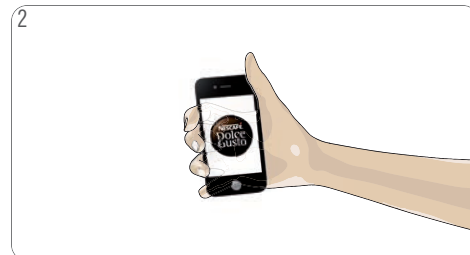


If volume display still flashes fast call the NESCAFÉ® Dolce Gusto® hotline. For hotline numbers see last page.



Water accumulates underneath or around machine. Clear water leaks around capsule holder during beverage preparation.

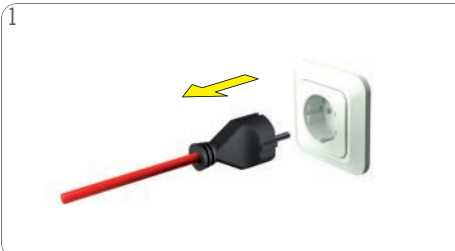

Unplug power plug!

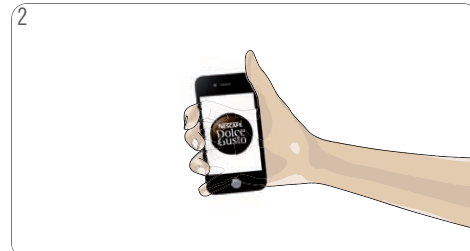

Call the NESCAFÉ® Dolce Gusto® hotline or go on the NESCAFÉ® Dolce Gusto® website. For hotline numbers see last page.



Water is splashing out of coffee outlet during rinsing or descaling.



Put rinsing tool into capsule holder. Insert capsule holder into machine.





DēLonghi



الخطوط المباشرة

AR 0800 999 81 00
BR 0800 7762233
CA 1 888 809 9267
CH 0800 86 00 85
CL 800 213 006
CO 01800-05-15566
CR 0-800-542-5444
DO (809) 508-5100
EC 1800 637-853 (1800 NESTLE)
GT 1-800-299-0019
HN 800-2220-6666
MX 800 365 2348
NI 1-800-4000
PA 800-0000
PE 080010210
PY 0800-112121
TT (868) 663-6832
US 1-800-745-3391
UY 0800-2122

AT 0800 365 23 48
BE 0800 93217
BG 0 700 10 330
CZ 800 135 135
DE 0800 365 23 48
DK 80 300 100
EE 6 177 441

ES 900 10 21 21
FI 0800 0 6161
FR 0 800 97 07 80
GB 0800 707 6066
GR 210 6371000
HR 0800 600 604
HU 06 40 214 200


IE 00800 6378 5385
IT 800365234
KZ 8-800-080-2880
LT 8 700 55 200
LU 8002 3183
LV 67508056
MA 080 100 52 54

MK 0800 00 200
MT 80074114
NL 0800-3652348
NO 800 80 730
PL 0800 174 902
PT 800 200 153
RO 0 800 8 637 853


SK 0800 135 135
SR 0800 000 100
SV 020-299200
TR 0800 211 02 18
4 44 31 60
UA 0 800 50 30 10

AL 0842 640 10
ZA 086 009 6116
+27 11 514 6116
AU 1800 466 975
NZ 0800 365 234


AE 800348786
BA 0800 202 42
CN 4006304868
HK (852) 21798999
ID 0800 182 1028
IL 1-700-50-20-54
JO +96265902997
JP 0120-879-816
KR 080-234-0070
KW +965 22286847
LB +9614548593
ME 020 269 902
Middle East: +97143634100
MY 1800 88 3633
PH 898-0061
PK 0800-62282
QA +97444587615
RU 8-800-700-79-79
SA 8008971971
SG 1 800 836 7009
SI 080 45 05
TH 1-800-295588
0-2657-8601
TW 0800-000-338
VN 1800 6699

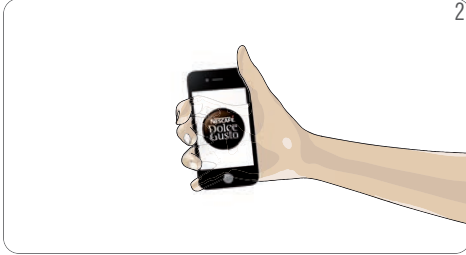


إذا استمرت وحدة عرض المنسوب في الوميض بسرعة،
اتصل بالخط الساخن NESCAFÉ® Dolce Gusto®.
اطّلع على الصفحة الأخيرة للتعرف على أرقام الخطوط
المباشرة.

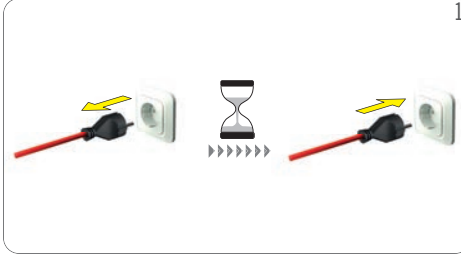


تأكد مما إذا كانت الكيسولة مسدودة، انظر «في حالة عدم
خروج أي سائل - هل يوجد انسداد في الكيسولة؟» الواردة
في الصفحة 21. اسحب قابس الطاقة وانتظر 20 دقيقة، ثم
وصل قابس الطاقة بمقبس التيار الرئيسي وشغل الماكينة.

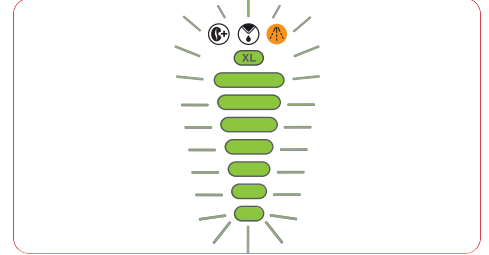

تومض وحدة عرض المنسوب ولمبات المؤشر بسرعة.

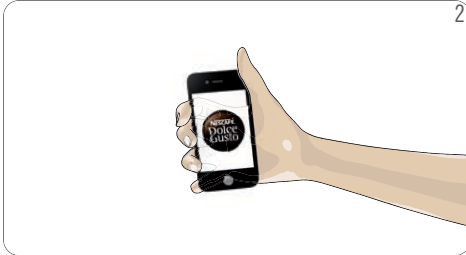

اتصل بالخط المباشر NESCAFÉ® Dolce Gusto® أو
انتقل إلى الموقع الإلكتروني
NESCAFÉ® Dolce Gusto®. اطّلع على الصفحة
الأخيرة للتعرف على أرقام الخطوط المباشرة.

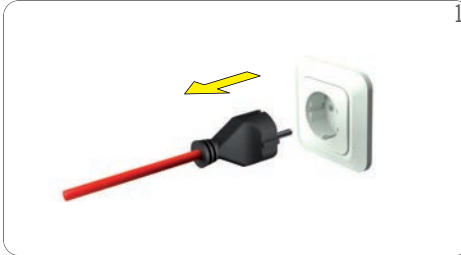

اسحب قابس الطاقة!



المياه تتراكم أسفل وحول الماكينة. تتسرب المياه النقية حول
حامل الكبسولات خلال إعداد المشروب.




ضع أداة الغسل داخل حامل الكبسولات. ركب حامل
الكبسولات بالماكينة.



المياه تتناثر من منفذ القهوة أثناء الغسل أو إزالة الترسبات.

12. استكشاف الأخطاء وإصلاحها

12.5 متنوع

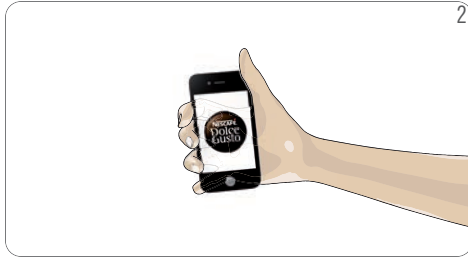

إذا لم تتمكن بعد من تشغيل الماكينة، اتصل بالخط المباشر لشركة NESCAFÉ® Dolce Gusto®. اطلع على الصفحة الأخيرة للتعرف على أرقام الخطوط المباشرة.




تأكد من صحة توصيل القابس بمقبس التيار الكهربائي. إن كان موصلًا بشكل صحيح، تحقق من مصدر الإمداد بالتيار الكهربائي.



يتعذر تشغيل الماكينة.



نظف حامل الكبسولات. أدخل كبسولة جديدة في حامل الكبسولات ثم أدخله في الجهاز مرة أخرى.

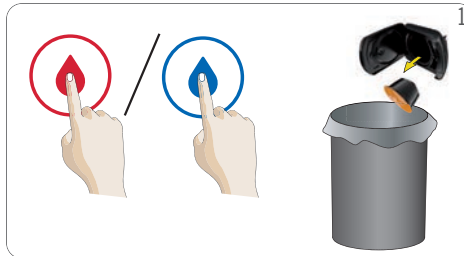


اضغط زر الماء الساخن «HOT» أو البارد «COLD» لإيقاف إعداد المشروب. اسحب حامل الكبسولات. ضع الكبسولة المستعملة في صندوق القمامة.



المشروب يتناثر من منفذ القهوة.



لفعل ذلك، يرجى اتباع تعليمات إزالة الرواسب. انظر «إزالة الترسبات كل 3-4 أشهر على الأقل» الواردة في الصفحة 18.

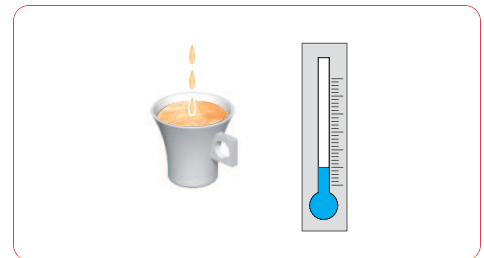


في حالة خروج المشروب بسرعة أقل من المعتاد (حتى في حالة خروجه على هيئة قطرات)، أو إذا كان المشروب باردًا بدرجة أكبر من المعتاد، فإن ذلك يشير إلى ضرورة إزالة الترسبات من الماكينة.

12. استكشاف الأخطاء وإصلاحها

12.3 في حالة عدم خروج أي سائل - هل يوجد انسداد في الكبسولة؟



2 لا تشرب القهوة! افتح مقبض القفل. الماكينة تحرر الضغط. اسحب حامل الكبسولات. ضع الكبسولة المستعملة في صندوق القمامة.

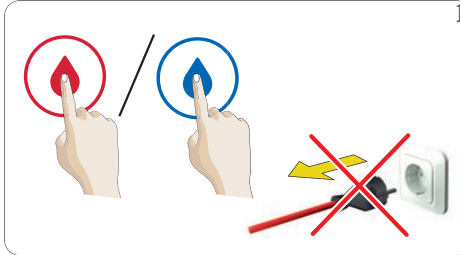

1 ضع الماكينة دائماً بشكل عمودي مستقيم! لإيقاف عملية الإعداد، ضغط باللمس على زر الماء الساخن/البارد مجدداً. لا تقم بسحب القابس!




في حالة عدم خروج أي سائل: قد تكون الكبسولة مسدودة أو تحت ضغط.



جرب تشغيل الماكينة بدون الكبسولة. إذا تدفق الماء، فهذا يوضح وجود عطل بالكبسولة. ما عليك سوى أن تستخدم كبسولة مختلفة. إذا لم يكن كذلك، فاتباع الخطوة 12.4 «في حالة عدم خروج أي سائل - هل يوجد انسداد في الحاقن؟».

12.4 في حالة عدم خروج أي سائل - هل يوجد انسداد في الحاقن؟

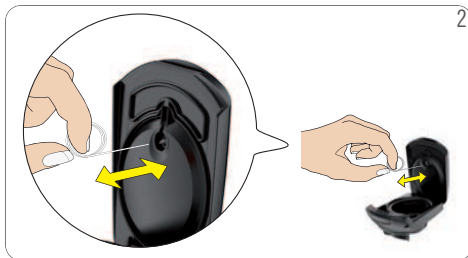

2 افتح حامل الكبسولات ونظف الحاقن باستخدام إبرة التنظيف. اتبع التعليمات الواردة في «إزالة الترسبات كل 3-4 أشهر على الأقل» الواردة في الصفحة 18.



1 احرص على أن يكون درج التقطير فارغاً. فك درج التقطير مع إمالتة. أخرج إبرة التنظيف. احفظ الإبرة بعيداً عن متناول الأطفال!




لا تخرج أي سائل: قد يكون الحاقن مسدوداً وتحت الضغط.

12. استكشاف الأخطاء وإصلاحها

12.1 تعمل إضاءة المؤشر البرتقالية لإزالة الترسبات




هذا يعني أن جهاز إعداد القهوة في حاجة إلى إزالة الترسبات. لفعل ذلك، يُرجى اتباع تعليمات إزالة الرواسب. انظر «إزالة الترسبات كل 3-4 أشهر على الأقل» الواردة في الصفحة 18.

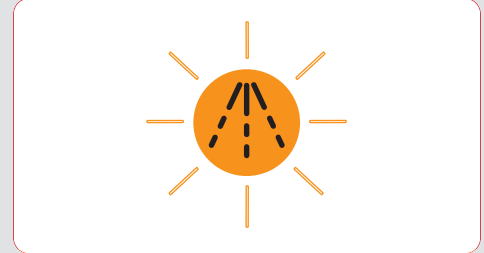


تعمل إضاءة المؤشر البرتقالية لإزالة الترسبات.

12.2 في حالة عدم خروج أي سائل - هل لا توجد مياه؟

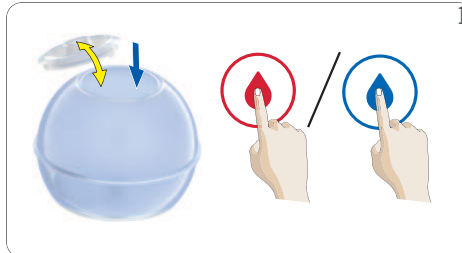


تحقق من وجود مياه شرب نقية كافية في خزان المياه. وإن لم يكن، فاعد الملاء بمياه شرب نقية، واضغط على زر الماء الساخن «HOT» أو البارد «COLD» لمواصلة إعداد المشروب. إذا استمر عدم خروج أي سائل، راجع الخطوة 12.3 «عدم خروج أي سائل - هل يوجد انسداد في الكبسولة؟».

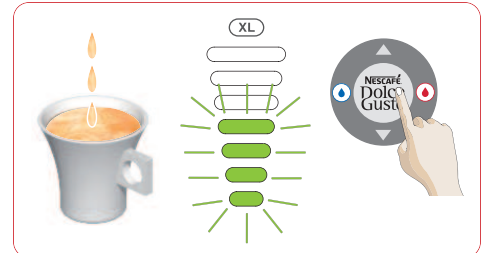


تتوقف عملية إعداد المشروب أو لا تبدأ على الإطلاق. تومض وحدة عرض المنسوب في المستوى الحالي. في حالة عدم خروج أي سائل: قد يكون خزان الماء فارغاً.


11. إزالة الترسبات كل 3-4 أشهر على الأقل

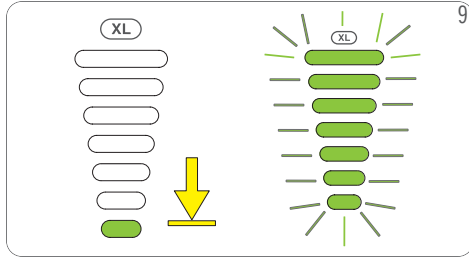


للحصول على أفضل نتائج من مزيل الترسبات، تدخل الماكينة في وقت الانتظار لمدة 2 دقائق. تختفي إضاءة وحدة عرض المنسوب تدريجياً. في نهاية وقت الانتظار، تومض وحدة عرض المنسوب بسرعة.

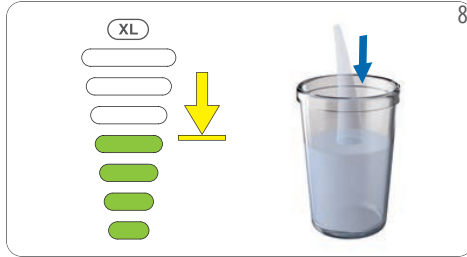


تزيل الماكينة الترسبات بالماء البارد باستمرار. تختفي إضاءة وحدة عرض المنسوب تدريجياً. توقف الماكينة عملية الإعداد أو توماتيكياً.

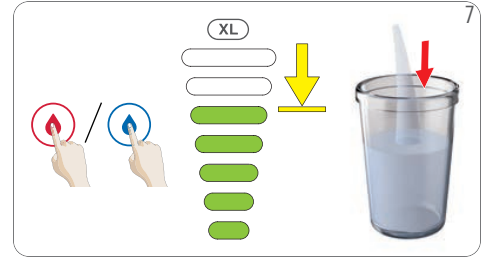

اضغط زر الماء الساخن «HOT» أو البارد «COLD». تختفي إضاءة وحدة عرض المنسوب تدريجياً. تزيل الماكينة الترسبات بالماء الساخن ضمن عملية غير متزامنة لمدة 2 دقائق تقريباً. يمكن إيقاف عملية الاستخلاص في أي وقت يدوياً بالضغط على زر ساخن «HOT» أو بارد «COLD».

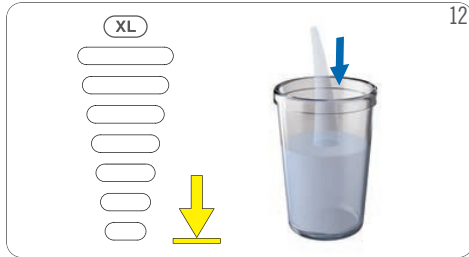

تُشطف الماكينة بالماء البارد باستمرار. تختفي إضاءة وحدة عرض المنسوب تدريجياً. توقف الماكينة عملية الإعداد أو توماتيكياً.

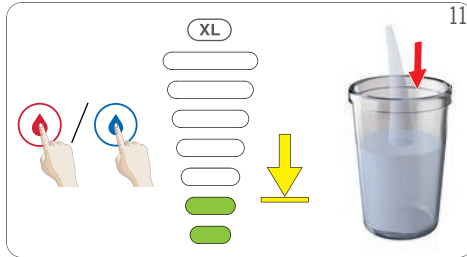

اضغط زر الماء الساخن «HOT» أو البارد «COLD». تختفي إضاءة وحدة عرض المنسوب تدريجياً. تُشطف الماكينة بالماء الساخن باستمرار. يمكن إيقاف عملية الاستخلاص في أي وقت يدوياً بالضغط على زر ساخن «HOT» أو بارد «COLD».



قم بتفريغ الوعاء وتنظيفه. اغسل ونظف خزان المياه. استخدم فرشاة طعام نظيفة وأمنة وسائل تنظيف إذا تطلب الأمر. بعد ذلك، عد ملء الخزان بمياه شرب نقية وسائل تنظيف في الماكينة.



نظف الماكينة بقطعة قماش ناعمة رطبة. جفف بعد ذلك بقطعة قماش ناعمة جافة.



أخرج الوعاء، قم بتفريغ الوعاء وتنظيفه. اسحب حامل الكبسولات. أزل أداة الغسل. احفظها في مكان آمن للتنظيف وإزالة الرواسب في وقت لاحق. احرص على غسل حامل الكبسولات بالماء من كلا الجانبين. أعد إدخال حامل الكبسولات.

11. إزالة الترسبات كل 3-4 أشهر على الأقل



لا تضغط على زر الطاقة ON / OFF في أثناء دورة إزالة الترسبات.



تجنب وصول مادة إزالة الترسبات إلى أي جزء من مكونات الماكينة.



لا تستعمل الخل لإزالة الترسبات!



www.dolce-gusto.com

استخدم مزيل الترسبات السائل من NESCAFÉ® Dolce Gusto® لطالب شراء مزيل الترسبات السائل، اتصل بالخط المباشر NESCAFÉ® Dolce Gusto® أو انتقل إلى الموقع الإلكتروني NESCAFÉ® Dolce Gusto®.



ضع كيسًا من مادة إزالة الترسبات في كأس المعاييرة وأضف عليه 0.5 لتر من مياه الشرب النقية. صب مزيل الترسبات في خزان المياه وركبه بالماكينة.




أخرج الماء، في حالة وجوده، من خزان الماء.



إذا اشتغلت إضاءة مؤشر إزالة الترسبات البرتقالية، أو إذا خرج المشروب بدرجة أبطأ من المعتاد (حتى في حالة خروجه على هيئة قطرات)، أو إذا كان أبرد من المعتاد، فإن ذلك يشير إلى ضرورة إزالة الترسبات من الماكينة.



اضغط على زر الطاقة ON / OFF مع الاستمرار في الضغط عليه لمدة 5 ثوان على الأقل. تبدأ إضاءة المؤشر البرتقالية لإزالة الترسبات في الوميض ثم تعمل الماكينة في وضع إزالة الترسبات.

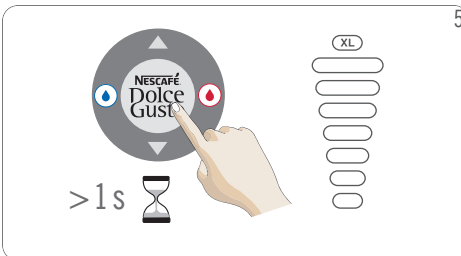

اطفئ الماكينة.




افتح مقبض القفل. ضع أداة الغسل داخل حامل الكبسولات. ركب حامل الكبسولات بالماكينة. أغلق مقبض القفل. ضع وعاء فارغًا كبيرًا أسفل منفذ القهوة.




نظف جانبي حامل الكبسولات باستخدام سائل تنظيف وماء شرب نقي. استخدم غسالة الأطباق كبديل. جفف حامل الكبسولات بعد ذلك.



اغسل درج التقطير وأداة الغسل بمياه شرب نقية. نظف درج التقطير بفرشاة طعام آمنة نظيفة. درج التقطير غير ملائم للتنظيف في غسالة الأطباق!

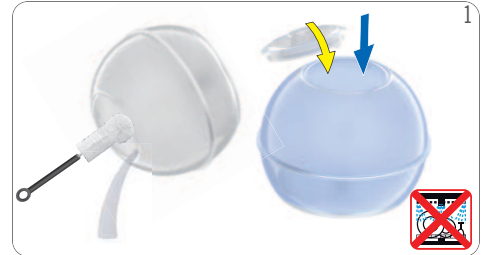

اغسل ونظف خزان المياه. استخدم فرشاة طعام نظيفة وآمنة وسائل تنظيف إذا تطلب الأمر. بعد ذلك، عد ملء الخزان بمياه شرب نقية وسائل تنظيف في الماكينة. خزان الماء غير ملائم للتنظيف في غسالة الأطباق!

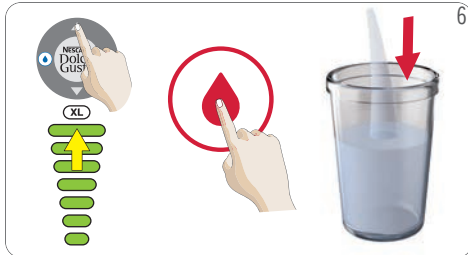


اضبط وحدة عرض المنسوب على 7 باستخدام أزرار اختيار المنسوب. اضغط زر الماء الساخن «HOT». الماكينة تبدأ في الغسل. تختفي إضاءة وحدة عرض المنسوب تدريجياً.



تظهر إضاءة عرض المنسوب تدريجياً في أثناء تسخين الماكينة لأربعين ثانية تقريباً. بعد ذلك، تين وحدة عرض المنسوب إعداد المنسوب الأخير. الماكينة جاهزة للاستعمال. ضع وعاء فارغاً كبيراً أسفل منفذ القهوة.



افتح مقبض القفل. ضع أداة الغسل داخل حامل الكبسولات. ركب حامل الكبسولات بالماكينة. أغلق مقبض القفل.

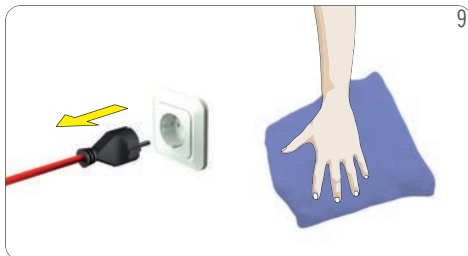

أطفئ الماكينة. اسحب قابس الطاقة! نظف الماكينة بقطعة قماش ناعمة رطبة. جفف بعد ذلك بقطعة قماش ناعمة جافة.



افتح مقبض القفل. اسحب حامل الكبسولات. أزل أداة الغسل. احفظها في مكان آمن للتنظيف وإزالة الرواسب في وقت لاحق. أخرج الماء، في حالة وجوده، من خزان الماء.




قم بتفريغ الوعاء وتنظيفه. تحذير: المياه ساخنة! تعامل بحذراً!

9. إعداد مشروب


9.2 كبسولتان (على سبيل المثال الكابتشينو «CAPPUCINO»)



بعد خروج المشروب، افتح مقبض الغلق. أزل الكوب من درج التقطير.

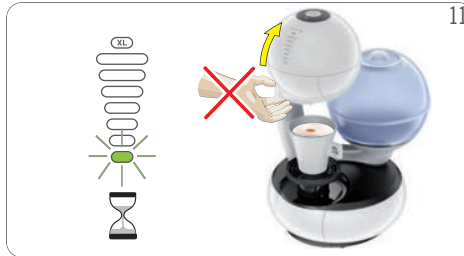

بعد الانتهاء من تحضير المشروب، تومض وحدة عرض المنسوب لثوان قليلة. لا تفتح مقبض القفل خلال هذه الفترة!

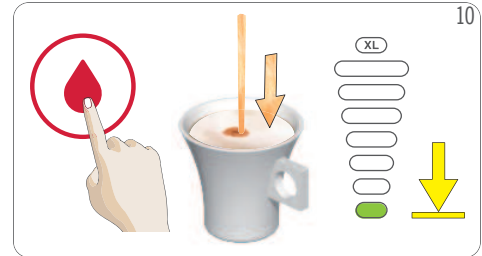

اضغط زر الماء الساخن «HOT» أو البارد «COLD» على النحو الموصى به على عبوات الكبسولة. تبدأ عملية إعداد المشروب. انتظر حتى يتوقف الاستخلاص. تختفي إضاءة وحدة عرض المنسوب تدريجياً. توقف الماكينة عملية الإعداد أوتوماتيكياً. يمكن إيقاف خروج المشروب في أي وقت يدوياً بالضغط على زر الماء الساخن «HOT» أو البارد «COLD» مجدداً.



احرص على غسل حامل الكبسولات بالماء من كلا الجانبين. جفف حامل الكبسولات. ثم أدخله في الجهاز مرة أخرى. استمتع بمشروبك!




اسحب حامل الكبسولات. افتح حامل الكبسولات. ضع الكبسولة المستعملة في صندوق القمامة. انتبه حتى لا تتخلص من حامل الكبسولات.

9.2 كبسولتان (على سبيل المثال الكابتشينو «CAPPUCCINO»)




افتح حامل الكبسولات. تأكد من عدم وجود أداة الغسل داخل الجهاز. أدخل أول كبسولة في حامل الكبسولات. أغلق حامل الكبسولات. ثم أدخله في الجهاز مرة أخرى. أغلق مقبض القفل.

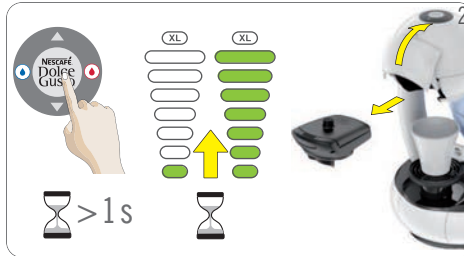


شغلّ الماكينة. تظهر إضاءة عرض المنسوب تدريجيًا في أثناء تسخين الماكينة لأربعين ثانية تقريبًا. بعد ذلك، تبين وحدة عرض المنسوب إعداد المنسوب الأخير. افتح مقبض القفل. اسحب حامل الكبسولات.



قم بضبط موضع درج التقطير. قم بوضع كوب بالحجم المناسب على درج التقطير. انظر 6. «أمثلة على المشروبات» أو الملف. تحقق من وجود مياه شرب نظيفة كافية في خزان المياه.

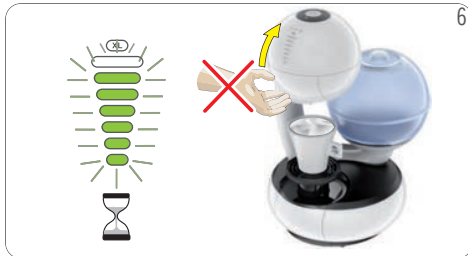

بعد الانتهاء من تحضير المشروب، تومض وحدة عرض المنسوب لثوان قليلة. لا تفتح مقبض القفل خلال هذه الفترة!

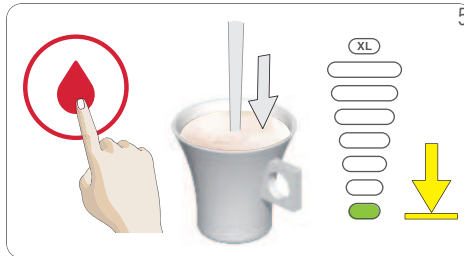

اضغط زر الماء الساخن «HOT» أو البارد «COLD» على النحو الموصى به على عبوات الكبسولة. تبدأ عملية إعداد المشروب. انتظر حتى يتوقف الاستخلاص. تختفي إضاءة وحدة عرض المنسوب تدريجيًا. توقف الماكينة عملية الإعداد أوتوماتيكيًا. يمكن إيقاف خروج المشروب في أي وقت يدويًا بالضغط على زر الماء الساخن «HOT» أو البارد «COLD» مجددًا.



استخدم أزرار اختيار المنسوب لضبط وحدة عرض المنسوب وفقًا لعدد الشرائط المبينة على الكبسولة، أو اختر عدد الشرائط حسب ذوقك الخاص. اختر مشروب XL لكوب كبير جدًا. انتظر حوالي 1.5 دقيقة إذا أردت أن تُعد كوبًا كبيرًا جدًا آخرًا.



استخدم أزرار اختيار المنسوب لضبط وحدة عرض المنسوب وفقًا لعدد الشرائط المبينة على الكبسولة، أو اختر عدد الشرائط حسب ذوقك الخاص.



ادخل كبسولة أخرى في حامل الكبسولات. أغلق حامل الكبسولات. ثم أدخله في الجهاز مرة أخرى. أغلق مقبض القفل.




افتح مقبض القفل. اسحب حامل الكبسولات. افتح حامل الكبسولات. ضع الكبسولة المستعملة في صندوق القمامة. انتبه حتى لا تتخلص من حامل الكبسولات.

9. إعداد مشروب

9.1 كبسولة واحدة (على سبيل المثال LUNGO)




افتح حامل الكبسولات. تأكد من عدم وجود أداة الغسل داخل الجهاز. أدخل كبسولة أخرى في حامل الكبسولات. أغلق حامل الكبسولات. ثم أدخله في الجهاز مرة أخرى. أغلق مقبض القفل.

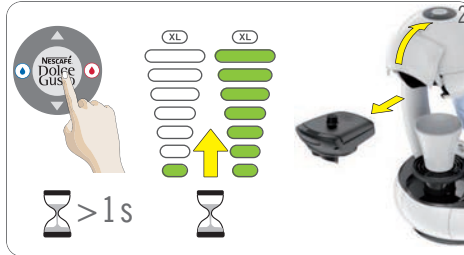


شغل الماكينة. تظهر إضاءة عرض المنسوب تدريجيًا في أثناء تسخين الماكينة لأربعين ثانية تقريبًا. بعد ذلك، تبين وحدة عرض المنسوب إعداد المنسوب الأخير. افتح مقبض القفل. اسحب حامل الكبسولات.



قم بضبط موضع درج التقطير. قم بوضع كوب بالحجم المناسب على درج التقطير. انظر 6. «أمثلة على المشروبات» أو الملف. تحقق من وجود مياه شرب نظيفة كافية في خزان المياه.

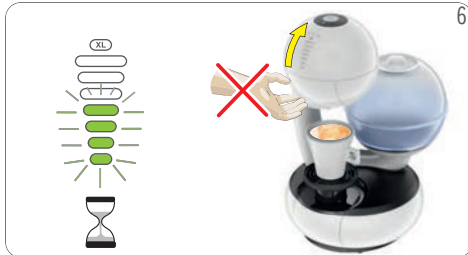

بعد الانتهاء من تحضير المشروب، تومض وحدة عرض المنسوب لثوان قليلة. لا تفتح مقبض القفل خلال هذه الفترة!

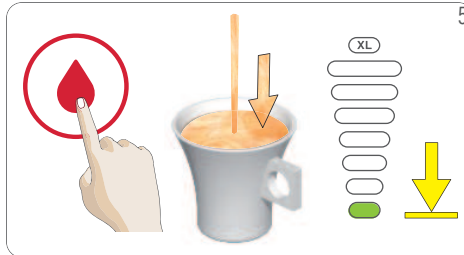

اضغط زر الماء الساخن «HOT» أو البارد «COLD» على النحو الموصى به على عبوات الكبسولة. تبدأ عملية إعداد المشروب. انتظر حتى يتوقف الاستخلاص. تختفي إضاءة وحدة عرض المنسوب تدريجيًا. توقف الماكينة عملية الإعداد أوتوماتيكيًا. يمكن إيقاف خروج المشروب في أي وقت يدويًا بالضغط على زر الماء الساخن «HOT» أو البارد «COLD» مجددًا.



استخدم أزرار اختيار المنسوب لضبط وحدة عرض المنسوب وفقًا لعدد الشرائط المبينة على الكبسولة، أو اختر عدد الشرائط حسب ذوقك الخاص. اختر مشروب XL لكوب كبير جدًا. انتظر حوالي 1.5 دقيقة إذا أردت أن تُعد كوبًا كبيرًا جدًا آخرًا.



احرص على غسل حامل الكبسولات بالماء من كلا الجانبين. جفف حامل الكبسولات. ثم أدخله في الجهاز مرة أخرى. استمتع بمشروبك!



اسحب حامل الكبسولات. افتح حامل الكبسولات. ضع الكبسولة المستعملة في صندوق القمامة. انتبه حتى لا تتخلص من حامل الكبسولات.



بعد خروج المشروب، افتح مقبض القفل. أزل الكوب من درج التقطير.




ركب حامل الكبسولات بالماكينة. أغلق مقبض القفل. ضع وعاءً فارغاً كبيراً أسفل منفذ القهوة. قم بتوصيل قابس الكهرباء بمقبس التيار الكهربائي.




خذ حامل الكبسولات واضغط على القفل لفتحه. تأكد من إدخال أداة الغسل في حامل الكبسولات. أغلق حامل الكبسولات.




اغسل خزان المياه يدويًا بمياه شرب نقية. املا خزان المياه بمياه شرب نقية. أعد تركيب خزان المياه بالماكينة. افتح مقبض القفل.

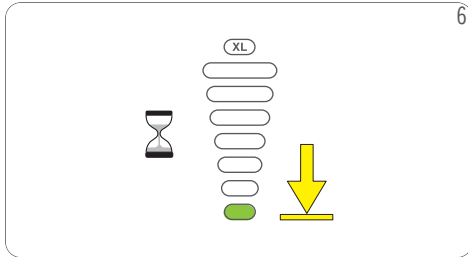

انتظر إلى أن ينتهي العد التنازلي وتتوقف الماكينة.

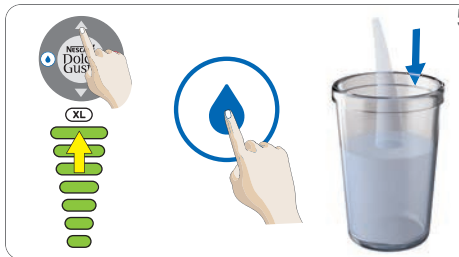

اضبط وحدة عرض المنسوب على 7 باستخدام أزرار اختيار المنسوب. اضغط زر الماء البارد «COLD». الماكينة تبدأ في الغسل. تختفي إضاءة وحدة عرض المنسوب تدريجيًا.

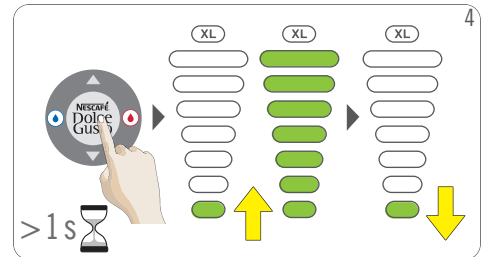


شغل الماكينة. تظهر إضاءة عرض المنسوب تدريجيًا في أثناء تسخين الماكينة لأربعين ثانية تقريبًا. الماكينة جاهزة للاستعمال.



أفرغ الوعاء. املا خزان المياه بمياه شرب نقية. أعد تركيب خزان المياه بالماكينة. الماكينة جاهزة للاستعمال.




انتظر إلى أن ينتهي العد التنازلي وتتوقف الماكينة. افتح مقبض القفل. اسحب حامل الكبسولات. افتح حامل الكبسولات. أزل أداة الغسل. احفظها في مكان آمن للتنظيف وإزالة الرواسب في وقت لاحق. أعد إدخال حامل الكبسولات.

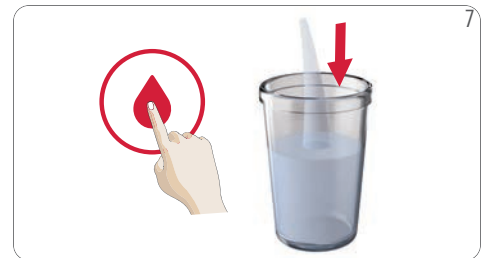


استكمل عملية الشطف باستخدام الماء الساخن. اضغط زر الماء الساخن «HOT». الماكينة تبدأ في الغسل. تختفي إضاءة وحدة عرض المنسوب تدريجيًا.


7. توصيات للاستخدام الآمن

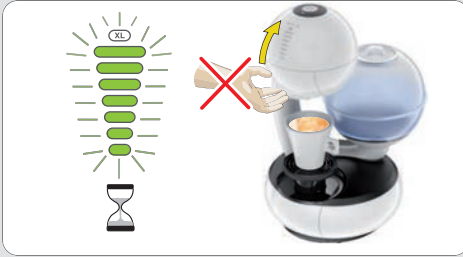


⚠ بعد الانتهاء من تحضير المشروب، تومض وحدة عرض المنسوب لثوان قليلة. لا تفتح مقبض القفل خلال هذه الفترة!

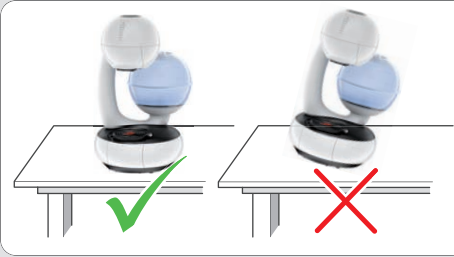


⚠ ضع الماكينة دائماً بشكل عمودي مستقيم!

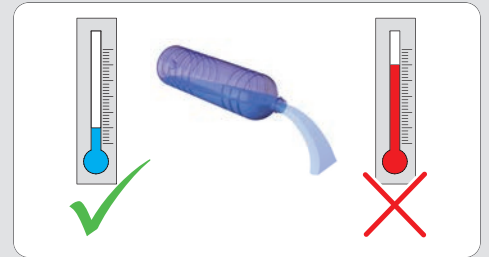


⚠ لا تصف أبداً الماء الساخن في خزان المياه!
⚠ استخدم مياه الشرب النقية فقط لغسل الجهاز ولإعداد المشروب.

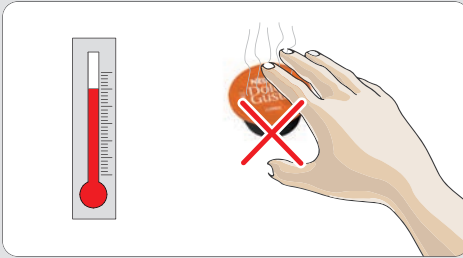

⚠ لا تلمس الكبسولة المستخدمة بعد إعداد المشروب! سطح ساخن، خطر الاحتراق!

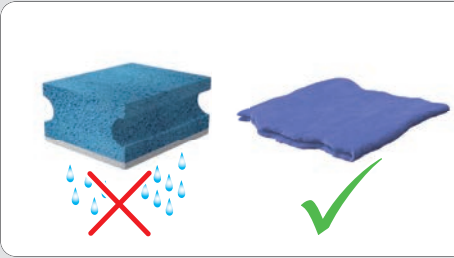

⚠ لا تستخدم اسفنجة مبتلة أبداً. استخدم فقط قطعة قماش ناعمة رطبة لتنظيف الجزء العلوي من الجهاز.

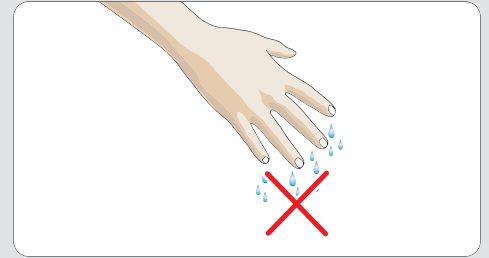

⚠ لا تلمس القابض أبداً ويداك مبللتين. لا تلمس الجهاز أبداً ويداك مبللتين.




⚠ إذا لم تُستخدم لأكثر من يومين: فأفرغ خزان المياه واشطفه وأعد تعبئته بمياه شرب نقية وركّبه في ماكينة إعداد القهوة. اشطف الماكينة متبعاً التعليمات الواردة في «التنظيف» الواردة في الصفحة 17، مع البدء بالخطوة 4.



⚠ لا تستخدم أداة الغسل لإعداد الشاي أو الماء الساخن.

اختر ساخن أو بارد

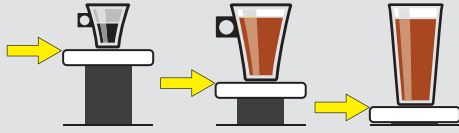

اختر المنسوب






عدّل درج التقطير



الكابتشينو المثلج





① + ②

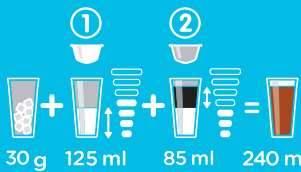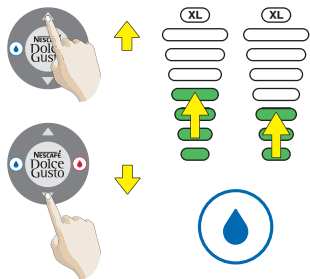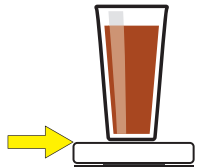

شوكوتشينو





① + ②

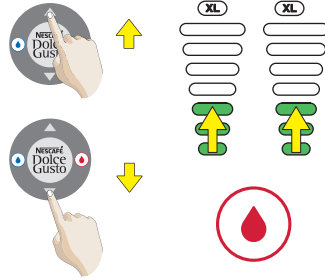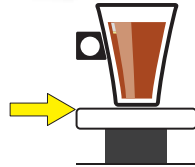



كابوتشينو



① + ②

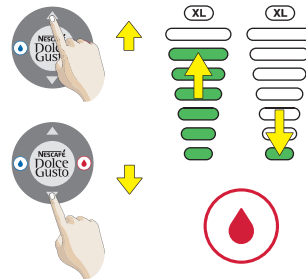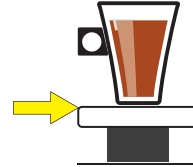

إسبرسو

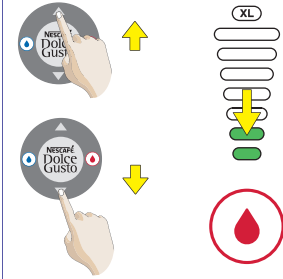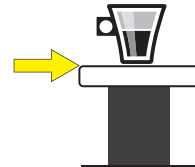

5. NESCAFÉ® DOLCE GUSTO® وصلة تطبيق BLUETOOTH® والبلوتوث

5.1 مزايا جديدة حصرية

ابحث عن NESCAFÉ® Dolce Gusto® في متاجر التطبيقات

iPhone®
جهاز رقمي محمول




Android™



أعد قهوتك السوداء بالطريقة التي تتاسبك


- اكتشف وضعين جديدين لاستخلاص المشروب (انظر الفصل 4 في الصفحة 8):
ESPRESSO BOOST: بإمكانك تحسين مذاق قهوة الإسبرسو التي تعدها.
DELICATE BREW: النكهة الكاملة والمذاق الكامل لقهوة أمريكانو وجرانو.
- حدد موعدًا لاحقًا لتناول مشروبك المفضل.
- احفظ إعداداتك المفضلة لتحضير القهوة.
- تأكد من تحضير أفضل فنجان من القهوة باستخدام دليل الصيانة واستكشاف الأخطاء وإصلاحها على الإنترنت.

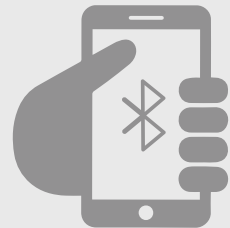


5.2 كيفية توصيل ماكينتك بالتطبيق



عند ظهور التعليمات على التطبيق، أكد الاقتران في غضون 10 ثوان بالضغط على زر بارد «COLD».

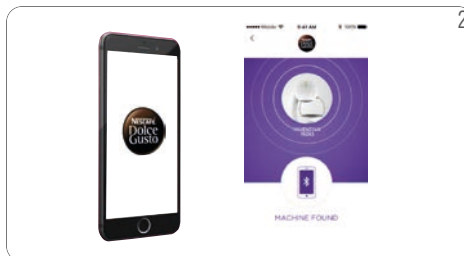


افتح تطبيق NESCAFÉ® Dolce Gusto® وشغل عملية الاقتران. سيبدأ التطبيق في البحث عن ماكينة إعداد القهوة الخاصة بك.

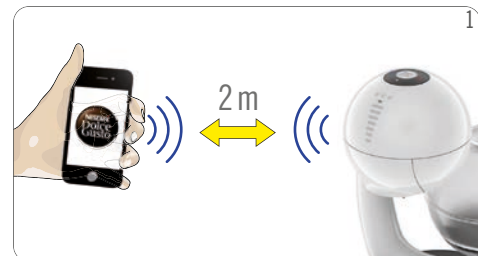


أطفئ الماكينة. يجب أن يكون المستخدم قريبًا من ماكينة إعداد القهوة (مسافة مترين بحد أقصى). شغل Bluetooth® على هاتفك الذكي.


5.3 كيفية تفعيل البلوتوث BLUETOOTH® أو تعطيله على ماكينتك

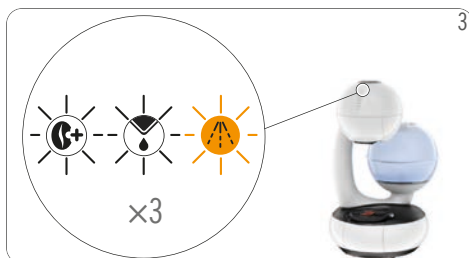

تومض لمبات المؤشر 3 مرات. تم تعطيل/إعادة تنشيط اتصال Bluetooth®.

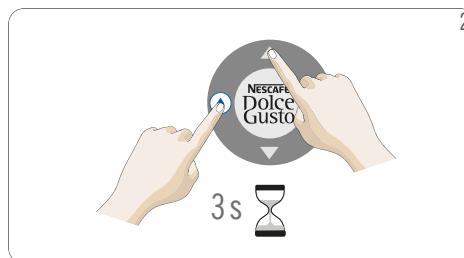


عند ظهور التعليمات على التطبيق، أكد الاقتران في غضون 10 ثوان بالضغط على زر بارد «COLD». اضغط باستمرار على زر بارد «COLD» ولأعلى «UP» لمدة 3 ثوان.

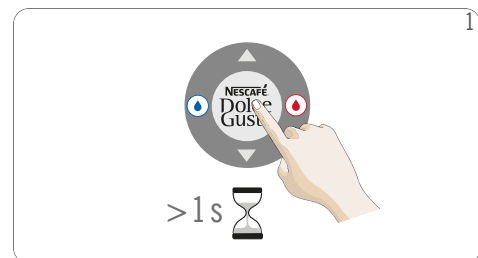


أطفئ الماكينة.

4. أعد قهوتك السوداء بالطريقة التي تناسبك


DELICATE BREW 4.3

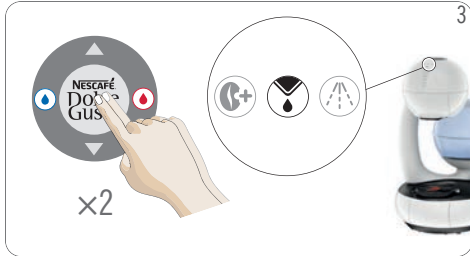


اضغط على زر الطاقة ON/OFF مرتين للانتقال إلى وضع DELICATE BREW. يومض مؤشر DELICATE BREW.

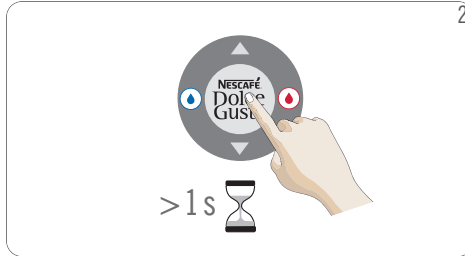


اضغط باستمرار على زر الطاقة ON/OFF لمدة ثانية واحدة على الأقل لتشغيل ماكينة إعداد القهوة.

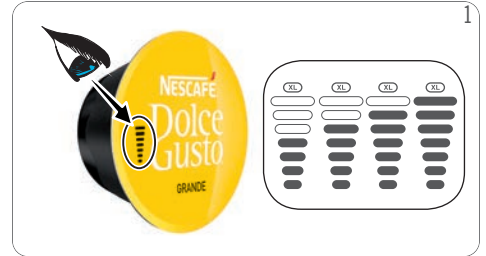

تحقق من عدد الشرائط الموضح على الكبسولة. جهز خيار DELICATE BREW بالمستوى الموصى به بنحو 4 إلى 7 كبسولات فقط.

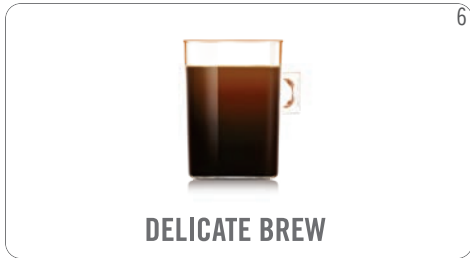

استمتع بمشروبك!

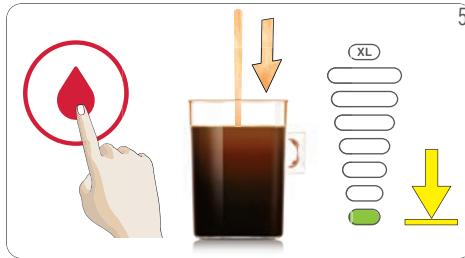

اضغط زر الماء الساخن «HOT». تبدأ عملية إعداد المشروب. انتظر حتى يتوقف الاستخلاص. تختفي إضاءة وحدة عرض المنسوب تدريجيًا. توقف الماكينة عملية الإعداد أوتوماتيكيًا. يمكن إيقاف خروج المشروب في أي وقت يدويًا بالضغط على زر الماء الساخن «HOT» أو البارد «COLD» مجددًا.



استخدم أزرار اختيار المنسوب لضبط وحدة عرض المنسوب وفقًا لعدد الشرائط المبيّنة على الكبسولة، أو اختر عدد الشرائط حسب ذوقك الخاص.

4. أعدد قهوتك السوداء بالطريقة التي تناسبك

4.1 اكتشف وضعين خاصين لاستخلاص المشروب



DELICATE BREW


النكهة الكاملة والمذاق الكامل لقهوة أمريكانو وجراندي.




ESPRESSO BOOST

بإمكانك تحسين مذاق قهوة الإسبرسو التي تعدها.

ESPRESSO BOOST 4.2

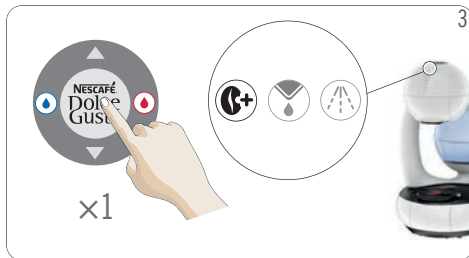

3 اضغط على زر الطاقة ON/OFF مرة واحدة للانتقال إلى وضع ESPRESSO BOOST. يومض مؤشر ESPRESSO BOOST.

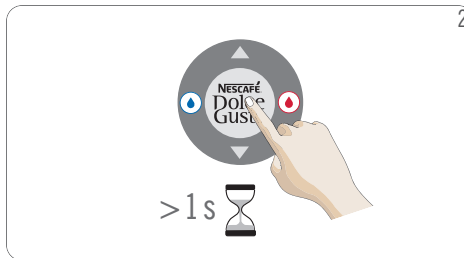

2 اضغط باستمرار على زر الطاقة ON/OFF لمدة ثانية واحدة على الأقل لتشغيل ماكينة إعداد القهوة.




1 تحقق من عدد الشرائط الموضح على الكبسولة. جهاز خيار ESPRESSO BOOST بالمستوى الموصى به بنحو كبسولة واحدة حتى 3 كبسولات فقط.



ESPRESSO BOOST

استمتع بمشروبك!

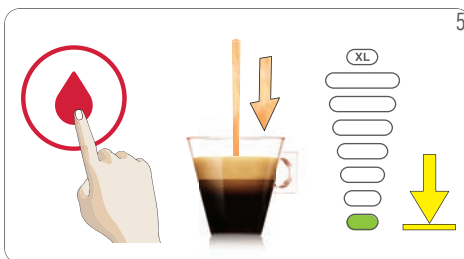


5 اضغط زر الماء الساخن «HOT». تبدأ عملية إعداد المشروب. انتظر حتى يتوقف الاستخلاص. تختفي إضاءة وحدة عرض المنسوب تدريجيًا. توقف الماكينة عملية الإعداد أوتوماتيكيًا. يمكن إيقاف خروج المشروب في أي وقت يدويًا بالضغط على زر الماء الساخن «HOT» أو البارد «COLD» مجددًا.



4 استخدم أزرار اختيار المنسوب لضبط وحدة عرض المنسوب وفقًا لعدد الشرائط المبيّنة على الكبسولة، أو اختر عدد الشرائط حسب ذوقك الخاص.

3. الميزات الأساسية


3.1 تشغيل/إيقاف ماكينة إعداد القهوة

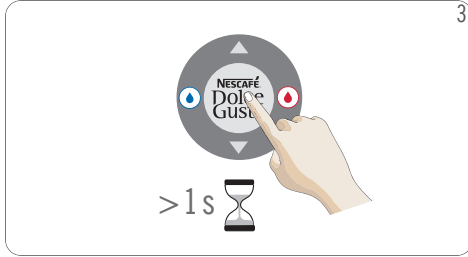

لايقاف تشغيل ماكينة إعداد القهوة، اضغط باستمرار على زر الطاقة ON/OFF لمدة ثانية واحدة على الأقل. يتوقف تشغيل ماكينة إعداد القهوة تلقائيًا بعد عدم استخدامها لمدة 5 دقائق.



يمكن أيضًا تشغيل ماكينة إعداد القهوة عن طريق فتح مقبض القفل.

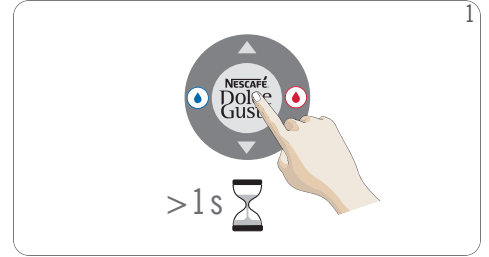

اضغط باستمرار على زر الطاقة ON/OFF لمدة ثانية واحدة على الأقل لتشغيل ماكينة إعداد القهوة.


3.2 ارفع درج التقطير حتى تسمع صوت نقرة.



ارفع درج التقطير حتى أعلى موضع. أغلق درج التقطير عبر إدارته في اتجاه عقارب الساعة حتى تسمع صوت نقرة. درج التقطير مغلق.



ارفع درج التقطير حتى الموضع الأوسط. أغلق درج التقطير عبر إدارته في اتجاه عقارب الساعة حتى تسمع صوت نقرة. درج التقطير مغلق.

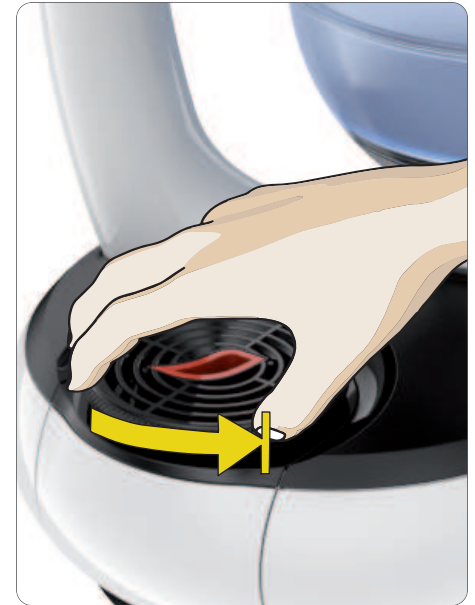

لضبط موضع درج التقطير: ادر درج التقطير عكس اتجاه عقارب الساعة لفتحه.

2. نظرة عامة على الماكينة



1. أداة الغسل
2. حاقن
3. حامل الكبسولات
4. وحدة عرض المنسوب
5. خاصية تحديد منسوب XL
6. لمبة مؤشر ESPRESSO BOOST
7. لمبة مؤشر DELICATE BREW
8. ضوء مؤشر إزالة الترسبات
9. زر الماء البارد «COLD»
10. زر الطاقة ON/OFF + مجموعة من الأوضاع المخصصة
11. زر اختيار المنسوب في اتجاه علوي
12. زر الماء الساخن «HOT»
13. زر اختيار المنسوب في اتجاه سفلي
14. مقبض القفل
15. غطاء خزان الماء
16. خزان الماء
17. شبكة التقطير
18. درج التقطير
19. إبرة التنظيف
20. دعامة درج التقطير

الوضع الاقتصادي:

بعد 5 دقائق من عدم الاستخدام: يخفئ ضوء وحدة عرض المنسوب.
يرجى العلم بأن الجهاز يظل يستهلك الكهرباء، في الوضع الاقتصادي (0.4 واط/الساعة).

بيانات فنية

- AR 220V-240V ~
- 50/60 Hz
- 1340 W-1600 W
- كحد أقصى 15 باراً P
- 1.4 لتر
- 2.7 كغ ~
- إلى 45 درجة مئوية 5
- 26.6 = A سم
- 36.4 = B سم
- 21.4 = C سم



- كان مقبض القفل مفتوحًا في أثناء دورات التخمر. لا تسحب مقبض القفل للأعلى قبل أن تتوقف أضواء الجهاز عن الوميض.
26. لأسباب صحية، احرص دائمًا على ملء خزان المياه بمياه شرب عذبة.
27. بعد استخدام الجهاز، احرص دائمًا على إزالة الكبسولة وتنظيف حامل الكبسولات. أفرغ كل من لوح التقطير ووعاء الكبسولات ونظفهما يوميًا. يجب على الأشخاص الذين يعانون من الحساسية الغذائية أن يشطفوا الجهاز طبقًا لإجراءات التنظيف.
28. قد يظل سطح التسخين ساخنًا بعد الاستخدام وقد يظل ملمس الهيكل الخارجي البلاستيكي دافئًا لعدة دقائق بعد الاستخدام.
29. بالنسبة للمرضى ذوي جهاز تنظيم ضربات القلب أو جهاز إزالة الرجفان: لا يجب وضع حامل الكبسولات فوق جهاز تنظيم ضربات القلب أو جهاز إزالة الرجفان مباشرة.
30. يحظر وضع الماكينة في خزانة عند الاستخدام.

الأطفال

31. ابق الجهاز وسلكه الكهربائي بعيدًا عن متناول الأطفال دون 8 سنوات. لا يُسمح للأطفال بالعبث بالجهاز.
32. يمكن للأطفال من سن 8 سنوات وأكبر والأفراد من ذوي الاحتياجات الخاصة سواء من الناحية الجسدية أو الحسية أو العقلية أو الذين تتقصم الخبرة أو المعرفة استخدام الجهاز، فقط في حالة وجود إشراف وثيق أو تلقيهم تعليمات الأمان الخاصة باستخدام الجهاز مع استيعابهم للمخاطر المتعلقة.
33. هذا الجهاز غير مخصص لاستخدام الأطفال أو الأشخاص الذين يعانون من قصور في القدرات البدنية أو الحسية أو العقلية أو الذين تتقصم الخبرة والمعرفة ما لم يتم الإشراف عليهم أو إعطاؤهم تعليمات بخصوص استخدام الجهاز من قبل شخص مسؤول عن سلامتهم.
- وبالنسبة للأشخاص الذين لديهم قدرة محدودة على معرفة تشغيل هذا الجهاز واستخدامه أو لا يعرفون كيفية تشغيله واستخدامه، فيجب عليهم أولاً قراءة محتويات دليل المستخدم وفهمها بالكامل وطلب أية إرشادات إضافية خاصة بتشغيل الجهاز واستخدامه من الشخص المسؤول عن سلامتهم كلما أمكن.
34. يجب مراقبة الأطفال لضمان عدم عبثهم بالماكينة.
35. يجب ألا يقوم الأطفال بإجراء أعمال التنظيف أو الصيانة ما لم يتعدى عمرهم 8 سنوات وتحت إشراف شخص بالغ.
36. يحظر استخدام الأطفال للماكينة كلعبة.

الصيانة

37. انزع قابس الجهاز من مأخذ التيار الكهربائي الرئيسي قبل التنظيف. اترك الجهاز يبرد قبل تركيب أو خلع أي أجزاء وقبل تنظيف الجهاز. لا تنظف أبدًا الجهاز تنظيفًا رطبًا ولا تغمره في أي سائل. لا تنظف أبدًا الجهاز بالمياه الجارية. لا تستخدم المنظفات أبدًا لتنظيف الجهاز. لا تستخدم سوى الإسفنج/ الفرش الناعمة لتنظيف الجهاز. يجب تنظيف خزان المياه باستخدام فرشاة طعام نظيفة وأمنة.
38. يجب أن تجرى أية أعمال تشغيل أو تنظيف أو عناية بالجهاز، فيما عدا الاستخدام العادي، لدى مراكز خدمة ما بعد البيع التي يتم تعيينها من خلال خدمة الخط المباشر من NESCAFÉ® Dolce Gusto®. لا تفك

- الجهاز أو تضع أي شيء في فتحاته.
39. لتقليل خطر حدوث حريق أو صدمة كهربائية، لا تزل الغطاء. لا توجد أجزاء بداخل الجهاز نافعة للمستخدم. يجب ألا يتم إجراء أعمال الإصلاح إلا من قبل موظفي خدمة معتمدين!
40. للحصول على إرشادات إضافية حول كيفية استخدام الجهاز، ارجع إلى دليل المستخدم على www.dolcegusto-me.com أو اتصل بالخط المباشر التابع لجهاز NESCAFÉ® Dolce Gusto®.

إعادة التدوير

41. العبوة مصنوعة من مواد قابلة لإعادة التدوير. اتصل بالمجلس المحلي الذي تتبعه أو الجهة المختصة للحصول على مزيد من المعلومات حول برامج إعادة التدوير. جهازك يتكون من مواد قيمة يمكن إعادة الانتفاع بها أو إعادة تدويرها.

الأسواق الأوروبية فقط: فُكر في البيئة!



- جهاز يتكون من مواد قيمة يمكن إعادة الانتفاع بها أو إعادة تدويرها.
- اتركها في نقطة تجمع النفايات المحلية التابعة للمدينة أو في مركز الخدمة المعتمد حيث يتم التخلص منها بصفتها ممتلكات. التوجيه الأوروبي 2012/19 / الاتحاد الأوروبي الصادر بشأن نفايات المعدات الكهربائية والإلكترونية (WEEE)، ينص على أن الأجهزة المنزلية المستخدمة يجب ألا يتم التخلص منها بصفتها نفايات محلية عادية غير مصنفة. يجب أن يتم تجميع الأجهزة القديمة بشكل منفصل لتحسين فرز وإعادة تدوير أجزائها والحد من التأثير على صحة الإنسان والبيئة.

1. احتياطات السلامة

اقرأ جميع التعليمات واتبع تعليمات السلامة هذه. قد يؤدي أي نوع من سوء استخدام الجهاز إلى احتمال التعرض للإصابة.

لا تتحمل الشركة المنتجة أي مسؤولية في حالة سوء استخدام الجهاز أو عدم الالتزام بالتعليمات الواردة، وتسقط حقوق الضمان.

لا يغطي الضمان الأجهزة التي لا تعمل أو لا تعمل بشكل سليم جراء عدم الاعتناء بها وعدم إزالة الترسبات منها أو كلاهما.

الاستخدام المقصود

1. هذا الجهاز مخصص للاستخدام في الأغراض المنزلية فقط وهو غير مخصص للاستخدام في الأماكن والأغراض التالية، ومن ثم لن يكون الضمان ساريًا في تلك الحالات:

- مناطق المطبخ الخاصة بالموظفين في المحلات التجارية والمكاتب وبيئات العمل الأخرى؛

- البيوت الزراعية؛

- من قبل العملاء في الفنادق والموتيلات وغيرها من أماكن الإقامة؛

- أماكن المبيت والإفطار؛

2. هذا الجهاز مخصص للاستخدام داخل المنزل فقط على ارتفاع يقل عن 3400 متر.

إمداد الطاقة الكهربائية

3. قم بتوصيل الجهاز بأخذ التيار الرئيسي من خلال وصلة أرضية فقط. يجب أن يكون جهد مأخذ الكهرباء مطابقًا للتفاصيل الموضحة على لوحة التصنيف. يؤدي استعمال وصلة غير سليمة إلى إبطال الضمان، وقد ينطوي هذا الاستعمال على مخاطر.

4. لحماية الأشخاص من التعرض لحريق أو لصدمة كهربائية أو لآية إصابة، لا تغمر سلك الكهرباء أو القوابس أو الجهاز في الماء أو في غيره من السوائل. تجنب انسكاب السوائل على القوابس. لا تلمس سلك الكهرباء ويداك مبللتين. لا تملأ خزان الماء بشكل زائد عن الحد.

5. في حالة الطوارئ، اسحب القابس من مقبس الكهرباء الرئيسي على الفور.

6. انزع قابس الجهاز من مقبس مأخذ التيار الكهربائي الرئيسي في حالة عدم استخدام الجهاز.

7. لفصل الجهاز عن التيار الكهربائي، انزع القابس من مأخذ التيار الرئيسي. ولا تفصل التيار الكهربائي عن طريق شد أو جذب السلك.

8. لا تجعل سلك الكهرباء معلقًا فوق حافة منضدة أو طاولة ولا تجعله يلمس أية أسطح ساخنة أو حواف حادة. لا تجعل سلك الكهرباء متدليًا (خطر التعثر). لا تلمس سلك الكهرباء أبدًا ويداك مبللتين.

9. لا تشغل الجهاز في حالة تلف سلك الكهرباء أو القابس. إذا كان سلك الكهرباء تالفًا، يجب تغييره لدى الشركة المنتجة أو وكيل خدمتها أو لدى أي أشخاص مؤهلين لهذا الغرض لتجنب التعرض لآية مخاطر. لا تشغل أي جهاز به خلل وظيفي أو متعرض لأي شكل من أشكال التلف. افصل سلك الكهرباء عن التيار الكهربائي على الفور. أعد الجهاز التالف إلى أقرب مركز خدمة معتمد يتم تعيينه من خلال خدمة الخط المباشر من

NESCAFÉ® Dolce Gusto®

10. في حالة عدم مطابقة مقبس الطاقة الرئيسي للقابس الخاص بالجهاز، استبدل القابس بنوع مناسب من مراكز خدمة ما بعد البيع التي يتم تعيينها من خلال خدمة الخط المباشر من NESCAFÉ® Dolce Gusto®.

شروط الاستخدام

11. احرص دائمًا على استخدام الجهاز على أسطح مستوية وثابتة ومقاومة للحرارة بعيدًا عن مصادر الحرارة أو رذاذ الماء.

12. لا تستخدم الجهاز بدون درج التقطير وشبكة التقطير، إلا في حالة استخدام كوب طويل جدًا. لا تستخدم الجهاز لإعداد الماء الساخن.

13. لا تقلب أبدًا الماكينة رأسًا على عقب.

14. قد يؤدي استخدام ملحقات تكميلية غير مصرح بها من قبل الشركة المنتجة للجهاز إلى تعرض الأشخاص لحريق أو صدمة كهربائية أو إصابة.

15. لا تضع الجهاز على أو بالقرب من موقد غاز ساخن أو موقد كهربائي أو في فرن ساخن.

16. لا تضع أصابعك أسفل المنفذ خلال إعداد المشروب.

17. لا تلمس الحاقن الموجود في رأس الماكينة.

18. لا تحمل الجهاز أبدًا من رأس وحدة الاستخلاص.

19. حامل الكبسولات مزود بمغناطيس ثابت. تجنب وضع حامل الكبسولات بالقرب من الأجهزة والأغراض التي يمكن أن تتضرر من العناصر المغناطيسية، مثل بطاقات الائتمان، وغيرها من محركات التخزين USB وغيرها من محركات البيانات، علاوة على أجهزة الفيديو والتلفزيون وشاشات الكمبيوتر المزودة بأنابيب صور، والساعات الميكانيكية، وساعات الأذن ومكبرات الصوت.

20. لا توقف تشغيل الجهاز أثناء عملية إزالة الترسبات. اغسل خزان المياه ونظف الجهاز لضمان عدم وجود أي من المنظفات المزيلة للترسبات.

21. في حالة التخطيط للسفر لفترة طويلة لقضاء عطلة على سبيل المثال وما إلى ذلك، يجب تفريغ الجهاز وتنظيفه وفصله عن الكهرباء. يجب غسل الجهاز قبل إعادة استخدامه. شغل دورة الغسل قبل إعادة استخدام جهازك.

22. ننصح باستخدام كبسولات NESCAFÉ® Dolce Gusto® المصممة والمختبرة خصيصًا للجهاز لضمان جودة القهوة المتعارف عليها، فكل كبسولة مصممة لإعداد كوب مثالي ولا يمكن إعادة استخدامها.

23. لا تقوم بآلة الكبسولة الساخنة باليد. استخدم دائمًا حامل الكبسولات للتخلص من الكبسولة المستخدمة.

24. احرص دائمًا على تركيب حامل الكبسولات بالجهاز لإعداد أي مشروب. لا تسحب حامل الكبسولات للخارج قبل أن يتوقف المؤشر عن الوميض. لن يعمل الجهاز إذا لم يكن حامل الكبسولات مركبًا به.

25. لماكينات الأجهزة بمقبض مقفل: قد تحدث الإصابة بالحروق إذا

- 9.2 كبسولتان (على سبيل المثال الكابتشينو «CAPPUCINO») 15
10. التنظيف 17
11. إزالة الترسبات كل 3-4 أشهر على الأقل 18
12. استكشاف الأخطاء وإصلاحها 20
- 12.1 تعمل إضاءة المؤشر البرتقالية لإزالة الترسبات 20
- 12.2 في حالة عدم خروج أي سائل - هل لا توجد مياه؟ 20
- 12.3 في حالة عدم خروج أي سائل - هل يوجد انسداد في الكبسولة؟ 21
- 12.4 في حالة عدم خروج أي سائل - هل يوجد انسداد في الحاقن؟ 21
- 12.5 متنوع 22

1.	احتياطات السلامة	4
2.	نظرة عامة على الماكينة	6
3.	الميزات الأساسية	7
3.1	تشغيل/إيقاف ماكينة إعداد القهوة	7
3.2	أرفع درج التقطير حتى تسمع صوت نقرة.	7
4.	أعد قهوتك السوداء بالطريقة التي تناسبك	8
4.1	اكتشف وضعين خاصين لاستخلاص المشروب	8
4.2	ESPRESSO BOOST	8
4.3	DELICATE BREW	9
5.	NESCAFÉ® DOLCE GUSTO® وصلة تطبيق BLUETOOTH® والبلوتوث	10
5.1	مزايا جديدة حصريّة	10
5.2	كيفية توصيل ماكيتك بالتطبيق	10
5.3	كيفية تفعيل البلوتوث BLUETOOTH® أو تعطيله على ماكيتك	10
6.	أمثلة على المشروبات	11
7.	توصيات للاستخدام الآمن	12
8.	الاستخدام لأول مرة	13
9.	إعداد مشروب	14
9.1	كبسولة واحدة (على سبيل المثال LUNGO)	14



ESPERTA

دليل المستخدم

